

Revision C:

- 11-1. CHANGE IN DEFROST SETTING and
6. OUTLINES AND DIMENSIONS have been corrected.

OBH865 REVISED EDITION-B is void.

OUTDOOR UNIT SERVICE MANUAL




**No. OBH865
REVISED EDITION-C**

Models

- MUZ-FT25VGHZ** - E1, E2, ET1, SC1, SC2
- MUZ-FT35VGHZ** - E1, E2, ET1, SC1, SC2
- MUZ-FT50VGHZ** - E1, E2, ET1, SC1, SC2

Indoor unit service manual
MSZ-FT-VG Series (OBH864)

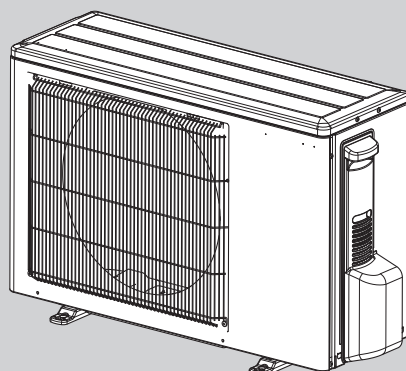

MUZ-FT25VGHZ

CONTENTS

1. TECHNICAL CHANGES	2
2. SERVICING PRECAUTIONS FOR UNITS USING REFRIGERANT R32	3
3. PART NAMES AND FUNCTIONS	5
4. SPECIFICATION	6
5. NOISE CRITERIA CURVES	8
6. OUTLINES AND DIMENSIONS	9
7. WIRING DIAGRAM	11
8. REFRIGERANT SYSTEM DIAGRAM	14
9. PERFORMANCE CURVES	16
10. ACTUATOR CONTROL	28
11. SERVICE FUNCTIONS	29
12. TROUBLESHOOTING	30
13. DISASSEMBLY INSTRUCTIONS	51

PARTS CATALOG (OBB865)

Use the specified refrigerant only

Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.

Correct refrigerant is specified in the manuals and on the spec labels provided with our products.

We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

<Preparation before the repair service>

- Prepare the proper tools.
- Prepare the proper protectors.
- Provide adequate ventilation.
- After stopping the operation of the air conditioner, turn off the power-supply breaker and pull the power plug.
- Discharge the capacitor before the work involving the electric parts.

<Precautions during the repair service>

- Do not perform the work involving the electric parts with wet hands.
- Do not pour water into the electric parts.
- Do not touch the refrigerant.
- Do not touch the hot or cold areas in the refrigeration cycle.
- When the repair or the inspection of the circuit needs to be done without turning off the power, exercise great caution not to touch the live parts.

⚠ WARNING

- When the refrigeration circuit has a leak, do not execute pump down with the compressor.
- When pumping down the refrigerant, stop the compressor before disconnecting the refrigerant pipes. The compressor may burst if air etc. get into it.
- When opening or closing the valve below freezing temperatures, refrigerant may spurt out from the gap between the valve stem and the valve body, resulting in injuries.

Revision A:

- A warning when opening or closing the valve has been added.

Revision B:

- MUZ-FT25/35/50VGHZ - **E2**, **SC2** have been added.

Revision C:

- 11-1. CHANGE IN DEFROST SETTING and 6. OUTLINES AND DIMENSIONS have been corrected.

1 TECHNICAL CHANGES

MUZ-FT25VGHZ - **E1**, **ET1**, **SC1**

MUZ-FT35VGHZ - **E1**, **ET1**, **SC1**

MUZ-FT50VGHZ - **E1**, **ET1**, **SC1**

1. New model

MUZ-FT25VGHZ - **E1**, **SC1** → MUZ-FT25VGHZ - **E2**, **SC2**

MUZ-FT35VGHZ - **E1**, **SC1** → MUZ-FT35VGHZ - **E2**, **SC2**

MUZ-FT50VGHZ - **E1**, **SC1** → MUZ-FT50VGHZ - **E2**, **SC2**

1. Compressor protector has been added.
2. Inverter P.C. board has been changed.

Servicing precautions for units using refrigerant R32



WARNING

This unit uses a flammable refrigerant.

If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater.)
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.
- Pipe-work shall be protected from physical damage.
- The installation of pipe-work shall be kept to a minimum.
- Compliance with national gas regulations shall be observed.
- Keep any required ventilation openings clear of obstruction.
- Servicing shall be performed only as recommended by the manufacturer.
- The appliance shall be stored so as to prevent mechanical damage from occurring.

Basic work procedures are the same as those for conventional units using refrigerant R410A.

However, pay careful attention to the following points.

1. Information on servicing
 - (1) Checks on the Area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized.
 - (2) Work Procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.
 - (3) General Work Area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.
 - (4) Checking for Presence of Refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.
 - (5) Presence of Fire Extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO2 fire extinguisher adjacent to the charging area.
 - (6) No Ignition Sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.
 - (7) Ventilated Area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
 - (8) Checks on the Refrigeration Equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

 - The charge size is in accordance with the room size within which the refrigerant containing parts are installed.
 - The ventilation machinery and outlets are operating adequately and are not obstructed.
 - If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant.
 - Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.
 - Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being corroded.
 - (9) Checks on Electrical Devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include that:

 - capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
 - no live electrical components and wiring are exposed while charging, recovering or purging the system;
 - there is continuity of earth bonding
2. Repairs to Sealed Components
 - (1) During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
 - (2) Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

Ensure that the apparatus is mounted securely.

Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.
3. Repair to intrinsically Safe Components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.

Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.
4. Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

5. Detection of Flammable Refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

6. Leak Detection Methods

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. For appliances containing flammable refrigerants, oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

7. Removal and Evacuation

When breaking into the refrigerant circuit to make repairs - or for any other purpose conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

- remove refrigerant
- purge the circuit with inert gas
- evacuate
- purge again with inert gas
- open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders. For appliances containing flammable refrigerants, the system shall be "flushed" with OFN to render the unit safe. This process may need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and that ventilation is available.

8. Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed:

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept upright.
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

9. Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

(1) Become familiar with the equipment and its operation.

(2) Isolate system electrically.

(3) Before attempting the procedure, ensure that:

- mechanical handling equipment is available, if required, for handling refrigerant cylinders;
- all personal protective equipment is available and being used correctly;
- the recovery process is supervised at all times by a competent person;
- recovery equipment and cylinders conform to the appropriate standards.

(4) Pump down refrigerant system, if possible.

(5) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.

(6) Make sure that cylinder is situated on the scales before recovery takes place.

(7) Start the recovery machine and operate in accordance with manufacturer's instructions.

(8) Do not overfill cylinders. (no more than 80 % volume liquid charge).

(9) Do not exceed the maximum working pressure of the cylinder, even temporarily.

(10) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.

(11) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

10. Labeling

Equipment shall be labeled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

11. Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.


When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labeled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.


The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

MUZ-FT25VGHZ

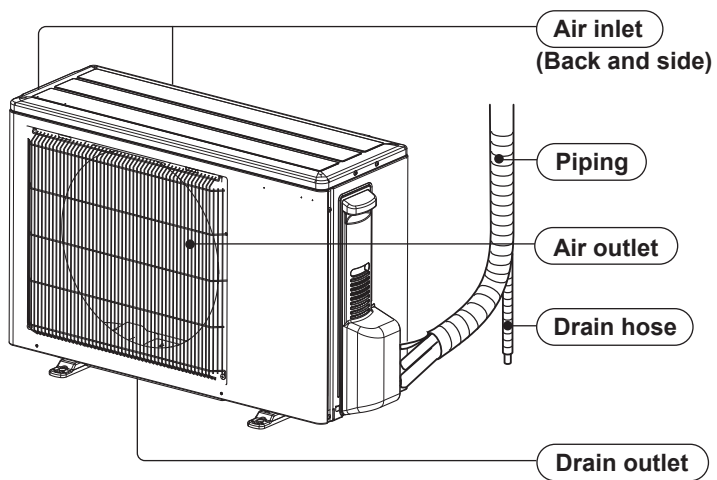

MUZ-FT35VGHZ MUZ-FT50VGHZ

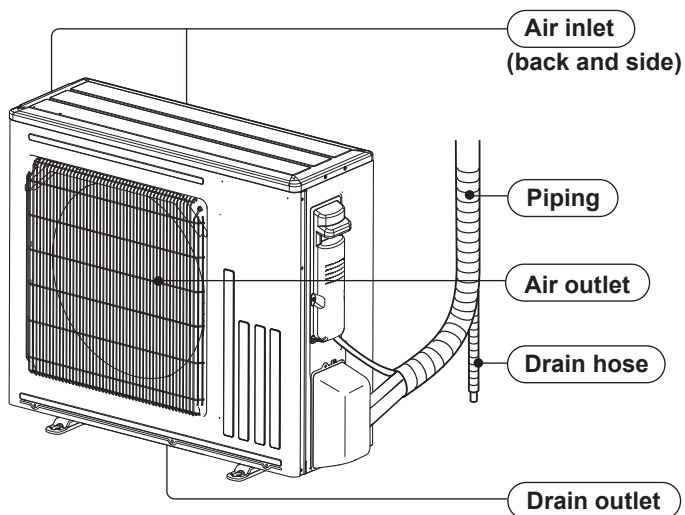

4

SPECIFICATION

Outdoor model				MUZ-FT25VGHZ	MUZ-FT35VGHZ	MUZ-FT50VGHZ	
Power supply				Single phase, 230 V, 50 Hz			
Capacity Rated (Min.-Max.)	Cooling	kW		2.5 (0.8 - 3.5)	3.5 (0.8 - 4.0)	5.0 (0.8 - 5.2)	
	Heating			3.2 (0.9 - 6.2)	4.0 (0.9 - 6.6)	5.0 (0.9 - 7.8)	
Breaker Capacity			A	12	16	16	
Electrical data	Power input *1 (Set)	Cooling	W	580	910	1,630	
		Heating		760	1,020	1,300	
	Running current *1 (Set)	Cooling	A	2.8	4.1	7.3	
		Heating		3.6	4.6	5.8	
	Power factor *1 (Set)	Cooling	%	90	96	97	
		Heating		91	96	97	
Starting current *1 (Set)			A	3.6	4.6	7.3	
Coefficient of performance (COP) *1 (Set)		Cooling		4.31	3.85	3.07	
		Heating		4.21	3.92	3.85	
Compressor	Model			SVB130FBBMT	SVB130FBBMT	SVB130FBBMT	
	Output		W	900	900	900	
	Current *1	Cooling	A	2.32	3.51	6.67	
		Heating		3.02	3.94	5.09	
	Refrigeration oil (Model)		L	0.35 (FW68S)	0.35 (FW68S)	0.35 (FW68S)	
Fan motor	Model			RC0J50-NC	RC0J50-RA	RC0J50-RA	
	Current *1	Cooling	A	0.22	0.3	0.3	
		Heating		0.23	0.3	0.3	
Dimensions W × H × D			mm	800 × 550 × 285	800 × 714 × 285	800 × 714 × 285	
Weight			kg	34	40	40	
Special remarks	Dehumidification		Cooling	L/h	0.2	1.0	2.3
	Airflow *1	Cooling	High	m ³ /h	2,058	2,664	2,664
			Low		906	1,320	1,320
		Heating	High		1,962	2,412	2,412
			Med.		1,686	2,412	2,412
			Low		1,356	1,290	1,320
	Sound level *1	Cooling		dB(A)	46	49	51
		Heating			49	50	54
	Fan speed	Cooling	High	rpm	940	940	940
			Low		460	490	490
		Heating	High		900	840	840
			Med.		780	840	840
			Low		640	480	490
	Fan speed regulator					3	3
Refrigerant filling capacity (R32)			kg	0.85	0.95	0.95	

NOTE: Test conditions are based on ISO 5151.

 
Cooling: Indoor Dry-bulb temperature 27°C Wet-bulb temperature 19°C

Outdoor Dry-bulb temperature 35°C

Heating: Indoor Dry-bulb temperature 20°C

Outdoor Dry-bulb temperature 7°C Wet-bulb temperature 6°C

*1 Measured under rated operating frequency.




Specifications and rated conditions of main electric parts

Item	Model	MUZ-FT25VGHZ	MUZ-FT35VGHZ	MUZ-FT50VGHZ
Smoothing capacitor	(C61, C62, C63)	600 μ F/ 620 μ F 420 V		
Diode module	(DB61)	15 A 600 V	25A 600 V	
	(DB65)	25A 600V		
Fuse	(F701, F801, F901)	T3.15AL250V		
Defrost heater	(H)	230 V 60 W		
Power module	(IC700)	20A 600 V		
	(IC932)	5 A 600 V		
Expansion valve coil	(LEV)	12 V DC		
Reactor	(L61)	23 mH		
Switching power transistor	(Q821)	30A/37A 600V		
Circuit protection	(PTC64, PTC65)	33 Ω		
Terminal block	(TB1)	5 P		
Relay	(X63)	3 A 250 V		
	(X64)	20 A 250 V		
	(X66)	3 A 250 V		
	(X69)	10 A 230 V		
R.V. coil	(21S4)	220-240 V AC		
Heater protector	(26H)	Open 45°C		


MUZ-FT25VGHZ

FUNCTION	SPL(dB(A))	LINE
COOLING	46	●—●
HEATING	49	□—□

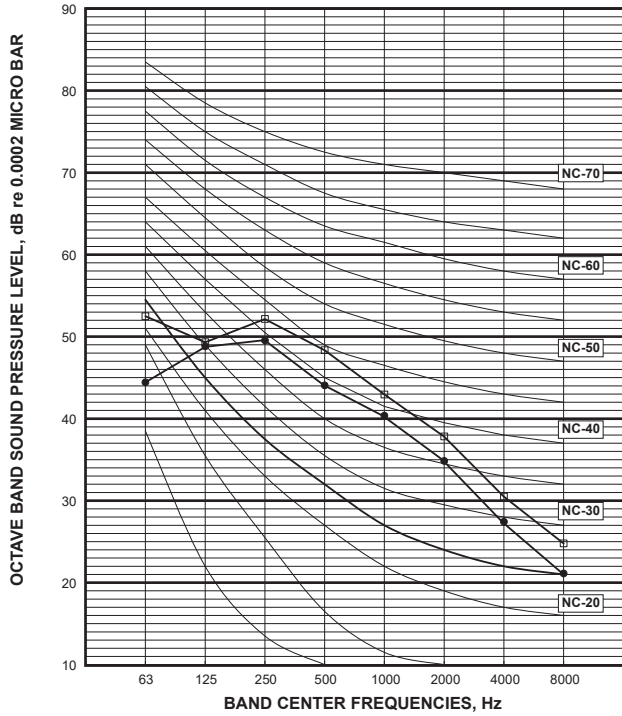


MUZ-FT35VGHZ

FUNCTION	SPL(dB(A))	LINE
COOLING	49	●—●
HEATING	50	□—□

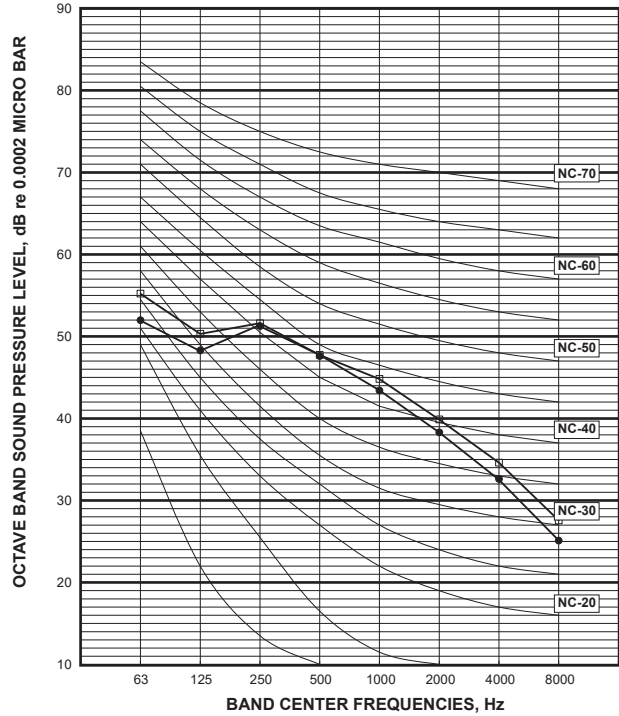

MUZ-FT50VGHZ


FUNCTION	SPL(dB(A))	LINE
COOLING	51	●—●
HEATING	54	□—□

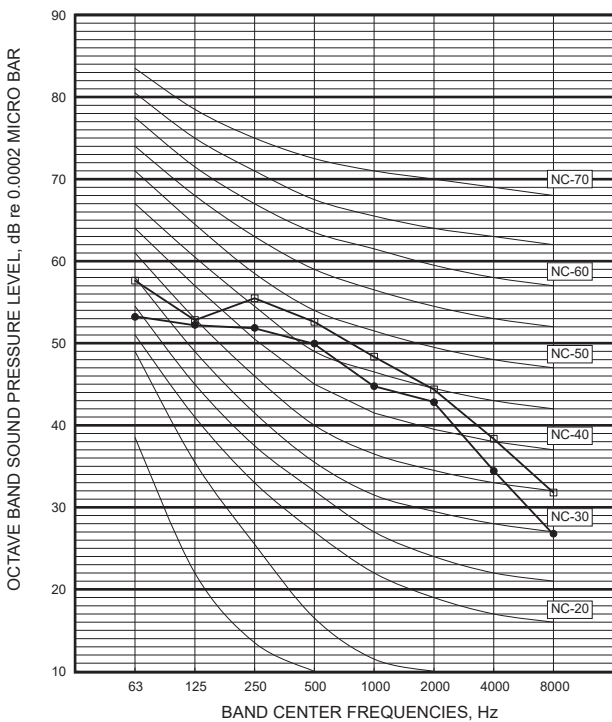

Test conditions


Cooling: Dry-bulb temperature 35°C

Heating: Dry-bulb temperature 7°C Wet-bulb temperature 6°C

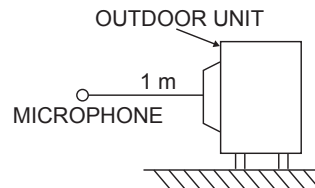


MUZ-FT25VGHZ

Unit: mm

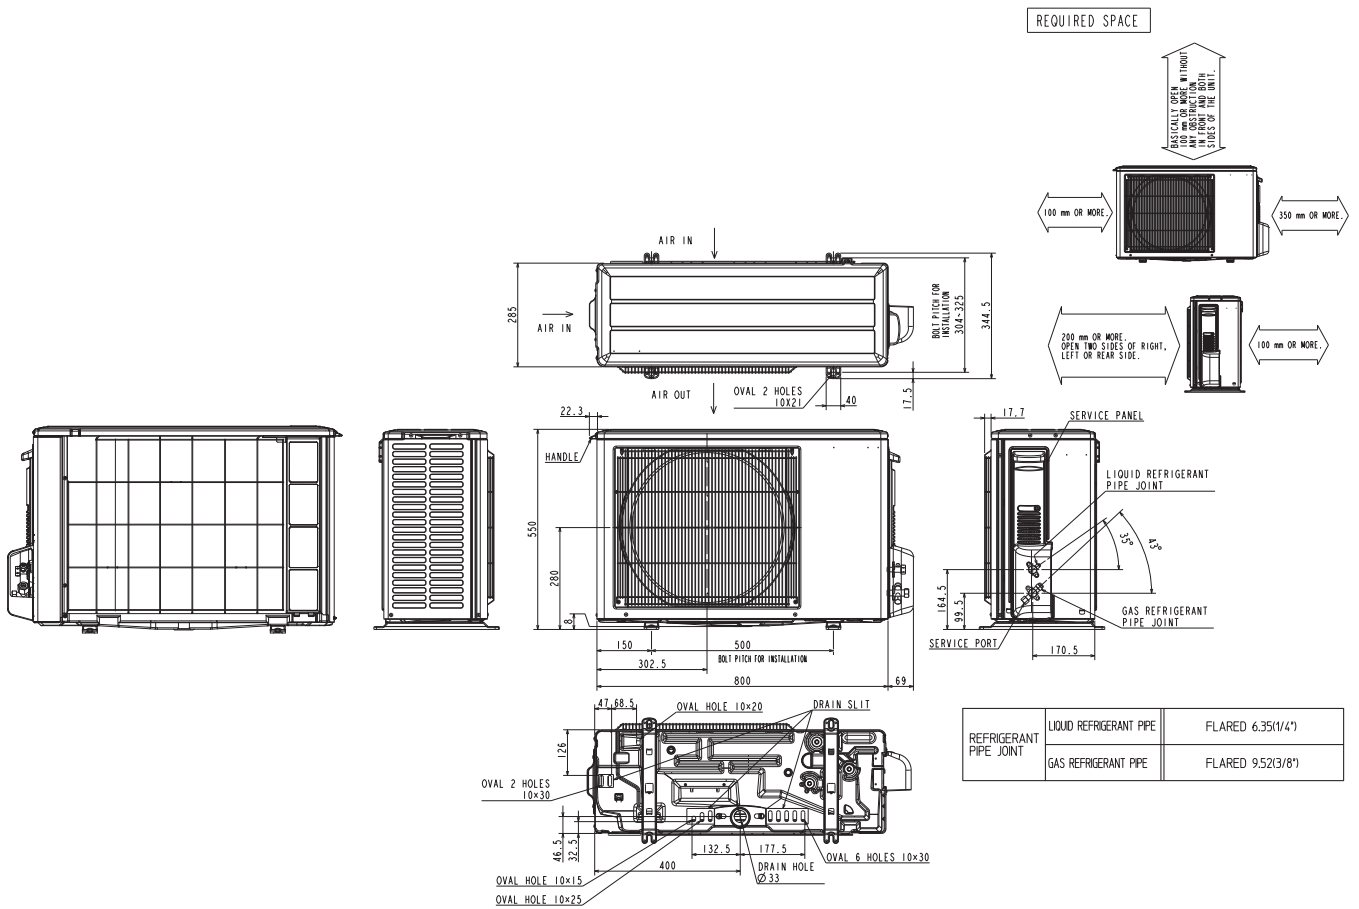

MUZ-FT35VGHZ MUZ-FT50VGHZ


Unit: mm

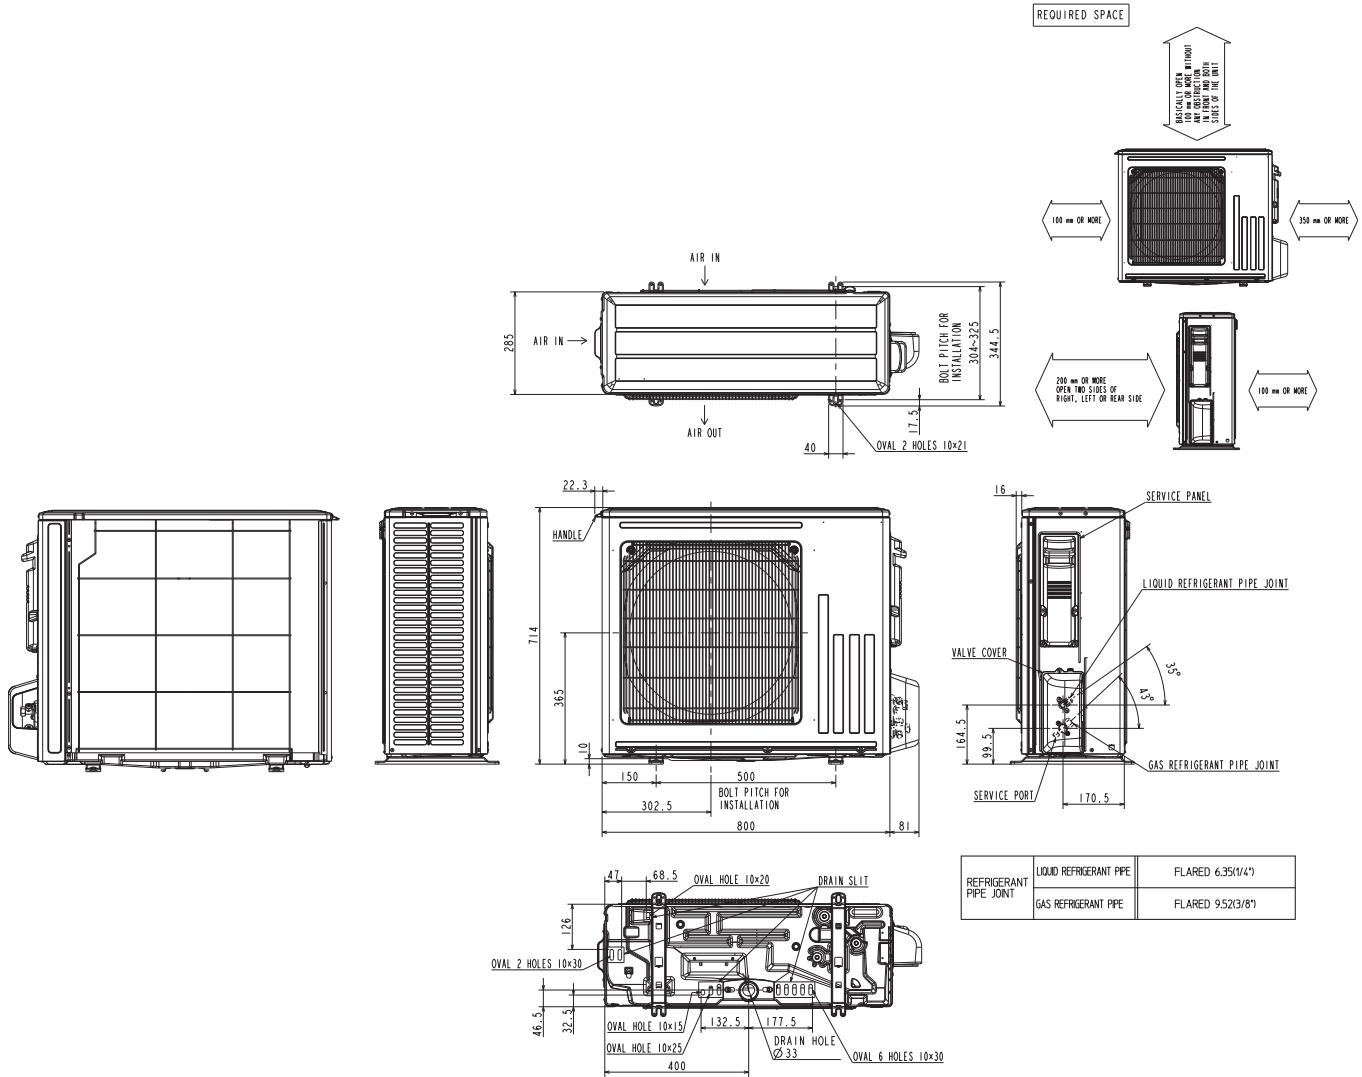

7

WIRING DIAGRAM


MUZ-FT25VGHZ - [E1], [SC1] MUZ-FT35VGHZ - [E1], [SC1]

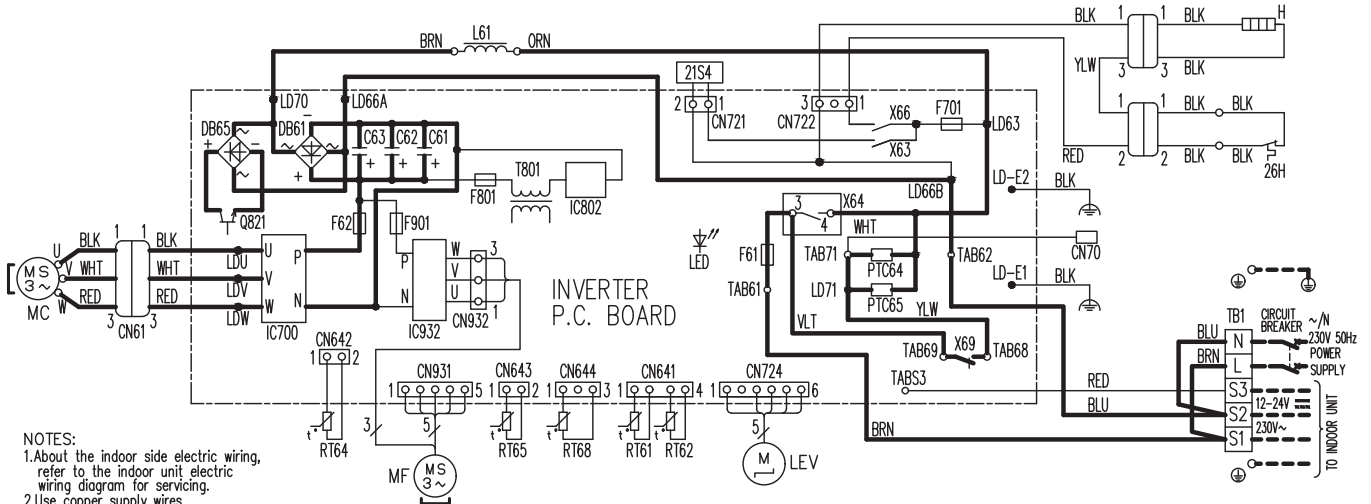

- NOTES:
 1. About the indoor side electric wiring, refer to the indoor unit electric wiring diagram for servicing.
 2. Use copper supply wires.
 3. Symbols indicate, : Terminal block
 : Connector

SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CN61	CONNECTOR	LED	LED	RT64	FIN TEMP. THERMISTOR
C61, C62, C63	SMOOTHING CAPACITOR	LEV	EXPANSION VALVE COIL	RT65	AMBIENT TEMP. THERMISTOR
DB61, DB65	DIODE MODULE	L61	REACTOR	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
F61	FUSE (25A 250V)	MC	COMPRESSOR	TB1	TERMINAL BLOCK
F62	FUSE (15A 250V)	MF	FAN MOTOR	T801	TRANSFORMER
F701, F801, F901	FUSE (T3.15AL250V)	PTC64, PTC65	CIRCUIT PROTECTION	X63, X64, X66, X69	RELAY
H	DEFROST HEATER	Q821	SWITCHING POWER TRANSISTOR	21S4	REVERSING VALVE COIL
IC700, IC932	POWER MODULE	RT61	DEFROST THERMISTOR	26H	HEATER PROTECTOR
IC802	POWER DEVICE	RT62	DISCHARGE TEMP. THERMISTOR		


MUZ-FT50VGHZ - [E1], [SC1]

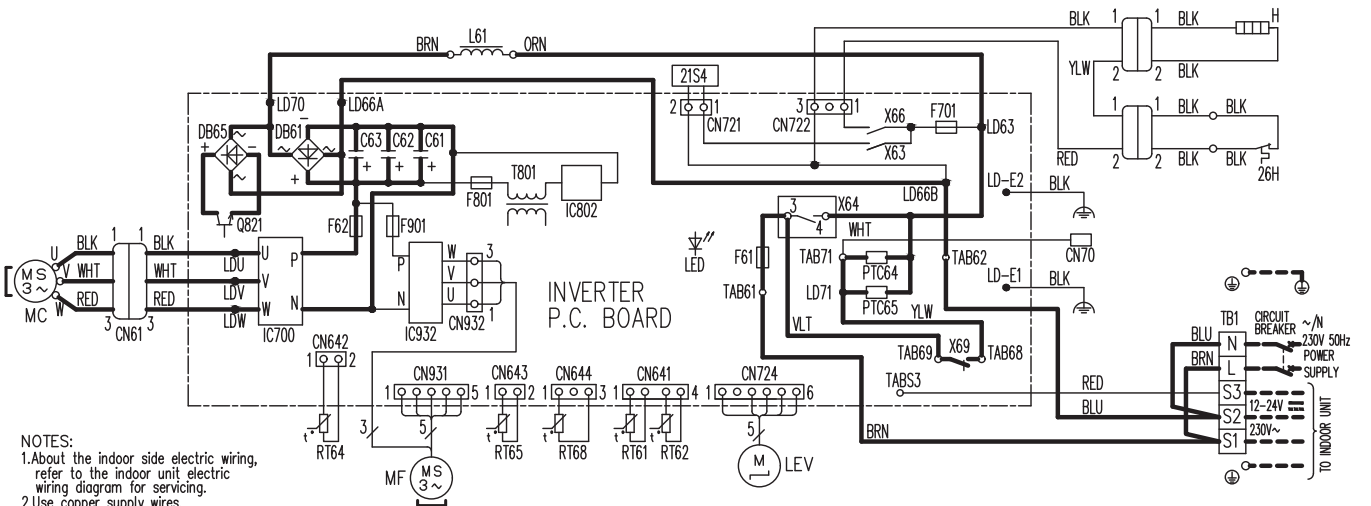

- NOTES:
 1. About the indoor side electric wiring, refer to the indoor unit electric wiring diagram for servicing.
 2. Use copper supply wires.
 3. Symbols indicate, : Terminal block
 : Connector


SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CN61	CONNECTOR	LED	LED	RT64	FIN TEMP. THERMISTOR
C61, C62, C63	SMOOTHING CAPACITOR	LEV	EXPANSION VALVE COIL	RT65	AMBIENT TEMP. THERMISTOR
DB61, DB65	DIODE MODULE	L61	REACTOR	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
F61	FUSE (25A 250V)	MC	COMPRESSOR	TB1	TERMINAL BLOCK
F62	FUSE (15A 250V)	MF	FAN MOTOR	T801	TRANSFORMER
F701, F801, F901	FUSE (T3.15AL250V)	PTC64, PTC65	CIRCUIT PROTECTION	X63, X64, X66, X69	RELAY
H	DEFROST HEATER	Q821	SWITCHING POWER TRANSISTOR	21S4	REVERSING VALVE COIL
IC700, IC932	POWER MODULE	RT61	DEFROST THERMISTOR	26H	HEATER PROTECTOR
IC802	POWER DEVICE	RT62	DISCHARGE TEMP. THERMISTOR		

MUZ-FT25VGHZ - E2, SC2 MUZ-FT35VGHZ - E2, SC2

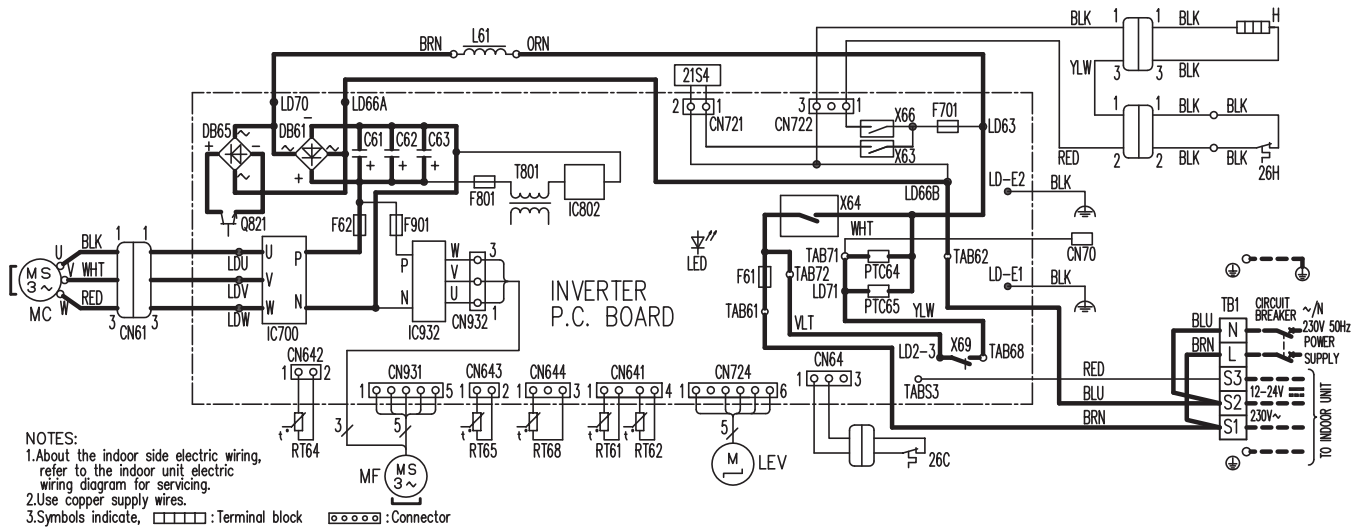


SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CN61	CONNECTOR	LEV	EXPANSION VALVE COIL	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
C61,C62,C63	SMOOTHING CAPACITOR	L61	REACTOR	TB1	TERMINAL BLOCK
DB61,DB65	DIODE MODULE	MC	COMPRESSOR	T801	TRANSFORMER
F61	FUSE (25A 250V)	MF	FAN MOTOR	X63,X64,X66,X69	RELAY
F62	FUSE (15A 250V)	PTC64,PTC65	CIRCUIT PROTECTION	21S4	REVERSING VALVE COIL
F701,F801,F901	FUSE (T3.15AL250V)	Q821	SWITCHING POWER TRANSISTOR	26C	COMPRESSOR PROTECTOR
H	DEFROST HEATER	RT61	DEFROST THERMISTOR	26H	HEATER PROTECTOR
IC700,IC932	POWER MODULE	RT62	DISCHARGE TEMP. THERMISTOR		
IC802	POWER DEVICE	RT64	FIN TEMP. THERMISTOR		
LED	LED	RT65	AMBIENT TEMP. THERMISTOR		

MUZ-FT50VGHZ - E2, SC2

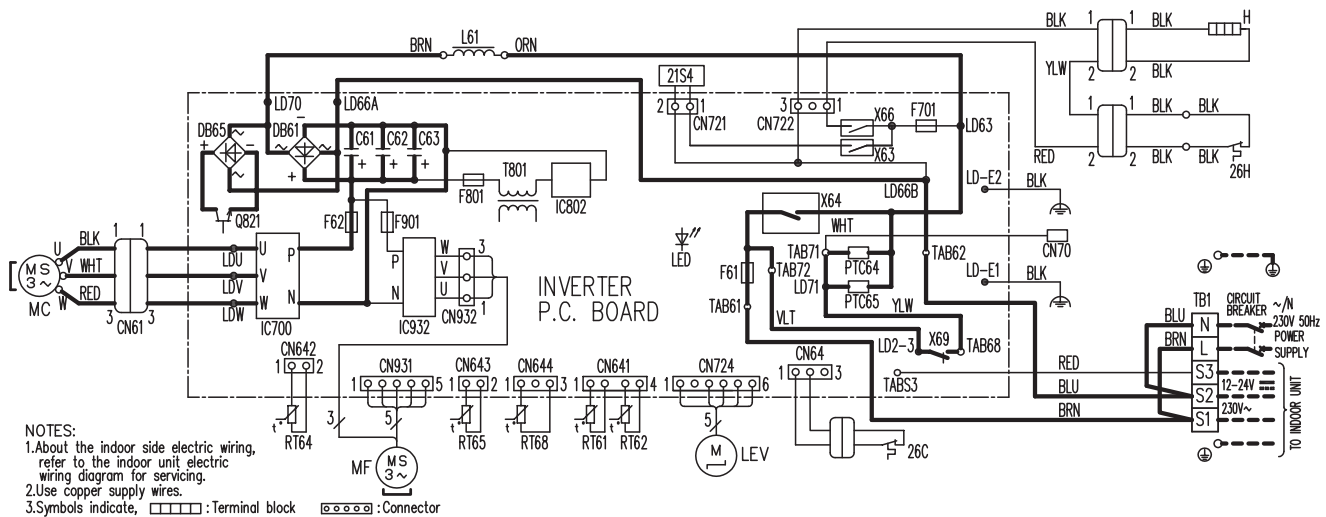


SYMBOL	NAME	SYMBOL	NAME	SYMBOL	NAME
CN61	CONNECTOR	LEV	EXPANSION VALVE COIL	RT68	OUTDOOR HEAT EXCHANGER TEMP. THERMISTOR
C61,C62,C63	SMOOTHING CAPACITOR	L61	REACTOR	TB1	TERMINAL BLOCK
DB61,DB65	DIODE MODULE	MC	COMPRESSOR	T801	TRANSFORMER
F61	FUSE (25A 250V)	MF	FAN MOTOR	X63,X64,X66,X69	RELAY
F62	FUSE (15A 250V)	PTC64,PTC65	CIRCUIT PROTECTION	21S4	REVERSING VALVE COIL
F701,F801,F901	FUSE (T3.15AL250V)	Q821	SWITCHING POWER TRANSISTOR	26C	COMPRESSOR PROTECTOR
H	DEFROST HEATER	RT61	DEFROST THERMISTOR	26H	HEATER PROTECTOR
IC700,IC932	POWER MODULE	RT62	DISCHARGE TEMP. THERMISTOR		
IC802	POWER DEVICE	RT64	FIN TEMP. THERMISTOR		
LED	LED	RT65	AMBIENT TEMP. THERMISTOR		

MUZ-FT25VGHZ - [ET1] MUZ-FT35VGHZ - [ET1]

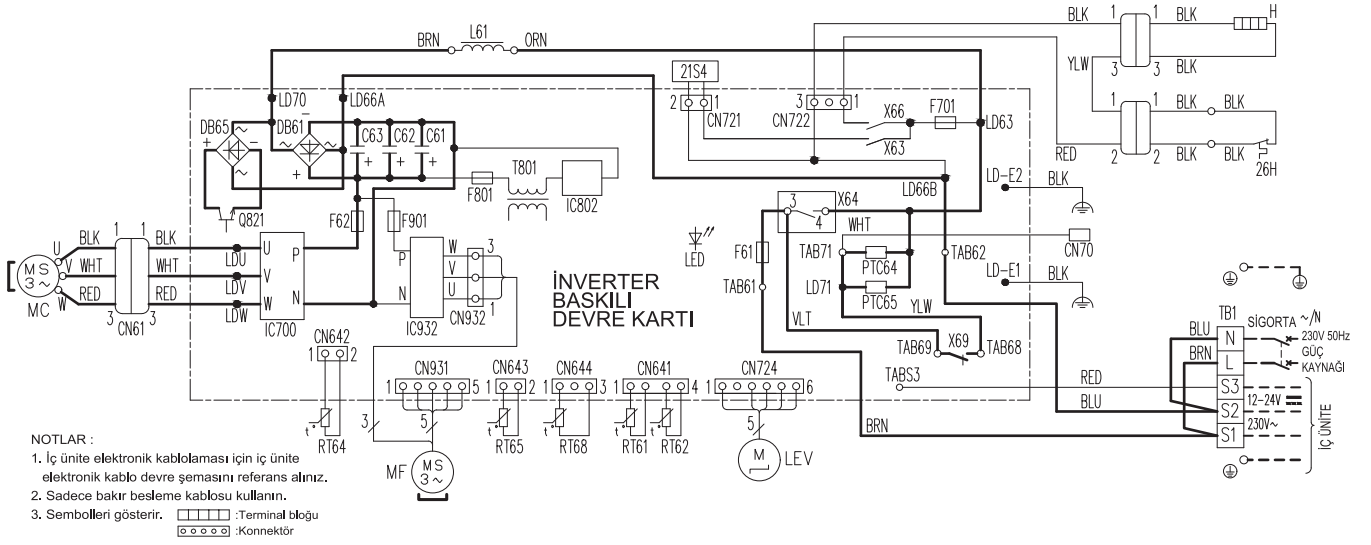

SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI
CN61	KONNEKTÖR	LED	LED	RT64	FİN SICAKLIK TERMİSTÖRÜ
C61,C62,C63	KAPASİTÖR	LEV	GENLEŞME VANASI SARGISI	RT65	ORTAM SICAKLIK TERMİSTÖRÜ
DB61,DB65	DIYOT MODÜLÜ	L61	REAKTÖR	RT68	DIŞ ÜNİTE EŞANJÖR SICAKLIK TERMİSTÖRÜ
F61	SİGORTA (25A 250V)	MC	KOMPRESÖR	TB1	TERMINAL BLOĞU
F62	SİGORTA (15A 250V)	MF	FAN MOTORU	T801	TRANSFORMATÖR
F701,F801,F901	SİGORTA (T3. 15AL250V)	PTC64,PTC65	DEVRE KORUMASI	T801	TRANSFORMATÖR
H	Buz Çözme Isıtıcısı	Q821	SIVIÇLI GÜÇ TRANSİSTÖRÜ	X63,X64,X66,X69	RÖLE
IC700,IC932	GÜÇ MODÜLÜ	RT61	DEFROST TERMİSTÖRÜ	21S4	4 YOLLU VANA SARGISI
IC802	GÜÇ CİHAZI	RT62	BASMA SICAKLIK TERMİSTÖRÜ	26H	Isıtıcı Korumucu


MUZ-FT50VGHZ - [ET1]

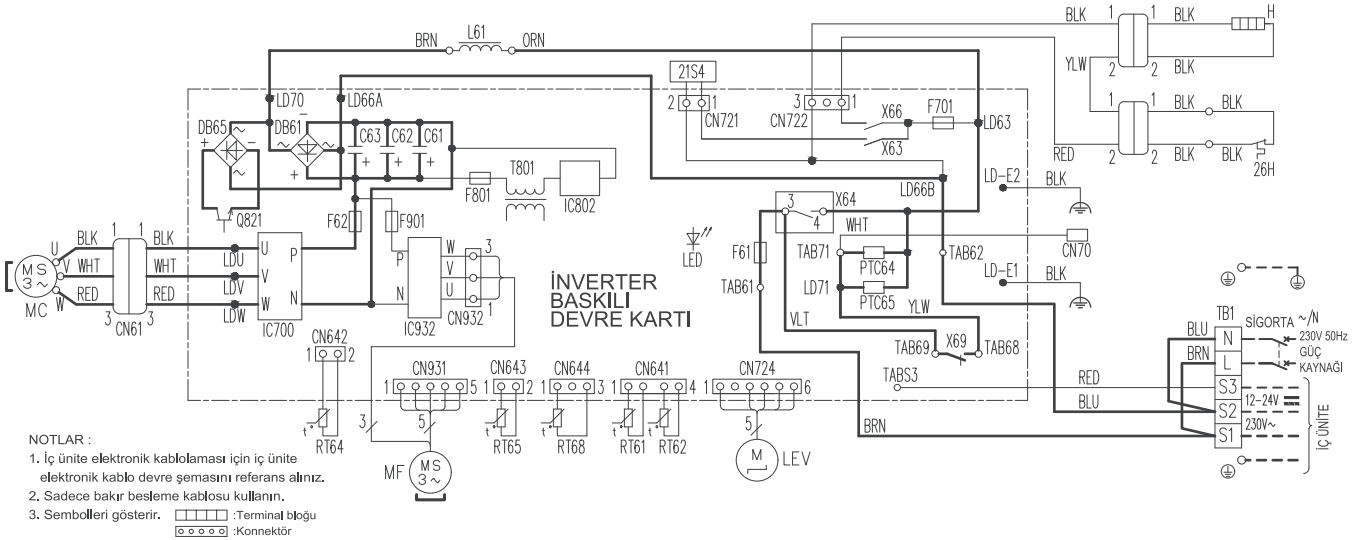


SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI	SEMBOL	PARÇA ADI
CN61	KONNEKTÖR	LED	LED	RT64	FİN SICAKLIK TERMİSTÖRÜ
C61,C62,C63	KAPASİTÖR	LEV	GENLEŞME VANASI SARGISI	RT65	ORTAM SICAKLIK TERMİSTÖRÜ
DB61,DB65	DIYOT MODÜLÜ	L61	REAKTÖR	RT68	DIŞ ÜNİTE EŞANJÖR SICAKLIK TERMİSTÖRÜ
F61	SİGORTA (25A 250V)	MC	KOMPRESÖR	TB1	TERMINAL BLOĞU
F62	SİGORTA (15A 250V)	MF	FAN MOTORU	T801	TRANSFORMATÖR
F701,F801,F901	SİGORTA (T3. 15AL250V)	PTC64,PTC65	DEVRE KORUMASI	T801	TRANSFORMATÖR
H	Buz Çözme Isıtıcısı	Q821	SIVIÇLI GÜÇ TRANSİSTÖRÜ	X63,X64,X66,X69	RÖLE
IC700,IC932	GÜÇ MODÜLÜ	RT61	DEFROST TERMİSTÖRÜ	21S4	4 YOLLU VANA SARGISI
IC802	GÜÇ CİHAZI	RT62	BASMA SICAKLIK TERMİSTÖRÜ	26H	Isıtıcı Korumucu


MUZ-FT25VGHZ

Unit: mm

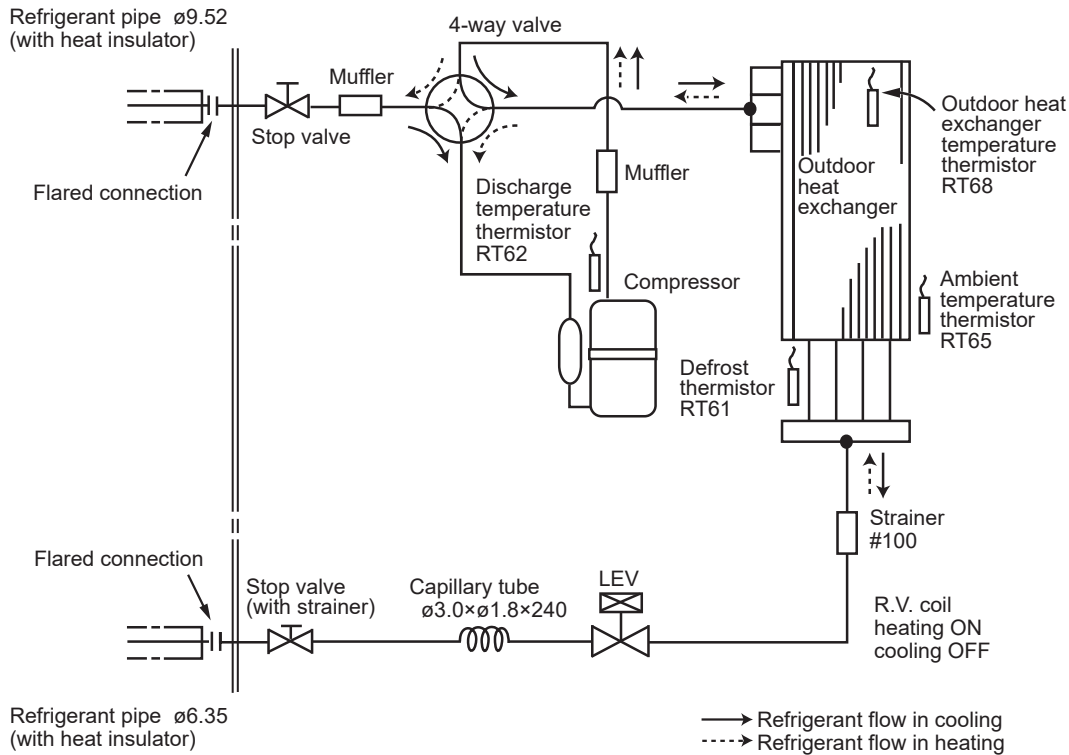


MUZ-FT35VGHZ MUZ-FT50VGHZ

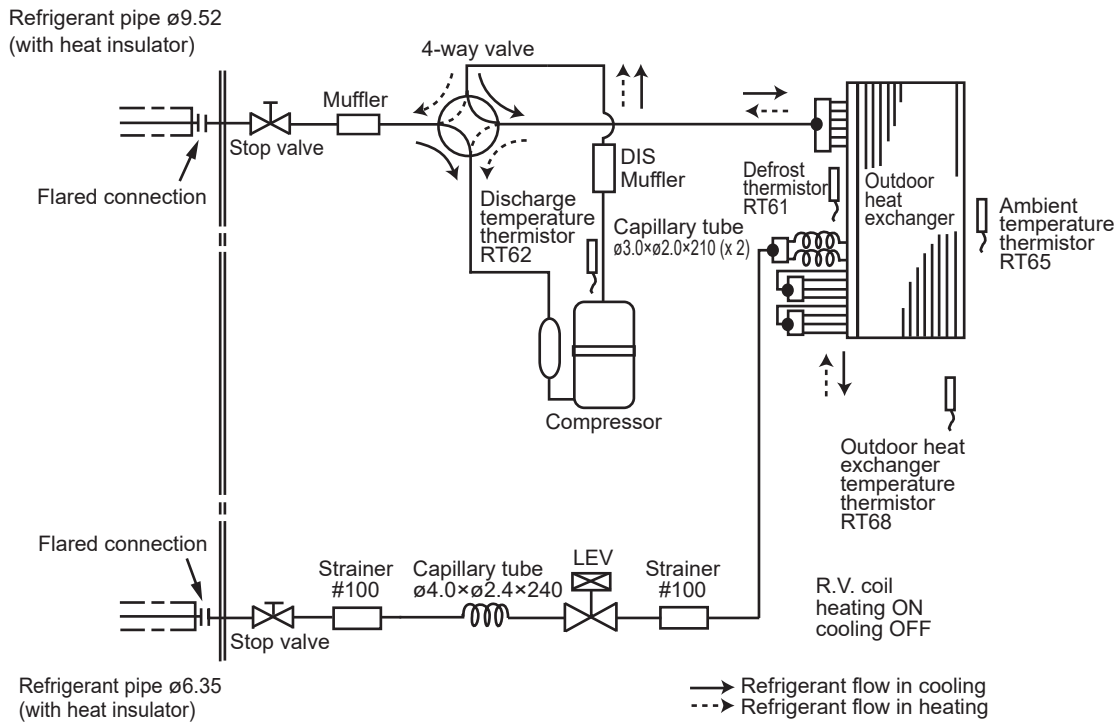

 

MAX. REFRIGERANT PIPING LENGTH and MAX. HEIGHT DIFFERENCE

Model	Refrigerant piping: m		Piping size O.D: mm	
	Max. Length A	Max. Height difference B	Gas	Liquid
MUZ-FT25VGHZ	20	12	9.52	6.35
MUZ-FT35VGHZ	30	15		
MUZ-FT50VGHZ				

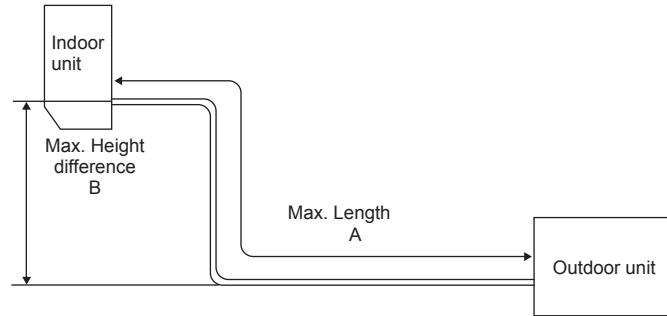

ADDITIONAL REFRIGERANT CHARGE (R32: g)

Model	Outdoor unit precharged	Refrigerant piping length (one way)									
		7 m	11 m	12 m	13 m	14 m	15 m	16 m	17 m	18 m	20 m
MUZ-FT25VGHZ	850	-	70	90	110	130	150	170	190	210	250

Calculation: X g = 20 g/m × (Refrigerant piping length(m) - 7.5)

Model	Outdoor unit precharged	Refrigerant piping length (one way)											
		7 m	11 m	12 m	13 m	14 m	15 m	16 m	17 m	18 m	20 m	25 m	30 m
MUZ-FT35VGHZ	950	-	70	90	110	130	150	170	190	210	250	350	450
MUZ-FT50VGHZ	950	-	70	90	110	130	150	170	190	210	250	350	450

Calculation: X g = 20 g/m × (Refrigerant piping length(m) - 7.5)

MUZ-FT25VGHZ MUZ-FT35VGHZ MUZ-FT50VGHZ

The standard specifications apply only to the operation of the air conditioner under normal conditions. Since operating conditions vary according to the areas where these units are installed, the following information has been provided to clarify the operating characteristics of the air conditioner under the conditions indicated by the performance curve.

(1) GUARANTEED VOLTAGE

198 ~ 264V, 50 Hz

(2) AIRFLOW

Airflow should be set at MAX.

(3) MAIN READINGS

(1) Indoor intake air wet-bulb temperature:	°C [WB]	} Cooling
(2) Indoor outlet air wet-bulb temperature:	°C [WB]	
(3) Outdoor intake air dry-bulb temperature:	°C [DB]	
(4) Total input:	W	
(5) Indoor intake air dry-bulb temperature:	°C [DB]	} Heating
(6) Outdoor intake air wet-bulb temperature:	°C [WB]	
(7) Total input:	W	

Indoor air wet and dry bulb temperature difference on the left side of the following chart shows the difference between the indoor intake air wet and dry bulb temperature and the indoor outlet air wet and dry bulb temperature for your reference at service.



(4) GUARANTEED OUTDOOR TEMPERATURE

COOLING (DB/WB): -10/ - ~ 46/ -

HEATING (DB/WB): -25/ - ~ 24/18



How to measure the indoor air wet and dry bulb temperature difference

1. Attach at least 2 sets of wet and dry bulb thermometers to the indoor air intake as shown in the figure, and at least 2 sets of wet and dry bulb thermometers to the indoor air outlet. The thermometers must be attached to the position where air speed is high.
2. Attach at least 2 sets of wet and dry bulb thermometers to the outdoor air intake.
Cover the thermometers to prevent direct rays of the sun.
3. Check that the air filter is cleaned.
4. Open windows and doors of room.
5. Press the emergency operation switch once (twice) to start the EMERGENCY COOL (HEAT) MODE.
6. When system stabilizes after more than 15 minutes, measure temperature and take an average temperature.
7. 10 minutes later, measure temperature again and check that the temperature does not change.

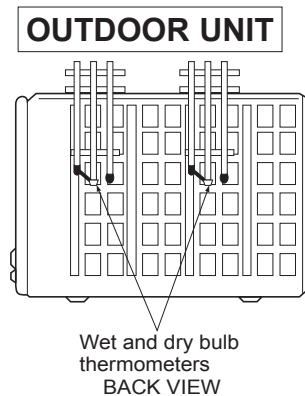
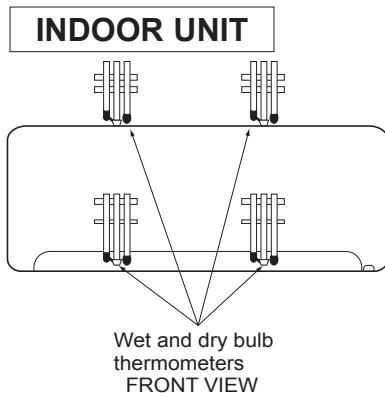


9-1. CAPACITY AND INPUT CURVES

Indoor air Wet-bulb temperature difference (°C)	5.4	7.3	11.2
	5.0	6.8	10.3
	4.6	6.2	9.4
	4.2	5.7	8.6
	3.8	5.2	7.7
	3.5	4.7	6.9
	3.1	4.1	6.1
	MUZ-FT25VGHZ	MUZ-FT35VGHZ	MUZ-FT50VGHZ

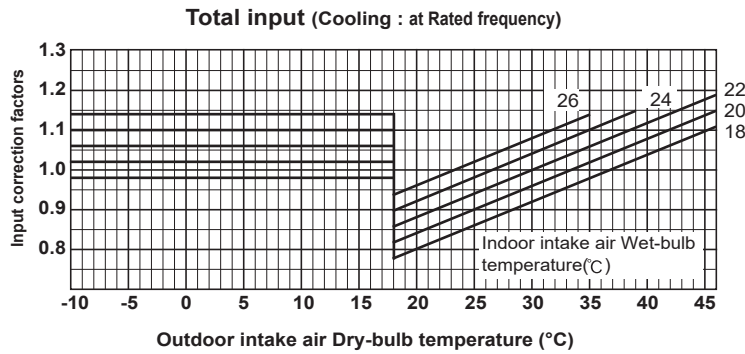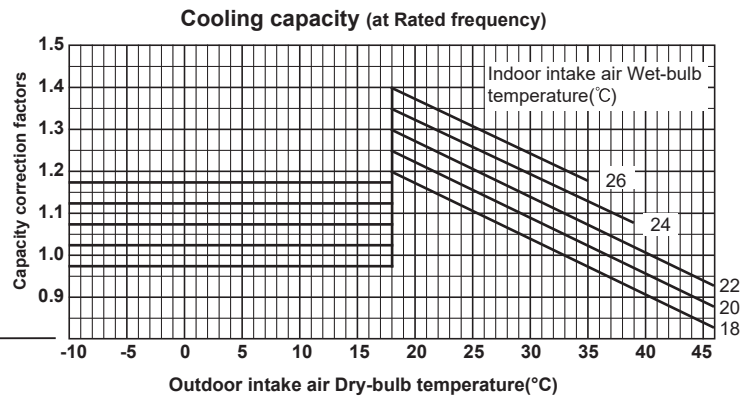


Indoor air Dry-bulb temperature difference (°C)	15.9	17.8	21.1
	14.6	16.4	19.5
	13.4	15.1	17.8
	12.2	13.7	16.2
	11.0	12.3	14.6
	9.8	10.9	13.0
	8.5	9.6	11.4
	7.3	8.2	9.7
	6.1	6.8	8.1
	4.9	5.5	6.5
	MUZ-FT25VGHZ	MUZ-FT35VGHZ	MUZ-FT50VGHZ

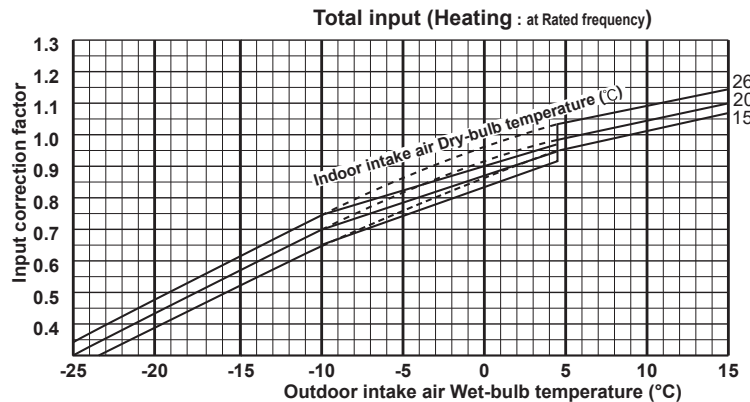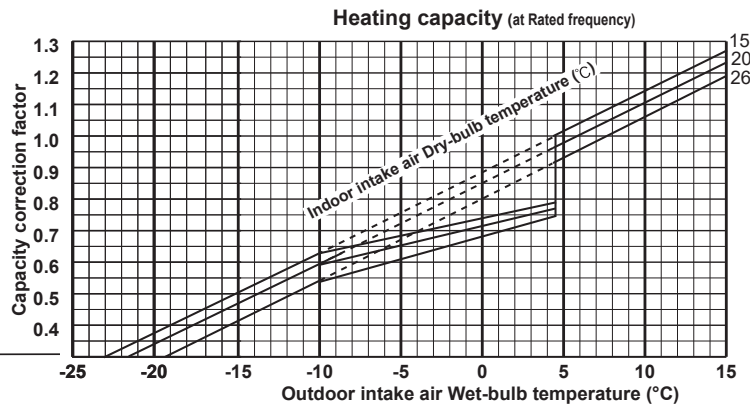


NOTE: The above broken lines are for the heating operation without any frost and defrost operation.

9-2. CAPACITY AND INPUT CORRECTION BY OPERATIONAL FREQUENCY OF COMPRESSOR


MUZ-FT25VGHZ

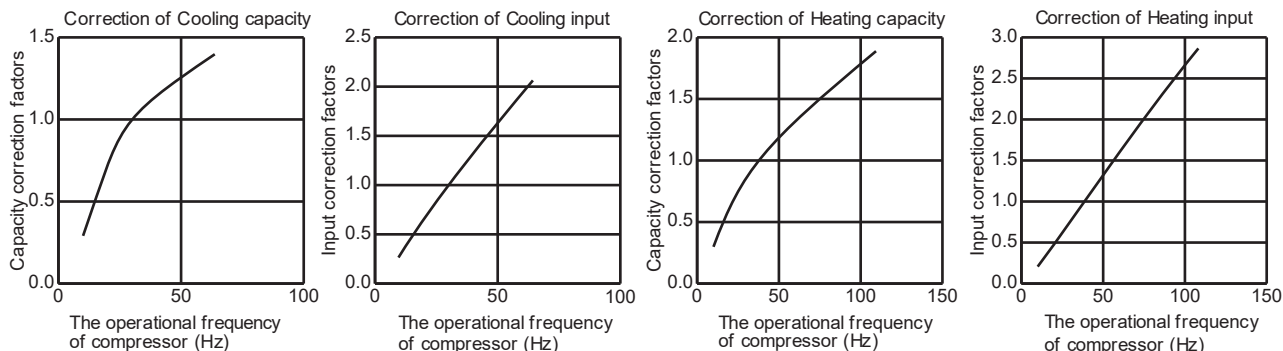

MUZ-FT35VGHZ

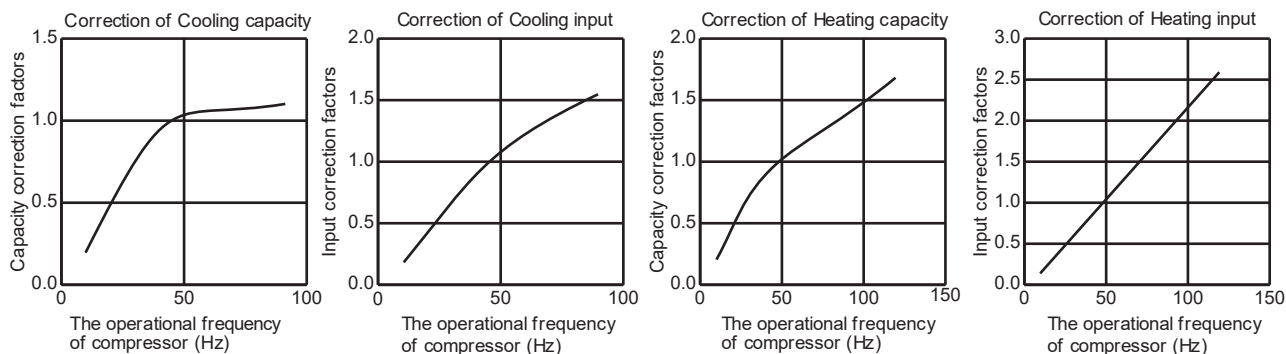

MUZ-FT50VGHZ

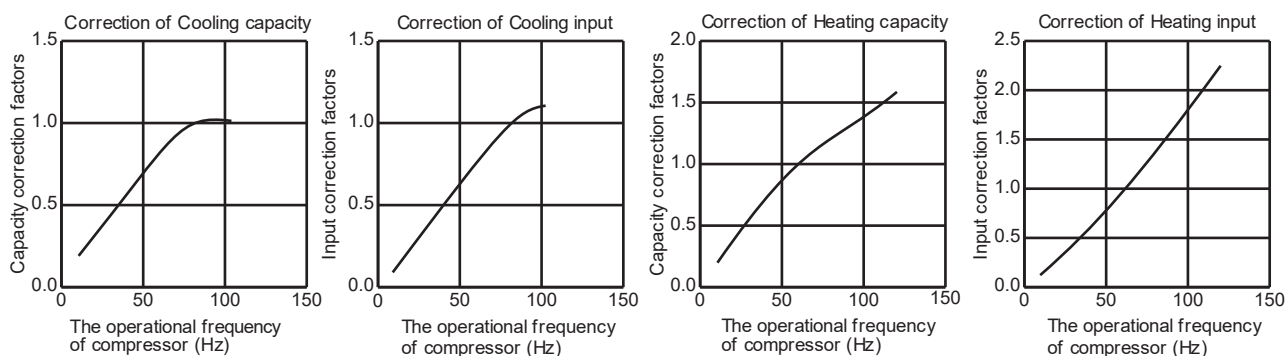

9-3. HOW TO OPERATE FIXED-FREQUENCY OPERATION

<Test run operation>




1. Press the emergency operation switch to start COOL or HEAT mode (COOL: Press once, HEAT: Press twice).
2. Test run operation starts and continues to operate for 30 minutes.
3. Compressor operates at rated frequency in COOL mode or 58 Hz in HEAT mode.
4. Indoor fan operates at High speed.
5. After 30 minutes, test run operation finishes and EMERGENCY OPERATION starts (operation frequency of compressor varies).
6. To cancel test run operation (EMERGENCY OPERATION), press the emergency operation switch or any button on remote controller.

9-4. OUTDOOR LOW PRESSURE AND OUTDOOR UNIT CURRENT COOL operation

- ① Both indoor and outdoor unit are under the same temperature/humidity condition.
- ② Operation: Test run operation (Refer to 9-3.)

Dry-bulb temperature (°C)	Relative humidity (%)
20	50
25	60
30	70




Outdoor low pressure

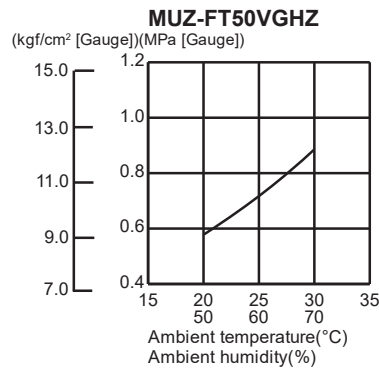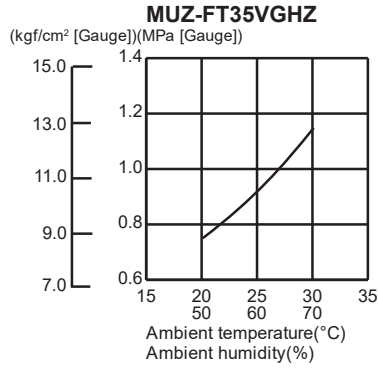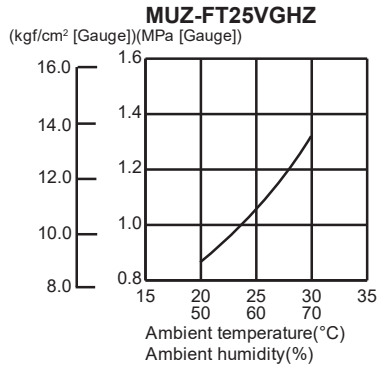

NOTE:

The unit of pressure has been changed to MPa on the international system of units (SI unit system)
The conversion factor is: **1 (MPa [Gauge]) = 10.2 (kgf/cm² [Gauge])**

Outdoor unit current

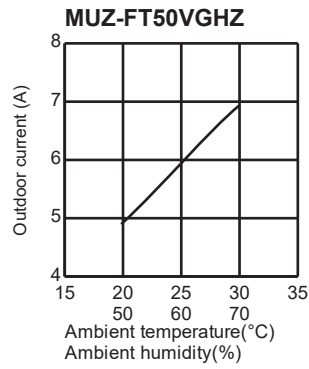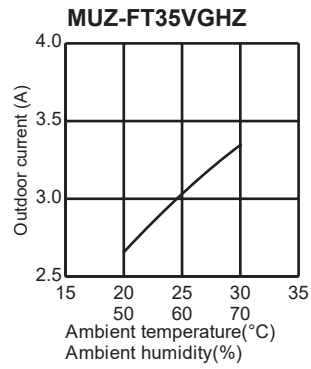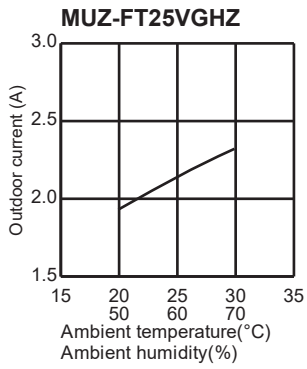




HEAT operation

① Condition:

	Indoor	Outdoor			
Dry bulb temperature (°C)	20.0	2	7	15	20.0
Wet bulb temperature (°C)	14.5	1	6	12	14.5

② Operation: Test run operation (Refer to 9-3.)

Outdoor unit current

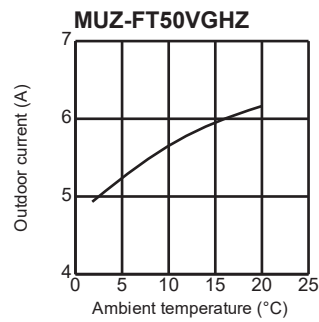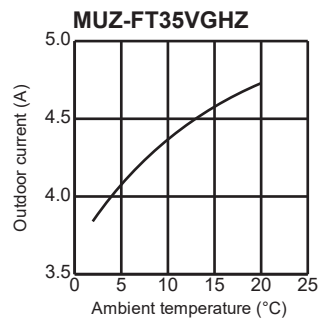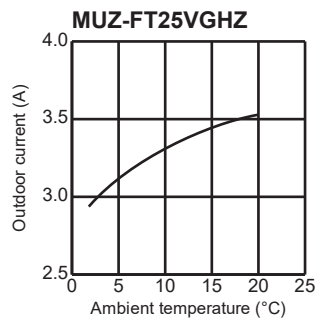

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-FT25VGHZ

CAPACITY: 2.5 kW

SHF: 0.95

INPUT: 580 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)															
		21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	2.94	2.26	0.77	464	2.81	2.17	0.77	487	2.70	2.08	0.77	510	2.60	2.00	0.77	534
21	20	3.06	1.99	0.65	487	2.94	1.91	0.65	516	2.85	1.85	0.65	528	2.75	1.79	0.65	551
22	18	2.94	2.38	0.81	464	2.81	2.28	0.81	487	2.70	2.19	0.81	510	2.60	2.11	0.81	534
22	20	3.06	2.11	0.69	487	2.94	2.03	0.69	516	2.85	1.97	0.69	528	2.75	1.90	0.69	551
22	22	3.19	1.82	0.57	505	3.08	1.75	0.57	537	3.00	1.71	0.57	551	2.88	1.64	0.57	574
23	18	2.94	2.50	0.85	464	2.81	2.39	0.85	487	2.70	2.30	0.85	510	2.60	2.21	0.85	534
23	20	3.06	2.24	0.73	487	2.94	2.14	0.73	516	2.85	2.08	0.73	528	2.75	2.01	0.73	551
23	22	3.19	1.94	0.61	505	3.08	1.88	0.61	537	3.00	1.83	0.61	551	2.88	1.75	0.61	574
24	18	2.94	2.61	0.89	464	2.81	2.50	0.89	487	2.70	2.40	0.89	510	2.60	2.31	0.89	534
24	20	3.06	2.36	0.77	487	2.94	2.26	0.77	516	2.85	2.19	0.77	528	2.75	2.12	0.77	551
24	22	3.19	2.07	0.65	505	3.08	2.00	0.65	537	3.00	1.95	0.65	551	2.88	1.87	0.65	574
24	24	3.35	1.78	0.53	528	3.23	1.71	0.53	557	3.15	1.67	0.53	574	3.05	1.62	0.53	603
25	18	2.94	2.73	0.93	464	2.81	2.62	0.93	487	2.70	2.51	0.93	510	2.60	2.42	0.93	534
25	20	3.06	2.48	0.81	487	2.94	2.38	0.81	516	2.85	2.31	0.81	528	2.75	2.23	0.81	551
25	22	3.19	2.20	0.69	505	3.08	2.12	0.69	537	3.00	2.07	0.69	551	2.88	1.98	0.69	574
25	24	3.35	1.91	0.57	528	3.23	1.84	0.57	557	3.15	1.80	0.57	574	3.05	1.74	0.57	603
26	18	2.94	2.85	0.97	464	2.81	2.73	0.97	487	2.70	2.62	0.97	510	2.60	2.52	0.97	534
26	20	3.06	2.60	0.85	487	2.94	2.50	0.85	516	2.85	2.42	0.85	528	2.75	2.34	0.85	551
26	22	3.19	2.33	0.73	505	3.08	2.24	0.73	537	3.00	2.19	0.73	551	2.88	2.10	0.73	574
26	24	3.35	2.04	0.61	528	3.23	1.97	0.61	557	3.15	1.92	0.61	574	3.05	1.86	0.61	603
26	26	3.45	1.69	0.49	557	3.35	1.64	0.49	586	3.30	1.62	0.49	603	3.20	1.57	0.49	621
27	18	2.94	2.94	1.00	464	2.81	2.81	1.00	487	2.70	2.70	1.00	510	2.60	2.60	1.00	534
27	20	3.06	2.73	0.89	487	2.94	2.61	0.89	516	2.85	2.54	0.89	528	2.75	2.45	0.89	551
27	22	3.19	2.45	0.77	505	3.08	2.37	0.77	537	3.00	2.31	0.77	551	2.88	2.21	0.77	574
27	24	3.35	2.18	0.65	528	3.23	2.10	0.65	557	3.15	2.05	0.65	574	3.05	1.98	0.65	603
27	26	3.45	1.83	0.53	557	3.35	1.78	0.53	586	3.30	1.75	0.53	603	3.20	1.70	0.53	621
28	18	2.94	2.94	1.00	464	2.81	2.81	1.00	487	2.70	2.70	1.00	510	2.60	2.60	1.00	534
28	20	3.06	2.85	0.93	487	2.94	2.73	0.93	516	2.85	2.65	0.93	528	2.75	2.56	0.93	551
28	22	3.19	2.58	0.81	505	3.08	2.49	0.81	537	3.00	2.43	0.81	551	2.88	2.33	0.81	574
28	24	3.35	2.31	0.69	528	3.23	2.23	0.69	557	3.15	2.17	0.69	574	3.05	2.10	0.69	603
28	26	3.45	1.97	0.57	557	3.35	1.91	0.57	586	3.30	1.88	0.57	603	3.20	1.82	0.57	621
29	18	2.94	2.94	1.00	464	2.81	2.81	1.00	487	2.70	2.70	1.00	510	2.60	2.60	1.00	534
29	20	3.06	2.97	0.97	487	2.94	2.85	0.97	516	2.85	2.76	0.97	528	2.75	2.67	0.97	551
29	22	3.19	2.71	0.85	505	3.08	2.61	0.85	537	3.00	2.55	0.85	551	2.88	2.44	0.85	574
29	24	3.35	2.45	0.73	528	3.23	2.35	0.73	557	3.15	2.30	0.73	574	3.05	2.23	0.73	603
29	26	3.45	2.10	0.61	557	3.35	2.04	0.61	586	3.30	2.01	0.61	603	3.20	1.95	0.61	621
30	18	2.94	2.94	1.00	464	2.81	2.81	1.00	487	2.70	2.70	1.00	510	2.60	2.60	1.00	534
30	20	3.06	3.06	1.00	487	2.94	2.94	1.00	516	2.85	2.85	1.00	528	2.75	2.75	1.00	551
30	22	3.19	2.84	0.89	505	3.08	2.74	0.89	537	3.00	2.67	0.89	551	2.88	2.56	0.89	574
30	24	3.35	2.58	0.77	528	3.23	2.48	0.77	557	3.15	2.43	0.77	574	3.05	2.35	0.77	603
30	26	3.45	2.24	0.65	557	3.35	2.18	0.65	586	3.30	2.15	0.65	603	3.20	2.08	0.65	621
31	18	2.94	2.94	1.00	464	2.81	2.81	1.00	487	2.70	2.70	1.00	510	2.60	2.60	1.00	534
31	20	3.06	3.06	1.00	487	2.94	2.94	1.00	516	2.85	2.85	1.00	528	2.75	2.75	1.00	551
31	22	3.19	2.96	0.93	505	3.08	2.86	0.93	537	3.00	2.79	0.93	551	2.88	2.67	0.93	574
31	24	3.35	2.71	0.81	528	3.23	2.61	0.81	557	3.15	2.55	0.81	574	3.05	2.47	0.81	603
31	26	3.45	2.38	0.69	557	3.35	2.31	0.69	586	3.30	2.28	0.69	603	3.20	2.21	0.69	621
32	18	2.94	2.94	1.00	464	2.81	2.81	1.00	487	2.70	2.70	1.00	510	2.60	2.60	1.00	534
32	20	3.06	3.06	1.00	487	2.94	2.94	1.00	516	2.85	2.85	1.00	528	2.75	2.75	1.00	551
32	22	3.19	3.09	0.97	505	3.08	2.98	0.97	537	3.00	2.91	0.97	551	2.88	2.79	0.97	574
32	24	3.35	2.85	0.85	528	3.23	2.74	0.85	557	3.15	2.68	0.85	574	3.05	2.59	0.85	603
32	26	3.45	2.52	0.73	557	3.35	2.45	0.73	586	3.30	2.41	0.73	603	3.20	2.34	0.73	621

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-FT25VGHZ

CAPACITY: 2.5 kW

SHF: 0.95

INPUT: 580 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)											
		35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	2.45	1.89	0.77	568	2.25	1.73	0.77	603	2.08	1.60	0.77	626
21	20	2.58	1.67	0.65	592	2.40	1.56	0.65	621	2.23	1.45	0.65	655
22	18	2.45	1.98	0.81	568	2.25	1.82	0.81	603	2.08	1.68	0.81	626
22	20	2.58	1.78	0.69	592	2.40	1.66	0.69	621	2.23	1.54	0.69	655
22	22	2.73	1.55	0.57	615	2.55	1.45	0.57	650	2.38	1.35	0.57	673
23	18	2.45	2.08	0.85	568	2.25	1.91	0.85	603	2.08	1.76	0.85	626
23	20	2.58	1.88	0.73	592	2.40	1.75	0.73	621	2.23	1.62	0.73	655
23	22	2.73	1.66	0.61	615	2.55	1.56	0.61	650	2.38	1.45	0.61	673
24	18	2.45	2.18	0.89	568	2.25	2.00	0.89	603	2.08	1.85	0.89	626
24	20	2.58	1.98	0.77	592	2.40	1.85	0.77	621	2.23	1.71	0.77	655
24	22	2.73	1.77	0.65	615	2.55	1.66	0.65	650	2.38	1.54	0.65	673
24	24	2.88	1.52	0.53	638	2.70	1.43	0.53	667	2.55	1.35	0.53	696
25	18	2.45	2.28	0.93	568	2.25	2.09	0.93	603	2.08	1.93	0.93	626
25	20	2.58	2.09	0.81	592	2.40	1.94	0.81	621	2.23	1.80	0.81	655
25	22	2.73	1.88	0.69	615	2.55	1.76	0.69	650	2.38	1.64	0.69	673
25	24	2.88	1.64	0.57	638	2.70	1.54	0.57	667	2.55	1.45	0.57	696
26	18	2.45	2.38	0.97	568	2.25	2.18	0.97	603	2.08	2.01	0.97	626
26	20	2.58	2.19	0.85	592	2.40	2.04	0.85	621	2.23	1.89	0.85	655
26	22	2.73	1.99	0.73	615	2.55	1.86	0.73	650	2.38	1.73	0.73	673
26	24	2.88	1.75	0.61	638	2.70	1.65	0.61	667	2.55	1.56	0.61	696
26	26	3.03	1.48	0.49	661	2.85	1.40	0.49	690	2.68	1.31	0.49	719
27	18	2.45	2.45	1.00	568	2.25	2.25	1.00	603	2.08	2.08	1.00	626
27	20	2.58	2.29	0.89	592	2.40	2.14	0.89	621	2.23	1.98	0.89	655
27	22	2.73	2.10	0.77	615	2.55	1.96	0.77	650	2.38	1.83	0.77	673
27	24	2.88	1.87	0.65	638	2.70	1.76	0.65	667	2.55	1.66	0.65	696
27	26	3.03	1.60	0.53	661	2.85	1.51	0.53	690	2.68	1.42	0.53	719
28	18	2.45	2.45	1.00	568	2.25	2.25	1.00	603	2.08	2.08	1.00	626
28	20	2.58	2.39	0.93	592	2.40	2.23	0.93	621	2.23	2.07	0.93	655
28	22	2.73	2.21	0.81	615	2.55	2.07	0.81	650	2.38	1.92	0.81	673
28	24	2.88	1.98	0.69	638	2.70	1.86	0.69	667	2.55	1.76	0.69	696
28	26	3.03	1.72	0.57	661	2.85	1.62	0.57	690	2.68	1.52	0.57	719
29	18	2.45	2.45	1.00	568	2.25	2.25	1.00	603	2.08	2.08	1.00	626
29	20	2.58	2.50	0.97	592	2.40	2.33	0.97	621	2.23	2.16	0.97	655
29	22	2.73	2.32	0.85	615	2.55	2.17	0.85	650	2.38	2.02	0.85	673
29	24	2.88	2.10	0.73	638	2.70	1.97	0.73	667	2.55	1.86	0.73	696
29	26	3.03	1.85	0.61	661	2.85	1.74	0.61	690	2.68	1.63	0.61	719
30	18	2.45	2.45	1.00	568	2.25	2.25	1.00	603	2.08	2.08	1.00	626
30	20	2.58	2.58	1.00	592	2.40	2.40	1.00	621	2.23	2.23	1.00	655
30	22	2.73	2.43	0.89	615	2.55	2.27	0.89	650	2.38	2.11	0.89	673
30	24	2.88	2.21	0.77	638	2.70	2.08	0.77	667	2.55	1.96	0.77	696
30	26	3.03	1.97	0.65	661	2.85	1.85	0.65	690	2.68	1.74	0.65	719
31	18	2.45	2.45	1.00	568	2.25	2.25	1.00	603	2.08	2.08	1.00	626
31	20	2.58	2.58	1.00	592	2.40	2.40	1.00	621	2.23	2.23	1.00	655
31	22	2.73	2.53	0.93	615	2.55	2.37	0.93	650	2.38	2.21	0.93	673
31	24	2.88	2.33	0.81	638	2.70	2.19	0.81	667	2.55	2.07	0.81	696
31	26	3.03	2.09	0.69	661	2.85	1.97	0.69	690	2.68	1.85	0.69	719
32	18	2.45	2.45	1.00	568	2.25	2.25	1.00	603	2.08	2.08	1.00	626
32	20	2.58	2.58	1.00	592	2.40	2.40	1.00	621	2.23	2.23	1.00	655
32	22	2.73	2.64	0.97	615	2.55	2.47	0.97	650	2.38	2.30	0.97	673
32	24	2.88	2.44	0.85	638	2.70	2.30	0.85	667	2.55	2.17	0.85	696
32	26	3.03	2.21	0.73	661	2.85	2.08	0.73	690	2.68	1.95	0.73	719

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-FT35VGHZ

CAPACITY: 3.5 kW

SHF: 0.8

INPUT: 910 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)															
		21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	4.11	2.55	0.62	728	3.94	2.44	0.62	764	3.78	2.34	0.62	801	3.64	2.26	0.62	837
21	20	4.29	2.14	0.50	764	4.11	2.06	0.50	810	3.99	2.00	0.50	828	3.85	1.93	0.50	865
22	18	4.11	2.71	0.66	728	3.94	2.60	0.66	764	3.78	2.49	0.66	801	3.64	2.40	0.66	837
22	20	4.29	2.32	0.54	764	4.11	2.22	0.54	810	3.99	2.15	0.54	828	3.85	2.08	0.54	865
22	22	4.46	1.87	0.42	792	4.31	1.81	0.42	842	4.20	1.76	0.42	865	4.03	1.69	0.42	901
23	18	4.11	2.88	0.70	728	3.94	2.76	0.70	764	3.78	2.65	0.70	801	3.64	2.55	0.70	837
23	20	4.29	2.49	0.58	764	4.11	2.39	0.58	810	3.99	2.31	0.58	828	3.85	2.23	0.58	865
23	22	4.46	2.05	0.46	792	4.31	1.98	0.46	842	4.20	1.93	0.46	865	4.03	1.85	0.46	901
24	18	4.11	3.04	0.74	728	3.94	2.91	0.74	764	3.78	2.80	0.74	801	3.64	2.69	0.74	837
24	20	4.29	2.66	0.62	764	4.11	2.55	0.62	810	3.99	2.47	0.62	828	3.85	2.39	0.62	865
24	22	4.46	2.23	0.50	792	4.31	2.15	0.50	842	4.20	2.10	0.50	865	4.03	2.01	0.50	901
24	24	4.69	1.78	0.38	828	4.52	1.72	0.38	874	4.41	1.68	0.38	901	4.27	1.62	0.38	946
25	18	4.11	3.21	0.78	728	3.94	3.07	0.78	764	3.78	2.95	0.78	801	3.64	2.84	0.78	837
25	20	4.29	2.83	0.66	764	4.11	2.71	0.66	810	3.99	2.63	0.66	828	3.85	2.54	0.66	865
25	22	4.46	2.41	0.54	792	4.31	2.32	0.54	842	4.20	2.27	0.54	865	4.03	2.17	0.54	901
25	24	4.69	1.97	0.42	828	4.52	1.90	0.42	874	4.41	1.85	0.42	901	4.27	1.79	0.42	946
26	18	4.11	3.37	0.82	728	3.94	3.23	0.82	764	3.78	3.10	0.82	801	3.64	2.98	0.82	837
26	20	4.29	3.00	0.70	764	4.11	2.88	0.70	810	3.99	2.79	0.70	828	3.85	2.70	0.70	865
26	22	4.46	2.59	0.58	792	4.31	2.50	0.58	842	4.20	2.44	0.58	865	4.03	2.33	0.58	901
26	24	4.69	2.16	0.46	828	4.52	2.08	0.46	874	4.41	2.03	0.46	901	4.27	1.96	0.46	946
26	26	4.83	1.64	0.34	874	4.69	1.59	0.34	919	4.62	1.57	0.34	946	4.48	1.52	0.34	974
27	18	4.11	3.54	0.86	728	3.94	3.39	0.86	764	3.78	3.25	0.86	801	3.64	3.13	0.86	837
27	20	4.29	3.17	0.74	764	4.11	3.04	0.74	810	3.99	2.95	0.74	828	3.85	2.85	0.74	865
27	22	4.46	2.77	0.62	792	4.31	2.67	0.62	842	4.20	2.60	0.62	865	4.03	2.50	0.62	901
27	24	4.69	2.35	0.50	828	4.52	2.26	0.50	874	4.41	2.21	0.50	901	4.27	2.14	0.50	946
27	26	4.83	1.84	0.38	874	4.69	1.78	0.38	919	4.62	1.76	0.38	946	4.48	1.70	0.38	974
28	18	4.11	3.70	0.90	728	3.94	3.54	0.90	764	3.78	3.40	0.90	801	3.64	3.28	0.90	837
28	20	4.29	3.34	0.78	764	4.11	3.21	0.78	810	3.99	3.11	0.78	828	3.85	3.00	0.78	865
28	22	4.46	2.95	0.66	792	4.31	2.84	0.66	842	4.20	2.77	0.66	865	4.03	2.66	0.66	901
28	24	4.69	2.53	0.54	828	4.52	2.44	0.54	874	4.41	2.38	0.54	901	4.27	2.31	0.54	946
28	26	4.83	2.03	0.42	874	4.69	1.97	0.42	919	4.62	1.94	0.42	946	4.48	1.88	0.42	974
29	18	4.11	3.87	0.94	728	3.94	3.70	0.94	764	3.78	3.55	0.94	801	3.64	3.42	0.94	837
29	20	4.29	3.52	0.82	764	4.11	3.37	0.82	810	3.99	3.27	0.82	828	3.85	3.16	0.82	865
29	22	4.46	3.12	0.70	792	4.31	3.01	0.70	842	4.20	2.94	0.70	865	4.03	2.82	0.70	901
29	24	4.69	2.72	0.58	828	4.52	2.62	0.58	874	4.41	2.56	0.58	901	4.27	2.48	0.58	946
29	26	4.83	2.22	0.46	874	4.69	2.16	0.46	919	4.62	2.13	0.46	946	4.48	2.06	0.46	974
30	18	4.11	4.03	0.98	728	3.94	3.86	0.98	764	3.78	3.70	0.98	801	3.64	3.57	0.98	837
30	20	4.29	3.69	0.86	764	4.11	3.54	0.86	810	3.99	3.43	0.86	828	3.85	3.31	0.86	865
30	22	4.46	3.30	0.74	792	4.31	3.19	0.74	842	4.20	3.11	0.74	865	4.03	2.98	0.74	901
30	24	4.69	2.91	0.62	828	4.52	2.80	0.62	874	4.41	2.73	0.62	901	4.27	2.65	0.62	946
30	26	4.83	2.42	0.50	874	4.69	2.35	0.50	919	4.62	2.31	0.50	946	4.48	2.24	0.50	974
31	18	4.11	4.11	1.00	728	3.94	3.94	1.00	764	3.78	3.78	1.00	801	3.64	3.64	1.00	837
31	20	4.29	3.86	0.90	764	4.11	3.70	0.90	810	3.99	3.59	0.90	828	3.85	3.47	0.90	865
31	22	4.46	3.48	0.78	792	4.31	3.36	0.78	842	4.20	3.28	0.78	865	4.03	3.14	0.78	901
31	24	4.69	3.10	0.66	828	4.52	2.98	0.66	874	4.41	2.91	0.66	901	4.27	2.82	0.66	946
31	26	4.83	2.61	0.54	874	4.69	2.53	0.54	919	4.62	2.49	0.54	946	4.48	2.42	0.54	974
32	18	4.11	4.11	1.00	728	3.94	3.94	1.00	764	3.78	3.78	1.00	801	3.64	3.64	1.00	837
32	20	4.29	4.03	0.94	764	4.11	3.87	0.94	810	3.99	3.75	0.94	828	3.85	3.62	0.94	865
32	22	4.46	3.66	0.82	792	4.31	3.53	0.82	842	4.20	3.44	0.82	865	4.03	3.30	0.82	901
32	24	4.69	3.28	0.70	828	4.52	3.16	0.70	874	4.41	3.09	0.70	901	4.27	2.99	0.70	946
32	26	4.83	2.80	0.58	874	4.69	2.72	0.58	919	4.62	2.68	0.58	946	4.48	2.60	0.58	974

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-FT35VGHZ

CAPACITY: 3.5 kW

SHF: 0.8

INPUT: 910 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)											
		35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	3.43	2.13	0.62	892	3.15	1.95	0.62	946	2.91	1.80	0.62	983
21	20	3.61	1.80	0.50	928	3.36	1.68	0.50	974	3.12	1.56	0.50	1028
22	18	3.43	2.26	0.66	892	3.15	2.08	0.66	946	2.91	1.92	0.66	983
22	20	3.61	1.95	0.54	928	3.36	1.81	0.54	974	3.12	1.68	0.54	1028
22	22	3.82	1.60	0.42	965	3.57	1.50	0.42	1019	3.33	1.40	0.42	1056
23	18	3.43	2.40	0.70	892	3.15	2.21	0.70	946	2.91	2.03	0.70	983
23	20	3.61	2.09	0.58	928	3.36	1.95	0.58	974	3.12	1.81	0.58	1028
23	22	3.82	1.75	0.46	965	3.57	1.64	0.46	1019	3.33	1.53	0.46	1056
24	18	3.43	2.54	0.74	892	3.15	2.33	0.74	946	2.91	2.15	0.74	983
24	20	3.61	2.24	0.62	928	3.36	2.08	0.62	974	3.12	1.93	0.62	1028
24	22	3.82	1.91	0.50	965	3.57	1.79	0.50	1019	3.33	1.66	0.50	1056
24	24	4.03	1.53	0.38	1001	3.78	1.44	0.38	1047	3.57	1.36	0.38	1092
25	18	3.43	2.68	0.78	892	3.15	2.46	0.78	946	2.91	2.27	0.78	983
25	20	3.61	2.38	0.66	928	3.36	2.22	0.66	974	3.12	2.06	0.66	1028
25	22	3.82	2.06	0.54	965	3.57	1.93	0.54	1019	3.33	1.80	0.54	1056
25	24	4.03	1.69	0.42	1001	3.78	1.59	0.42	1047	3.57	1.50	0.42	1092
26	18	3.43	2.81	0.82	892	3.15	2.58	0.82	946	2.91	2.38	0.82	983
26	20	3.61	2.52	0.70	928	3.36	2.35	0.70	974	3.12	2.18	0.70	1028
26	22	3.82	2.21	0.58	965	3.57	2.07	0.58	1019	3.33	1.93	0.58	1056
26	24	4.03	1.85	0.46	1001	3.78	1.74	0.46	1047	3.57	1.64	0.46	1092
26	26	4.24	1.44	0.34	1037	3.99	1.36	0.34	1083	3.75	1.27	0.34	1128
27	18	3.43	2.95	0.86	892	3.15	2.71	0.86	946	2.91	2.50	0.86	983
27	20	3.61	2.67	0.74	928	3.36	2.49	0.74	974	3.12	2.31	0.74	1028
27	22	3.82	2.37	0.62	965	3.57	2.21	0.62	1019	3.33	2.06	0.62	1056
27	24	4.03	2.01	0.50	1001	3.78	1.89	0.50	1047	3.57	1.79	0.50	1092
27	26	4.24	1.61	0.38	1037	3.99	1.52	0.38	1083	3.75	1.42	0.38	1128
28	18	3.43	3.09	0.90	892	3.15	2.84	0.90	946	2.91	2.61	0.90	983
28	20	3.61	2.81	0.78	928	3.36	2.62	0.78	974	3.12	2.43	0.78	1028
28	22	3.82	2.52	0.66	965	3.57	2.36	0.66	1019	3.33	2.19	0.66	1056
28	24	4.03	2.17	0.54	1001	3.78	2.04	0.54	1047	3.57	1.93	0.54	1092
28	26	4.24	1.78	0.42	1037	3.99	1.68	0.42	1083	3.75	1.57	0.42	1128
29	18	3.43	3.22	0.94	892	3.15	2.96	0.94	946	2.91	2.73	0.94	983
29	20	3.61	2.96	0.82	928	3.36	2.76	0.82	974	3.12	2.55	0.82	1028
29	22	3.82	2.67	0.70	965	3.57	2.50	0.70	1019	3.33	2.33	0.70	1056
29	24	4.03	2.33	0.58	1001	3.78	2.19	0.58	1047	3.57	2.07	0.58	1092
29	26	4.24	1.95	0.46	1037	3.99	1.84	0.46	1083	3.75	1.72	0.46	1128
30	18	3.43	3.36	0.98	892	3.15	3.09	0.98	946	2.91	2.85	0.98	983
30	20	3.61	3.10	0.86	928	3.36	2.89	0.86	974	3.12	2.68	0.86	1028
30	22	3.82	2.82	0.74	965	3.57	2.64	0.74	1019	3.33	2.46	0.74	1056
30	24	4.03	2.50	0.62	1001	3.78	2.34	0.62	1047	3.57	2.21	0.62	1092
30	26	4.24	2.12	0.50	1037	3.99	2.00	0.50	1083	3.75	1.87	0.50	1128
31	18	3.43	3.43	1.00	892	3.15	3.15	1.00	946	2.91	2.91	1.00	983
31	20	3.61	3.24	0.90	928	3.36	3.02	0.90	974	3.12	2.80	0.90	1028
31	22	3.82	2.98	0.78	965	3.57	2.78	0.78	1019	3.33	2.59	0.78	1056
31	24	4.03	2.66	0.66	1001	3.78	2.49	0.66	1047	3.57	2.36	0.66	1092
31	26	4.24	2.29	0.54	1037	3.99	2.15	0.54	1083	3.75	2.02	0.54	1128
32	18	3.43	3.43	1.00	892	3.15	3.15	1.00	946	2.91	2.91	1.00	983
32	20	3.61	3.39	0.94	928	3.36	3.16	0.94	974	3.12	2.93	0.94	1028
32	22	3.82	3.13	0.82	965	3.57	2.93	0.82	1019	3.33	2.73	0.82	1056
32	24	4.03	2.82	0.70	1001	3.78	2.65	0.70	1047	3.57	2.50	0.70	1092
32	26	4.24	2.46	0.58	1037	3.99	2.31	0.58	1083	3.75	2.17	0.58	1128

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency

MUZ-FT50VGHZ

CAPACITY: 5.0 kW

SHF: 0.69

INPUT: 1630 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)															
		21				25				27				30			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	5.88	3.00	0.51	1304	5.63	2.87	0.51	1369	5.40	2.75	0.51	1434	5.20	2.65	0.51	1500
21	20	6.13	2.39	0.39	1369	5.88	2.29	0.39	1451	5.70	2.22	0.39	1483	5.50	2.15	0.39	1549
22	18	5.88	3.23	0.55	1304	5.63	3.09	0.55	1369	5.40	2.97	0.55	1434	5.20	2.86	0.55	1500
22	20	6.13	2.63	0.43	1369	5.88	2.53	0.43	1451	5.70	2.45	0.43	1483	5.50	2.37	0.43	1549
22	22	6.38	1.98	0.31	1418	6.15	1.91	0.31	1508	6.00	1.86	0.31	1549	5.75	1.78	0.31	1614
23	18	5.88	3.47	0.59	1304	5.63	3.32	0.59	1369	5.40	3.19	0.59	1434	5.20	3.07	0.59	1500
23	20	6.13	2.88	0.47	1369	5.88	2.76	0.47	1451	5.70	2.68	0.47	1483	5.50	2.59	0.47	1549
23	22	6.38	2.23	0.35	1418	6.15	2.15	0.35	1508	6.00	2.10	0.35	1549	5.75	2.01	0.35	1614
24	18	5.88	3.70	0.63	1304	5.63	3.54	0.63	1369	5.40	3.40	0.63	1434	5.20	3.28	0.63	1500
24	20	6.13	3.12	0.51	1369	5.88	3.00	0.51	1451	5.70	2.91	0.51	1483	5.50	2.81	0.51	1549
24	22	6.38	2.49	0.39	1418	6.15	2.40	0.39	1508	6.00	2.34	0.39	1549	5.75	2.24	0.39	1614
24	24	6.70	1.81	0.27	1483	6.45	1.74	0.27	1565	6.30	1.70	0.27	1614	6.10	1.65	0.27	1695
25	18	5.88	3.94	0.67	1304	5.63	3.77	0.67	1369	5.40	3.62	0.67	1434	5.20	3.48	0.67	1500
25	20	6.13	3.37	0.55	1369	5.88	3.23	0.55	1451	5.70	3.14	0.55	1483	5.50	3.03	0.55	1549
25	22	6.38	2.74	0.43	1418	6.15	2.64	0.43	1508	6.00	2.58	0.43	1549	5.75	2.47	0.43	1614
25	24	6.70	2.08	0.31	1483	6.45	2.00	0.31	1565	6.30	1.95	0.31	1614	6.10	1.89	0.31	1695
26	18	5.88	4.17	0.71	1304	5.63	3.99	0.71	1369	5.40	3.83	0.71	1434	5.20	3.69	0.71	1500
26	20	6.13	3.61	0.59	1369	5.88	3.47	0.59	1451	5.70	3.36	0.59	1483	5.50	3.25	0.59	1549
26	22	6.38	3.00	0.47	1418	6.15	2.89	0.47	1508	6.00	2.82	0.47	1549	5.75	2.70	0.47	1614
26	24	6.70	2.35	0.35	1483	6.45	2.26	0.35	1565	6.30	2.21	0.35	1614	6.10	2.14	0.35	1695
26	26	6.90	1.59	0.23	1565	6.70	1.54	0.23	1646	6.60	1.52	0.23	1695	6.40	1.47	0.23	1744
27	18	5.88	4.41	0.75	1304	5.63	4.22	0.75	1369	5.40	4.05	0.75	1434	5.20	3.90	0.75	1500
27	20	6.13	3.86	0.63	1369	5.88	3.70	0.63	1451	5.70	3.59	0.63	1483	5.50	3.47	0.63	1549
27	22	6.38	3.25	0.51	1418	6.15	3.14	0.51	1508	6.00	3.06	0.51	1549	5.75	2.93	0.51	1614
27	24	6.70	2.61	0.39	1483	6.45	2.52	0.39	1565	6.30	2.46	0.39	1614	6.10	2.38	0.39	1695
27	26	6.90	1.86	0.27	1565	6.70	1.81	0.27	1646	6.60	1.78	0.27	1695	6.40	1.73	0.27	1744
28	18	5.88	4.64	0.79	1304	5.63	4.44	0.79	1369	5.40	4.27	0.79	1434	5.20	4.11	0.79	1500
28	20	6.13	4.10	0.67	1369	5.88	3.94	0.67	1451	5.70	3.82	0.67	1483	5.50	3.69	0.67	1549
28	22	6.38	3.51	0.55	1418	6.15	3.38	0.55	1508	6.00	3.30	0.55	1549	5.75	3.16	0.55	1614
28	24	6.70	2.88	0.43	1483	6.45	2.77	0.43	1565	6.30	2.71	0.43	1614	6.10	2.62	0.43	1695
28	26	6.90	2.14	0.31	1565	6.70	2.08	0.31	1646	6.60	2.05	0.31	1695	6.40	1.98	0.31	1744
29	18	5.88	4.88	0.83	1304	5.63	4.67	0.83	1369	5.40	4.48	0.83	1434	5.20	4.32	0.83	1500
29	20	6.13	4.35	0.71	1369	5.88	4.17	0.71	1451	5.70	4.05	0.71	1483	5.50	3.91	0.71	1549
29	22	6.38	3.76	0.59	1418	6.15	3.63	0.59	1508	6.00	3.54	0.59	1549	5.75	3.39	0.59	1614
29	24	6.70	3.15	0.47	1483	6.45	3.03	0.47	1565	6.30	2.96	0.47	1614	6.10	2.87	0.47	1695
29	26	6.90	2.42	0.35	1565	6.70	2.35	0.35	1646	6.60	2.31	0.35	1695	6.40	2.24	0.35	1744
30	18	5.88	5.11	0.87	1304	5.63	4.89	0.87	1369	5.40	4.70	0.87	1434	5.20	4.52	0.87	1500
30	20	6.13	4.59	0.75	1369	5.88	4.41	0.75	1451	5.70	4.28	0.75	1483	5.50	4.13	0.75	1549
30	22	6.38	4.02	0.63	1418	6.15	3.87	0.63	1508	6.00	3.78	0.63	1549	5.75	3.62	0.63	1614
30	24	6.70	3.42	0.51	1483	6.45	3.29	0.51	1565	6.30	3.21	0.51	1614	6.10	3.11	0.51	1695
30	26	6.90	2.69	0.39	1565	6.70	2.61	0.39	1646	6.60	2.57	0.39	1695	6.40	2.50	0.39	1744
31	18	5.88	5.35	0.91	1304	5.63	5.12	0.91	1369	5.40	4.91	0.91	1434	5.20	4.73	0.91	1500
31	20	6.13	4.84	0.79	1369	5.88	4.64	0.79	1451	5.70	4.50	0.79	1483	5.50	4.35	0.79	1549
31	22	6.38	4.27	0.67	1418	6.15	4.12	0.67	1508	6.00	4.02	0.67	1549	5.75	3.85	0.67	1614
31	24	6.70	3.69	0.55	1483	6.45	3.55	0.55	1565	6.30	3.47	0.55	1614	6.10	3.36	0.55	1695
31	26	6.90	2.97	0.43	1565	6.70	2.88	0.43	1646	6.60	2.84	0.43	1695	6.40	2.75	0.43	1744
32	18	5.88	5.58	0.95	1304	5.63	5.34	0.95	1369	5.40	5.13	0.95	1434	5.20	4.94	0.95	1500
32	20	6.13	5.08	0.83	1369	5.88	4.88	0.83	1451	5.70	4.73	0.83	1483	5.50	4.57	0.83	1549
32	22	6.38	4.53	0.71	1418	6.15	4.37	0.71	1508	6.00	4.26	0.71	1549	5.75	4.08	0.71	1614
32	24	6.70	3.95	0.59	1483	6.45	3.81	0.59	1565	6.30	3.72	0.59	1614	6.10	3.60	0.59	1695
32	26	6.90	3.24	0.47	1565	6.70	3.15	0.47	1646	6.60	3.10	0.47	1695	6.40	3.01	0.47	1744

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature

PERFORMANCE DATA COOL operation at Rated frequency
MUZ-FT50VGHZ

CAPACITY: 5.0 kW SHF: 0.69 INPUT: 1630 W

INDOOR DB (°C)	INDOOR WB (°C)	OUTDOOR DB (°C)											
		35				40				46			
		Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT	Q	SHC	SHF	INPUT
21	18	4.90	2.50	0.51	1597	4.50	2.30	0.51	1695	4.15	2.12	0.51	1760
21	20	5.15	2.01	0.39	1663	4.80	1.87	0.39	1744	4.45	1.74	0.39	1842
22	18	4.90	2.70	0.55	1597	4.50	2.48	0.55	1695	4.15	2.28	0.55	1760
22	20	5.15	2.21	0.43	1663	4.80	2.06	0.43	1744	4.45	1.91	0.43	1842
22	22	5.45	1.69	0.31	1728	5.10	1.58	0.31	1826	4.75	1.47	0.31	1891
23	18	4.90	2.89	0.59	1597	4.50	2.66	0.59	1695	4.15	2.45	0.59	1760
23	20	5.15	2.42	0.47	1663	4.80	2.26	0.47	1744	4.45	2.09	0.47	1842
23	22	5.45	1.91	0.35	1728	5.10	1.79	0.35	1826	4.75	1.66	0.35	1891
24	18	4.90	3.09	0.63	1597	4.50	2.84	0.63	1695	4.15	2.61	0.63	1760
24	20	5.15	2.63	0.51	1663	4.80	2.45	0.51	1744	4.45	2.27	0.51	1842
24	22	5.45	2.13	0.39	1728	5.10	1.99	0.39	1826	4.75	1.85	0.39	1891
24	24	5.75	1.55	0.27	1793	5.40	1.46	0.27	1875	5.10	1.38	0.27	1956
25	18	4.90	3.28	0.67	1597	4.50	3.02	0.67	1695	4.15	2.78	0.67	1760
25	20	5.15	2.83	0.55	1663	4.80	2.64	0.55	1744	4.45	2.45	0.55	1842
25	22	5.45	2.34	0.43	1728	5.10	2.19	0.43	1826	4.75	2.04	0.43	1891
25	24	5.75	1.78	0.31	1793	5.40	1.67	0.31	1875	5.10	1.58	0.31	1956
26	18	4.90	3.48	0.71	1597	4.50	3.20	0.71	1695	4.15	2.95	0.71	1760
26	20	5.15	3.04	0.59	1663	4.80	2.83	0.59	1744	4.45	2.63	0.59	1842
26	22	5.45	2.56	0.47	1728	5.10	2.40	0.47	1826	4.75	2.23	0.47	1891
26	24	5.75	2.01	0.35	1793	5.40	1.89	0.35	1875	5.10	1.79	0.35	1956
26	26	6.05	1.39	0.23	1858	5.70	1.31	0.23	1940	5.35	1.23	0.23	2021
27	18	4.90	3.68	0.75	1597	4.50	3.38	0.75	1695	4.15	3.11	0.75	1760
27	20	5.15	3.24	0.63	1663	4.80	3.02	0.63	1744	4.45	2.80	0.63	1842
27	22	5.45	2.78	0.51	1728	5.10	2.60	0.51	1826	4.75	2.42	0.51	1891
27	24	5.75	2.24	0.39	1793	5.40	2.11	0.39	1875	5.10	1.99	0.39	1956
27	26	6.05	1.63	0.27	1858	5.70	1.54	0.27	1940	5.35	1.44	0.27	2021
28	18	4.90	3.87	0.79	1597	4.50	3.56	0.79	1695	4.15	3.28	0.79	1760
28	20	5.15	3.45	0.67	1663	4.80	3.22	0.67	1744	4.45	2.98	0.67	1842
28	22	5.45	3.00	0.55	1728	5.10	2.81	0.55	1826	4.75	2.61	0.55	1891
28	24	5.75	2.47	0.43	1793	5.40	2.32	0.43	1875	5.10	2.19	0.43	1956
28	26	6.05	1.88	0.31	1858	5.70	1.77	0.31	1940	5.35	1.66	0.31	2021
29	18	4.90	4.07	0.83	1597	4.50	3.74	0.83	1695	4.15	3.44	0.83	1760
29	20	5.15	3.66	0.71	1663	4.80	3.41	0.71	1744	4.45	3.16	0.71	1842
29	22	5.45	3.22	0.59	1728	5.10	3.01	0.59	1826	4.75	2.80	0.59	1891
29	24	5.75	2.70	0.47	1793	5.40	2.54	0.47	1875	5.10	2.40	0.47	1956
29	26	6.05	2.12	0.35	1858	5.70	2.00	0.35	1940	5.35	1.87	0.35	2021
30	18	4.90	4.26	0.87	1597	4.50	3.92	0.87	1695	4.15	3.61	0.87	1760
30	20	5.15	3.86	0.75	1663	4.80	3.60	0.75	1744	4.45	3.34	0.75	1842
30	22	5.45	3.43	0.63	1728	5.10	3.21	0.63	1826	4.75	2.99	0.63	1891
30	24	5.75	2.93	0.51	1793	5.40	2.75	0.51	1875	5.10	2.60	0.51	1956
30	26	6.05	2.36	0.39	1858	5.70	2.22	0.39	1940	5.35	2.09	0.39	2021
31	18	4.90	4.46	0.91	1597	4.50	4.10	0.91	1695	4.15	3.78	0.91	1760
31	20	5.15	4.07	0.79	1663	4.80	3.79	0.79	1744	4.45	3.52	0.79	1842
31	22	5.45	3.65	0.67	1728	5.10	3.42	0.67	1826	4.75	3.18	0.67	1891
31	24	5.75	3.16	0.55	1793	5.40	2.97	0.55	1875	5.10	2.81	0.55	1956
31	26	6.05	2.60	0.43	1858	5.70	2.45	0.43	1940	5.35	2.30	0.43	2021
32	18	4.90	4.66	0.95	1597	4.50	4.28	0.95	1695	4.15	3.94	0.95	1760
32	20	5.15	4.27	0.83	1663	4.80	3.98	0.83	1744	4.45	3.69	0.83	1842
32	22	5.45	3.87	0.71	1728	5.10	3.62	0.71	1826	4.75	3.37	0.71	1891
32	24	5.75	3.39	0.59	1793	5.40	3.19	0.59	1875	5.10	3.01	0.59	1956
32	26	6.05	2.84	0.47	1858	5.70	2.68	0.47	1940	5.35	2.51	0.47	2021

NOTE Q : Total capacity (kW) SHF : Sensible heat factor DB : Dry-bulb temperature
 SHC : Sensible heat capacity (kW) INPUT : Total power input (W) WB : Wet-bulb temperature



PERFORMANCE DATA HEAT operation at Rated frequency
MUZ-FT25VGHZ

CAPACITY: 3.2 kW INPUT: 760 W

INDOOR DB (°C)	OUTDOOR WB (°C)																			
	-25		-20		-15		-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	0.80	205	1.22	304	1.60	395	2.02	494	2.43	593	2.85	669	3.26	722	3.68	768	4.06	790	4.48	806
21	0.74	220	1.12	319	1.50	418	1.92	532	2.30	631	2.72	699	3.10	752	3.52	790	3.90	813	4.30	844
26	0.51	243	0.90	342	1.31	456	1.73	570	2.14	669	2.53	737	2.94	790	3.36	828	3.74	851	4.16	874

MUZ-FT35VGHZ

CAPACITY: 4.0 kW INPUT: 1020 W

INDOOR DB (°C)	OUTDOOR WB (°C)																			
	-25		-20		-15		-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	1.00	275	1.52	408	2.00	530	2.52	663	3.04	796	3.56	898	4.08	969	4.60	1030	5.08	1061	5.60	1081
21	0.92	296	1.40	428	1.88	561	2.40	714	2.88	847	3.40	938	3.88	1010	4.40	1061	4.88	1091	5.38	1132
26	0.64	326	1.12	459	1.64	612	2.16	765	2.68	898	3.16	989	3.68	1061	4.20	1112	4.68	1142	5.20	1173

MUZ-FT50VGHZ

CAPACITY: 5.0 kW INPUT: 1300 W


INDOOR DB (°C)	OUTDOOR WB (°C)																			
	-25		-20		-15		-10		-5		0		5		10		15		20	
	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT	Q	INPUT
15	1.25	351	1.90	520	2.50	676	3.15	845	3.80	1014	4.45	1144	5.10	1235	5.75	1313	6.35	1352	7.00	1378
21	1.15	377	1.75	546	2.35	715	3.00	910	3.60	1079	4.25	1196	4.85	1287	5.50	1352	6.10	1391	6.73	1443
26	0.80	416	1.40	585	2.05	780	2.70	975	3.35	1144	3.95	1261	4.60	1352	5.25	1417	5.85	1456	6.50	1495

NOTE: Q: Total capacity (kW) INPUT : Total power input (W) DB: Dry-bulb temperature WB: Wet-bulb temperature

MUZ-FT25VGHZ MUZ-FT35VGHZ MUZ-FT50VGHZ

10-1. OUTDOOR FAN MOTOR CONTROL


The fan motor turns ON/OFF, interlocking with the compressor.
 [ON] The fan motor turns ON 5 seconds before the compressor starts up.
 [OFF] The fan motor turns OFF 15 seconds after the compressor has stopped running.

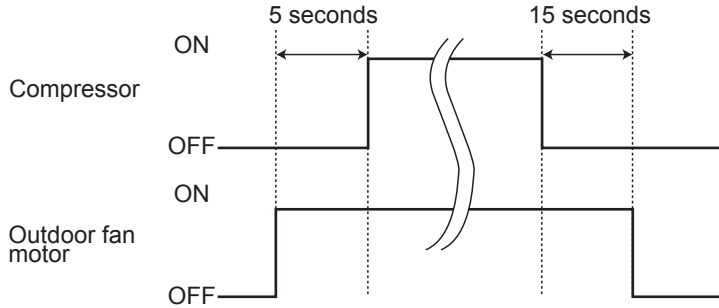

10-2. R.V. COIL CONTROL

Heating ON
 Cooling OFF
 Dry OFF

NOTE: The 4-way valve reverses for 5 seconds right before startup of the compressor.

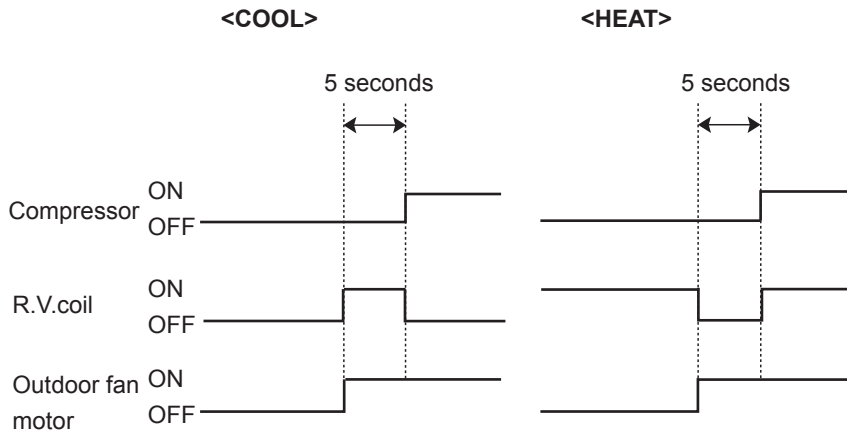

10-3. RELATION BETWEEN MAIN SENSOR AND ACTUATOR

Sensor	Purpose	Actuator					
		Compressor	LEV	Outdoor fan motor	R.V. coil	Indoor fan motor	Defrost heater
Discharge temperature thermistor	Protection	○	○				
Indoor coil temperature thermistor	Cooling: Coil frost prevention	○					
	Heating: High pressure protection	○	○				
Defrost thermistor	Heating: Defrosting	○	○	○	○	○	
Fin temperature thermistor	Protection	○		○			
Ambient temperature thermistor	Cooling: Low ambient temperature operation	○	○	○			
	Heating: Defrosting (Heater)						○
Outdoor heat exchanger temperature thermistor	Cooling: Low ambient temperature operation	○	○	○			
	Cooling: High pressure protection	○	○	○			

MUZ-FT25VGHZ MUZ-FT35VGHZ MUZ-FT50VGHZ**11-1. CHANGE IN DEFROST SETTING****Changing defrost finish temperature**

<JS> To change the defrost finish temperature, cut/solder the JS wire of the outdoor inverter P.C. board.
(Refer to 12-6.1)

Jumper wire		Defrost finish temperature (°C)
JS	Soldered (Initial setting)	8
	None (Cut)	13

11-2. PRE-HEAT CONTROL SETTING**PRE-HEAT CONTROL**

When moisture gets into the refrigerant cycle, it may interfere the startup of the compressor at low outside temperature. The pre-heat control prevents this interference. The pre-heat control turns ON when the discharge temperature thermistor is 20°C or below. When the pre-heat control turns ON, the compressor is energized. (About 50 W)

Pre-heat control setting

<JK>

ON: To activate the pre-heat control, cut the JK wire of the inverter P.C. board.

OFF: To deactivate the pre-heat control, solder the JK wire of the inverter P.C. board.

(Refer to 12-6.1)

NOTE: When the inverter P.C. board is replaced, check the jumper wires, and cut/solder them if necessary.

MUZ-FT25VGHZ MUZ-FT35VGHZ MUZ-FT50VGHZ**12-1. CAUTIONS ON TROUBLESHOOTING****1. Before troubleshooting, check the following**

- 1) Check the power supply voltage.
- 2) Check the indoor/outdoor connecting wire for miswiring.

2. Take care of the following during servicing

- 1) Before servicing the air conditioner, be sure to turn OFF the main unit first with the remote controller, and then after confirming the horizontal vane is closed, turn OFF the breaker and/or disconnect the power plug.
- 2) Be sure to turn OFF the power supply before removing the front panel, the cabinet, the top panel, and the electronic control P.C. board.
- 3) When removing the electrical parts, be careful of the residual voltage of smoothing capacitor.
- 4) When removing the electronic control P.C. board, hold the edge of the board with care NOT to apply stress on the components.
- 5) When connecting or disconnecting the connectors, hold the connector housing. DO NOT pull the lead wires.

<Incorrect>

**Lead wiring**

<Correct>

**Connector housing****3. Troubleshooting procedure**

- 1) Check if the OPERATION INDICATOR lamp on the indoor unit is blinking on and off to indicate an abnormality.
To make sure, check how many times the OPERATION INDICATOR lamp is blinking on and off before starting service work.
- 2) Before servicing, verify that all connectors and terminals are connected properly.
- 3) When the electronic control P.C. board seems to be defective, check for disconnection of the copper foil pattern and burnt or discolored components
- 4) Refer to 12-2 and 12-3.


12-2. FAILURE MODE RECALL FUNCTION

Outline of the function

This air conditioner can memorize the abnormal condition which has occurred once.


Even though LED indication listed on the troubleshooting check table (12-3.) disappears, the memorized failure details can be recalled.

1. Flow chart of failure mode recall function for the indoor/outdoor unit

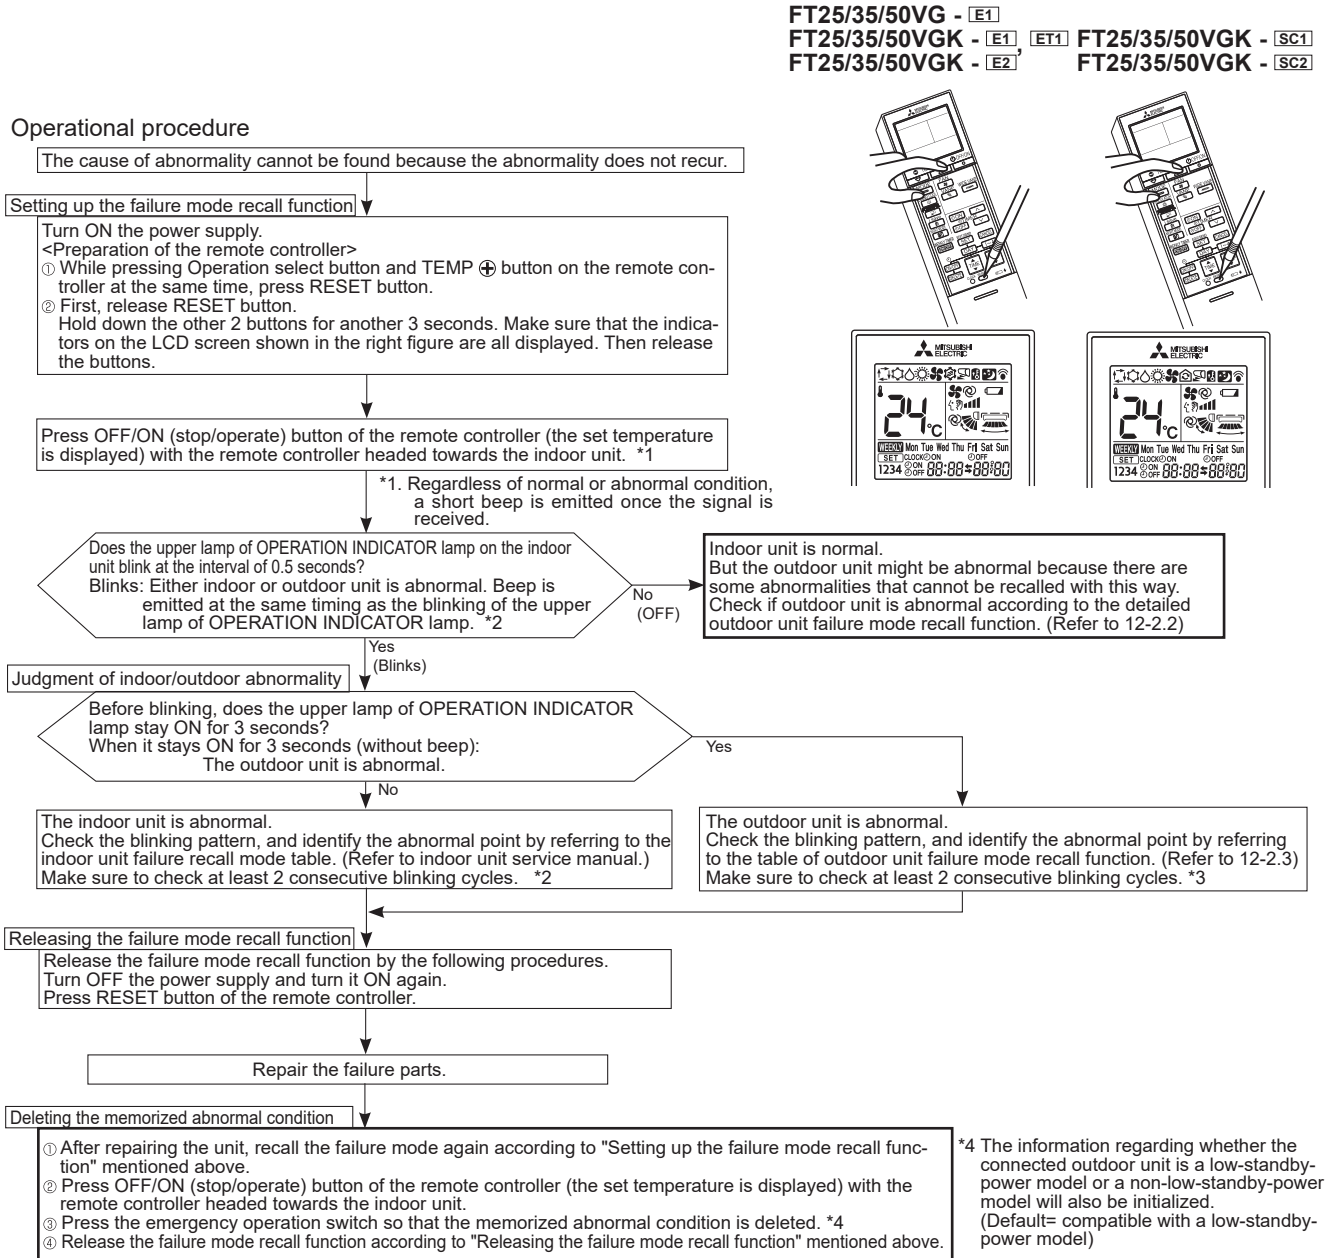


NOTE: 1. Make sure to release the failure mode recall function after it is set up, otherwise the unit cannot operate properly.
 2. If the abnormal condition is not deleted from the memory, the last abnormal condition is kept memorized.

*2. Blinking pattern when the indoor unit is abnormal:


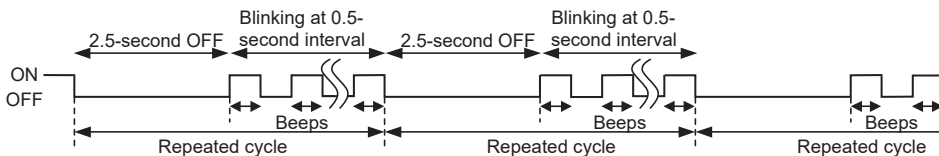


*3. Blinking pattern when the outdoor unit is abnormal:

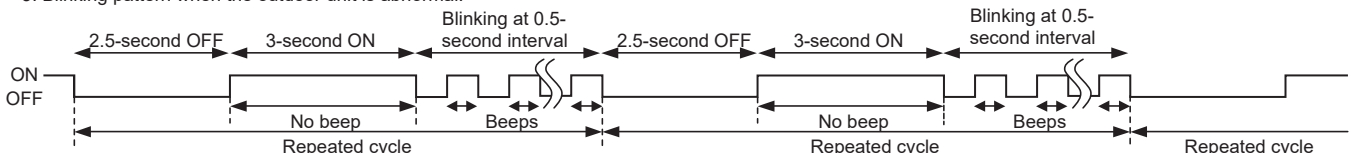

2. Flow chart of the detailed outdoor unit failure mode recall function

Operational procedure

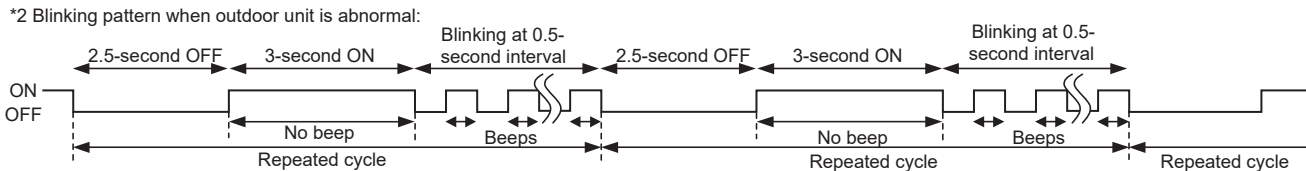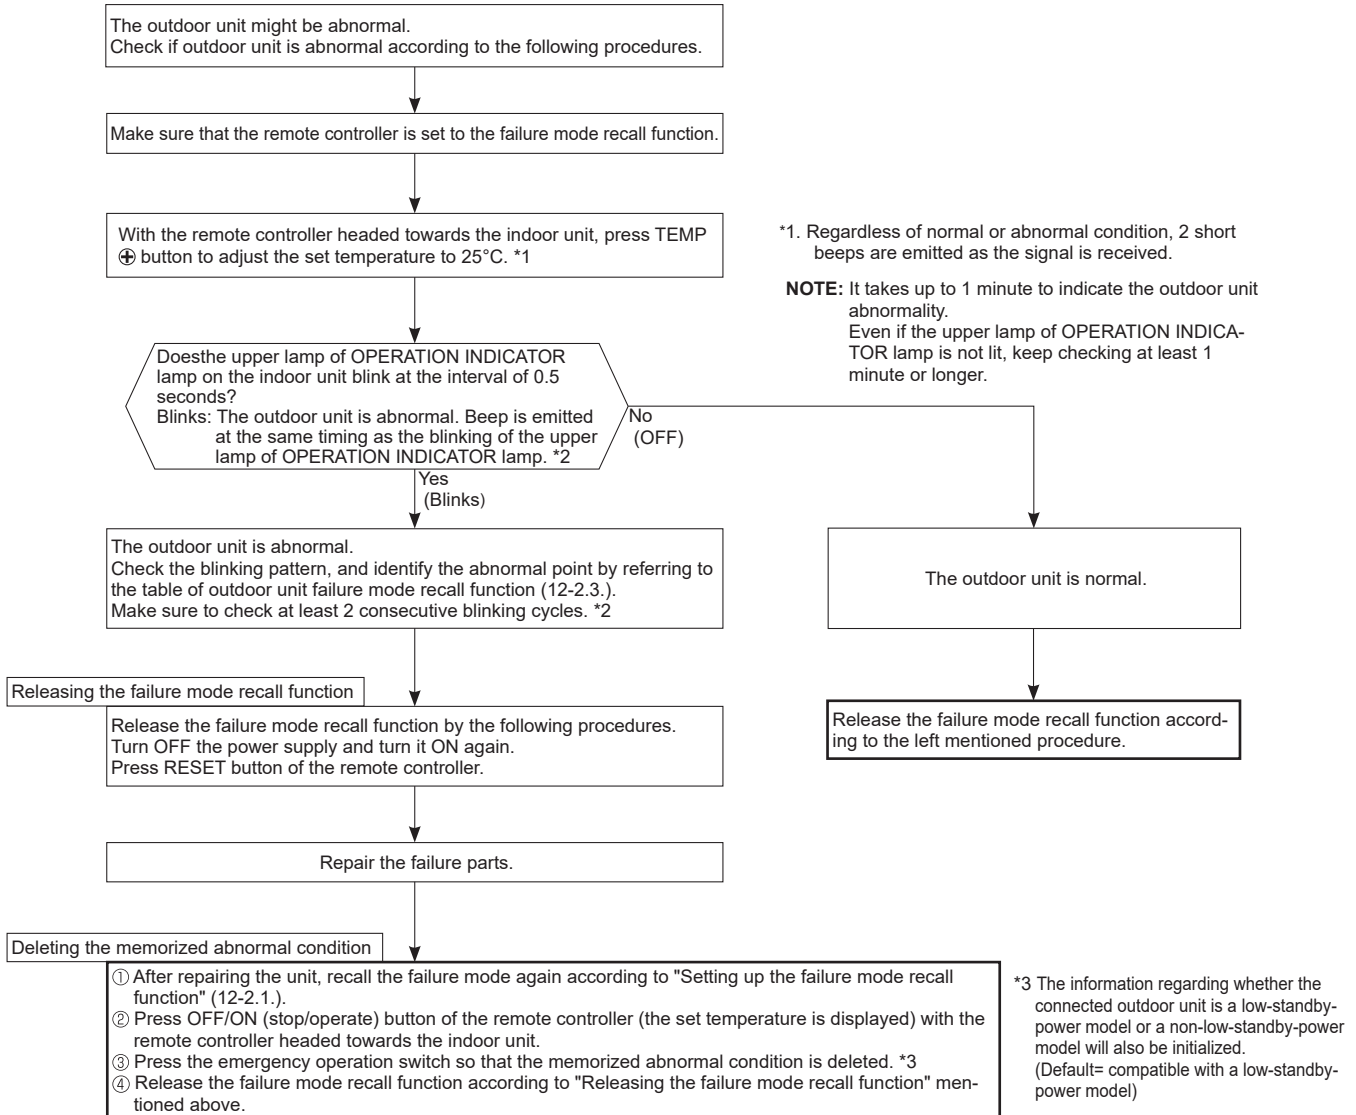



3. Table of outdoor unit failure mode recall function

NOTE: Blinking patterns of this mode differ from the ones of TROUBLESHOOTING CHECK TABLE (12-3.).

Upper lamp of OPERATION INDICATOR lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)	Condition	Remedy	Indoor/outdoor unit failure mode recall function	Outdoor unit failure mode recall function
OFF	None (Normal)	—	—	—	—	—
1-time blink 2.5 seconds OFF	Indoor/outdoor communication, receiving error	—	Any signals from the inverter P.C. board cannot be received normally for 3 minutes.	•Refer to 12-5. ㉔ How to check miswiring and serial signal error.	○	○
	Indoor/outdoor communication, receiving error	—	Although the inverter P.C. board sends signal "0", signal "1" has been received 30 consecutive times.	•Refer to 12-5. ㉔ How to check miswiring and serial signal error.		
2-time blink 2.5 seconds OFF	Outdoor power system	—	Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started.	•Reconnect connectors. •Refer to 12-5. ㉕ How to check inverter/compressor". •Check stop valve.	○	○
3-time blink 2.5 seconds OFF	Discharge temperature thermistor	1-time blink every 2.5 seconds	Thermistor shorts or opens during compressor running.	•Refer to 12-5. ㉖ "Check of outdoor thermistors". Defective outdoor thermistors can be identified by checking the blinking pattern of LED. •Replace the inverter P.C. board.	○	○
	Defrost thermistor	—				
	Fin temperature thermistor	3-time blink 2.5 seconds OFF				
	Ambient temperature thermistor	2-time blink 2.5 seconds OFF				
	Outdoor heat exchanger temperature thermistor	—				
P.C. board temperature thermistor	4-time blink 2.5 seconds OFF					
4-time blink 2.5 seconds OFF	Overcurrent	11-time blink 2.5 seconds OFF	Large current flows into power module (IC700).	•Reconnect compressor connector. •Refer to 12-5. ㉕ How to check inverter/compressor". •Check stop valve.	—	○
	Compressor synchronous abnormality (Compressor startup failure protection)	12-time blink 2.5 seconds OFF	Waveform of compressor current is distorted.	•Reconnect compressor connector. •Refer to 12-5. ㉕ How to check inverter/compressor".	—	○
5-time blink 2.5 seconds OFF	Discharge temperature	—	Temperature of discharge temperature thermistor exceeds 116°C, compressor stops. Compressor can restart if discharge temperature thermistor reads 100°C or less 3 minutes later.	•Check refrigerant circuit and refrigerant amount. •Refer to 12-5. ㉗ Check of LEV".	—	○
6-time blink 2.5 seconds OFF	High pressure	—	Temperature of indoor coil thermistor exceeds 70°C in HEAT mode. Temperature of defrost thermistor exceeds 70°C in COOL mode.	•Check refrigerant circuit and refrigerant amount. •Check stop valve.	—	○
7-time blink 2.5 seconds OFF	Fin temperature/P.C. board temperature	7-time blink 2.5 seconds OFF	Temperature of fin temperature thermistor on the inverter P.C. board exceeds 75 ~ 86°C, or temperature of P.C. board temperature thermistor on the inverter P.C. board exceeds 72 ~ 85°C.	•Check around outdoor unit. •Check outdoor unit air passage. •Refer to 12-5. ㉘ Check of outdoor fan motor".	—	○
8-time blink 2.5 seconds OFF	Outdoor fan motor	—	Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan startup.	•Refer to 12-5. ㉘ Check of outdoor fan motor". Refer to 12-5. ㉙ Check of inverter P.C. board".	—	○
9-time blink 2.5 seconds OFF	Nonvolatile memory data	5-time blink 2.5 seconds OFF	Nonvolatile memory data cannot be read properly.	•Replace the inverter P.C. board.	○	○
	Power module (IC700)	6-time blink 2.5 seconds OFF	The interface short circuit occurs in the output of the power module (IC700). The compressor winding shorts circuit.	•Refer to 12-5. ㉕ How to check inverter/compressor".	—	

NOTE: Blinking patterns of this mode differ from the ones of TROUBLESHOOTING CHECK TABLE (12-3.).

Upper lamp of OPERATION INDICATOR lamp (Indoor unit)	Abnormal point (Failure mode/protection)	LED indication (Outdoor P.C. board)	Condition	Remedy	Indoor/outdoor unit failure mode recall function	Outdoor unit failure mode recall function
10-time blink 2.5 seconds OFF	Discharge temperature	—	Temperature of discharge temperature thermistor has been 50°C or less for 20 minutes.	<ul style="list-style-type: none"> Refer to 12-5.⑧"Check of LEV". Check refrigerant circuit and refrigerant amount. 	—	○
11-time blink 2.5 seconds OFF	Bus-bar voltage (DC)	8-time blink 2.5 seconds OFF	Bus-bar voltage of inverter cannot be detected normally.	<ul style="list-style-type: none"> Refer to 12-5.⑨"How to check inverter/compressor". 	—	○
	Each phase current of compressor	9-time blink 2.5 seconds OFF	Each phase current of compressor cannot be detected normally.			
14-time blink 2.5 seconds OFF	Stop valve (Closed valve)	14-time blink 2.5 seconds OFF	Closed valve is detected by compressor current.	<ul style="list-style-type: none"> Check stop valve. 	○	○
	4-way valve/ Pipe temperature	16-time blink 2.5 seconds OFF	The 4-way valve does not work properly. The indoor coil thermistor detects an abnormal temperature.	<ul style="list-style-type: none"> Check the 4-way valve. Replace the inverter P.C. board. 		
16-time blink 2.5 seconds OFF	Outdoor refrigerant system abnormality	1-time blink 2.5 seconds OFF	A closed valve and air trapped in the refrigerant circuit are detected based on the temperature sensed by the indoor and outdoor thermistors and the current of the compressor.	<ul style="list-style-type: none"> Check for a gas leak in a connecting piping etc. Check the stop valve. Refer to 12-5.⑩ "Check of outdoor refrigerant circuit". 	○	○

12-3. TROUBLESHOOTING CHECK TABLE


No.	Symptom	LED indication	Abnormal point/ Condition	Condition	Remedy
1	Outdoor unit does not operate.	1-time blink every 2.5 seconds	Outdoor power system	Overcurrent protection cut-out operates 3 consecutive times within 1 minute after the compressor gets started.	<ul style="list-style-type: none"> •Reconnect connector of compressor. •Refer to 12-5.Ⓐ "How to check inverter/compressor". •Check stop valve.
2			Outdoor thermistors	Discharge temperature thermistor, fin temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor or ambient temperature thermistor shorts or opens during compressor running.	•Refer to 12-5.Ⓒ "Check of outdoor thermistors".
				P.C. board temperature thermistor shorts or opens during compressor running.	•Replace inverter P.C. board.
3			Outdoor control system	Nonvolatile memory data cannot be read properly. (Upper lamp of OPERATION INDICATOR lamp of the indoor unit lights up or blinks 7-time.)	•Replace inverter P.C. board.
4		6-time blink 2.5 seconds OFF	Serial signal	The communication fails between the indoor and outdoor unit for 3 minutes.	•Refer to 12-5.Ⓜ "How to check miswiring and serial signal error."
5		11-time blink 2.5 seconds OFF	Stop valve/ Closed valve	Closed valve is detected by compressor current.	•Check stop valve.
6		14-time blink 2.5 seconds OFF	Outdoor unit (Other abnormality)	Outdoor unit is defective.	•Refer to 12-2.2. "Flow chart of the detailed outdoor unit failure mode recall function".
7		16-time blink 2.5 seconds OFF	4-way valve/ Pipe temperature	The 4-way valve does not work properly. The indoor coil thermistor detects an abnormal temperature.	<ul style="list-style-type: none"> •Refer to 12-5.Ⓣ "Check of R.V. coil". •Replace the inverter P.C. board.
8		17-time blink 2.5 seconds OFF	Outdoor refrigerant system abnormality	A closed valve and air trapped in the refrigerant circuit are detected based on the temperature sensed by the indoor and outdoor thermistors and the current of the compressor.	<ul style="list-style-type: none"> •Check for a gas leak in a connecting piping etc. •Check the stop valve. •Refer to 12-5.Ⓝ "Check of outdoor refrigerant circuit".
9	'Outdoor unit stops and restarts 3 minutes later' is repeated.	2-time blink 2.5 seconds OFF	Overcurrent protection	Large current flows into power module (IC700).	<ul style="list-style-type: none"> •Reconnect connector of compressor. •Refer to 12-5.Ⓐ "How to check inverter/compressor". •Check stop valve.
10		3-time blink 2.5 seconds OFF	Discharge temperature overheat protection	Temperature of discharge temperature thermistor exceeds 116°C, compressor stops. Compressor can restart if discharge temperature thermistor reads 100°C or less 3 minutes later.	<ul style="list-style-type: none"> •Check refrigerant circuit and refrigerant amount. •Refer to 12-5.Ⓚ "Check of LEV".
11		4-time blink 2.5 seconds OFF	Fin temperature /P.C. board temperature thermistor overheat protection	Temperature of fin temperature thermistor on the heat sink exceeds 75 ~ 86°C or temperature of P.C. board temperature thermistor on the inverter P.C. board exceeds 72 ~ 85°C.	<ul style="list-style-type: none"> •Check around outdoor unit. •Check outdoor unit air passage. •Refer to 12-5.Ⓛ "Check of outdoor fan motor".
12		5-time blink 2.5 seconds OFF	High pressure protection	Indoor coil thermistor exceeds 70°C in HEAT mode. Defrost thermistor exceeds 70°C in COOL mode.	<ul style="list-style-type: none"> •Check refrigerant circuit and refrigerant amount. •Check stop valve.
13		8-time blink 2.5 seconds OFF	Compressor synchronous abnormality	The waveform of compressor current is distorted.	<ul style="list-style-type: none"> •Reconnect connector of compressor. •Refer to 12-5.Ⓐ "How to check inverter/compressor".
14		10-time blink 2.5 seconds OFF	Outdoor fan motor	Outdoor fan has stopped 3 times in a row within 30 seconds after outdoor fan startup.	<ul style="list-style-type: none"> •Refer to 12-5.Ⓛ "Check of outdoor fan motor." •Refer to 12-5.Ⓛ "Check of inverter P.C. board."
15		12-time blink 2.5 seconds OFF	Each phase current of compressor	Each phase current of compressor cannot be detected normally.	•Refer to 12-5.Ⓐ "How to check inverter/compressor".
16		13-time blink 2.5 seconds OFF	Bus-bar voltage (DC)	Bus-bar voltage of inverter cannot be detected normally.	•Refer to 12-5.Ⓐ "How to check inverter/compressor".
17	Outdoor unit operates.	1-time blink 2.5 seconds OFF	Frequency drop by current protection	When the input current exceeds approximately 10A, compressor frequency lowers.	<ul style="list-style-type: none"> •The unit is normal, but check the following. •Check if indoor filters are clogged. •Check if refrigerant is short. •Check if indoor/outdoor unit air circulation is short cycled.
18		3-time blink 2.5 seconds OFF	Frequency drop by high pressure protection	Temperature of indoor coil thermistor exceeds 55°C in HEAT mode, compressor frequency lowers.	
			Frequency drop by defrosting in COOL mode	Indoor coil thermistor reads 8°C or less in COOL mode, compressor frequency lowers.	
19		4-time blink 2.5 seconds OFF	Frequency drop by discharge temperature protection	Temperature of discharge temperature thermistor exceeds 111°C, compressor frequency lowers.	<ul style="list-style-type: none"> •Check refrigerant circuit and refrigerant amount. •Refer to 12-5.Ⓚ "Check of LEV". •Refer to 12-5.Ⓒ "Check of outdoor thermistors".
20		5-time blink 2.5 seconds OFF	Outside temperature thermistor protection	When the outside temperature thermistor shorts or opens, protective operation without that thermistor is performed.	•Refer to 12-5. Ⓒ Check of outdoor thermistors.




No.	Symptom	LED indication	Abnormal point/ Condition	Condition	Remedy
21	Outdoor unit operates.	7-time blink 2.5 seconds OFF	Low discharge temperature protection	Temperature of discharge temperature thermistor has been 50°C or less for 20 minutes.	<ul style="list-style-type: none"> Refer to 12-5.Ⓢ "Check of LEV". Check refrigerant circuit and refrigerant amount.
22		8-time blink 2.5 seconds OFF	PAM protection PAM: Pulse Amplitude Modulation	The overcurrent flows into PFC (Power factor correction: IC820) or the bus-bar voltage reaches 394 V or more, PAM stops and restarts.	This is not malfunction. PAM protection will be activated in the following cases: <ol style="list-style-type: none"> Instantaneous power voltage drop. (Short time power failure) When the power supply voltage is high.
23		9-time blink 2.5 seconds OFF	Inverter check mode	The connector of compressor is disconnected, inverter check mode starts.	<ul style="list-style-type: none"> Check if the connector of the compressor is correctly connected. Refer to 12-5.Ⓐ "How to check inverter/compressor".

NOTE: 1. The location of LED is illustrated at the right figure. Refer to 12-6.1.
 2. LED is lit during normal operation.




The blinking frequency shows the number of times the LED blinks after every 2.5-second OFF.
 (Example) When the blinking frequency is "2".

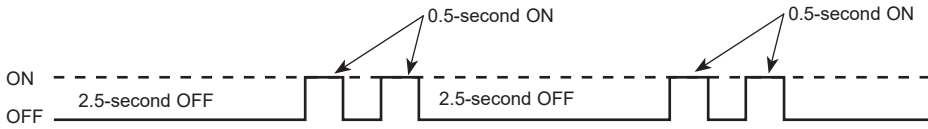

Inverter P.C. board

 


12-4. TROUBLESHOOTING CRITERION OF MAIN PARTS
MUZ-FT25VGHZ MUZ-FT35VGHZ MUZ-FT50VGHZ

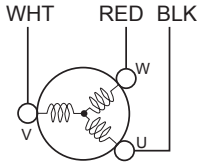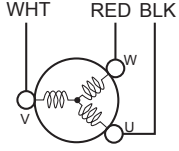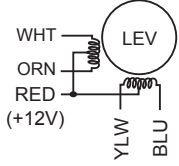Part name	Check method and criterion	Figure														
Defrost thermistor (RT61) Fin temperature thermistor (RT64) Ambient temperature thermistor (RT65) Outdoor heat exchanger temperature thermistor (RT68)	Measure the resistance with a multimeter. Refer to 12-6. "Test point diagram and voltage", 1. "Inverter P.C. board", for the chart of thermistor.															
Discharge temperature thermistor (RT62)	Measure the resistance with a multimeter. Before measurement, hold the thermistor with your hands to warm it up. Refer to 12-6. "Test point diagram and voltage", 1. "Inverter P.C. board", for the chart of thermistor.															
Compressor	Measure the resistance between terminals using a multimeter. (Temperature: -10 to 40°C) <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th></th> <th colspan="3">Normal (Ω)</th> </tr> <tr> <th></th> <th>MUZ-FT25VGHZ</th> <th>MUZ-FT35VGHZ</th> <th>MUZ-FT50VGHZ</th> </tr> </thead> <tbody> <tr> <td>U-V</td> <td colspan="3" rowspan="3">0.86 - 1.06</td> </tr> <tr> <td>U-W</td> </tr> <tr> <td>V-W</td> </tr> </tbody> </table>		Normal (Ω)				MUZ-FT25VGHZ	MUZ-FT35VGHZ	MUZ-FT50VGHZ	U-V	0.86 - 1.06			U-W	V-W	
	Normal (Ω)															
	MUZ-FT25VGHZ	MUZ-FT35VGHZ	MUZ-FT50VGHZ													
U-V	0.86 - 1.06															
U-W																
V-W																
Outdoor fan motor	Measure the resistance between lead wires using a multimeter. (Temperature: -10 ~ 40°C) <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th rowspan="2">Color of lead wire</th> <th colspan="3">Normal (Ω)</th> </tr> <tr> <th>MUZ-FT25VGHZ</th> <th>MUZ-FT35VGHZ</th> <th>MUZ-FT50VGHZ</th> </tr> </thead> <tbody> <tr> <td>RED - BLK BLK - WHT WHT - RED</td> <td>33 - 40</td> <td colspan="2">8 - 10</td> </tr> </tbody> </table>	Color of lead wire	Normal (Ω)			MUZ-FT25VGHZ	MUZ-FT35VGHZ	MUZ-FT50VGHZ	RED - BLK BLK - WHT WHT - RED	33 - 40	8 - 10					
Color of lead wire	Normal (Ω)															
	MUZ-FT25VGHZ	MUZ-FT35VGHZ	MUZ-FT50VGHZ													
RED - BLK BLK - WHT WHT - RED	33 - 40	8 - 10														
R.V. coil (21S4)	Measure the resistance using a multimeter. (Temperature: -10 to 40°C) <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th colspan="2">Normal (kΩ)</th> </tr> <tr> <th>MUZ-FT25VGHZ</th> <th>MUZ-FT35/50VGHZ</th> </tr> </thead> <tbody> <tr> <td>1.41 - 2.00</td> <td>1.17 - 1.66</td> </tr> </tbody> </table>	Normal (kΩ)		MUZ-FT25VGHZ	MUZ-FT35/50VGHZ	1.41 - 2.00	1.17 - 1.66									
Normal (kΩ)																
MUZ-FT25VGHZ	MUZ-FT35/50VGHZ															
1.41 - 2.00	1.17 - 1.66															
Expansion valve coil (LEV)	Measure the resistance using a multimeter. (Temperature: -10 to 40°C) <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th>Color of lead wire</th> <th>Normal (Ω)</th> </tr> </thead> <tbody> <tr> <td>RED - ORN</td> <td rowspan="4">41 - 50</td> </tr> <tr> <td>RED - WHT</td> </tr> <tr> <td>RED - BLU</td> </tr> <tr> <td>RED - YLW</td> </tr> </tbody> </table>	Color of lead wire	Normal (Ω)	RED - ORN	41 - 50	RED - WHT	RED - BLU	RED - YLW								
Color of lead wire	Normal (Ω)															
RED - ORN	41 - 50															
RED - WHT																
RED - BLU																
RED - YLW																
Defrost heater	Measure the resistance using a multimeter. (Temperature: -10 to 40°C) <table border="1" style="width: 100%; text-align: center;"> <thead> <tr> <th colspan="2">Normal (Ω)</th> </tr> <tr> <th>MUZ-FT25/35VGHZ</th> <th>MUZ-FT50VGHZ</th> </tr> </thead> <tbody> <tr> <td>778 - 951</td> <td>355 - 434</td> </tr> </tbody> </table>	Normal (Ω)		MUZ-FT25/35VGHZ	MUZ-FT50VGHZ	778 - 951	355 - 434									
Normal (Ω)																
MUZ-FT25/35VGHZ	MUZ-FT50VGHZ															
778 - 951	355 - 434															



12-5. TROUBLESHOOTING FLOW

A How to check inverter/compressor

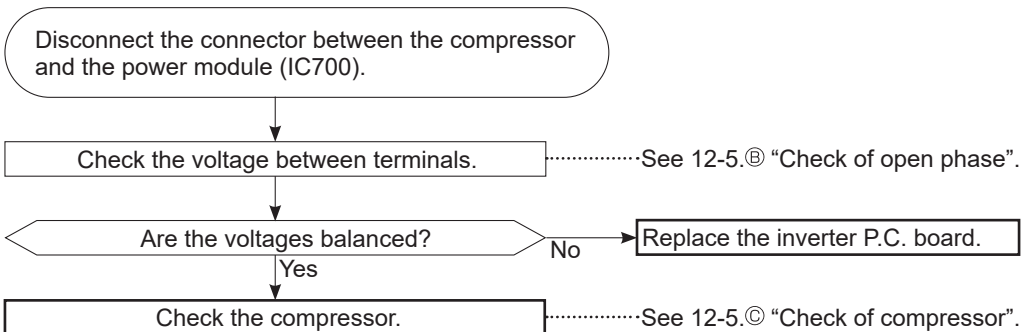

B Check of open phase

- With the connector between the compressor and the power module (IC700) disconnected, activate the inverter and check if the inverter is normal by measuring **the voltage balance** between the terminals.

Output voltage is 50 - 130V. (The voltage may differ according to the multimeter.)

<<Operation method>>

Start cooling or heating operation by pressing the emergency operation switch on the indoor unit. (TEST RUN OPERATION: Refer to 9-3.)

<<Measurement point>>

At 3 points


BLK (U)-WHT (V) * Measure AC voltage between the lead wires at 3 points.

BLK (U)-RED (W)

WHT(V)-RED (W)

- NOTE:** 1. Output voltage varies according to power supply voltage.
 2. Measure the voltage by analog type multimeter.
 3. During this check, LED of the inverter P.C. board blinks 9 times. (Refer to 12-6.1.)

C Check of compressor

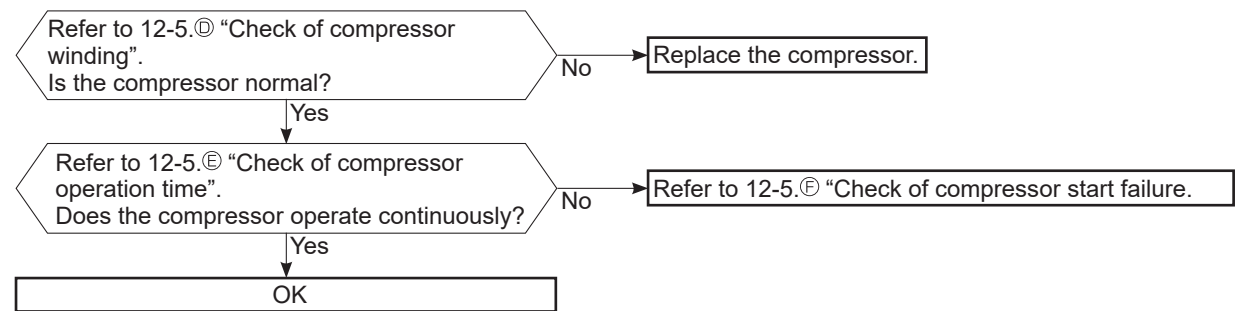



D Check of compressor winding

• Disconnect the connector between the compressor and the power module (IC700), and measure the resistance between the compressor terminals.

<<Measurement point>>

At 3 points

BLK-WHT

BLK-RED

WHT-RED

* Measure the resistance between the lead wires at 3 points.

<<Judgement>>

Refer to 12-4.

0 [Ω]Abnormal [short]

Infinite [Ω]Abnormal [open]

NOTE: Be sure to zero the ohmmeter before measurement.

E Check of compressor operation time

• Connect the compressor and activate the inverter. Then measure the time until the inverter stops due to overcurrent.


<<Operation method>>

Start heating or cooling operation by pressing the emergency operation switch on the indoor unit. (Test run operation: Refer to 9-3.)

<<Measurement>>

Measure the time from the start of compressor to the stop of compressor due to overcurrent.



<<Judgement>>

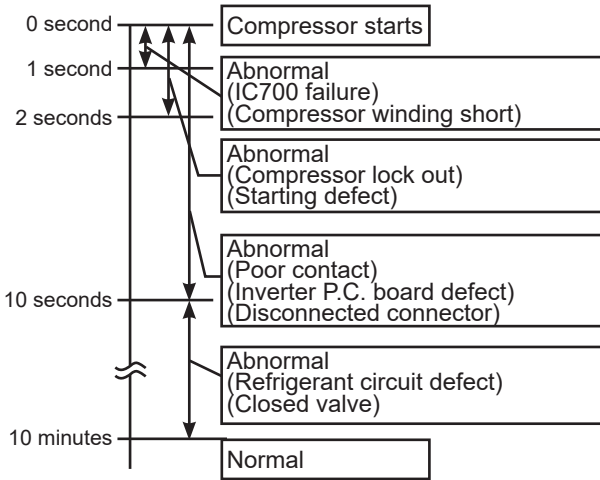

F Check of compressor start failure

Confirm that ①~④ is normal.

- Electrical circuit check
 - ①. Contact of the compressor connector
 - ②. Output voltage of inverter P.C. board and balance of them (See 12-5.⑥)
 - ③. Direct current voltage between DB61(+) and (-) on the inverter P.C. board
 - ④. Voltage between outdoor terminal block S1-S2

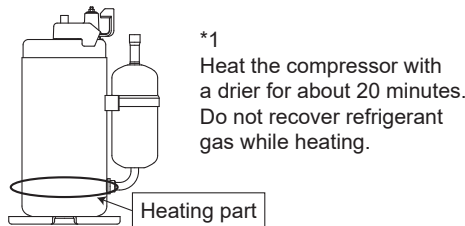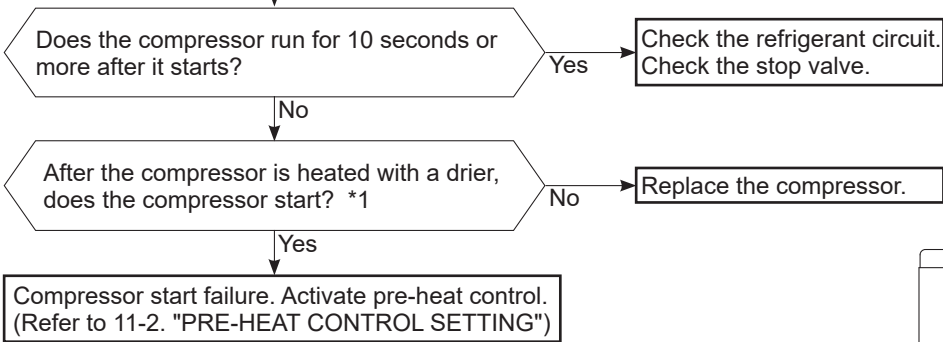

Ⓒ Check of outdoor thermistors

Disconnect the connector of thermistor in the inverter P.C. board (see below table), and measure the resistance of thermistor.

Is the resistance of thermistor normal?
(Refer to 12-6.1.)

No

Replace the thermistor except RT64.
When RT64 is abnormal, replace the inverter P.C. board.

Yes

Reconnect the connector of thermistor.
Turn ON the power supply and press the emergency operation switch.

Does the unit operate for 10 minutes or more
without showing thermistor abnormality?


No

Replace the inverter P.C. board.

Yes

OK (Cause is poor contact.)


Thermistor	Symbol	Connector, Pin No.	Board
Defrost	RT61	Between CN641 pin1 and pin2	Inverter P.C. board
Discharge temperature	RT62	Between CN641 pin3 and pin4	
Fin temperature	RT64	Between CN642 pin1 and pin2	
Ambient temperature	RT65	Between CN643 pin1 and pin2	
Outdoor heat exchanger temperature	RT68	Between CN644 pin1 and pin3	

 


H Check of R.V. coil

- * First of all, measure the resistance of R.V. coil to check if the coil is defective. Refer to 12-4.
- * In case CN721 is disconnected or R.V. coil is open, voltage is generated between the terminal pins of the connector although no signal is being transmitted to R.V. coil.
Check if CN721 is connected.

Unit operates in COOL mode even if it is set to HEAT mode.

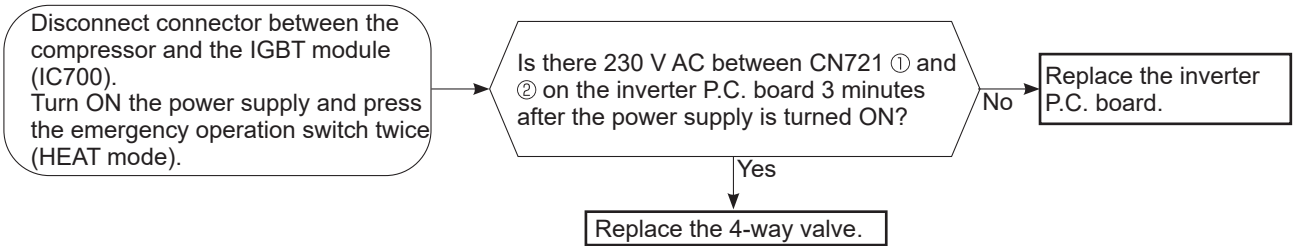

Unit operates in HEAT mode even if it is set to COOL mode.

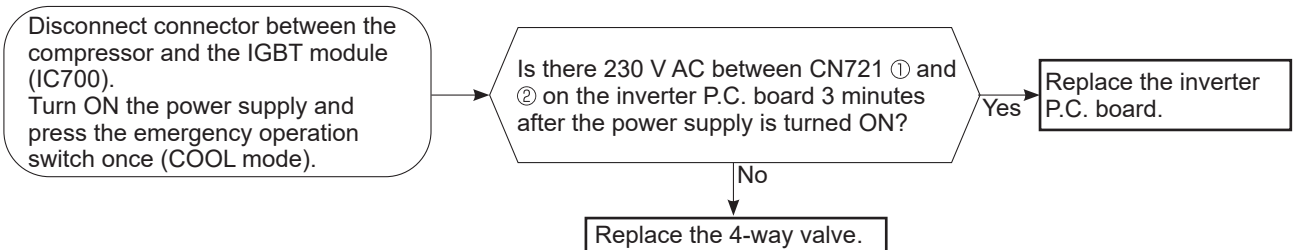



① Check of outdoor fan motor

Disconnect the connectors CN931 and CN932 from the inverter P.C. board.
Check the connection between the connector CN931 and CN932.

Is the resistance between each terminal of outdoor fan motor normal?
(Refer to 12-4.)

Yes

No

Disconnect CN932 from the inverter P.C. board, and turn on the power supply.

Rotate the outdoor fan motor manually and measure the voltage of CN931.
Between 1(+) and 5(-)
Between 2(+) and 5(-)
Between 3(+) and 5(-)

(Fixed to either 5 or 0 V DC)

Does the voltage between each terminal become 5 and 0V DC repeatedly?

No

Yes

Does the outdoor fan motor rotate smoothly?

No

Yes

Replace the outdoor fan motor.

Replace the inverter P.C. board.

J Check of power supply

Disconnect the connector between the compressor and the power module (IC700). Turn ON power supply and press the emergency operation switch.

Does the upper lamp of OPERATION INDICATOR lamp on the indoor unit light up?

No

Is there voltage 230 V AC between the indoor terminal block S1 and S2?

No

Replace the indoor electronic control P.C. board.

Rectify indoor/outdoor connecting wire.

Yes

Is there bus-bar voltage 260 - 370V DC between DB61 (+) and DB61 (-) on the inverter P.C. board? (Refer to 12-6.1.)

Yes

Does LED on the inverter P.C. board light up or blink? (Refer to 12-6.1.)

No


Replace the inverter P.C. board.

No

Check the electric parts in main circuit.



If lights up, OK.
If blinks, refer to 12-3.

Yes

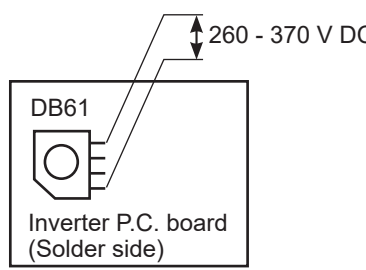

K Check of LEV (Expansion valve)

FT25/35/50VG - [E1]
 FT25/35/50VGK - [E1] [ET1] FT25/35/50VGK - [SC1]
 FT25/35/50VGK - [E2] FT25/35/50VGK - [SC2]

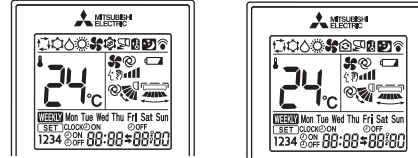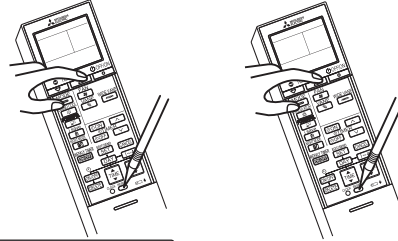

*1. Regardless of normal or abnormal condition, a short beep is emitted once the signal is received.

Turn ON the power supply.
 <Preparation of the remote controller>
 ① While pressing both Operation select button and TEMP \oplus button on the remote controller at the same time, press RESET button.
 ② First, release RESET button. Hold down the other 2 buttons for another 3 seconds. Make sure that the indicators on the LCD screen shown in the right figure are all displayed. Then release the buttons.

Press OFF/ON (stop/operate) button of the remote controller (the set temperature is displayed) with the remote controller headed towards the indoor unit. *1

Expansion valve operates in full-opening direction.

Do you hear the expansion valve "click, click....."?
 Do you feel the expansion valve vibrate when touching it? Yes → OK

Is LEV coil properly fixed to the expansion valve? No → Properly fix the LEV coil to the expansion valve.


Does the resistance of LEV coil have the characteristics? (Refer to 12-4.) Yes → Measure each voltage between connector pins of CN724 on the inverter P.C. board.
 1. Pin③(-) — Pin①(+)
 2. Pin④(-) — Pin①(+)
 3. Pin⑤(-) — Pin①(+)
 4. Pin⑥(-) — Pin①(+)
 Is there about 3 - 5 V AC between each?
 NOTE: Measure the voltage by an analog multimeter. No → Replace the inverter P.C. board.

No → Replace the LEV coil.


Yes → Replace the expansion valve.

NOTE: After check of LEV, take the following steps.
 1. Turn OFF the power supply and turn it ON again.
 2. Press RESET button on the remote controller.

L Check of inverter P.C. board

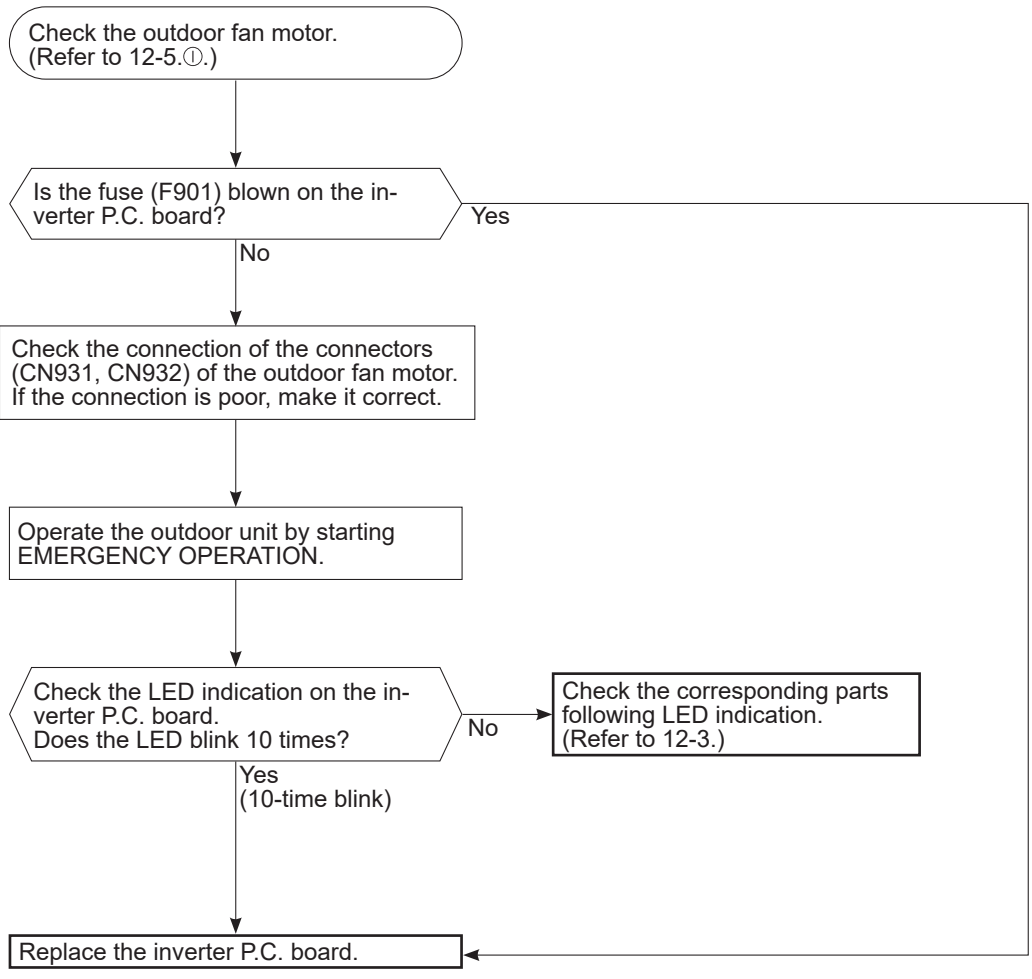

M How to check miswiring and serial signal error

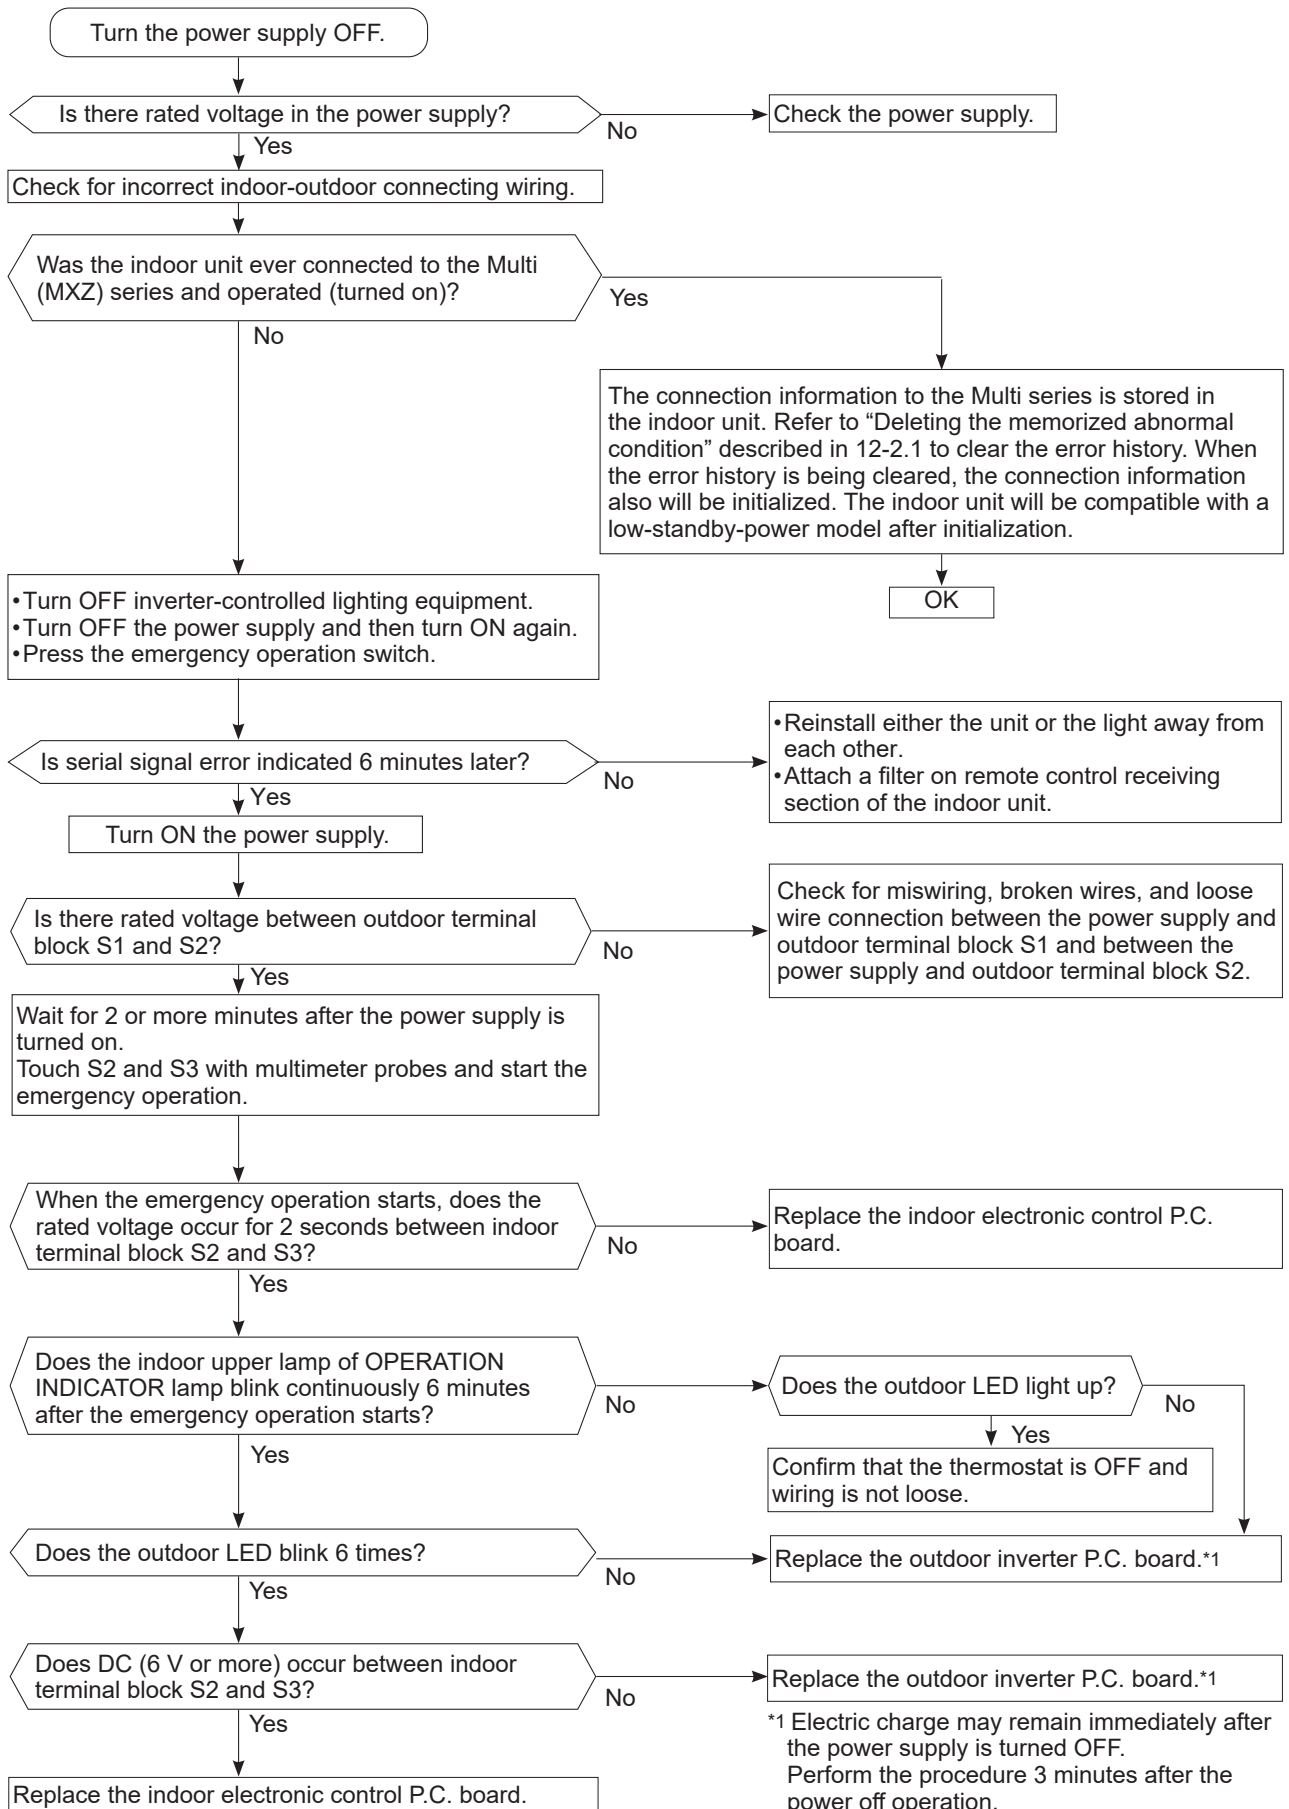

*1 Electric charge may remain immediately after the power supply is turned OFF. Perform the procedure 3 minutes after the power off operation.



N Check of the outdoor refrigerant circuit

Has the operation stopped during pump down?

Yes

The operation has stopped to prevent the diesel explosion caused by air trapped in the refrigerant circuit. Close the stop valve, and disconnect the power plug or turn the breaker OFF.

CAUTION:
Do not start the operation again to prevent hazards.

No

Was the operation started with the stop valve closed, and was it opened during operation?


Yes

The unit occasionally stops when the stop valve is opened or closed during operation. Open the stop valve and start the cooling operation again.

No

The refrigerant gas amount may be 60% or less than the normal amount. Identify where the gas is leaking from, and fix the leak.

⊙ Electromagnetic noise enters into TV sets or radios

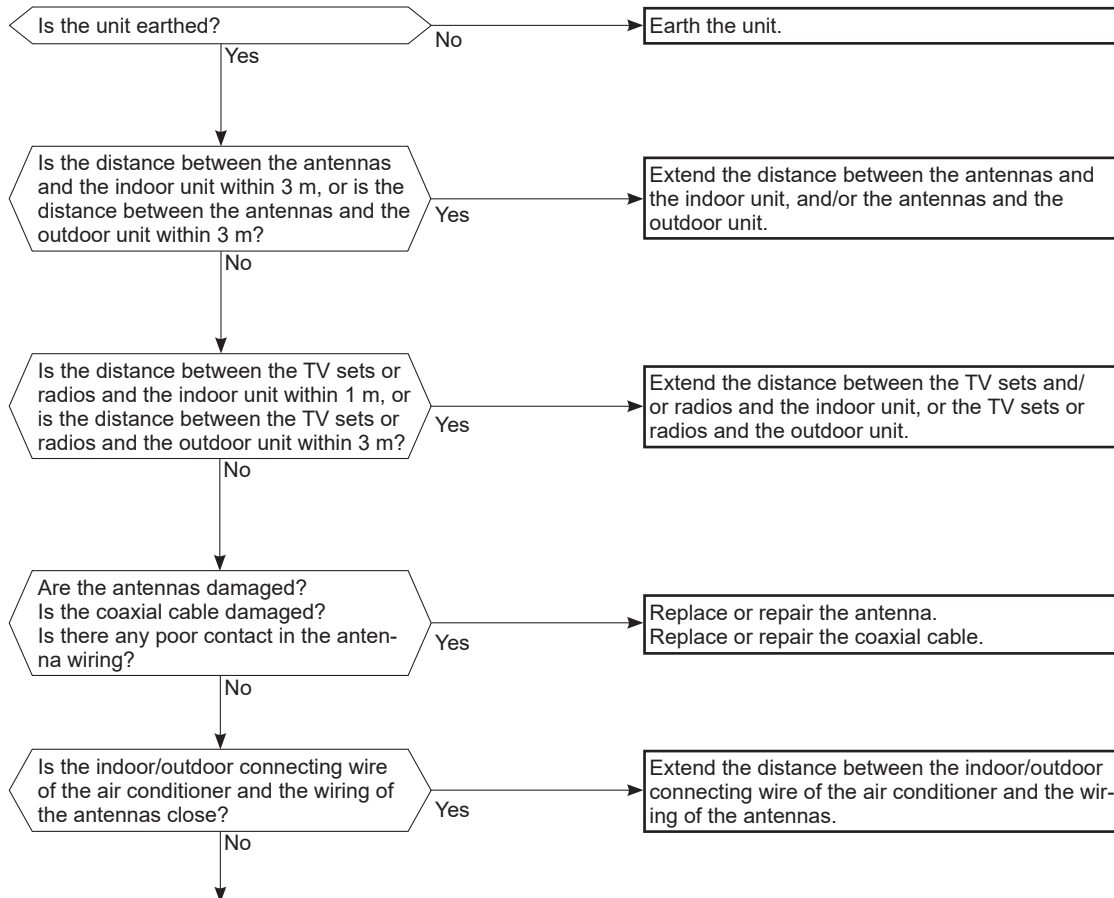


Even if all of the above conditions are fulfilled, the electromagnetic noise may enter, depending on the electric field strength or the installation condition (combination of specific conditions such as antennas or wiring).
Check the following before asking for service.

1. Devices affected by the electromagnetic noise
TV sets, radios (FM/AM broadcast, shortwave)
2. Channel, frequency, broadcast station affected by the electromagnetic noise
3. Channel, frequency, broadcast station unaffected by the electromagnetic noise
4. Layout of:
indoor/outdoor unit of the air conditioner, indoor/outdoor wiring, earth wire, antennas, wiring from antennas, receiver
5. Electric field intensity of the broadcast station affected by the electromagnetic noise
6. Presence or absence of amplifier such as booster
7. Operation condition of air conditioner when the electromagnetic noise enters in
 - 1) Turn OFF the power supply once, and then turn ON the power supply. In this situation, check for the electromagnetic noise.
 - 2) Within 3 minutes after turning ON the power supply, press OFF/ON (stop/operate) button on the remote controller for power ON, and check for the electromagnetic noise.
 - 3) After a short time (3 minutes later after turning ON), the outdoor unit starts running. During operation, check for the electromagnetic noise.
 - 4) Press OFF/ON (stop/operate) button on the remote controller for power OFF, when the outdoor unit stops but the indoor/outdoor communication still runs on. In this situation, check for the electromagnetic noise.




12-6. TEST POINT DIAGRAM AND VOLTAGE

1. Inverter P.C. board


MUZ-FT25VGHZ - [E1], [ET1], [SC1] MUZ-FT35VGHZ - [E1], [ET1], [SC1] MUZ-FT50VGHZ - [E1], [ET1], [SC1]

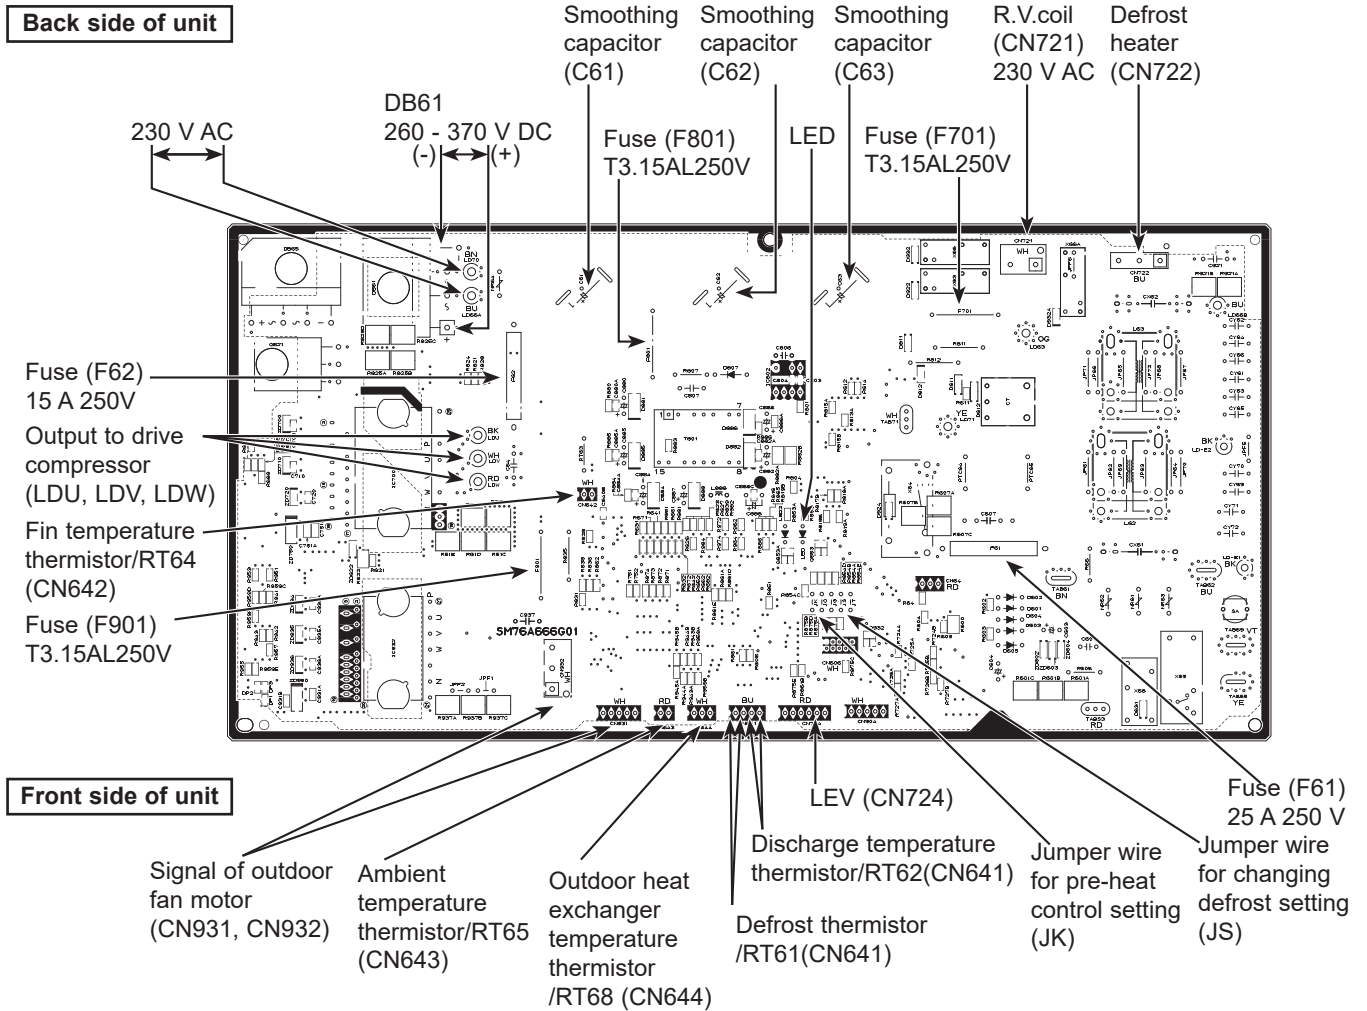




Defrost thermistor(RT61)
Ambient temperature thermistor(RT65)
Outdoor heat exchanger temperature thermistor(RT68)

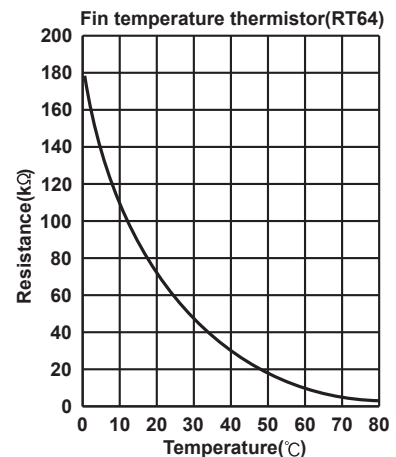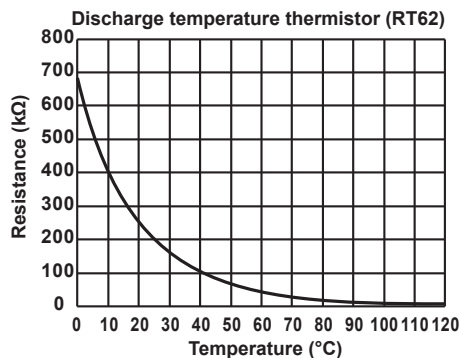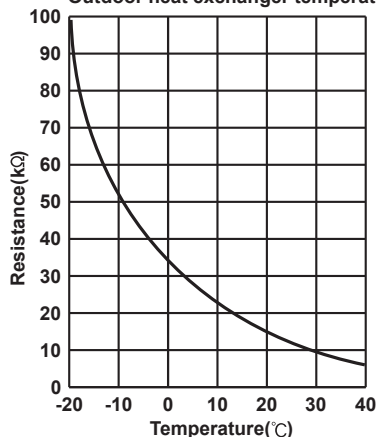

MUZ-FT25VGHZ - [E2], [SC2] MUZ-FT35VGHZ - [E2], [SC2] MUZ-FT50VGHZ - [E2], [SC2]

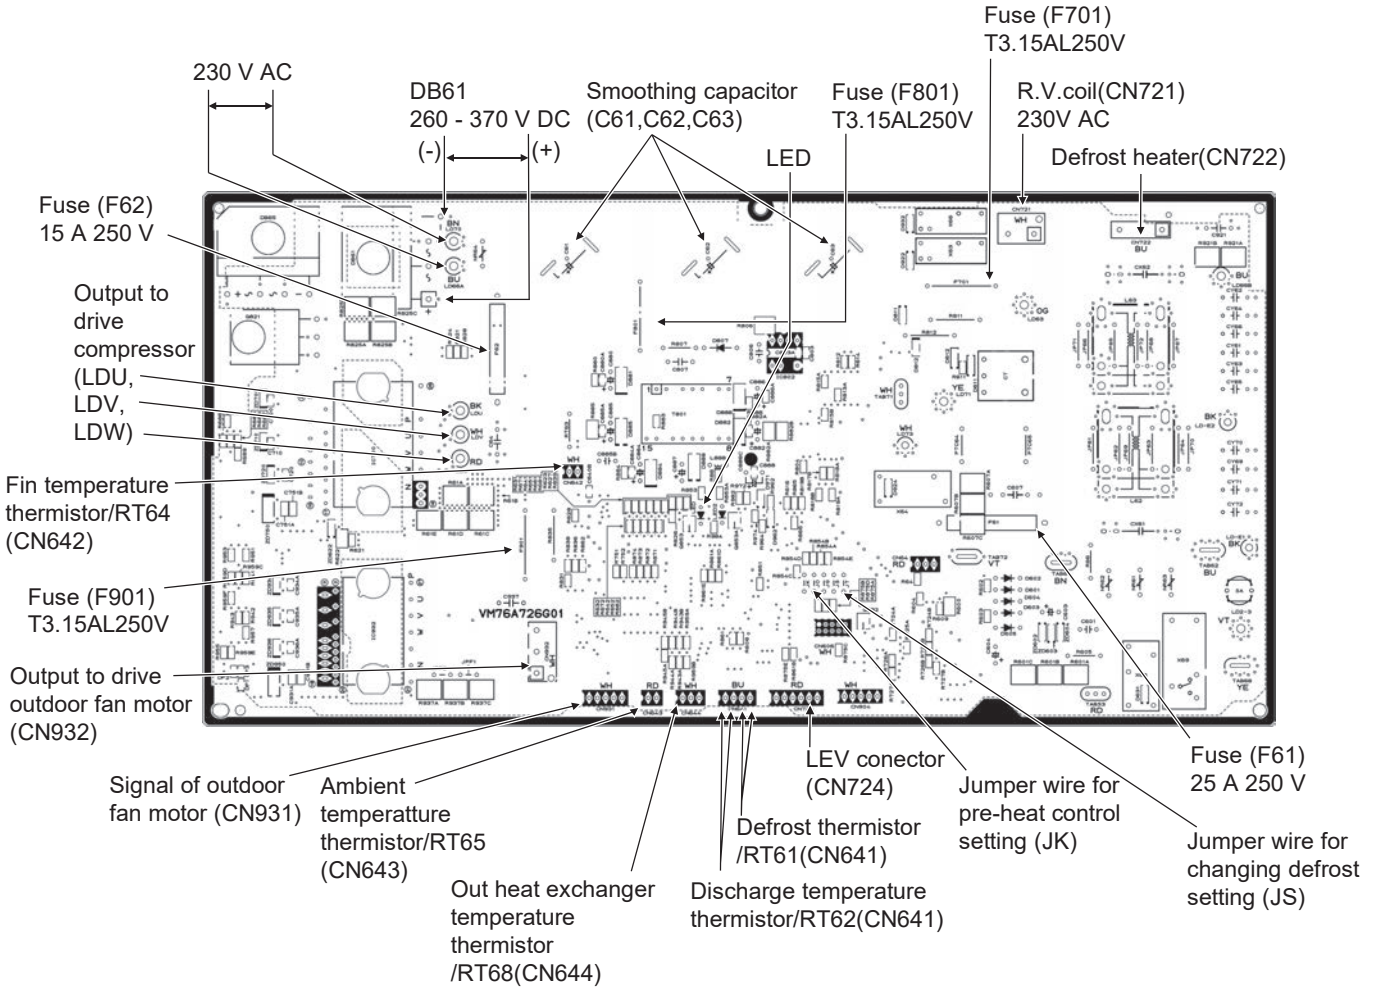

Defrost thermistor (RT61)
Ambient temperature thermistor (RT65)
Outdoor heat exchanger temperature thermistor (RT68)

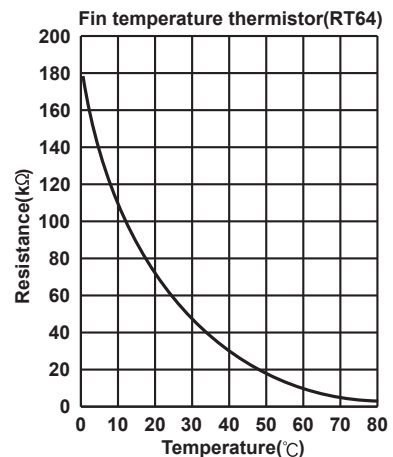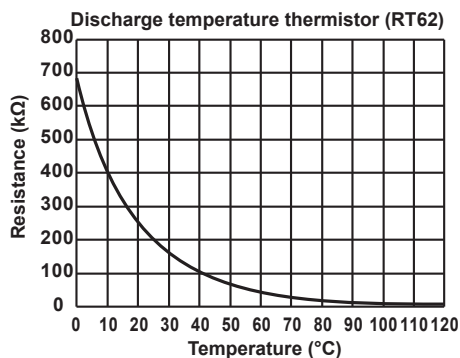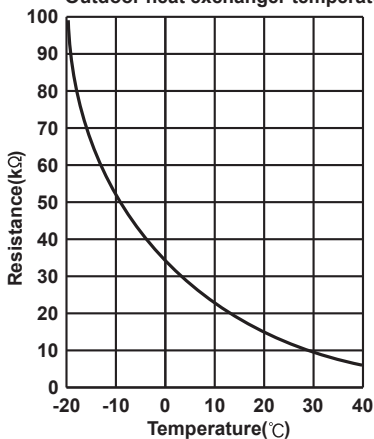

<Detaching method of the terminal with locking mechanism>


The terminal which has the locking mechanism can be detached as shown below.

There are 2 types of the terminal with locking mechanism.


The terminal without locking mechanism can be detached by pulling it out.

Check the shape of the terminal before detaching.

(1) Slide the sleeve and check if there is a locking lever or not.

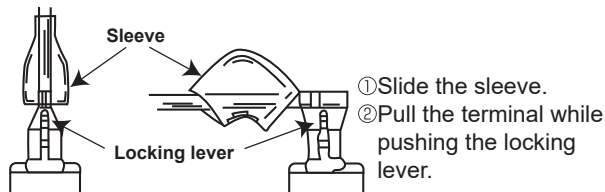

(2) The terminal with this connector shown below has the locking mechanism.

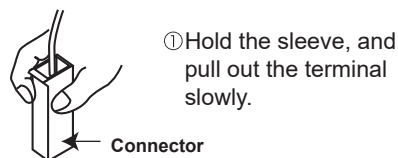**13-1. MUZ-FT25VGHZ - [E1], [ET1], [SC1]**

NOTE: Turn OFF the power supply before disassembly.

—> : Indicates the visible parts in the photos/figures.
 - - -> : Indicates the invisible parts in the photos/figures.

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>1. Removing the cabinet</p> <ol style="list-style-type: none"> (1) Remove the screws fixing the service panel. (2) Pull down the service panel and remove it. (3) Disconnect the power supply cord and indoor/outdoor connecting wire. (4) Remove the screws fixing the top panel. (5) Remove the top panel. (6) Remove the screws fixing the cabinet. (7) Remove the cabinet. (8) Remove the screws fixing the back panel. (9) Remove the screws of the terminal block support and the back panel. (10) Remove the back panel. <p>Photo 2</p>	<p>Photo 1</p> <p>Photo 3</p>

OPERATING PROCEDURE


2. Removing the inverter assembly and inverter P.C. board

- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
 - <Inverter P.C. board>
 - CN721 (R.V. coil)
 - CN722 (Base heater)
 - CN931, CN932 (Fan motor)
 - CN641 (Defrost thermistor and discharge temperature thermistor)
 - CN643 (Ambient temperature thermistor)
 - CN644 (Outdoor heat exchanger temperature thermistor)
 - CN724 (Expansion valve coil)
- (3) Remove the compressor connector (CN61).
- (4) Remove the screws fixing the heat sink support and the separator.
- (5) Remove the fixing screw of the P.B. support and the separator.
- (6) Remove the fixing screws of the terminal block support and the back panel.
- (7) Remove the inverter assembly.
- (8) Remove the heat sink support from the P.C. board support.
- (9) Remove the screw of the inverter P.C. board and remove the inverter P.C. board from the P.C. board support.

* Connection procedure when attaching the inverter P.C. board (Photo 5)

1. Connect the lead wires of the heat exchanger temperature thermistor to the connector on the inverter P.C. board. Pull the lead wires of the heat exchanger temperature thermistor toward you and put them on the left hook on the P.C. board support so that the other lead wires are bundled up as shown in Photo 5.
2. Connect the lead wires of the expansion valve coil to the connector on the inverter P.C. board. Pull the lead wires of the expansion valve coil toward you and put them on the right hook on the P.C. board support so that the other lead wires are bundled up as shown in Photo 5.

Photo 6 (Inverter assembly)

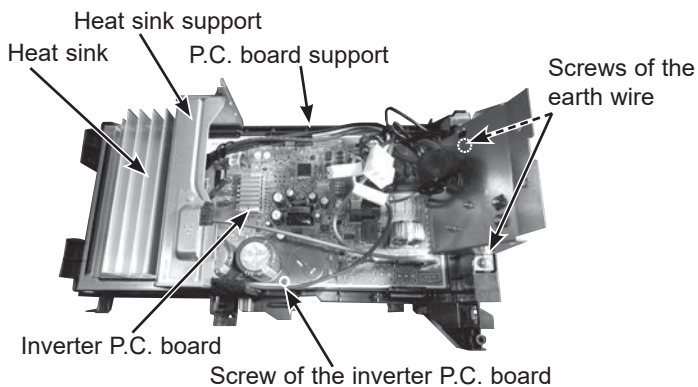

PHOTOS/FIGURES

Photo 4



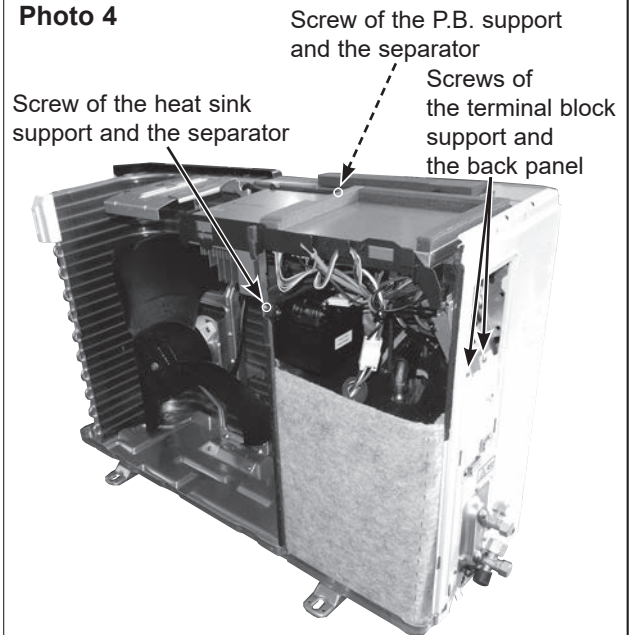


Photo 5

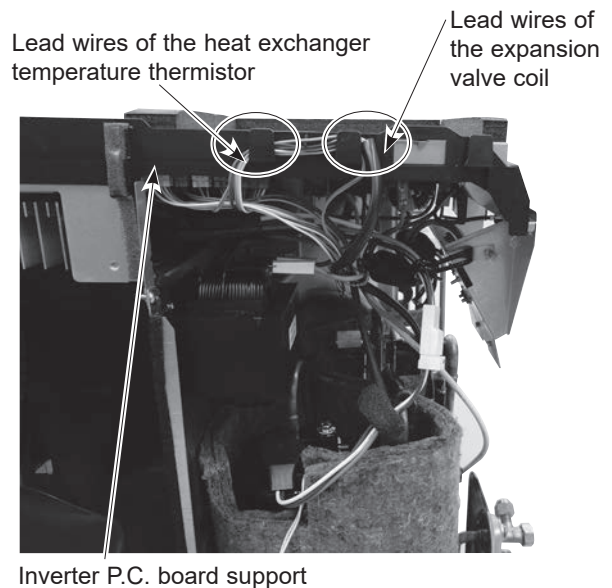

 

OPERATING PROCEDURE

3. Removing R.V. coil

- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Disconnect the following connectors:
 <Inverter P.C. board>
 CN721 (R.V. coil)
- (3) Remove the R.V. coil.

4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor

- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
 <Inverter P.C. board>
 CN641 (Defrost thermistor and discharge temperature thermistor)
 CN643 (Ambient temperature thermistor)
 CN644 (Outdoor heat exchanger temperature thermistor)
- (3) Pull out the discharge temperature thermistor from its holder.
- (4) Pull out the defrost thermistor from its holder.
- (5) Pull out the outdoor heat exchanger temperature thermistor from its holder.
- (6) Pull out the ambient temperature thermistor from its holder.

5. Removing outdoor fan motor

- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Disconnect the following connectors:
 <Inverter P.C. board>
 CN931, CN932 (Fan motor)
- (3) Remove the propeller fan nut.
- (4) Remove the propeller fan.
- (5) Remove the screws fixing the fan motor.
- (6) Remove the fan motor.

PHOTOS/FIGURES

Photo 7


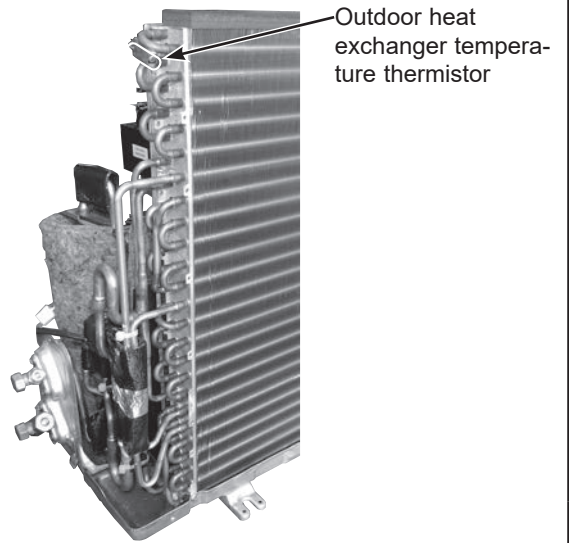


Photo 8

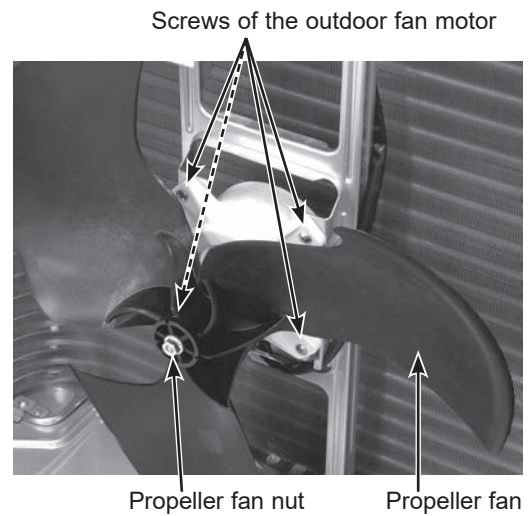

OPERATING PROCEDURE

6. Removing the compressor and 4-way valve


- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Remove the inverter assembly. (Refer to section 2.)
- (3) Recover gas from the refrigerant circuit.
NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).
- (4) Detach the brazed part of the suction and the discharge pipe connected with compressor.
- (5) Remove the compressor nuts.
- (6) Remove the compressor.
- (7) Detach the brazed part of pipes connected with 4-way valve.

PHOTOS/FIGURES

Photo 9

Discharge pipe
brazed part

Suction pipe
brazed part



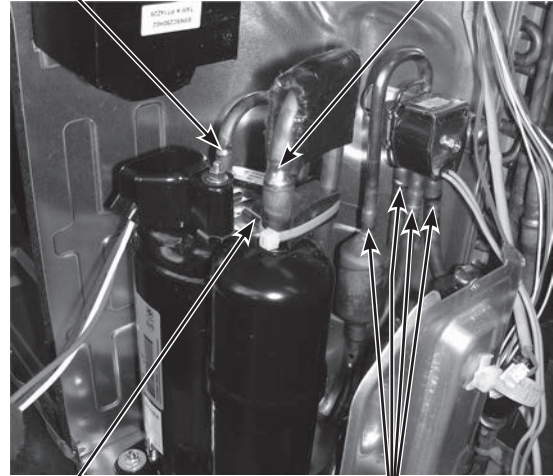


Discharge
temperature
thermistor

Brazed parts of 4-way valve

13-2. MUZ-FT25VGHZ - [E2], [SC2]

NOTE: Turn OFF the power supply before disassembly.

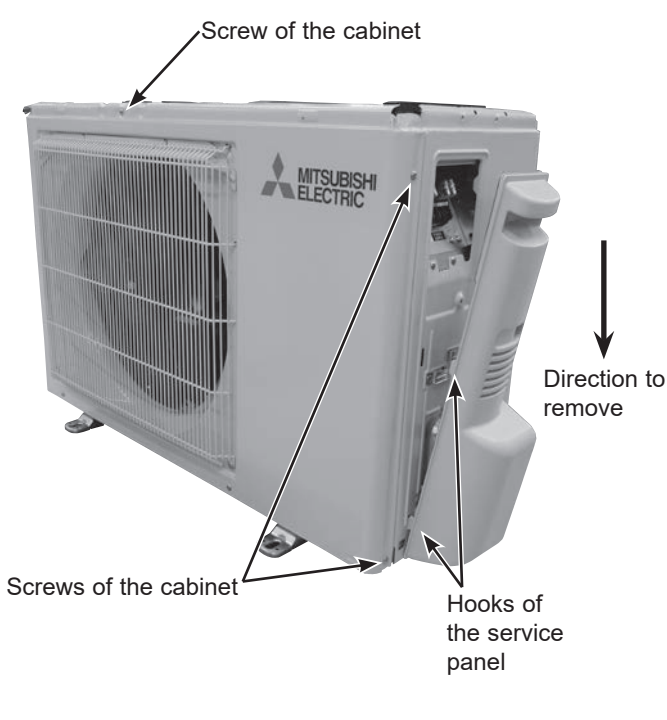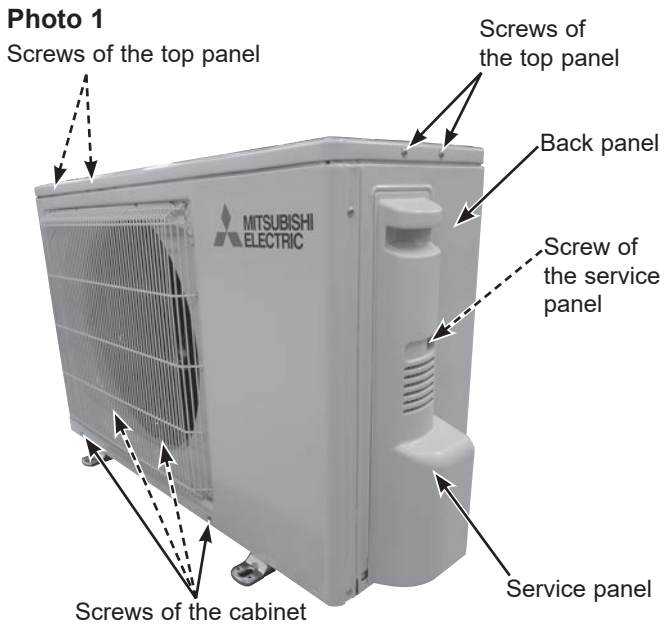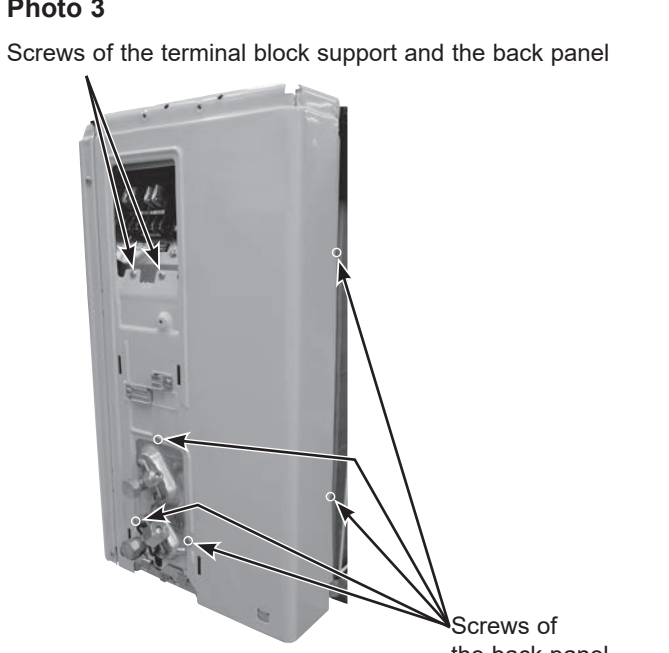OPERATING PROCEDURE	PHOTOS/FIGURES
<p>1. Removing the cabinet</p> <ol style="list-style-type: none">(1) Remove the screws fixing the service panel.(2) Pull down the service panel and remove it.(3) Disconnect the power supply cord and indoor/outdoor connecting wire.(4) Remove the screws fixing the top panel.(5) Remove the top panel.(6) Remove the screws fixing the cabinet.(7) Remove the cabinet.(8) Remove the screws fixing the back panel.(9) Remove the screws of the terminal block support and the back panel.(10) Remove the back panel. <p>Photo 2</p>  <p>Screw of the cabinet</p> <p>Screws of the cabinet</p> <p>Hooks of the service panel</p> <p>Direction to remove</p>	<p>Photo 1</p>  <p>Screws of the top panel</p> <p>Screws of the cabinet</p> <p>Screw of the service panel</p> <p>Back panel</p> <p>Service panel</p> <p>Photo 3</p>  <p>Screws of the terminal block support and the back panel</p> <p>Screws of the back panel</p>

OPERATING PROCEDURE

2. Removing the inverter assembly and inverter P.C. board

- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
 - <Inverter P.C. board>
 - CN721 (R.V. coil)
 - CN931, CN932 (Fan motor)
 - CN641 (Defrost thermistor and discharge temperature thermistor)
 - CN643 (Ambient temperature thermistor)
 - CN644 (Outdoor heat exchanger temperature thermistor)
 - CN724 (Expansion valve coil)
 - CN722 (Defrost heater and heater protector)
 - CN64 (Compressor protector)
- (3) Remove the compressor connector (CN61).
- (4) Remove the screws fixing the heat sink support and the separator.
- (5) Remove the fixing screw of the P.B. support and the separator.
- (6) Remove the fixing screws of the terminal block support and the back panel.
- (7) Remove the inverter assembly.
- (8) Remove the heat sink support from the P.C. board support.
- (9) Remove the screw of the inverter P.C. board and remove the inverter P.C. board from the P.C. board support.


* Connection procedure when attaching the inverter P.C. board (Photo 5)

1. Connect the lead wires of the heat exchanger temperature thermistor to the connector on the inverter P.C. board. Pull the lead wires of the heat exchanger temperature thermistor toward you and put them on the left hook on the P.C. board support so that the other lead wires are bundled up as shown in Photo 5.
2. Connect the lead wires of the expansion valve coil to the connector on the inverter P.C. board. Pull the lead wires of the expansion valve coil toward you and put them on the right hook on the P.C. board support so that the other lead wires are bundled up as shown in Photo 5.

PHOTOS/FIGURES

Photo 4


Screw of the P.B. support and the separator Screws of the terminal block support and the back panel

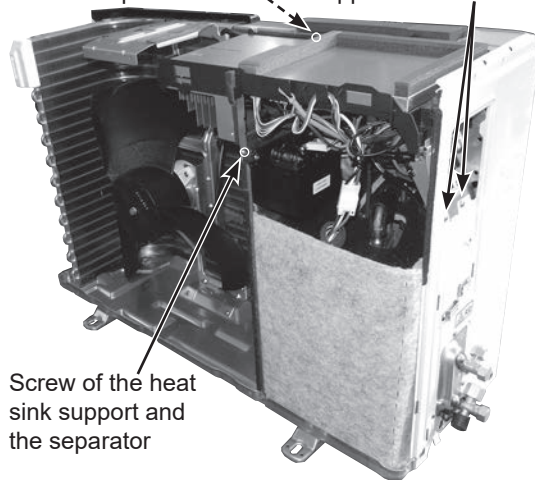

Screw of the heat sink support and the separator

Photo 6 (Inverter assembly)

Heat sink support Screws of the earth wire

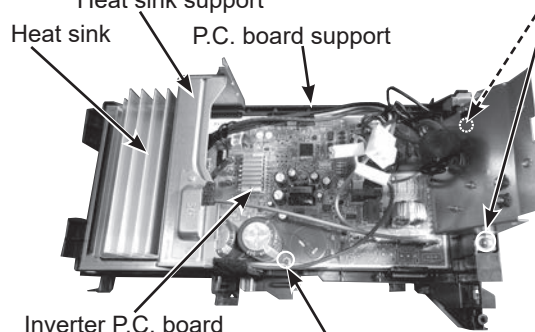

Inverter P.C. board

Screw of the inverter P.C. board


Photo 5

Lead wires of the heat exchanger temperature thermistor

Lead wires of the expansion valve coil

Inverter P.C. board support

Connector of the compressor protector

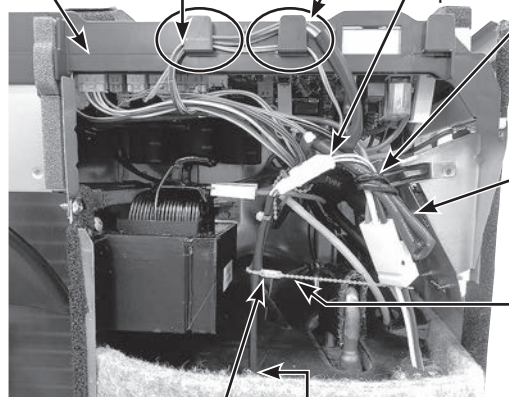

Clamp the end of the compressor protector's tube.



Fold back the tube of the compressor protector.

Cut the surplus of the fastener to prevent it from hitting the front panel.

Fix the lead wires of the compressor protector and the discharge temperature thermistor.

Pass the lead wire of compressor protector through the top felt hole.

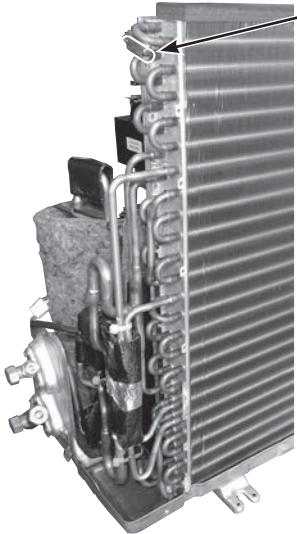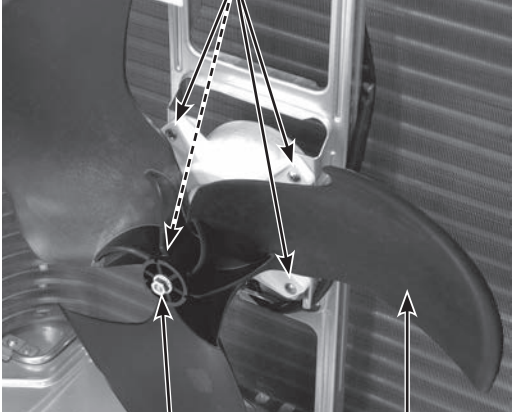

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>3. Removing R.V. coil</p> <ol style="list-style-type: none">(1) Remove the cabinet and panels. (Refer to section 1.)(2) Disconnect the following connectors: <Inverter P.C. board> CN721 (R.V. coil)(3) Remove the R.V. coil.	<p>Photo 7</p>  <p>Outdoor heat exchanger temperature thermistor</p> <p>A black and white photograph showing a side view of a heat exchanger unit. A small cylindrical component, the outdoor heat exchanger temperature thermistor, is mounted on the top edge of the unit. An arrow points from the text label to this component.</p>
<p>4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor</p> <ol style="list-style-type: none">(1) Remove the cabinet and panels. (Refer to section 1.)(2) Disconnect the lead wire to the reactor and the following connectors: <Inverter P.C. board> CN641 (Defrost thermistor and discharge temperature thermistor) CN643 (Ambient temperature thermistor) CN644 (Outdoor heat exchanger temperature thermistor)(3) Pull out the discharge temperature thermistor from its holder.(4) Pull out the defrost thermistor from its holder.(5) Pull out the outdoor heat exchanger temperature thermistor from its holder.(6) Pull out the ambient temperature thermistor from its holder.	<p>Photo 8</p>  <p>Screws of the outdoor fan motor</p> <p>Propeller fan nut Propeller fan</p> <p>A black and white photograph showing a close-up of the outdoor fan motor assembly. Two screws are being removed from the motor housing. Dashed lines indicate the removal path. Below the photo, two arrows point to the propeller fan nut and the propeller fan.</p>
<p>5. Removing outdoor fan motor</p> <ol style="list-style-type: none">(1) Remove the cabinet and panels. (Refer to section 1.)(2) Disconnect the following connectors: <Inverter P.C. board> CN931, CN932 (Fan motor)(3) Remove the propeller fan nut.(4) Remove the propeller fan.(5) Remove the screws fixing the fan motor.(6) Remove the fan motor.	


OPERATING PROCEDURE

6. Removing the compressor and 4-way valve

- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Remove the inverter assembly. (Refer to section 2.)
- (3) Recover gas from the refrigerant circuit.
NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).
- (4) Detach the brazed part of the suction and the discharge pipe connected with compressor.
- (5) Remove the compressor nuts.
- (6) Remove the compressor.
- (7) Detach the brazed part of pipes connected with 4-way valve.

Figure 1


Attach the compressor protector to the protector holder with the surface on which the model name is printed facing the area hatched in the figure.

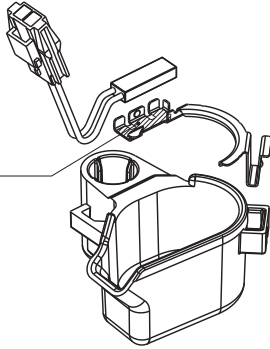

PHOTOS/FIGURES

Photo 9

Compressor protector Discharge pipe brazed part Suction pipe brazed part


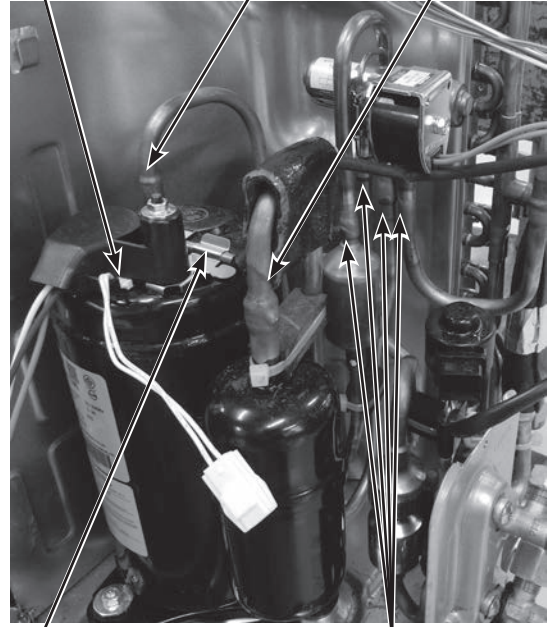


Discharge temperature thermistor

Brazed parts of 4-way valve

13-3. MUZ-FT35VGHZ - [E1], [ET1], [SC1] MUZ-FT50VGHZ - [E1], [ET1], [SC1]

NOTE: Turn OFF the power supply before disassembly.

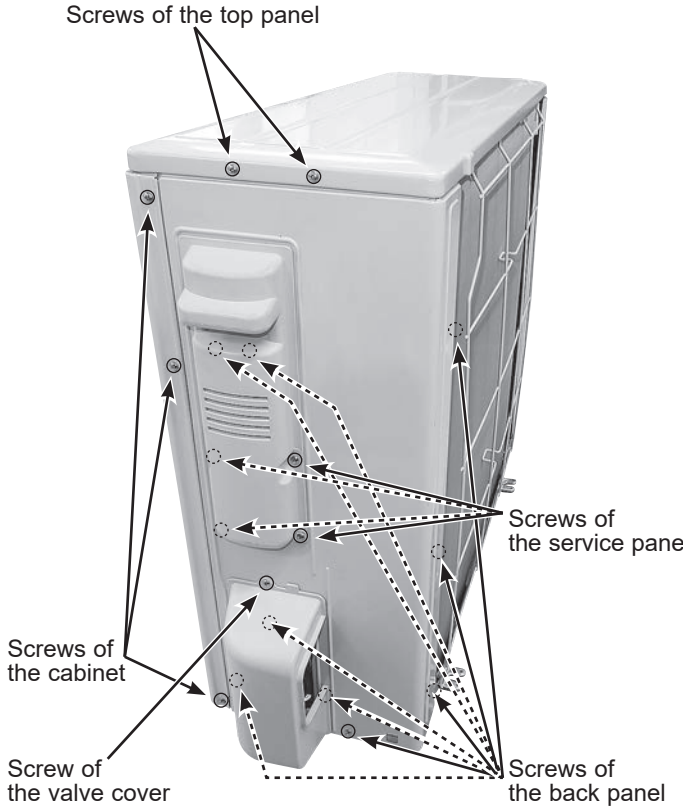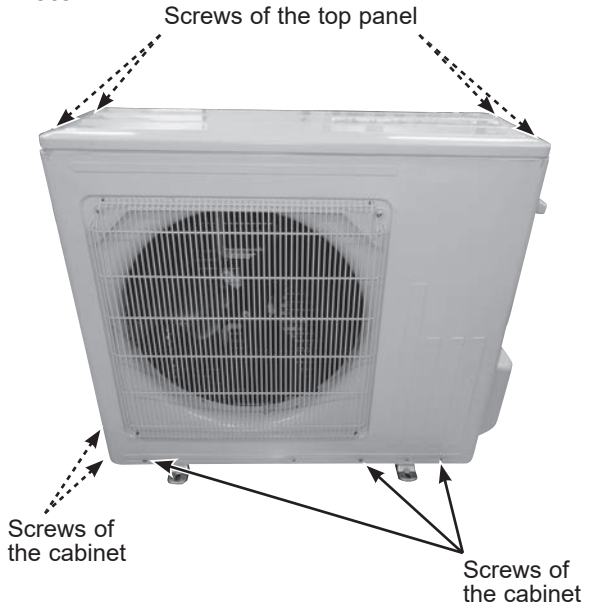OPERATING PROCEDURE	PHOTOS/FIGURES
<p>1. Removing the cabinet</p> <ol style="list-style-type: none">(1) Remove the screws of the service panel.(2) Remove the screws of the top panel.(3) Remove the screw of the valve cover.(4) Remove the service panel.(5) Remove the top panel.(6) Remove the valve cover.(7) Disconnect the power supply cord and indoor/outdoor connecting wire.(8) Remove the screws of the cabinet.(9) Remove the cabinet.(10) Remove the screws of the back panel.(11) Remove the back panel. <p>Photo 2</p>  <p>The diagram shows the back of the outdoor unit with various screw locations marked. Labels include: 'Screws of the top panel' pointing to the top edge; 'Screws of the service panel' pointing to the middle section; 'Screws of the cabinet' pointing to the side and bottom edges; 'Screw of the valve cover' pointing to the bottom left; and 'Screws of the back panel' pointing to the bottom right.</p>	<p>Photo 1</p>  <p>The photo shows the front of the outdoor unit. Labels include: 'Screws of the top panel' pointing to the top edge; and 'Screws of the cabinet' pointing to the bottom edge.</p>

OPERATING PROCEDURE

2. Removing the inverter assembly and inverter P.C. board

- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Disconnect the lead wire to the reactor and the following connectors:
 - <Inverter P.C. board>
 - CN721 (R.V. coil)
 - CN931, CN932 (Fan motor)
 - CN641 (Defrost thermistor and discharge temperature thermistor)
 - CN643 (Ambient temperature thermistor)
 - CN644 (Outdoor heat exchanger temperature thermistor)
 - CN724 (Expansion valve coil)
- (3) Remove the compressor connector (CN61).
- (4) Remove the screws fixing the heat sink support and the separator.
- (5) Remove the fixing screw of the P.B. support and the separator.
- (6) Remove the fixing screws of the terminal block support and the back panel.
- (7) Remove the inverter assembly.
- (8) Remove the heat sink support from the P.C. board support.
- (9) Remove the screw of the inverter P.C. board and remove the inverter P.C. board from the P.C. board support.

* Connection procedure when attaching the inverter P.C. board (Photo 4)

1. Connect the lead wires of the heat exchanger temperature thermistor, the defrost thermistor, and the discharge temperature thermistor to the connector on the inverter P.C. board. Pull the lead wires toward you and put them on the right hook on the P.C. board support.
2. Connect the lead wires of the expansion valve coil to the connector on the inverter P.C. board. Pull the lead wires toward you and put them on the right hook on the P.C. board support.
3. Connect the lead wires of the ambient temperature thermistor to the connector on the inverter P.C. board. Pull the lead wires toward you and put them on the left hook on the P.C. board support so that the fan motor lead wires are bundled up as shown in Photo 4.

PHOTOS/FIGURES

Photo 3

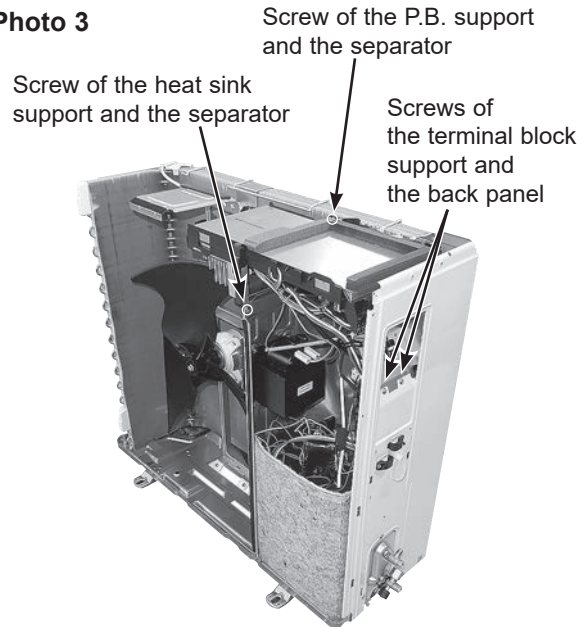


Photo 4





 
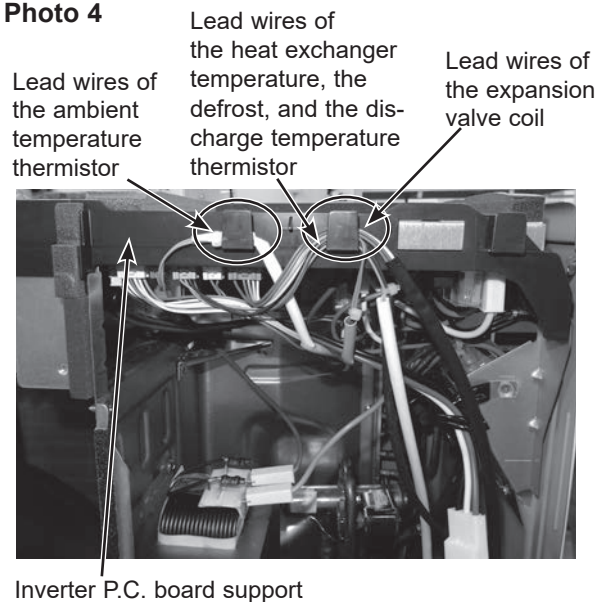


Photo 5 (Inverter assembly)

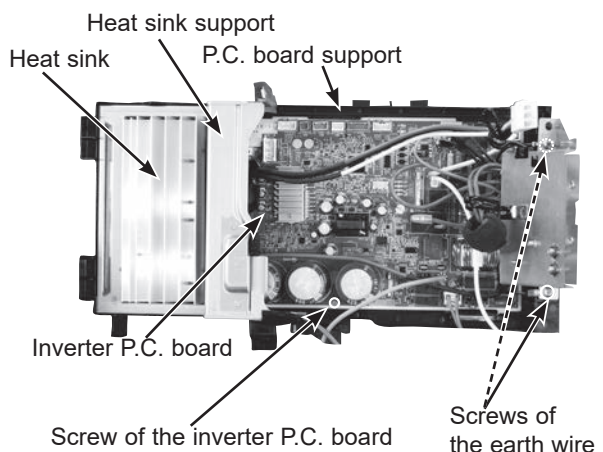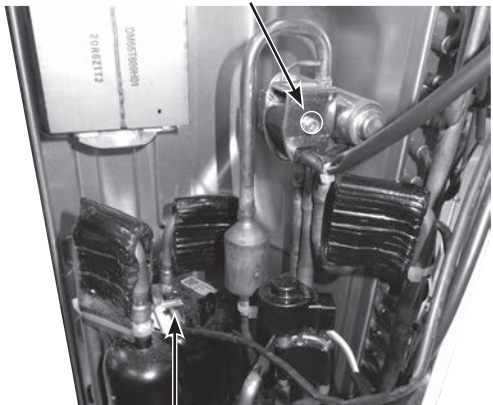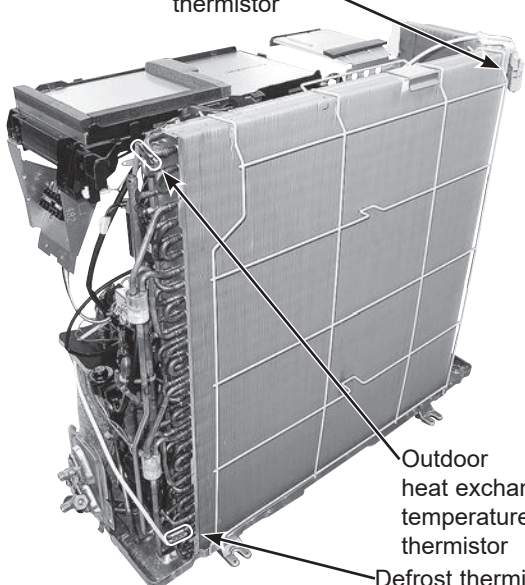

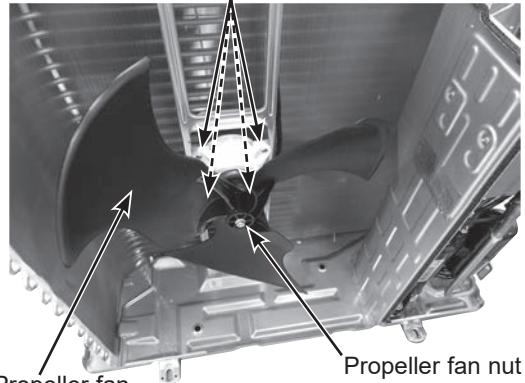

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>3. Removing R. V. coil</p> <ol style="list-style-type: none">(1) Remove the cabinet and panels. (Refer to section 1.)(2) Disconnect the following connectors: <Inverter P.C. board> CN721 (R.V. coil)(3) Remove the R.V. coil.	<p>Photo 6</p> <p>Screw of the R.V. coil</p>  <p>Discharge temperature thermistor</p>
<p>4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor</p> <ol style="list-style-type: none">(1) Remove the cabinet and panels. (Refer to section 1.)(2) Disconnect the lead wire to the reactor and the following connectors: <Inverter P.C. board> CN641 (Defrost thermistor and discharge temperature thermistor) CN643 (Ambient temperature thermistor) CN644 (Outdoor heat exchanger temperature thermistor)(3) Pull out the discharge temperature thermistor from its holder.(4) Pull out the defrost thermistor from its holder.(5) Pull out the outdoor heat exchanger temperature thermistor from its holder.(6) Pull out the ambient temperature thermistor from its holder.	<p>Photo 7</p> <p>Ambient temperature thermistor</p>  <p>Outdoor heat exchanger temperature thermistor</p> <p>Defrost thermistor</p>
<p>5. Removing outdoor fan motor</p> <ol style="list-style-type: none">(1) Remove the cabinet and panels. (Refer to section 1)(2) Disconnect the following connectors: <Inverter P.C. board> CN931, CN932 (Fan motor)(3) Remove the propeller fan nut.(4) Remove the propeller fan.(5) Remove the screws fixing the fan motor.(6) Remove the fan motor.	<p>Photo 8</p> <p>Screws of the outdoor fan motor</p>  <p>Propeller fan</p> <p>Propeller fan nut</p>

OPERATING PROCEDURE

6. Removing the compressor and 4-way valve


- (1) Remove the cabinet and panels. (Refer to section 1.)
- (2) Remove the inverter assembly. (Refer to section 2.)
- (3) Recover gas from the refrigerant circuit.
NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).
- (4) Detach the brazed part of the suction and the discharge pipe connected with compressor.
- (5) Remove the compressor nuts.
- (6) Remove the compressor.
- (7) Detach the brazed part of pipes connected with 4-way valve.

PHOTOS/FIGURES

Photo 9

Suction pipe
brazed part



Discharge pipe
brazed part

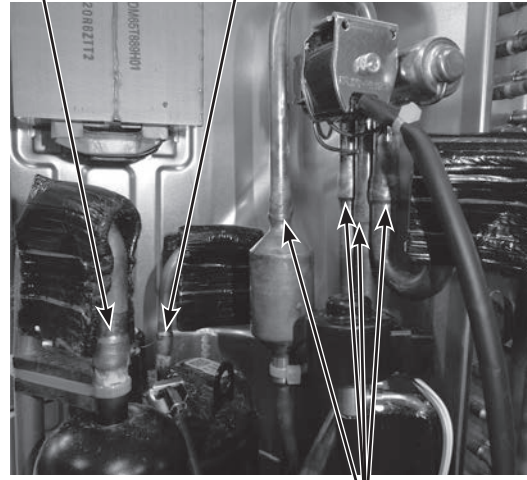

Brazed parts of 4-way valve

13-4. MUZ-FT35VGHZ - [E2], [SC2] MUZ-FT50VGHZ - [E2], [SC2]

NOTE: Turn OFF the power supply before disassembly.

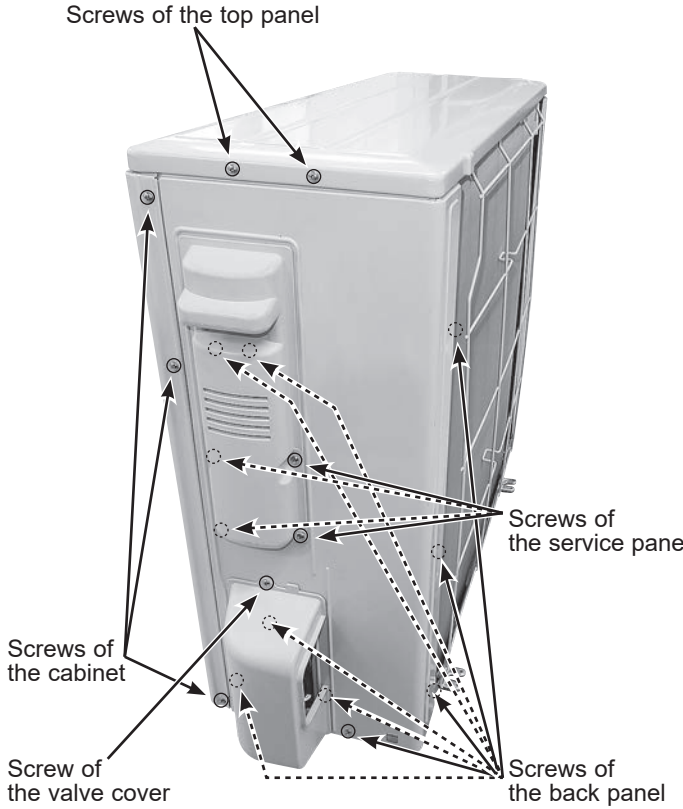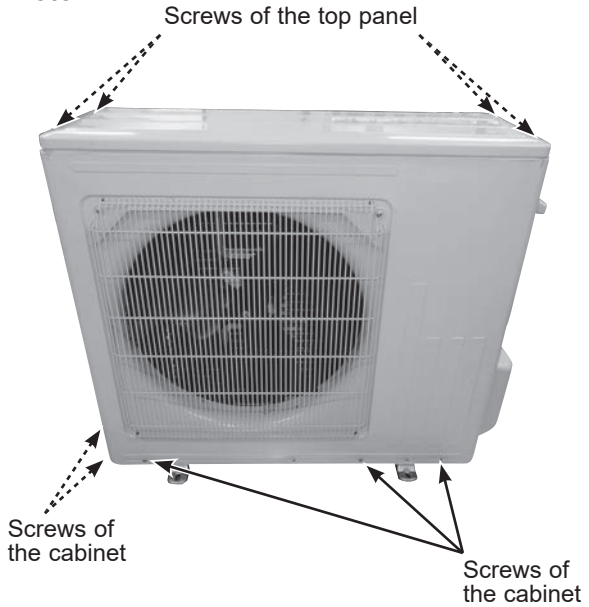OPERATING PROCEDURE	PHOTOS/FIGURES
<p>1. Removing the cabinet</p> <ol style="list-style-type: none">(1) Remove the screws of the service panel.(2) Remove the screws of the top panel.(3) Remove the screw of the valve cover.(4) Remove the service panel.(5) Remove the top panel.(6) Remove the valve cover.(7) Disconnect the power supply cord and indoor/outdoor connecting wire.(8) Remove the screws of the cabinet.(9) Remove the cabinet.(10) Remove the screws of the back panel.(11) Remove the back panel. <p>Photo 2</p>  <p>The diagram shows the back of the outdoor unit with various screw locations marked. Labels include: 'Screws of the top panel' pointing to the top edge; 'Screws of the service panel' pointing to the central access panel; 'Screw of the valve cover' pointing to the bottom left; 'Screws of the cabinet' pointing to the side and bottom edges; and 'Screws of the back panel' pointing to the rear panel.</p>	<p>Photo 1</p>  <p>The photo shows the top of the outdoor unit. Labels include: 'Screws of the top panel' pointing to the top surface; and 'Screws of the cabinet' pointing to the bottom edge of the unit.</p>

OPERATING PROCEDURE

2. Removing the inverter assembly and inverter P.C. board

- (1) Remove the cabinet and panels (refer to section 1).
- (2) Disconnect the lead wire to the reactor and the following connectors:
 - <Inverter P.C. board>
 - CN721 (R.V. coil)
 - CN931, CN932 (Fan motor)
 - CN641 (Defrost thermistor and discharge temperature thermistor)
 - CN643 (Ambient temperature thermistor)
 - CN644 (Outdoor heat exchanger temperature thermistor)
 - CN724 (LEV)
 - CN722 (Defrost heater and heater protector)
 - CN64 (Compressor protector)
- (3) Remove the compressor connector (CN61).
- (4) Remove the screws fixing the heat sink support and the separator.
- (5) Remove the fixing screw of the P.B. support and the separator.
- (6) Remove the fixing screws of the terminal block support and the back panel.
- (7) Remove the inverter assembly.
- (8) Remove the screws of the earth wires.
- (9) Remove the heat sink support from the P.C. board support.
- (10) Remove the screw of the inverter P.C. board and remove the inverter P.C. board from the P.C. board support.

PHOTOS/FIGURES

Photo 3

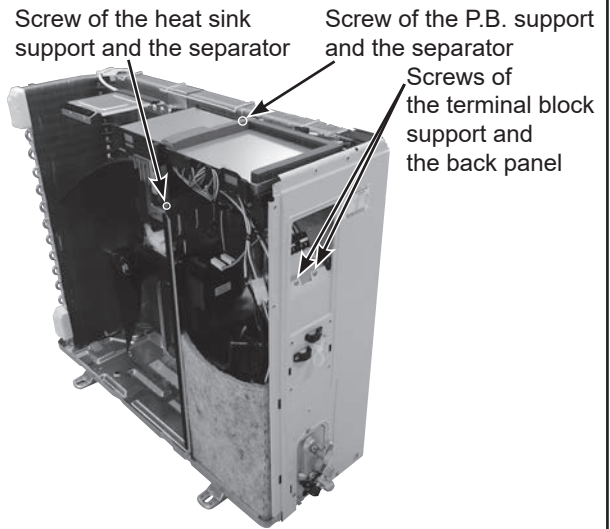


Photo 4


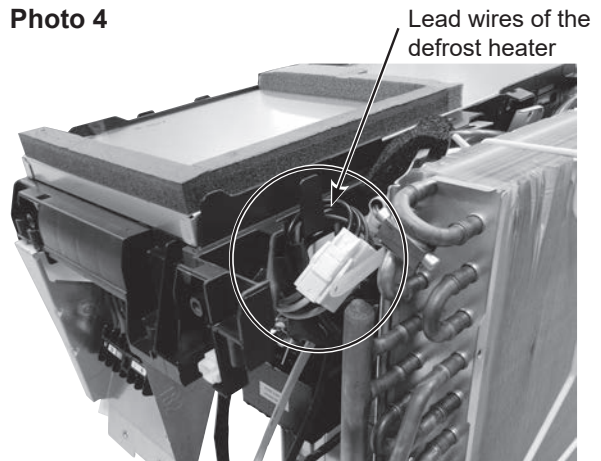


Photo 5 (Inverter assembly)



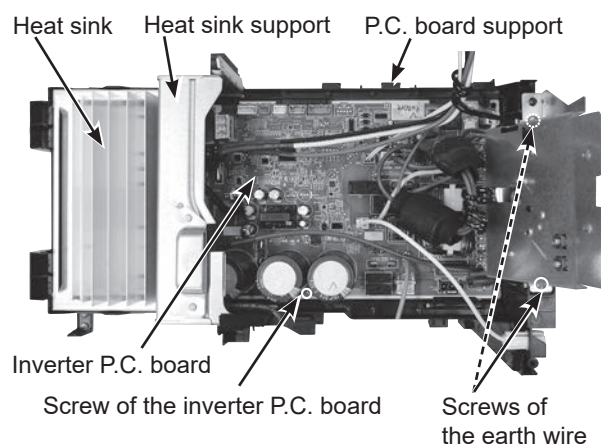

OPERATING PROCEDURE

*** Connection procedure when attaching the inverter P.C. board (Photo 6)**

1. Connect the lead wires of the heat exchanger temperature thermistor, the defrost thermistor and discharge temperature thermistor to the connector on the inverter P.C. board. Pull the lead wires toward you and put them on the right hook on the P.C. board support.
2. Connect the lead wires of the LEV to the connector on the inverter P.C. board. Pull the lead wires toward you and put them on the right hook on the P.C. board support.
3. Connect the lead wires of the ambient temperature thermistor to the connector on the inverter P.C. board. Pull the lead wires toward you and put them on the left hook on the P.C. board support so that the fan motor lead wires are bundled up as shown in Photo 6.
4. Hook the lead wires of the defrost heater and the heater protector. (Photo 4)


PHOTOS/FIGURES

Photo 6

Lead wires of the ambient temperature thermistor
Inverter P.C. board support

Lead wires of the heat exchanger temperature, defrost and discharge temperature thermistor

Lead wires of the expansion valve coil
Connector of the compressor protector

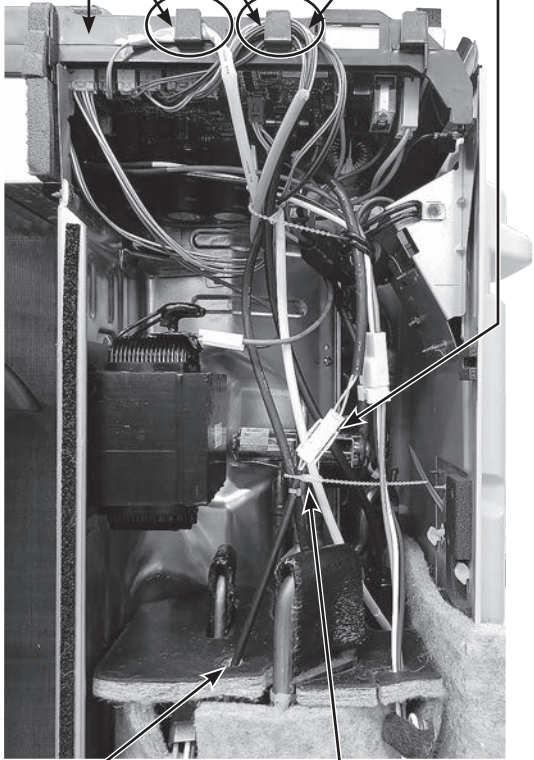

Pass the lead wire of compressor protector through the top felt hole.

Fix the lead wires of the compressor protector and the discharge temperature thermistor.

OPERATING PROCEDURE

3. Removing R. V. coil

- (1) Remove the cabinet and panels (refer to section 1).
- (2) Disconnect the following connectors:
<Inverter P.C. board>
CN721 (R.V. coil)
- (3) Remove the R.V. coil.

PHOTOS/FIGURES

Photo 7

Screw of the R.V. coil
Discharge temperature thermistor
Compressor protector


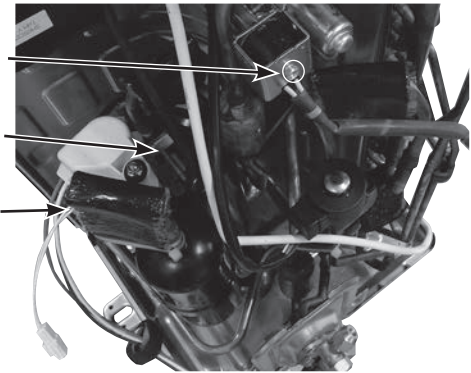


Figure 1

Attach the compressor protector to the protector holder with the surface on which the model name is printed facing the area hatched in the figure.

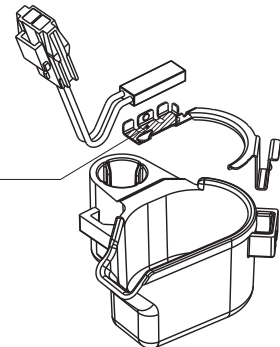


4. Removing the discharge temperature thermistor, defrost thermistor, outdoor heat exchanger temperature thermistor and ambient temperature thermistor

- (1) Remove the cabinet and panels (refer to section 1).
- (2) Disconnect the lead wire to the reactor and the following connectors:
<Inverter P.C. board>
CN641 (Defrost thermistor and discharge temperature thermistor)
CN643 (Ambient temperature thermistor)
CN644 (Outdoor heat exchanger temperature thermistor)
- (3) Pull out the discharge temperature thermistor from its holder.
- (4) Pull out the defrost thermistor from its holder.
- (5) Pull out the outdoor heat exchanger temperature thermistor from its holder.
- (6) Pull out the ambient temperature thermistor from its holder.

Photo 8

Outdoor heat exchanger temperature thermistor

Ambient temperature thermistor

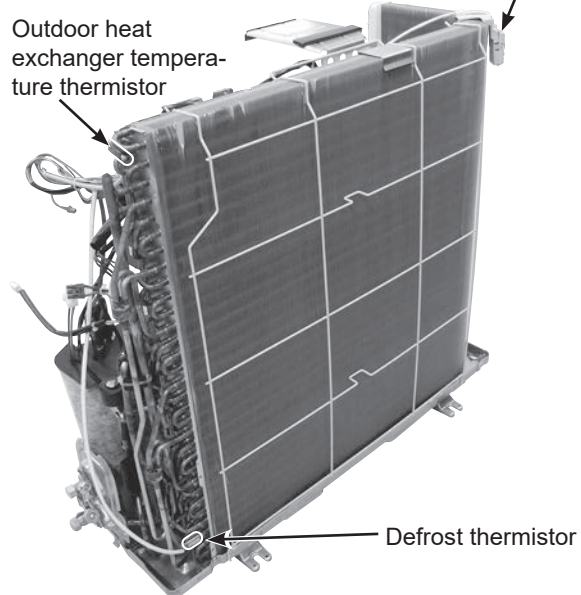


Defrost thermistor

5. Removing outdoor fan motor

- (1) Remove the cabinet and panels (refer to section 1).
- (2) Disconnect the following connectors:
<Inverter P.C. board>
CN931, CN932 (Fan motor)
- (3) Remove the propeller fan nut.
- (4) Remove the propeller fan.
- (5) Remove the screws fixing the fan motor.
- (6) Remove the fan motor.

Photo 9

Screws of the outdoor fan motor

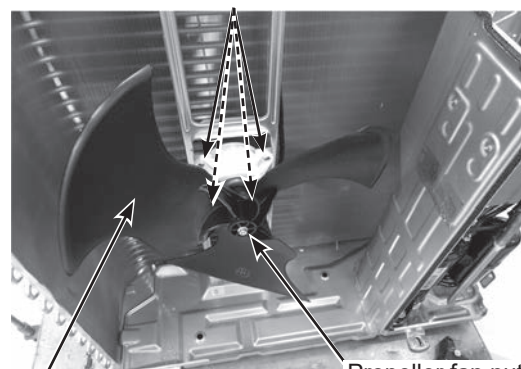


Propeller fan

Propeller fan nut



OPERATING PROCEDURE
<p>6. Removing the compressor and 4-way valve</p> <ul style="list-style-type: none">(1) Remove the cabinet and panels (refer to section 1).(2) Remove the inverter assembly (refer to section 2).(3) Recover gas from the refrigerant circuit. NOTE: Recover gas from the pipes until the pressure gauge shows 0 kg/cm² (0 MPa).(4) Detach the brazed part of the suction and the discharge pipe connected with compressor.(5) Remove the compressor nuts.(6) Remove the compressor.(7) Detach the brazed part of pipes connected with 4-way valve.

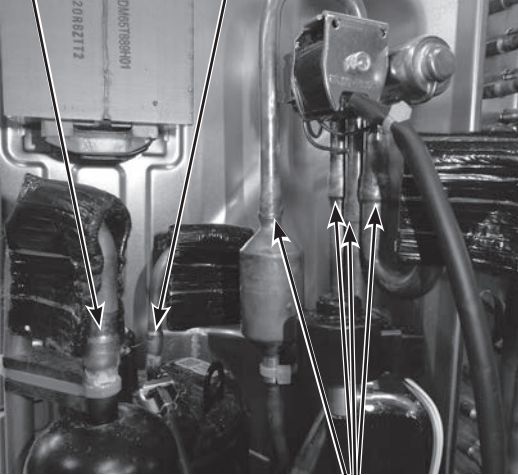PHOTOS/FIGURES
<p>Photo 10</p> <p>Suction pipe brazed part</p> <p>Discharge pipe brazed part</p>  <p>Brazed parts of 4-way valve</p>

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN

© Copyright 2020 MITSUBISHI ELECTRIC CORPORATION

Issued: Oct. 2024. No. OBH865 REVISED EDITION-C

Issued: May 2022. No. OBH865 REVISED EDITION-B

Issued: Jun. 2021. No. OBH865 REVISED EDITION-A

Published: Jun. 2020. No. OBH865

Made in Japan

Specifications are subject to change without notice.