

TECHNICAL & SERVICE MANUAL

Series PLFY Ceiling Cassettes

R32/R410A

Indoor unit

[Model names]

PLFY-M20VEM6-E
 PLFY-M20VEM6-ER
 PLFY-M20VEM6-ET
 PLFY-M25VEM6-E
 PLFY-M25VEM6-ER
 PLFY-M25VEM6-ET
 PLFY-M32VEM6-E
 PLFY-M32VEM6-ER
 PLFY-M32VEM6-ET
 PLFY-M40VEM6-E
 PLFY-M40VEM6-ER
 PLFY-M40VEM6-ET
 PLFY-M50VEM6-E
 PLFY-M50VEM6-ER
 PLFY-M50VEM6-ET
 PLFY-M63VEM6-E
 PLFY-M63VEM6-ER
 PLFY-M63VEM6-ET
 PLFY-M71VEM6-E
 PLFY-M71VEM6-ER
 PLFY-M71VEM6-ET
 PLFY-M80VEM6-E
 PLFY-M80VEM6-ER
 PLFY-M80VEM6-ET
 PLFY-M100VEM6-E
 PLFY-M100VEM6-ER
 PLFY-M100VEM6-ET
 PLFY-M125VEM6-E
 PLFY-M125VEM6-ER
 PLFY-M125VEM6-ET

[Service Ref.]

PLFY-M20VEM6-E.UK
 PLFY-M20VEM6-ER.UK
 PLFY-M20VEM6-ET.UK
 PLFY-M25VEM6-E.UK
 PLFY-M25VEM6-ER.UK
 PLFY-M25VEM6-ET.UK
 PLFY-M32VEM6-E.UK
 PLFY-M32VEM6-ER.UK
 PLFY-M32VEM6-ET.UK
 PLFY-M40VEM6-E.UK
 PLFY-M40VEM6-ER.UK
 PLFY-M40VEM6-ET.UK
 PLFY-M50VEM6-E.UK
 PLFY-M50VEM6-ER.UK
 PLFY-M50VEM6-ET.UK
 PLFY-M63VEM6-E.UK
 PLFY-M63VEM6-ER.UK
 PLFY-M63VEM6-ET.UK
 PLFY-M71VEM6-E.UK
 PLFY-M71VEM6-ER.UK
 PLFY-M71VEM6-ET.UK
 PLFY-M80VEM6-E.UK
 PLFY-M80VEM6-ER.UK
 PLFY-M80VEM6-ET.UK
 PLFY-M100VEM6-E.UK
 PLFY-M100VEM6-ER.UK
 PLFY-M100VEM6-ET.UK
 PLFY-M125VEM6-E.UK
 PLFY-M125VEM6-ER.UK
 PLFY-M125VEM6-ET.UK

Revision:


- PLP-6EAB has been added in REVISED EDITION-A.

OCH793 is void.


Grille model

[Model names]

PLP-6EA
 PLP-6EAE
 PLP-6EAL
 PLP-6EALC
 PLP-6EALJ
 PLP-6EALJE
 PLP-6EALM
 PLP-6EALME
 PLP-6EAB

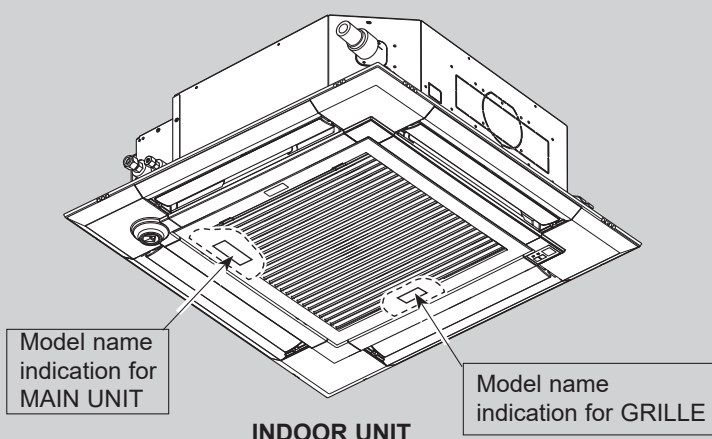

WIRELESS REMOTE
CONTROLLER
(Option)

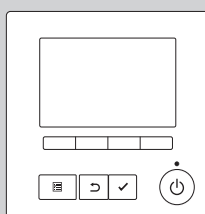

WIRED REMOTE
CONTROLLER
(Option)





CONTENTS

1. SAFETY PRECAUTION	2
2. PARTS NAMES AND FUNCTIONS	7
3. SPECIFICATIONS	8
4. 4-WAY AIRFLOW SYSTEM	14
5. OUTLINES AND DIMENSIONS	17
6. WIRING DIAGRAM	18
7. REFRIGERANT SYSTEM DIAGRAM ..	19
8. TROUBLESHOOTING	20
9. SPECIAL FUNCTION	28
10. DISASSEMBLY PROCEDURE	31
11. REMOTE CONTROLLER	38

PARTS CATALOG (OCB793)

CITY MULTI

MEANINGS OF SYMBOLS DISPLAYED ON THE UNIT

	WARNING (Risk of fire)	This mark is for R32 refrigerant only. Refrigerant type is written on nameplate of outdoor unit. In case that refrigerant type is R32, this unit uses a flammable refrigerant. If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire.
	Read the OPERATION MANUAL carefully before operation.	
	Service personnel are required to carefully read the OPERATION MANUAL and INSTALLATION MANUAL before operation.	
	Further information is available in the OPERATION MANUAL, INSTALLATION MANUAL, and the like.	

1-1. ALWAYS OBSERVE FOR SAFETY

Before obtaining access to terminal, all supply circuits must be disconnected.

1-2. CAUTIONS RELATED TO REFRIGERANT

Cautions for units utilizing refrigerant R32/R410A

Use new refrigerant pipes.

In case of using the existing pipes for R22, be careful with the following.

- Be sure to clean the pipes and make sure that the insides of the pipes are clean.
- Change flare nut to the one provided with this product. Use a newly flared pipe.
- Avoid using thin pipes.
- In case of reconnecting the refrigerant pipes after detaching, make the flared part of pipe re-fabricated.

Make sure that the inside and outside of refrigerant piping is clean and it has no contaminants such as sulfur, oxides, dirt, shaving particles, etc., which are hazard to refrigerant cycle. In addition, use pipes with specified thickness.

Contamination inside refrigerant piping can cause deterioration of refrigerant oil, etc.

Store the piping indoors, and keep both ends of the piping sealed until just before brazing. (Leave elbow joints, etc. in their packaging.)

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

The refrigerant oil applied to flare and flange connections must be ester oil, ether oil or alkylbenzene oil in a small amount.

If large amount of mineral oil enters, that can cause deterioration of refrigerant oil, etc.

Charge refrigerant from liquid phase of gas cylinder.

If the refrigerant is charged from gas phase, composition change may occur in refrigerant and the efficiency will be lowered.

Use a vacuum pump with a reverse flow check valve.

Vacuum pump oil may flow back into refrigerant cycle and that can cause deterioration of refrigerant oil, etc.

Use the following tools specifically designed for use with R32/R410A refrigerant.

The following tools are necessary to use R32/R410A refrigerant.

Tools for R32/R410A	
Gauge manifold	Flare tool
Charge hose	Size adjustment gauge
Gas leak detector	Vacuum pump adaptor
Torque wrench	Electronic refrigerant charging scale

Handle tools with care.

If dirt, dust or moisture enters into refrigerant cycle, that can cause deterioration of refrigerant oil or malfunction of compressor.

Do not use a charging cylinder.

If a charging cylinder is used, the composition of refrigerant will change and the efficiency will be lowered.

Use the specified refrigerant only.

Never use any refrigerant other than that specified.

Doing so may cause a burst, an explosion, or fire when the unit is being used, serviced, or disposed of.
Correct refrigerant is specified on name plate of outdoor unit.

If other refrigerant (R22, etc.) is used, chlorine in refrigerant can cause deterioration of refrigerant oil, etc.
We will not be held responsible for mechanical failure, system malfunction, unit breakdown or accidents caused by failure to follow the instructions.

Ventilate the room if refrigerant leaks during operation. If refrigerant comes into contact with a flame, poisonous gases will be released.

[1] Warning for service

- (1) Do not alter the unit.
- (2) For installation and relocation work, follow the instructions in the Installation Manual and use tools and pipe components specifically made for use with refrigerant specified in the outdoor unit installation manual.
- (3) Ask a dealer or an authorized technician to install, relocate and repair the unit.
- (4) This unit should be installed in rooms which exceed the floor space specified in outdoor unit installation manual. Refer to outdoor unit installation manual.
- (5) Install the indoor unit at least 2.5 m above floor or grade level.
For appliances not accessible to the general public.
- (6) Refrigerant pipes connection shall be accessible for maintenance purposes.
- (7) If the air conditioner is installed in a small room or closed room, measures must be taken to prevent the refrigerant concentration in the room from exceeding the safety limit in the event of refrigerant leakage. Should the refrigerant leak and cause the concentration limit to be exceeded, hazards due to lack of oxygen in the room may result.
- (8) Keep gas-burning appliances, electric heaters, and other fire sources (ignition sources) away from the location where installation, repair, and other air conditioner work will be performed.
If refrigerant comes into contact with a flame, poisonous gases will be released.
- (9) When installing or relocating, or servicing the air conditioner, use only the specified refrigerant written on outdoor unit to charge the refrigerant lines.
Do not mix it with any other refrigerant and do not allow air to remain in the lines.
If air is mixed with the refrigerant, then it can be the cause of abnormal high pressure in the refrigerant line, and may result in an explosion and other hazards.
- (10) After installation has been completed, check for refrigerant leaks. If refrigerant leaks into the room and comes into contact with the flame of a heater or portable cooking range, poisonous gases will be released.
- (11) Do not use low temperature solder alloy in case of brazing the refrigerant pipes.
- (12) When performing brazing work, be sure to ventilate the room sufficiently. Make sure that there are no hazardous or flammable materials nearby.
When performing the work in a closed room, small room, or similar location, make sure that there are no refrigerant leaks before performing the work.
If refrigerant leaks and accumulates, it may ignite or poisonous gases may be released.
- (13) Do not install the unit in places where refrigerant may build-up or places with poor ventilation such as a semi-basement or a sunken place in outdoor: Refrigerant is heavier than air, and inclined to fall away from the leak source.
- (14) Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- (15) The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- (16) Do not pierce or burn.
- (17) Be aware that refrigerants may not contain an odour.
- (18) Pipe-work shall be protected from physical damage.
- (19) The installation of pipe-work shall be kept to a minimum.
- (20) Compliance with national gas regulations shall be observed.
- (21) Keep any required ventilation openings clear of obstruction.
- (22) Servicing shall be performed only as recommended by the manufacturer.
- (23) The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- (24) Maintenance, service and repair operations shall be performed by authorized technician with required qualification.

[2] Cautions for service

- (1) Perform service after recovering the refrigerant left in unit completely.
- (2) Do not release refrigerant in the air.
- (3) After completing service, charge the cycle with specified amount of refrigerant.
- (4) When performing service, install a filter drier simultaneously.
Be sure to use a filter drier for new refrigerant.

[3] Additional refrigerant charge

When charging directly from cylinder

- (1) Check that cylinder for R32/R410A available on the market is a syphon type.
- (2) Charging should be performed with the cylinder of syphon stood vertically. (Refrigerant is charged from liquid phase.)

[4] Cautions for unit using R32 refrigerant

Basic work procedures are the same as those for conventional units using refrigerant R410A. However, pay careful attention to the following points.

(1) Information on servicing

(1-1) Checks on the Area

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized.

For repair to the refrigerating systems, (1-3) to (1-7) shall be completed prior to conducting work on the systems.

(1-2) Work Procedure

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapor being present while the work is being performed.

(1-3) General Work Area

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out.

Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

(1-4) Checking for Presence of Refrigerant

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

(1-5) Presence of Fire Extinguisher

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand.

Have a dry powder or CO2 fire extinguisher adjacent to the charging area.

(1-6) No Ignition Sources

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

(1-7) Ventilated Area

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

(1-8) Checks on the Refrigeration Equipment

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The charge size is in accordance with the room size within which the refrigerant containing parts are installed.
- The ventilation machinery and outlets are operating adequately and are not obstructed.
- Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.
- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being corroded.

(1-9) Checks on Electrical Devices

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised. Initial safety checks shall include that:

- capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- no live electrical components and wiring are exposed while charging, recovering or purging the system;
- there is continuity of earth bonding

(2) Repairs to Sealed Components

(2-1) During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

(2-2) Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

Ensure that the apparatus is mounted securely.

Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres.

Replacement parts shall be in accordance with the manufacturer's specifications.

(3) Repair to Intrinsically Safe Components

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.

Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

(4) Cabling

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

(5) Detection of Flammable Refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks.

A halide torch (or any other detector using a naked flame) shall not be used.

(6) Leak Detection Methods

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)

Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25% maximum) is confirmed.

Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. For appliances containing flammable refrigerants, oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

(7) Removal and Evacuation

When breaking into the refrigerant circuit to make repairs – or for any other purpose conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

- remove refrigerant
- purge the circuit with inert gas
- evacuate
- purge again with inert gas
- open the circuit by cutting or brazing.

The refrigerant charge shall be recovered into the correct recovery cylinders. For appliances containing flammable refrigerants, the system shall be “flushed” with OFN to render the unit safe. This process may need to be repeated several times.

Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and that ventilation is available.

(8) Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed:

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
- Cylinders shall be kept upright.
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

(9) Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced.

Continued to the next page

-
- a) Become familiar with the equipment and its operation.
 - b) Isolate system electrically.
 - c) Before attempting the procedure, ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.
 - d) Pump down refrigerant system, if possible.
 - e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
 - f) Make sure that cylinder is situated on the scales before recovery takes place.
 - g) Start the recovery machine and operate in accordance with manufacturer's instructions.
 - h) Do not overfill cylinders. (No more than 80 % volume liquid charge).
 - i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
 - j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
 - k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

(10) Labelling


Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

(11) Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely. When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders. If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.

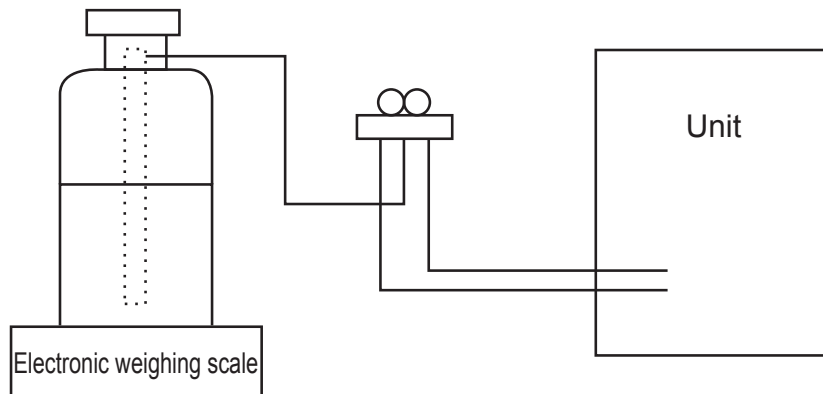

[5] Service tools

Use the below service tools as exclusive tools for R32/R410A refrigerant.


Refer to the spec name plate on outdoor unit for the type of refrigerant being used.

No.	Tool name	Specifications
1.	Gauge manifold	<ul style="list-style-type: none"> · Use the existing fitting specifications. (UNF1/2) · Use high-tension side pressure of 5.3MPa·G or over.
2.	Charge hose	<ul style="list-style-type: none"> · Use pressure performance of 5.09MPa·G or over.
3.	Electronic weighing scale	—
4.	Gas leak detector	<ul style="list-style-type: none"> · Use the detector for R134a, R407, R410A, or R32.
5.	Adaptor for reverse flow check	<ul style="list-style-type: none"> · Attach on vacuum pump.
6.	Refrigerant charge base	—
7.	Refrigerant cylinder	<ul style="list-style-type: none"> · R32 or R410A refrigerant · Cylinder with syphon
8.	Refrigerant recovery equipment	—

2


PARTS NAMES AND FUNCTIONS

2-1. Indoor unit

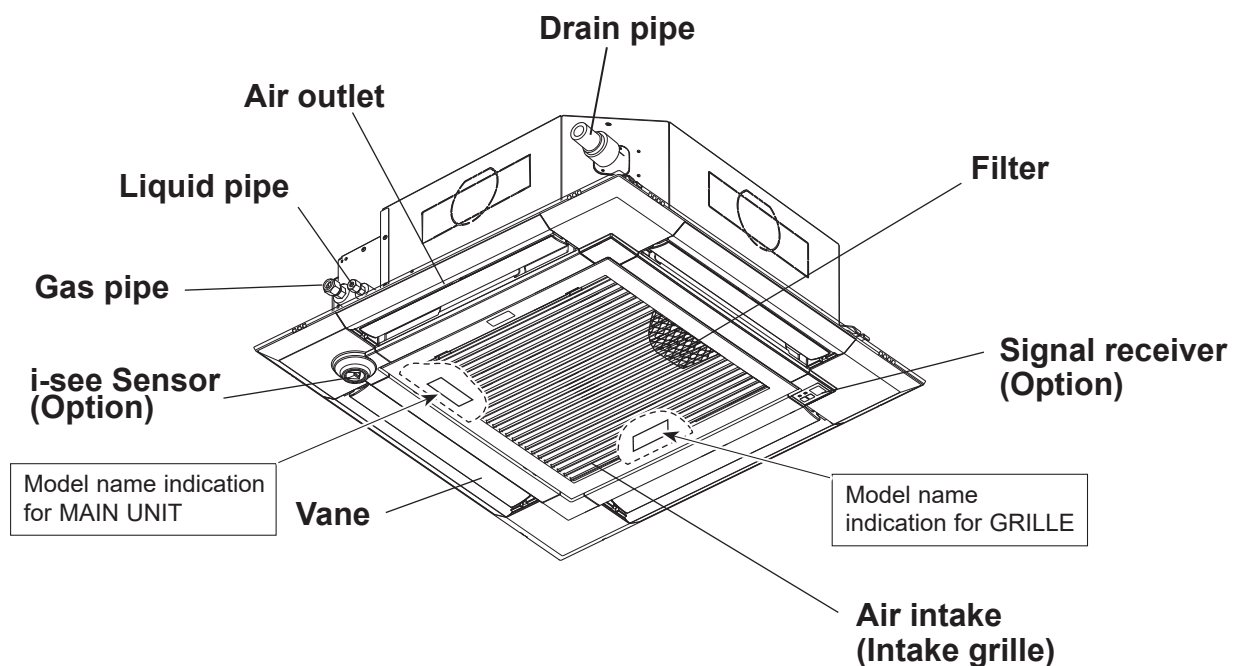


3-1. SPECIFICATIONS

Model			PLFY-M20VEM6-E.UK PLFY-M20VEM6-ER.UK PLFY-M20VEM6-ET.UK	PLFY-M25VEM6-E.UK PLFY-M25VEM6-ER.UK PLFY-M25VEM6-ET.UK	PLFY-M32VEM6-E.UK PLFY-M32VEM6-ER.UK PLFY-M32VEM6-ET.UK	PLFY-M40VEM6-E.UK PLFY-M40VEM6-ER.UK PLFY-M40VEM6-ET.UK	PLFY-M50VEM6-E.UK PLFY-M50VEM6-ER.UK PLFY-M50VEM6-ET.UK	
Power source			220-240 V 50 Hz / 220 V 60 Hz					
Cooling capacity (Nominal)	*1	kW	2.2	2.8	3.6	4.5	5.6	
	*1	kcal/h	1,900	2,400	3,100	3,900	4,800	
	*1	Btu/h	7,500	9,600	12,300	15,400	19,100	
	Power input		kW	0.03	0.03	0.03	0.06	
	Current input		A	0.31	0.31	0.32	0.52	
Heating capacity (Nominal)	*2	kW	2.5	3.2	4.0	5.0	6.3	
	*2	kcal/h	2,200	2,800	3,400	4,300	5,400	
	*2	Btu/h	8,500	10,900	13,600	17,100	21,500	
	Power input		kW	0.03	0.03	0.03	0.07	
	Current input		A	0.24	0.24	0.25	0.60	
External finish			Galvanized steel sheet					
External dimension H × W × D		mm	258 × 840 × 840				298 × 840 × 840	
		inch	10-3/16 × 33-3/32 × 33-3/32				11-3/4 × 33-3/32 × 33-3/32	
Net weight		kg (lb)	19 (42)				24 (52)	
Grille	model		PLP-6EA					
	External finish		MUNSELL (1.0Y 9.2/0.2)					
	Dimension H × W × D	mm	40 × 950 × 950					
		inch	1-9/16 × 37-13/32 × 37-13/32					
	Net weight		kg (lb)	5 (11)				
Heat exchanger			Cross fin (Aluminum fin and copper tube)					
Fan	Type × Quantity		Turbo fan × 1	Turbo fan × 1	Turbo fan × 1	Turbo fan × 1	Turbo fan × 1	
	External static press.	Pa	0	0	0	0	0	
		mmH ₂ O	0	0	0	0	0	
	Motor type		DC motor					
	Motor output		kW				0.12	
	Driving mechanism		Direct-drive					
	Airflow rate (Low-Mid2- Mid1- High)	Cooling	m ³ /min	12 - 13 - 14 - 15	12 - 13 - 14 - 15	13 - 14 - 15 - 16	13 - 14 - 15 - 17	16 - 17 - 18 - 25
		Heating						16 - 17 - 18 - 28
		Cooling	L/s	200 - 217 - 233 - 250	200 - 217 - 233 - 250	217 - 233 - 250 - 267	217 - 233 - 250 - 283	267 - 283 - 300 - 417
		Heating						267 - 283 - 300 - 467
		Cooling	cfm	424 - 459 - 494 - 530	424 - 459 - 494 - 530	459 - 494 - 530 - 565	459 - 494 - 530 - 600	565 - 600 - 636 - 883
		Heating						565 - 600 - 636 - 989
	Sound pressure level (Low-Mid2-Mid1-High) (measured in anechoic room)	Cooling	dB <A>	24 - 26 - 27 - 29	24 - 26 - 27 - 29	26 - 27 - 29 - 31	26 - 27 - 29 - 31	27 - 29 - 31 - 38
		Heating						27 - 29 - 31 - 41
Insulation material			PS					
Air filter			PP honeycomb					
Protection device			Fuse					
Refrigerant control device			LEV					
Connectable outdoor unit			R32/R410A CITY MULTI					
Diameter of refrigerant pipe	Liquid (R32/R410A)	mm (inch)	ø6.35 (ø1/4) Flare	ø6.35 (ø1/4) Flare	ø6.35 (ø1/4) Flare	ø6.35 (ø1/4) Flare	ø6.35 (ø1/4) Flare	
	Gas (R32/R410A)	mm (inch)	ø12.7 (ø1/2) Flare	ø12.7 (ø1/2) Flare	ø12.7 (ø1/2) Flare	ø12.7 (ø1/2) Flare	ø12.7 (ø1/2) Flare	
Field drain pipe size		mm	O.D. ø32 (VP-25)					
Standard attachment	Document Accessory		Installation Manual, Instruction Book					
Remark	Optional parts							
	Grille	**1	PLP-6EA					
	Air outlet shutter plate		PAC-SJ37SP-E					
	High efficiency filterelement	**2	PAC-SH59KF-E					
	Multi-function casement		PAC-SJ41TM-E					
			**1. PLFY-M-VEM6-(E/ET/ER) should be used together with PLP-6EA. **2. PAC-SJ41TM-E is necessary to use with filter PAC-SH59KF-E.					
	Installation		Details on foundation work, duct work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual.					
*1 Nominal cooling condition Indoor : 27°CDB/19°CWB (81°FDB/66°FWB) Outdoor : 35°CDB (95°FDB) Pipe length : 7.5 m (24-9/16 ft) Level difference : m (0 ft)					*2 Nominal heating condition 20°CDB (68°FDB) 7°CDB/6°CWB (45°FDB/43°FWB) 7.5 m (24-9/16 ft) 0 m (0 ft)			
					Unit converter kcal/h = kW × 860 Btu/h = kW × 3,412 cfm = K/min × 35.31 lb = kg/0.4536 *Above specification data is subject to rounding variation.			
Notes: 1. Nominal conditions *1 and *2 are subject to JIS B8615-1. 2. Due to continuing improvement, above specification may be subject to change without notice.								



Model			PLFY-M63VEM6-E.UK PLFY-M63VEM6-ER.UK PLFY-M63VEM6-ET.UK	PLFY-M71VEM6-E.UK PLFY-M71VEM6-ER.UK PLFY-M71VEM6-ET.UK	PLFY-M80VEM6-E.UK PLFY-M80VEM6-ER.UK PLFY-M80VEM6-ET.UK	PLFY-M100VEM6-E.UK PLFY-M100VEM6-ER.UK PLFY-M100VEM6-ET.UK	PLFY-M125VEM6-E.UK PLFY-M125VEM6-ER.UK PLFY-M125VEM6-ET.UK	
Power source			220–240 V 50 Hz / 220 V 60 Hz					
Cooling capacity (Nominal)	*1	kW	7.1	8.0	9.0	11.2	14.0	
	*1	kcal/h	6,100	6,900	7,700	9,600	12,000	
	*1	Btu/h	24,200	27,300	30,700	38,200	47,800	
	Power input	kW	0.09	0.12	0.12	0.12	0.12	
	Current input	A	0.74	0.97	0.97	0.97	0.97	
Heating capacity (Nominal)	*2	kW	8.0	9.0	10.0	12.5	16.0	
	*2	kcal/h	6,900	7,740	8,600	10,800	13,800	
	*2	Btu/h	27,300	30,708	34,100	42,700	54,600	
	Power input	kW	0.12	0.12	0.12	0.12	0.12	
	Current input	A	0.90	0.94	0.94	0.94	0.94	
External finish			Galvanized steel sheet					
External dimension H × W × D		mm	298 × 840 × 840					
		inch	11-3/4 × 33-3/32 × 33-3/32					
Net weight		kg (lb)	24 (52)	27 (60)				
Grille	Model		PLP-6EA					
	External finish		MUNSELL (1.0Y 9.2/0.2)					
	Dimension H × W × D	mm	40 × 950 × 950					
		inch	1-9/16 × 37-13/32 × 37-13/32					
	Net weight		kg (lb)	5 (11)				
Heat exchanger			Cross fin (Aluminum fin and copper tube)					
Fan	Type × Quantity		Turbo fan × 1	Turbo fan × 1	Turbo fan × 1	Turbo fan × 1	Turbo fan × 1	
	External static press.	Pa	0	0	0	0	0	
		mmH2O	0	0	0	0	0	
	Motor type		DC motor					
	Motor output		0.12					
	Driving mechanism		Direct-drive					
	Airflow rate (Low- Mid2- Mid1-High)	Cooling Heating	m³/min	16 - 18 - 20 - 32 16 - 18 - 20 - 35	16 - 18 - 20 - 35	16 - 20 - 23 - 35	17 - 22 - 28 - 35	17 - 24 - 31 - 35
			Cooling Heating	L/s	267 - 300 - 333 - 533 267 - 300 - 333 - 583	233 - 283 - 333 - 583	233 - 283 - 333 - 583	333 - 383 - 433 - 583
		Cooling Heating		cfm	565 - 636 - 706 - 1130 565 - 636 - 706 - 1236	742 - 812 - 847 - 1236	742 - 812 - 847 - 1236	742 - 883 - 1024 - 1236
			Cooling Heating	dB <A>	27 - 30 - 32 - 43 27 - 30 - 32 - 46	28 - 31 - 35 - 46	28 - 33 - 37 - 46	29 - 35 - 41 - 46
		Insulation material			PS			
		Air filter			PP honeycomb			
Protection device			Fuse					
Refrigerant control device			LEV					
Connectable outdoor unit			R32/R410A CITY MULTI					
Diameter of refrigerant pipe	Liquid (R32/R410A)	mm (inch)	ø9.52 (ø3/8) Flare	ø9.52 (ø3/8) Flare	ø9.52 (ø3/8) Flare	ø9.52 (ø3/8) Flare	ø9.52 (ø3/8) Flare	
	Gas (R32/R410A)	mm (inch)	ø15.88 (ø5/8) Flare	ø15.88 (ø5/8) Flare	ø15.88 (ø5/8) Flare	ø15.88 (ø5/8) Flare	ø15.88 (ø5/8) Flare	
Field drain pipe size		mm	O.D. ø32 (VP-25)					
Standard attachment	DocumentAccessory		Installation Manual, Instruction Book					
Remark	Optional parts							
	Grille **1		PLP-6EA					
	Air outlet shutter plate		PAC-SJ37SP-E					
	High efficiency filter element **2		PAC-SH59KF-E					
	Multi-function casement		PAC-SJ41TM-E					
			**1. PLFY-M-VEM6-(E/ET/ER) should be used together with PLP-6EA. **2. PAC-SJ41TM-E is necessary to use with filter PAC-SH59KF-E.					
	Installation		Details on foundation work, duct work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual.					
*1 Nominal cooling condition Indoor : 27°CDB/19°CWB (81°FDB/66°FWB) Outdoor : 35°CDB (95°FDB) Pipe length : 7.5 m (24-9/16 ft) Level difference : m (0 ft)					*2 Nominal heating condition 20°CDB (68°FDB) 7°CDB/6°CWB (45°FDB/43°FWB) 7.5 m (24-9/16 ft) 0 m (0 ft)		Unit converter kcal/h = kW × 860 Btu/h = kW × 3,412 cfm = K/min × 35.31 lb = kg/0.4536 *Above specification data is subject to rounding variation.	
Notes: 1. Nominal conditions *1 and *2 are subject to JIS B8615-1. 2. Due to continuing improvement, above specification may be subject to change without notice.								



3-2. ELECTRICAL PARTS SPECIFICATIONS

Model name Parts name	Symbol	PLFY-M20VEM6-E.UK PLFY-M20VEM6-ER.UK PLFY-M20VEM6-ET.UK	PLFY-M25VEM6-E.UK PLFY-M25VEM6-ER.UK PLFY-M25VEM6-ET.UK	PLFY-M32VEM6-E.UK PLFY-M32VEM6-ER.UK PLFY-M32VEM6-ET.UK	PLFY-M40VEM6-E.UK PLFY-M40VEM6-ER.UK PLFY-M40VEM6-ET.UK	PLFY-M50VEM6-E.UK PLFY-M50VEM6-ER.UK PLFY-M50VEM6-ET.UK	
Room temperature thermistor	TH21	Resistance 0°C/15 kΩ, 10°C/9.6 kΩ, 20°C/6.3 kΩ, 25°C/5.4 kΩ, 30°C/4.3 kΩ, 40°C/3.0 kΩ					
Liquid pipe thermistor	TH22	Resistance 0°C/15 kΩ, 10°C/9.6 kΩ, 20°C/6.3 kΩ, 25°C/5.4 kΩ, 30°C/4.3 kΩ, 40°C/3.0 kΩ					
Gas pipe thermistor	TH23	Resistance 0°C/15 kΩ, 10°C/9.6 kΩ, 20°C/6.3 kΩ, 25°C/5.4 kΩ, 30°C/4.3 kΩ, 40°C/3.0 kΩ					
Fuse (Indoor controller board)	FUSE	250 V 6.3 A					
Fan motor	MF	8-pole OUTPUT 50 W				8-pole OUTPUT 120 W	
Vane motor	MV	MSBPC20M13 DC12 V 300 Ω/phase					
Drain pump	DP	PMD-12D13ME INPUT 3 W 24ℓ /Hr					
Drain float switch	FS	Open / Short detection					
Linear expansion valve	LEV	DC12 V Stepping motor drive port dimension ø3.2 (0–2000pulse) EFM-40YGME					
Power supply terminal block	TB2	(L, N) Rated to 330 V 30 A *					
Transmission terminal block	TB5	(M1, M2, S) Rated to 250 V 20 A *					
MA remote controller terminal block	TB15	(1, 2) Rated to 250 V 10 A *					


*Refer to WIRING DIAGRAM for the supplied voltage.

Model name Parts name	Symbol	PLFY-M63VEM6-E.UK PLFY-M63VEM6-ER.UK PLFY-M63VEM6-ET.UK	PLFY-M71VEM6-E.UK PLFY-M71VEM6-ER.UK PLFY-M71VEM6-ET.UK	PLFY-M80VEM6-E.UK PLFY-M80VEM6-ER.UK PLFY-M80VEM6-ET.UK	PLFY-M100VEM6-E.UK PLFY-M100VEM6-ER.UK PLFY-M100VEM6-ET.UK	PLFY-M125VEM6-E.UK PLFY-M125VEM6-ER.UK PLFY-M125VEM6-ET.UK
Room temperature thermistor	TH21	Resistance 0°C/15 kΩ, 10°C/9.6 kΩ, 20°C/6.3 kΩ, 25°C/5.4 kΩ, 30°C/4.3 kΩ, 40°C/3.0 kΩ				
Liquid pipe thermistor	TH22	Resistance 0°C/15 kΩ, 10°C/9.6 kΩ, 20°C/6.3 kΩ, 25°C/5.4 kΩ, 30°C/4.3 kΩ, 40°C/3.0 kΩ				
Gas pipe thermistor	TH23	Resistance 0°C/15 kΩ, 10°C/9.6 kΩ, 20°C/6.3 kΩ, 25°C/5.4 kΩ, 30°C/4.3 kΩ, 40°C/3.0 kΩ				
Fuse (Indoor controller board)	FUSE	250 V 6.3 A				
Fan motor	MF	8-pole OUTPUT 120 W				
Vane motor	MV	MSBPC20M13 DC12 V 300 Ω/phase				
Drain pump	DP	PMD-12D13ME INPUT 3 W 24 R/Hr				
Drain float switch	FS	Open / Short detection				
Linear expansion valve	LEV	DC12 V Stepping motor drive port dimension ø3.2 (0–2000pulse) EFM-40YGME	DC12 V Stepping motor drive port dimension ø5.2 (0–2000pulse) EFM-80YGME			
Power supply terminal block	TB2	(L, N) Rated to 330 V 30 A *				
Transmission terminal block	TB5	(M1, M2, S) Rated to 250 V 20 A *				
MA remote controller terminal block	TB15	(1, 2) Rated to 250 V 10 A *				

*Refer to WIRING DIAGRAM for the supplied voltage.

3-3. SOUND PRESSURE LEVEL

PLFY-M-VEM6-E/ER/ET.UK

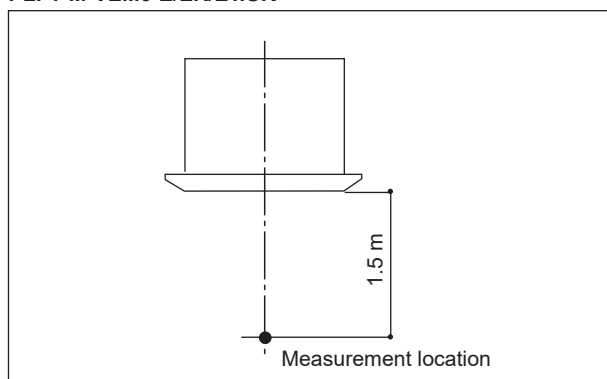

Note: Measured in anechoic room.


Sound pressure level at anechoic room : Low-Mid2-Mid1-High

Model name	Sound pressure level dB (A)
PLFY-M20VEM6-E.UK PLFY-M20VEM6-ER.UK PLFY-M20VEM6-ET.UK PLFY-M25VEM6-E.UK PLFY-M25VEM6-ER.UK PLFY-M25VEM6-ET.UK	24 - 26 - 27 - 29
PLFY-M32VEM6-E.UK PLFY-M32VEM6-ER.UK PLFY-M32VEM6-ET.UK PLFY-M40VEM6-E.UK PLFY-M40VEM6-ER.UK PLFY-M40VEM6-ET.UK	26 - 27 - 29 - 31
PLFY-M50VEM6-E.UK PLFY-M50VEM6-ER.UK PLFY-M50VEM6-ET.UK	27 - 29 - 31 - 38 (Cooling) 27 - 29 - 31 - 41 (Heating)
PLFY-M63VEM6-E.UK PLFY-M63VEM6-ER.UK PLFY-M63VEM6-ET.UK	27 - 30 - 32 - 43 (Cooling) 27 - 30 - 32 - 46 (Heating)
PLFY-M71VEM6-E.UK PLFY-M71VEM6-ER.UK PLFY-M71VEM6-ET.UK	28 - 31 - 35 - 46
PLFY-M80VEM6-E.UK PLFY-M80VEM6-ER.UK PLFY-M80VEM6-ET.UK	28 - 33 - 37 - 46
PLFY-M100VEM6-E.UK PLFY-M100VEM6-ER.UK PLFY-M100VEM6-ET.UK	29 - 35 - 41 - 46
PLFY-M125VEM6-E.UK PLFY-M125VEM6-ER.UK PLFY-M125VEM6-ET.UK	30 - 37 - 45 - 46

3-4. NC CURVES


PLFY-M20VEM6-E/ER/ET.UK
PLFY-M25VEM6-E/ER/ET.UK
<Cooling&Heating>

NOTCH	SPL(dB)	LINE
High	29	○—○
Medium1	27	●—●
Medium2	26	△—△
Low	24	▲—▲

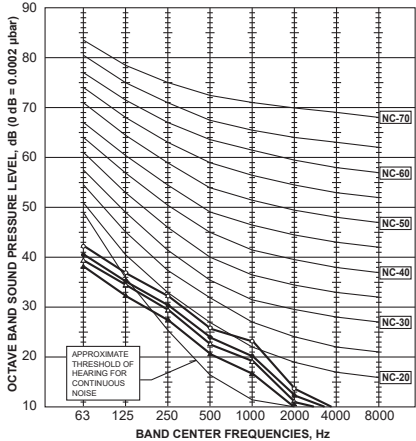


PLFY-M32VEM6-E/ER/ET.UK
PLFY-M40VEM6-E/ER/ET.UK
<Cooling&Heating>

NOTCH	SPL(dB)	LINE
High	31	○—○
Medium1	29	●—●
Medium2	27	△—△
Low	26	▲—▲

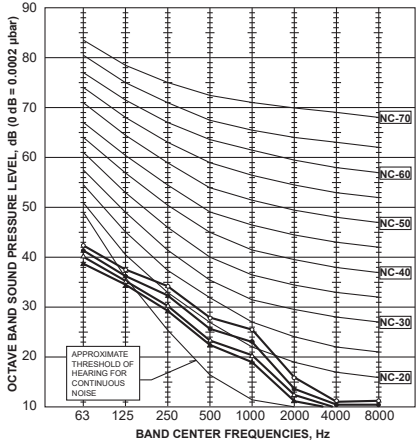


PLFY-M50VEM6-E/ER/ET.UK
<Cooling>

NOTCH	SPL(dB)	LINE
High	38	○—○
Medium1	31	●—●
Medium2	29	△—△
Low	27	▲—▲

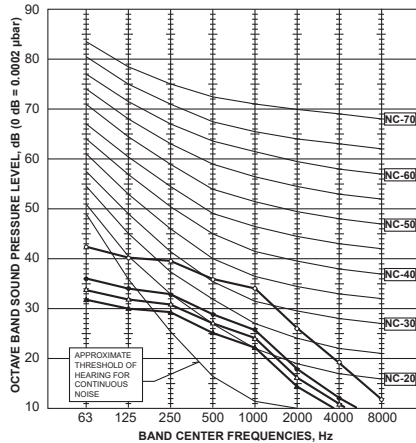


PLFY-M50VEM6-E/ER/ET.UK
<Heating>

NOTCH	SPL(dB)	LINE
High	41	○—○
Medium1	31	●—●
Medium2	29	△—△
Low	27	▲—▲

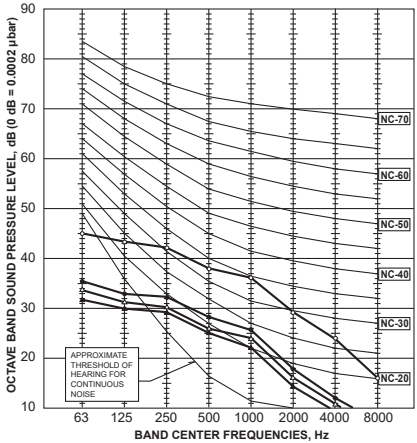


PLFY-M63VEM6-E/ER/ET.UK
<Cooling>

NOTCH	SPL(dB)	LINE
High	43	○—○
Medium1	32	●—●
Medium2	30	△—△
Low	27	▲—▲

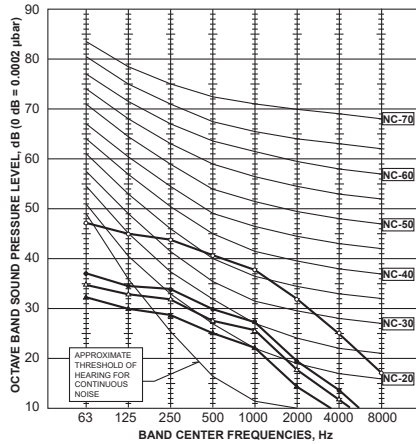


PLFY-M63VEM6-E/ER/ET.UK
<Heating>

NOTCH	SPL(dB)	LINE
High	46	○—○
Medium1	32	●—●
Medium2	30	△—△
Low	27	▲—▲

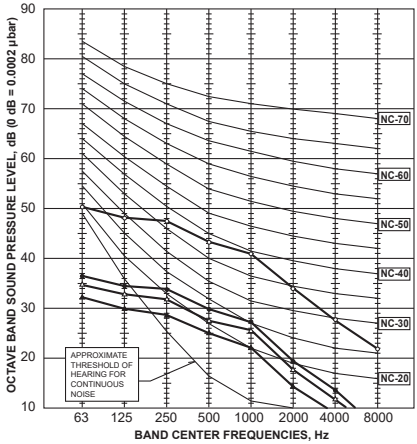


PLFY-M71VEM6-E/ER/ET.UK
<Cooling&Heating>

NOTCH	SPL(dB)	LINE
High	46	○—○
Medium1	35	●—●
Medium2	31	△—△
Low	28	▲—▲

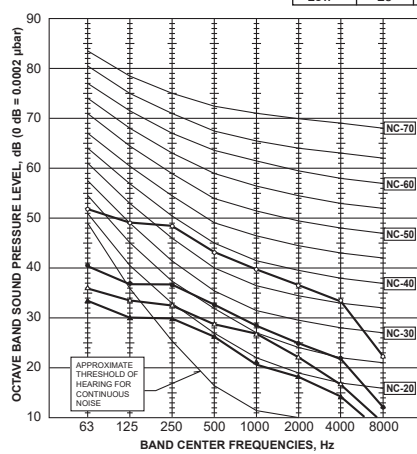


PLFY-M80VEM6-E/ER/ET.UK
<Cooling&Heating>

NOTCH	SPL(dB)	LINE
High	46	○—○
Medium1	37	●—●
Medium2	33	△—△
Low	28	▲—▲

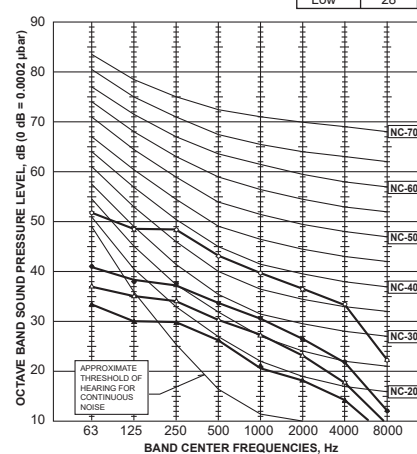


PLFY-M100VEM6-E/ER/ET.UK
<Cooling&Heating>

NOTCH	SPL(dB)	LINE
High	46	○—○
Medium1	41	●—●
Medium2	35	△—△
Low	29	▲—▲

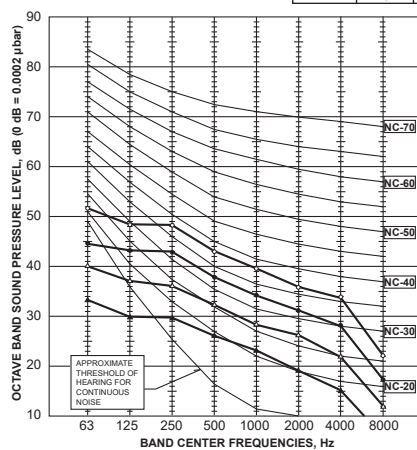

PLFY-M125VEM6-E/ER/ET.UK
<Cooling&Heating>

NOTCH	SPL(dB)	LINE
High	46	○—○
Medium1	45	●—●
Medium2	37	△—△
Low	30	▲—▲

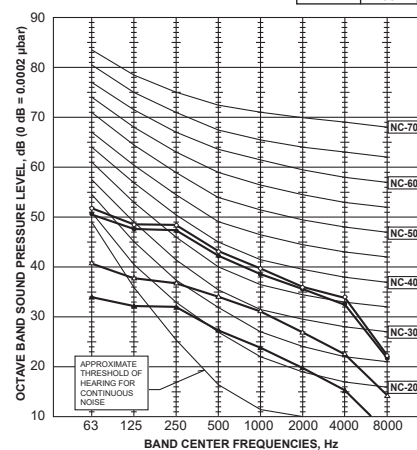




4-1. PLACEMENT OF THE AIR OUTLETS

- For this grille, the blowout direction comes in 11 patterns.

Also, by setting switch on the controller board to the appropriate settings, you can adjust the airflow and speed. Select the settings from Table1 according to the location in which you want to install the unit.

- Decide on the pattern of the airflow direction.

<Table 1>

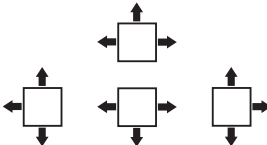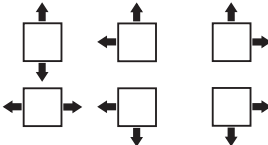
	4-direction	3-direction	2-direction
Blowout direction pattern	Pattern 1 Initial setting 	Pattern 4 1 air outlet fully closed 	Pattern 6 2 air outlet fully closed 

Note1.

For 3- and 2-direction settings, please use the air outlet shutter plate (option).

- According to the number of air outlets and height of the ceiling to install the unit, be sure to set up the switch (SW21) on the circuit board to the appropriate setting.

- Correspondence of ceiling heights to the number of air outlets

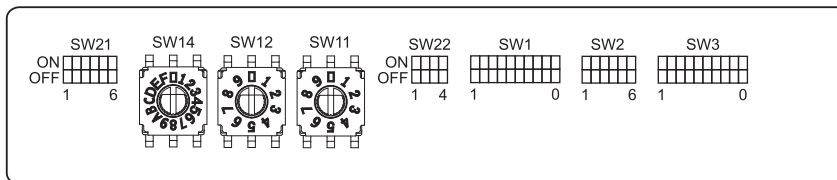

			PLFY-M20VEM6-E/ER/ET.UK PLFY-M25VEM6-E/ER/ET.UK PLFY-M32VEM6-E/ER/ET.UK PLFY-M40VEM6-E/ER/ET.UK PLFY-M50VEM6-E/ER/ET.UK						PLFY-M63VEM6-E/ER/ET.UK PLFY-M71VEM6-E/ER/ET.UK PLFY-M80VEM6-E/ER/ET.UK PLFY-M100VEM6-E/ER/ET.UK PLFY-M125VEM6-E/ER/ET.UK					
			Silent		Standard		High ceiling		Silent		Standard		High ceiling	
			SW21-1	SW21-2	SW21-1	SW21-2	SW21-1	SW21-2	SW21-1	SW21-2	SW21-1	SW21-2	SW21-1	SW21-2
			OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
4 direction	SW21-3	OFF	2.5 m		2.7 m		3.5 m		2.7 m		3.2 m		4.5 m	
	SW21-4	ON												
3 direction	SW21-3	OFF	2.7 m		3.0 m		3.5 m		3.0 m		3.6 m		4.5 m	
	SW21-4	OFF												
2 direction	SW21-3	ON	3.0 m		3.3 m		3.5 m		3.3 m		4.0 m		4.5 m	
	SW21-4	OFF												

4-2. BRANCH DUCT HOLE AND FRESH AIR INTAKE HOLE

At the time of installation, use the duct holes (cut out) located at the positions shown in following diagram, as and when required.

- A fresh air intake hole for the optional multi-functional casement can also be made.


Note:

The figures marked with * in the drawing below represent the dimensions of the main unit excluding those of the optional multi-functional casement.

When installing the optional multi-functional casement, add 135 mm to the dimensions marked on the figure.


When installing the branch ducts, be sure to insulate adequately.

Otherwise, condensation and dripping may occur.

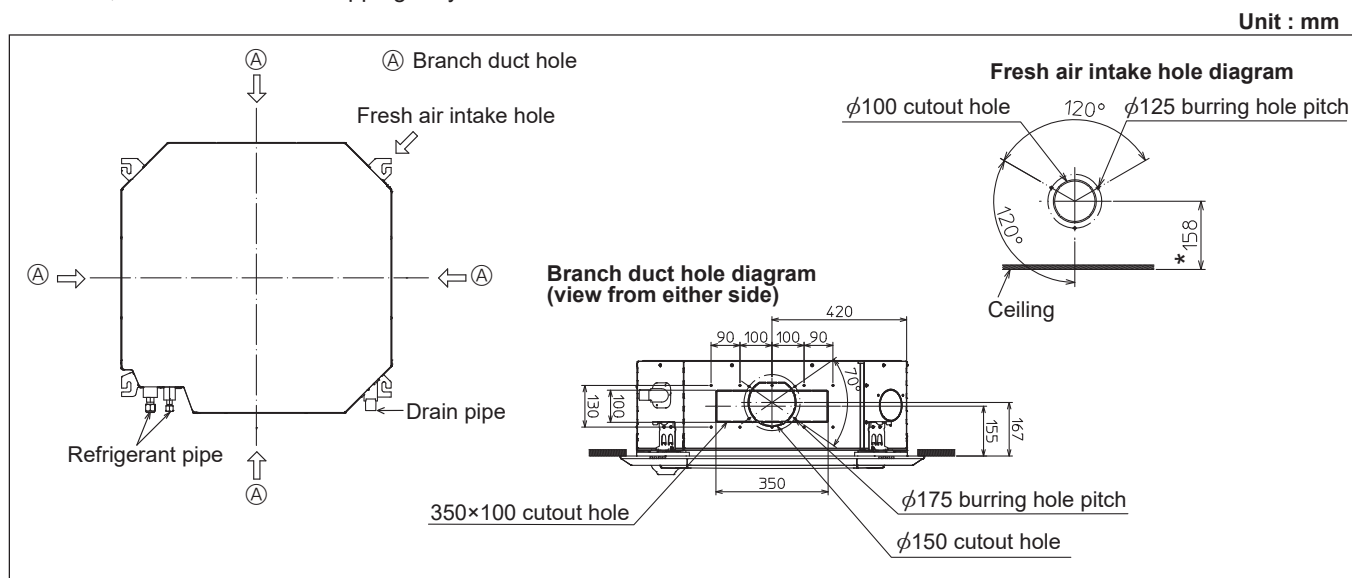

4-3. OPERATION IN CONJUNCTION WITH DUCT FAN (Booster fan)


- Whenever the indoor unit is operating, the duct fan also operates.
- (1) Connect the optional multiple remote controller adapter (PAC-SA88HA-E) to the connector CN51 on the indoor controller board.
 - (2) Drive the relay after connecting the 12 V DC relay between the Yellow and Orange connector lines.
 MB: Electromagnetic switch power relay for duct fan.
 X: Auxiliary relay (For 12 V DC, coil rating: 1.0 W or smaller)

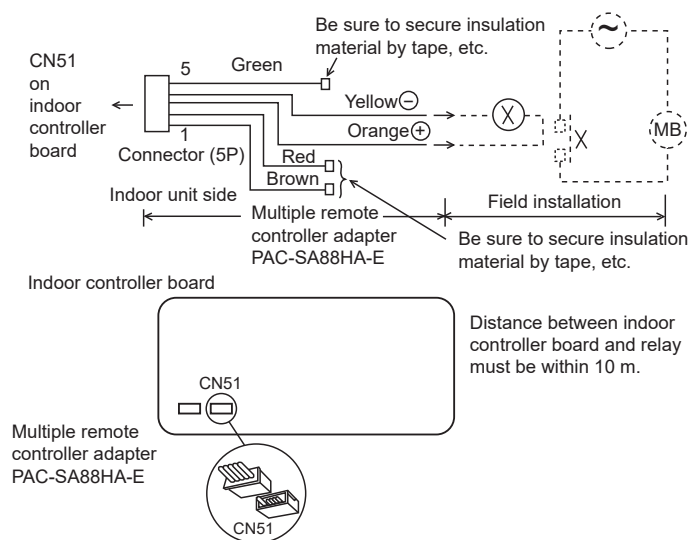


4-4. FRESH AIR INTAKE AMOUNT & STATIC PRESSURE CHARACTERISTICS

1 PLFY-M20/25/32/40VEM6-E/ER/ET


Taking air into the unit

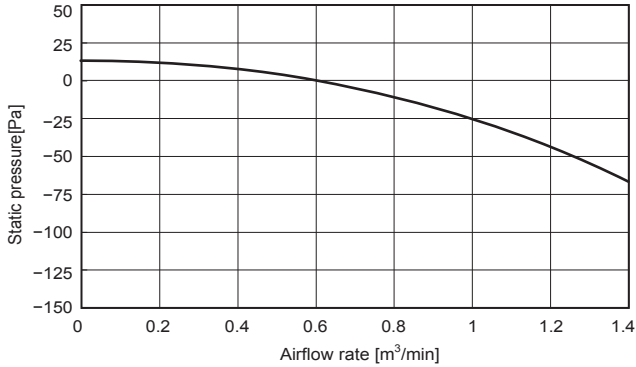


Multi-functional casement + Standard filter

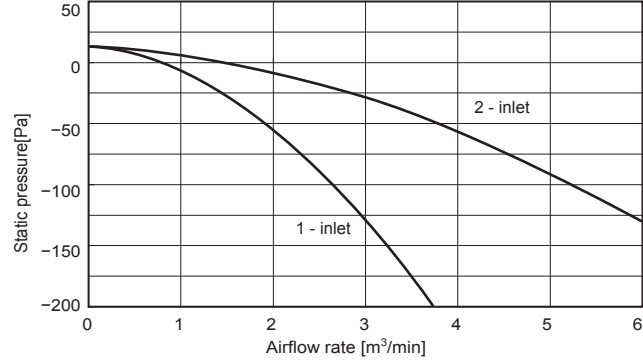

Multi-functional casement + High efficiency filter

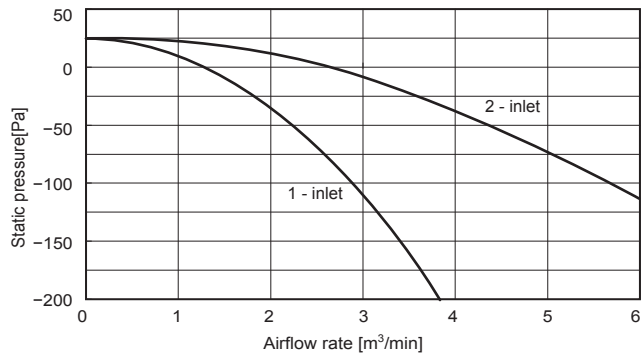


How to read curves

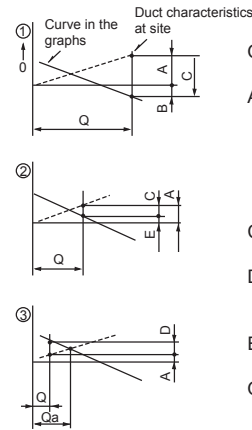


- Q...Designed amount of fresh air intake
<m³/min>
- A...Static pressure loss of fresh air
intake air duct system with airflow
amount Q
<Pa>
- B...Forced static pressure at air condi-
tioner inlet with airflow amount Q
<Pa>
- C...Static pressure of booster fan with
airflow amount Q
<Pa>
- D...Static pressure loss increase amount
of fresh air intake duct system for
airflow amount Q
<Pa>
- E...Static pressure of indoor unit with
airflow amount Q
<Pa>
- Qa...Estimated amount of fresh air
intake without D
<m³/min>

2 PLFY-M50/63/71/80/100/125VEM6-E/ER/ET


Taking air into the unit

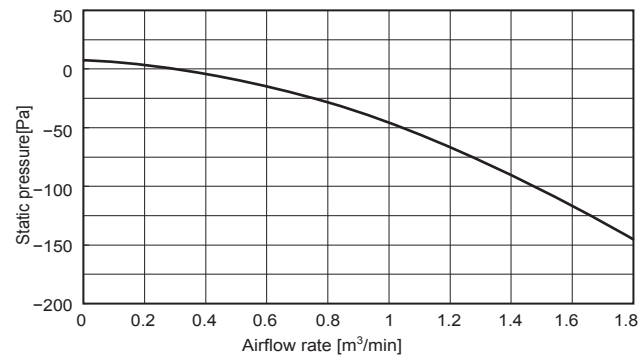

Multi-functional casement + Standard filter

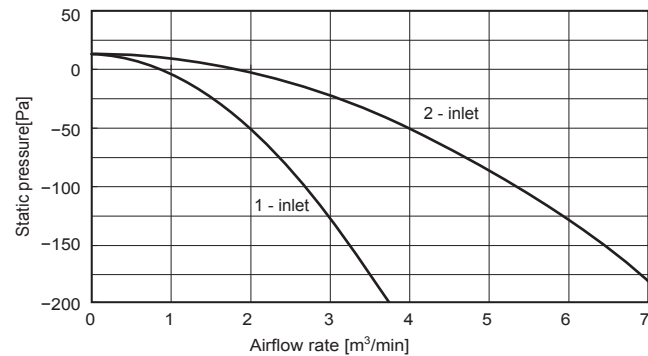


Multi-functional casement + High efficiency filter

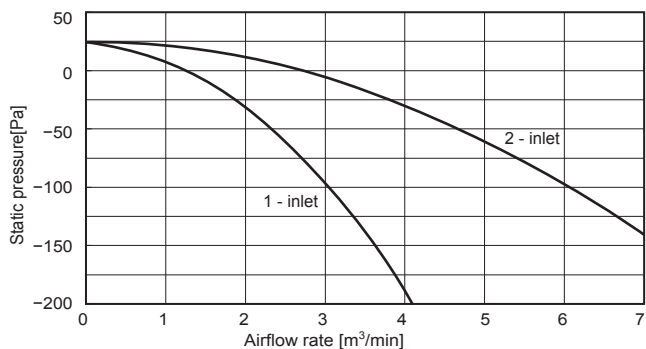

[LEGEND]


SYMBOL	NAME	SYMBOL	NAME
I.B	INDOOR CONTROLLER BOARD	MV	VANE MOTOR
CN32	CONNECTOR	TH21	THERMISTOR ROOM TEMP. DETECTION (0°C/15kΩ, 25°C/5.4kΩ)
CN51	REMOTE SWITCH	TH22	PIPE TEMP. DETECTION / LIQUID (0°C/15kΩ, 25°C/5.4kΩ)
CN52	CENTRALLY CONTROL	TH23	PIPE TEMP. DETECTION / GAS (0°C/15kΩ, 25°C/5.4kΩ)
CN105	REMOTE INDICATION	TB2	TERMINAL POWER SUPPLY
F1	IT TERMINAL	TB5	TRANSMISSION
SW1	FUSE (T 6.3AL 250V)	TB15	MA-REMOTE CONTROLLER
SW2	SWITCH MODE SELECTION	OPTION PART	
SW3	CAPACITY CODE	W.B	PCB OF SIGNAL RECEIVER
SW11	MODE SELECTION	BZ	BUZZER
SW12	ADDRESS SETTING 1s DIGIT	LED1	LED (OPERATION INDICATION : GREEN)
SW14	ADDRESS SETTING 10s DIGIT	LED2	LED (PREPARATION FOR HEATING : ORANGE)
SW21	BRANCH NO.	RU	RECEIVING UNIT
SW22	CEILING HEIGHT	SW1	EMERGENCY OPERATION (HEAT / DOWN)
SWE	DISCHARGE OUTLET NUMBER	SW2	EMERGENCY OPERATION (COOL / UP)
DP	PAIR NO. SETTING	MT	see Sensor MOTOR
FS	DRAIN PUMP (TEST MODE)		
LEV	DRAIN FLOAT SWITCH		
MF	LINEAR EXPANSION VALVE		
	FAN MOTOR		

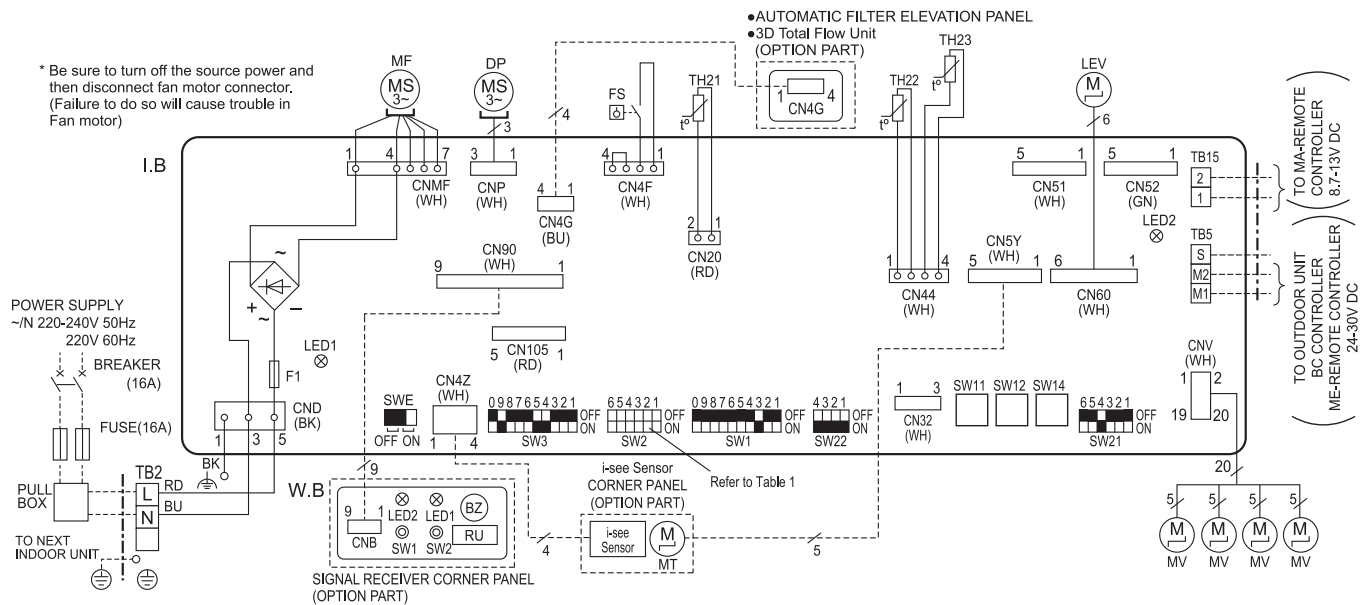

NOTES:

- At servicing for outdoor unit, always follow the wiring diagram of outdoor unit.
- In case of using MA-Remote controller, please connect to TB15. (Remote controller wire is non-polar.)
- In case of using ME-Remote controller, please connect to TB5. (Transmission line is non-polar.)
- Symbol [S] of TB5 is the shield wire connection.
- Symbols used in wiring diagram above are,
□ □ □ : terminal block, □ □ □ □ □ : connector.
- The setting of SW2 differs in the capacity and model.
For the detail, refer to the table 1.
- Make sure to turn off the indoor and the outdoor units before replacing indoor controller board.
- is the switch position.

MA-Remote controller terminal block and transmission terminal block

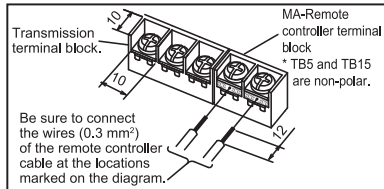


- When installing the automatic filter elevation panel and the 3D Total Flow Unit together, refer to the wiring diagram of the 3D Total Flow Unit.

<Table 1> SW2 (CAPACITY CODE)

MODELS	SW2	MODELS	SW2	MODELS	SW2	MODELS	SW2
20	ON OFF	40	ON OFF	71	ON OFF	125	ON OFF
25	ON OFF	50	ON OFF	80	ON OFF		
32	ON OFF	63	ON OFF	100	ON OFF		

LED on indoor board for service








Mark	Meaning	Function
LED1	Main power supply	Main Power supply (Indoor unit: 220-240V AC) power on → lamp is lit
LED2	Power supply for MA-Remote controller	Power supply for MA-Remote controller on → lamp is lit

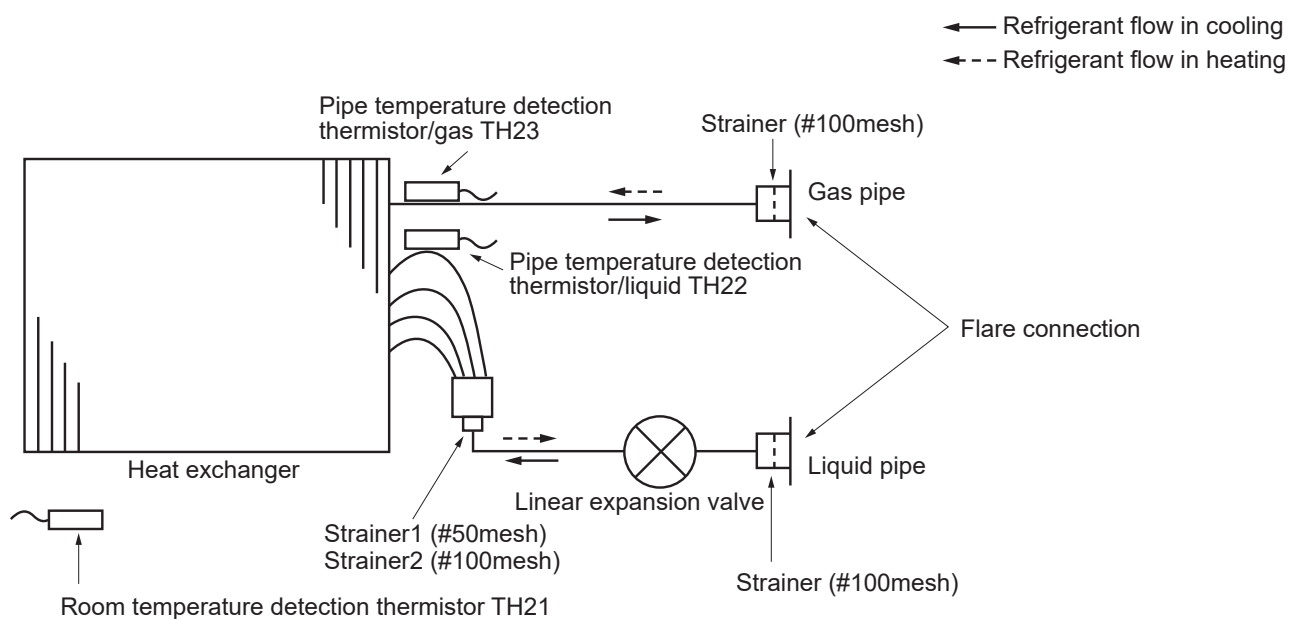

Unit : mm (inch)

Service Ref.	PLFY-M20VEM6-E/ER/ET.UK PLFY-M25VEM6-E/ER/ET.UK PLFY-M32VEM6-E/ER/ET.UK PLFY-M40VEM6-E/ER/ET.UK PLFY-M50VEM6-E/ER/ET.UK	PLFY-M63VEM6-E/ER/ET.UK PLFY-M71VEM6-E/ER/ET.UK PLFY-M80VEM6-E/ER/ET.UK PLFY-M100VEM6-E/ER/ET.UK PLFY-M125VEM6-E/ER/ET.UK
Item		
Gas pipe	ø12.7 (1/2)	ø15.88 (5/8)
Liquid pipe	ø6.35 (1/4)	ø9.52 (3/8)

8-1. HOW TO CHECK THE PARTS

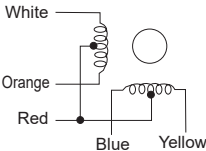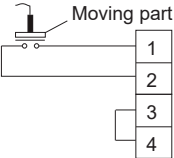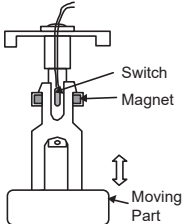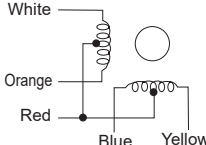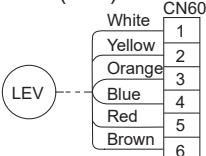Parts name	Checkpoints									
Room temperature detection thermistor (TH21) Pipe temperature detection thermistor/liquid (TH22) Pipe temperature detection thermistor/gas (TH23)	Disconnect the connectors, then measure the resistance with a multimeter. (At ambient temperatures of 10 to 30℃) <table><tr><td>Normal</td><td>Abnormal</td></tr><tr><td>4.3–9.6 kΩ</td><td>Open or short</td></tr></table> (Refer to “8-1-1. Thermistor”.)	Normal	Abnormal	4.3–9.6 kΩ	Open or short					
Normal	Abnormal									
4.3–9.6 kΩ	Open or short									
Vane motor (MV) 	Measure the resistance between the terminals with a multimeter. (At ambient temperatures of 20 to 30℃) <table><tr><th>Connector</th><th>Normal</th><th>Abnormal</th></tr><tr><td>Red - Yellow (⑤-③, ⑩-⑧, ⑮-⑬, ⑳-⑱)</td><td rowspan="4">300 Ω</td><td rowspan="4">Open or short</td></tr><tr><td>Red - Blue (⑤-①, ⑩-⑥, ⑮-⑪, ⑳-⑱)</td></tr><tr><td>Red - Orange (⑤-④, ⑩-⑨, ⑮-⑭, ⑳-⑱)</td></tr><tr><td>Red - White (⑤-②, ⑩-⑦, ⑮-⑫, ⑳-⑱)</td></tr></table>	Connector	Normal	Abnormal	Red - Yellow (⑤-③, ⑩-⑧, ⑮-⑬, ⑳-⑱)	300 Ω	Open or short	Red - Blue (⑤-①, ⑩-⑥, ⑮-⑪, ⑳-⑱)	Red - Orange (⑤-④, ⑩-⑨, ⑮-⑭, ⑳-⑱)	Red - White (⑤-②, ⑩-⑦, ⑮-⑫, ⑳-⑱)
Connector	Normal	Abnormal								
Red - Yellow (⑤-③, ⑩-⑧, ⑮-⑬, ⑳-⑱)	300 Ω	Open or short								
Red - Blue (⑤-①, ⑩-⑥, ⑮-⑪, ⑳-⑱)										
Red - Orange (⑤-④, ⑩-⑨, ⑮-⑭, ⑳-⑱)										
Red - White (⑤-②, ⑩-⑦, ⑮-⑫, ⑳-⑱)										
Drain pump (DP) 	<p>① Check if the drain float switch works properly. ② Check if the drain pump works and drains water properly in cooling operation. ③ If no water drains, confirm that the check code 2502 will not be displayed 10 minutes after the operation starts.</p> <p>Note: The drain pump for this model is driven by the internal DC, so it is not possible to measure the resistance between the terminals.</p> <p>Normal Red–Black: Input 13 V DC → The fan starts to rotate. Purple–Black: Abnormal (check code 2502) if it outputs 0–13 V square wave (5 pulses/rotation), and the number of rotation is not normal.</p>									
Drain float switch (FS) 	Measure the resistance between the terminals with a multimeter. <table><tr><th>State of moving part</th><th>Normal</th><th>Abnormal</th></tr><tr><td>UP</td><td>Short</td><td>Other than short</td></tr><tr><td>DOWN</td><td>Open</td><td>Other than open</td></tr></table> 	State of moving part	Normal	Abnormal	UP	Short	Other than short	DOWN	Open	Other than open
State of moving part	Normal	Abnormal								
UP	Short	Other than short								
DOWN	Open	Other than open								
i-see Sensor (Option) 	Turn the power ON while the i-see Sensor connector is connected to the CN4Z on indoor controller board. A communication between the indoor controller board and i-see Sensor board is made to detect the connection. Normal: When the operation starts, the motor for i-see Sensor is driven to rotate the i-see Sensor. Abnormal: The motor for i-see Sensor is not driven when the operation starts. Note: The voltage between the terminals cannot be measured accurately since it is pulse output.									
i-see Sensor motor (MT) (Option) 	Measure the resistance between the terminals with a multimeter. (At ambient temperatures of 20 to 30℃) <table><tr><th>Connector</th><th>Normal</th><th>Abnormal</th></tr><tr><td>Red - Yellow</td><td rowspan="4">250 Ω</td><td rowspan="4">Open or short</td></tr><tr><td>Red - Blue</td></tr><tr><td>Red - Orange</td></tr><tr><td>Red - White</td></tr></table>	Connector	Normal	Abnormal	Red - Yellow	250 Ω	Open or short	Red - Blue	Red - Orange	Red - White
Connector	Normal	Abnormal								
Red - Yellow	250 Ω	Open or short								
Red - Blue										
Red - Orange										
Red - White										
Linear expansion valve (LEV) 	Disconnect the connector then measure the resistance valve with a multimeter. (At the coil temperatures of 10 to 30℃) <table><tr><th>Connector</th><th>Normal</th><th>Abnormal</th></tr><tr><td>White-Red Yellow-Brown Orange-Red Blue-Brown</td><td>200 Ω ± 10%</td><td>Open or short</td></tr></table> Refer to “8-1-2. Linear expansion valve”.	Connector	Normal	Abnormal	White-Red Yellow-Brown Orange-Red Blue-Brown	200 Ω ± 10%	Open or short			
Connector	Normal	Abnormal								
White-Red Yellow-Brown Orange-Red Blue-Brown	200 Ω ± 10%	Open or short								

8-1-1. Thermistor

<Thermistor characteristic graph>


Thermistors for lower temperature

Room temperature detection thermistor (TH21)
Pipe temperature detection thermistor/liquid (TH22)
Pipe temperature detection thermistor/gas (TH23)

Thermistor $R_0 = 15 \text{ k}\Omega \pm 3\%$
Fixed number of $B = 3480 \pm 2\%$

$$R_t = 15 \exp \left\{ 3480 \left(\frac{1}{273+t} - \frac{1}{273} \right) \right\}$$

0°C	15 kΩ
10°C	9.6 kΩ
20°C	6.3 kΩ
25°C	5.4 kΩ
30°C	4.3 kΩ
40°C	3.0 kΩ

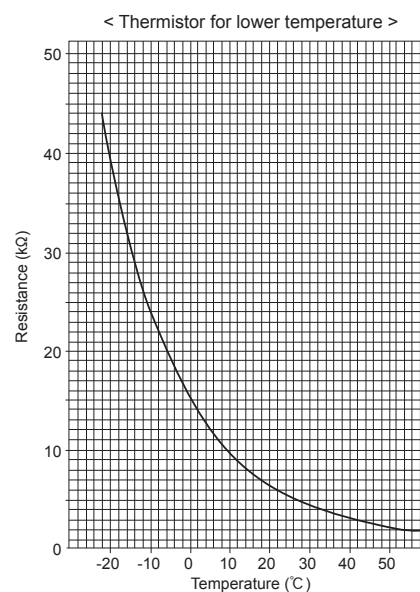


8-1-2. Linear expansion valve

① Operation summary of the linear expansion valve

- Linear expansion valves open/close through the use of a stepping motor after receiving the pulse signal from the indoor controller board.
- Valve position can be changed in proportion to the number of pulse signals.

<Connection between the indoor controller board and the linear expansion valve>

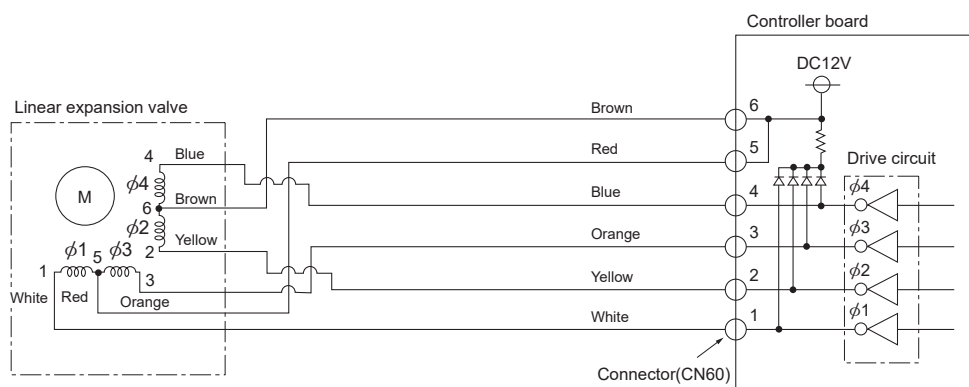

<Output pulse signal and the valve operation>

Output (Phase)	Output			
	1	2	3	4
ø1	ON	OFF	OFF	ON
ø2	ON	ON	OFF	OFF
ø3	OFF	ON	ON	OFF
ø4	OFF	OFF	ON	ON

The output pulse shifts in the following order.


Closing a valve : 1 → 2 → 3 → 4 → 1

Opening a valve : 4 → 3 → 2 → 1 → 4

Note:

- When linear expansion valve operation stops, all output phases become OFF.
- At phase interruption or when phase does not shift in order, motor does not rotate smoothly and motor will lock and vibrate.

② Linear expansion valve operation

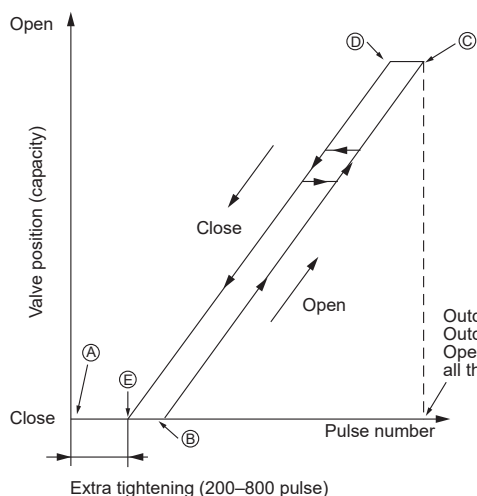

- When the power is turned on, 2200 pulse closing valve signal will be sent till it goes to point A in order to define the valve position.

When the valve moves smoothly, there is no sound or vibration occurring from the linear expansion valves, however, when the pulse number moves from E to A or when the valve is locked, more sound can be heard than in a normal situation.

- Sound can be detected by placing the ear against the screw driver handle while putting the screw driver tip to the linear expansion valve.

Outdoor unit R410A/R32 model : 1400 pulse
Outdoor unit R22/R407C model : 2000 pulse
Opening a valve all the way

③ Troubleshooting

Symptom	Checkpoints	Countermeasures
Operation circuit failure of the micro processor	<p>Disconnect the connector on the controller board, then connect LED for checking.</p> <p>1kΩ LED</p> <p>When power is turned on, pulse signals will output for 10 seconds. There must be some defects in the operation circuit if the LED does not light while the signals are output or keeps lighting even after the signals stop.</p>	Exchange the indoor controller board at drive circuit failure.
Linear expansion valve mechanism is locked.	Motor will idle and make a ticking noise when the motor is operated while the linear expansion valve is locked. This ticking sound is the sign of the abnormality.	Exchange the linear expansion valve.
Short or breakage of the motor coil of the linear expansion valve	Measure the resistance between each coil (white-red, yellow-brown, orange-red, blue-brown) with a tester. It is normal if the resistance is in the range of 200 Ω ±10%.	Exchange the linear expansion valve.
Valve does not close completely.	<p>To check the linear expansion valve, operate the indoor unit in fan mode and at the same time operate other indoor units in cooling mode, then check the pipe temperature <liquid pipe temperature> of the indoor unit by the outdoor multi controller board operation monitor. During fan operation, linear expansion valve is closed completely and if there is any leakage, detecting temperature of the thermistor will go lower. If the detected temperature is much lower than the temperature indicated on the remote controller, it means the valve is not closed all the way. It is not necessary to exchange the linear expansion valve, if the leakage is small and not affecting normal operation.</p> <p>Thermistor (Liquid pipe) Linear expansion valve</p>	If a large amount of refrigerant is leaked, exchange the linear expansion valve.
Wrong connection of the connector or contact failure	Check the color of lead wire and missing terminal of the connector.	Disconnect the connector at the controller board, then check for continuity.

8-1-3. DC Fan motor (fan motor/indoor controller board)


Check method of indoor fan motor (fan motor/indoor controller board)

① Notes

- High voltage is applied to the connector (CNMF) for the fan motor. Pay attention to the service.
- Do not pull out the connector (CNMF) for the motor with the power supply on.
(It causes trouble of the indoor controller board and fan motor.)






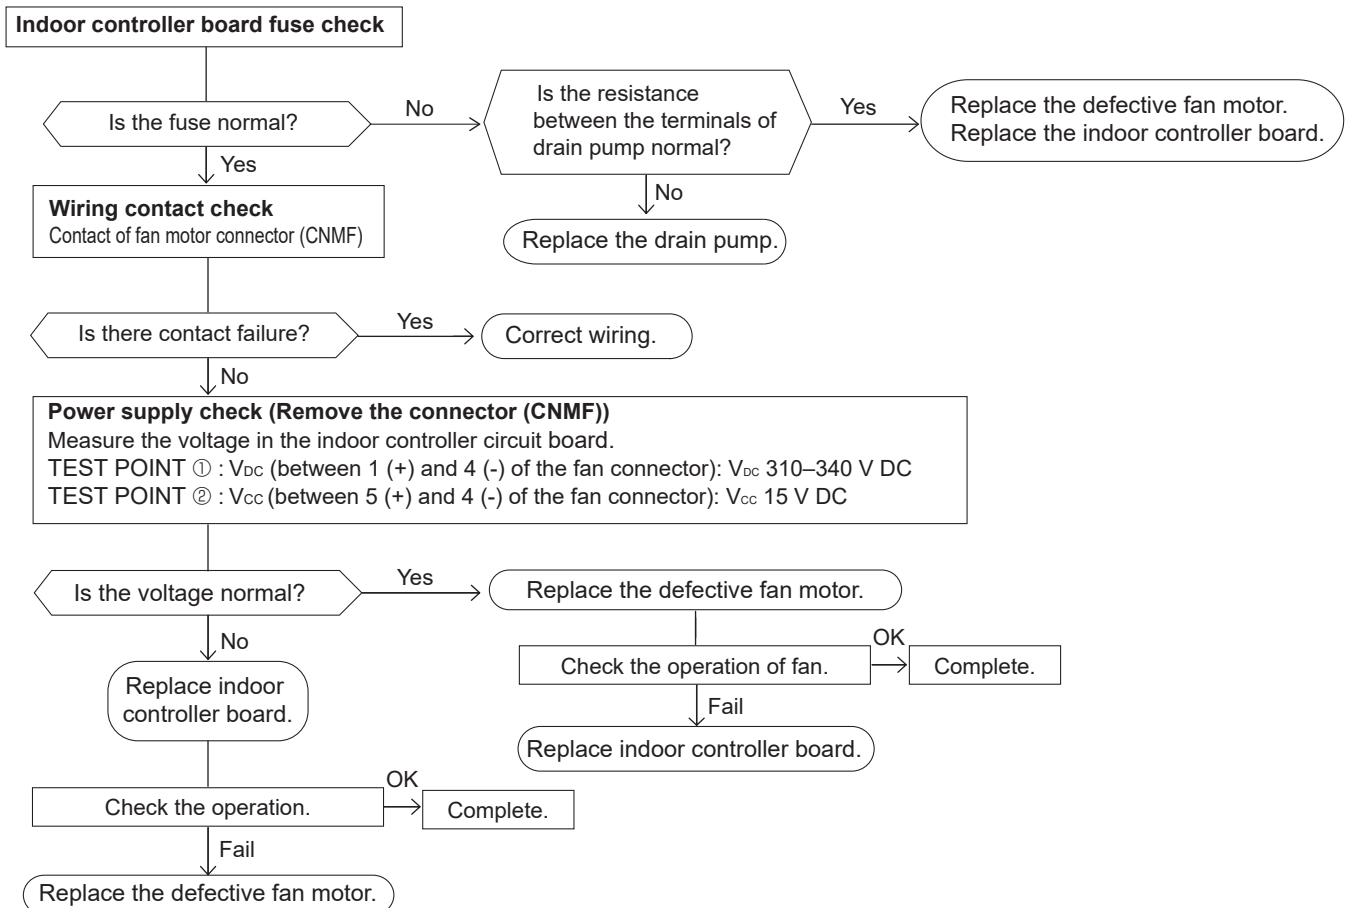




























② Self check

Conditions : The indoor fan cannot rotate.



8-2. FUNCTION OF DIP SWITCH

The black square (■) indicates a switch position.

Switch	Pole	Function	Operation by switch		Effective timing	Remarks																																	
			ON	OFF																																			
SW1 Function Selection	1	Thermistor <Room temperature detection> position	Built-in remote controller	Indoor unit	Under suspension	<div><Initial setting></div> <div>ON </div> <div>OFF </div> <div>*1 Refer to <Table A> below.</div>																																	
	2	Filter clogging detection	Provided	Not provided																																			
	3	Filter cleaning	2,500 hr	100 hr																																			
	4	Fresh air intake	Effective	Not effective																																			
	5	Switching remote display	Thermo-ON signal display	Indicating fan operation ON/OFF																																			
	6	—	—	—																																			
	7	Airflow set in case of thermo-OFF at heating mode	Low* ¹	Extra low* ¹																																			
	8	Auto restart function	Effective	Not effective																																			
	9	Power ON/OFF by breaker	Effective	Not effective																																			
SW2 Capacity code setting	1-6	<table><tr><td>MODELS</td><td>SW2</td><td>MODELS</td><td>SW2</td><td>MODELS</td><td>SW2</td><td>MODELS</td><td>SW2</td></tr><tr><td>20</td><td>ON OFF </td><td>40</td><td>ON OFF </td><td>71</td><td>ON OFF </td><td>125</td><td>ON OFF </td></tr><tr><td>25</td><td>ON OFF </td><td>50</td><td>ON OFF </td><td>80</td><td>ON OFF </td><td></td><td></td></tr><tr><td>32</td><td>ON OFF </td><td>63</td><td>ON OFF </td><td>100</td><td>ON OFF </td><td></td><td></td></tr></table>				MODELS	SW2	MODELS	SW2	MODELS	SW2	MODELS	SW2	20	ON OFF 	40	ON OFF 	71	ON OFF 	125	ON OFF 	25	ON OFF 	50	ON OFF 	80	ON OFF 			32	ON OFF 	63	ON OFF 	100	ON OFF 			Before power supply ON	<div><Initial setting></div> <div>Set for each capacity.</div>
		MODELS	SW2	MODELS	SW2	MODELS	SW2	MODELS	SW2																														
		20	ON OFF 	40	ON OFF 	71	ON OFF 	125	ON OFF 																														
		25	ON OFF 	50	ON OFF 	80	ON OFF 																																
		32	ON OFF 	63	ON OFF 	100	ON OFF 																																
SW3 Function setting	1	Heat pump/Cooling only	Cooling only	Heat pump	Under suspension	<div><Initial setting></div> <div>ON </div> <div>OFF </div> <div>*2 Refer to <Table D> below for SW3-5 and SW-3-6.</div>																																	
	2	—	—	—																																			
	3	3D i-see Sensor positioning	The setting depends on the combination of SW3-3 and SW3-4. Refer to <Table B> below.		Before power supply ON																																		
	4																																						
	5	Vane horizontal angle ①	Second setting* ²	First setting* ²	Under suspension																																		
	6	Vane horizontal angle ②	Third setting* ²	Depends on SW3-5																																			
	7	Changing the opening of linear expansion valve	Effective	Not effective																																			
	8	Heat 4 degrees up	Not effective	Effective																																			
	9	3D i-see Sensor ceiling height setting	The setting depends on the combination of SW3-9 and SW3-10. Refer to <Table C> below.																																				
	0																																						

<Table A>

SW1-7	SW1-8	
OFF	OFF	Extra low
ON	OFF	Low
OFF	ON	Setting airflow
ON	ON	stop

<Table B>

SW3-3	SW3-4	
OFF	OFF	Setting ①
ON	OFF	Setting ②
OFF	ON	Setting ③
ON	ON	Setting ④

<Table C>






SW3-9	SW3-10	
OFF	OFF	Low ceiling
ON	OFF	Standard
OFF	ON	High ceiling
ON	ON	(High ceiling)

<Table D>

SW3-5	SW3-6	Vane setting	Initial setting	Setting	Vane position
OFF	OFF	Setting ①		Standard	Standard
ON	OFF	Setting ②	●	Less draft* ³	Upward position than the standard
OFF	ON	Setting ③		Less smudging	Downward position than the standard
ON	ON	Unused		—	—

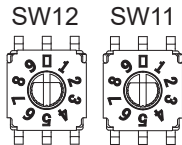

*3 Smudge could be left on the ceiling.



Switch	Pole	Function	Operation by switch		Effective timing	Remarks
			ON	OFF		
SW11 1s digit address setting SW12 10s digit address setting	Rotary switch		Address setting should be done when M-NET remote controller is being used.		Before power supply ON	<p><Initial setting></p> 
SW14 Connection No. setting	Rotary switch		This is the switch to be used when the indoor unit is operated with R2 series outdoor unit as a set.			<p><Initial setting></p> 
SW21 Function Selection	1	Setting the ceiling height	Depending on the combination of SW21-1 and SW21-2. Refer to <Table E> below.		Under suspension	<p><Initial setting></p> 
	2	Setting the ceiling height				
	3	Setting the number of air outlet	Depending on the combination of SW21-3 and SW21-4. Refer to <Table E> below.			
	4	Setting the number of air outlet				
	5	Setting for optional parts	Option	Standard		
	6	Not used	Not used	Not used		

<Table E> Ceiling height


Blowout directions			PLFY-M20VEM6-E/ER/ET.UK PLFY-M25VEM6-E/ER/ET.UK PLFY-M32VEM6-E/ER/ET.UK PLFY-M40VEM6-E/ER/ET.UK PLFY-M50VEM6-E/ER/ET.UK						PLFY-M63VEM6-E/ER/ET.UK PLFY-M71VEM6-E/ER/ET.UK PLFY-M80VEM6-E/ER/ET.UK PLFY-M100VEM6-E/ER/ET.UK PLFY-M125VEM6-E/ER/ET.UK					
			Silent		Standard		High ceiling		Silent		Standard		High ceiling	
			SW21-1	SW21-2	SW21-1	SW21-2	SW21-1	SW21-2	SW21-1	SW21-2	SW21-1	SW21-2	SW21-1	SW21-2
			OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF	ON	OFF
4 direction	SW21-3	OFF	2.5 m		2.7 m		3.5 m		2.7 m		3.2 m		4.5 m	
	SW21-4	ON												
3 direction	SW21-3	OFF	2.7 m		3.0 m		3.5 m		3.0 m		3.6 m		4.5 m	
	SW21-4	OFF												
2 direction	SW21-3	ON	3.0 m		3.3 m		3.5 m		3.3 m		4.0 m		4.5 m	
	SW21-4	OFF												

Note: The setting with  indicates the initial setting; To change it to other than , switch setting is necessary.



Switch	Pole	Function	Operation by switch		Effective timing	Remarks																																						
			ON	OFF																																								
SW22 Function selection	Switch	<table><tr><th></th><th>Function</th><th>ON</th><th>OFF</th></tr><tr><td>1</td><td>—</td><td>—</td><td>—</td></tr><tr><td>2</td><td>—</td><td>—</td><td>—</td></tr><tr><td>3</td><td>Pair No. of wireless remote controller</td><td colspan="2" rowspan="2">Depends on the combination of SW22-3 and 22-4</td></tr><tr><td>4</td><td>Pair No. of wireless remote controller</td></tr></table>		Function	ON	OFF	1	—	—	—	2	—	—	—	3	Pair No. of wireless remote controller	Depends on the combination of SW22-3 and 22-4		4	Pair No. of wireless remote controller	<div><p>• To operate each indoor unit by each remote controller when installed 2 indoor units or more are near, Pair No. setting is necessary.</p><p>• Pair No. setting is available with the 4 patterns.</p><p>• Make setting for SW22-3, 22-4 of indoor controller board and the Pair No. of wireless remote controller.</p><p>• Pair No. setting is not set necessarily when operating it by one remote controller.</p><p>① Setting for indoor unit</p><p>• Set SW22-3, 22-4 on the indoor controller board according to the table below.</p><p>② Wireless remote controller pair number:</p><p>• Setting operation (Fig. 1 ㉑)</p><p>1. Press the button ① to stop the air conditioner.</p><p>2. Press the button ②.</p><p>3. Check that function No."1" is displayed, and then press the button ③. The Screen display setting screen will be displayed. (Fig. 2.)</p><p>• Pair No. changing operation (Fig. 2 ㉒)</p><p>1. Press the button ④.</p><p>2. Each time the button ④ is pressed, the pair No.0~3 changes.</p><p>3. Press the button ③ to check the setting.</p><p>4. Press the button ②.</p></div> <table><tr><th colspan="2">Indoor unit SW22</th><th rowspan="2">Pair No. of wireless remote controller</th><th rowspan="2"></th></tr><tr><th>SW22-3</th><th>SW22-4</th></tr><tr><td>ON</td><td>ON</td><td>0</td><td>Initial setting</td></tr><tr><td>OFF</td><td>ON</td><td>1</td><td>—</td></tr><tr><td>ON</td><td>OFF</td><td>2</td><td>—</td></tr><tr><td>OFF</td><td>OFF</td><td>3~9</td><td>—</td></tr></table>	Indoor unit SW22		Pair No. of wireless remote controller		SW22-3	SW22-4	ON	ON	0	Initial setting	OFF	ON	1	—	ON	OFF	2	—	OFF	OFF	3~9	—	<div><p>Under operation or suspension</p><p><Initial setting></p><p>Fig. 1</p><p>Fig. 2</p></div>
			Function	ON	OFF																																							
		1	—	—	—																																							
		2	—	—	—																																							
		3	Pair No. of wireless remote controller	Depends on the combination of SW22-3 and 22-4																																								
		4	Pair No. of wireless remote controller																																									
		Indoor unit SW22		Pair No. of wireless remote controller																																								
		SW22-3	SW22-4																																									
		ON	ON	0	Initial setting																																							
		OFF	ON	1	—																																							
ON	OFF	2	—																																									
OFF	OFF	3~9	—																																									
SWE Test run for Drain pump	Connector	<p>Drain pump and fan are activated simultaneously after the connector SWE is set to ON and turn on the power.</p> <div><div><p>SWE</p><p>OFF ON</p></div><div>→</div><div><p>SWE</p><p>OFF ON</p></div></div> <p>The connector SWE is set to OFF after test run.</p>	<div><p>Under operation</p><p><Initial setting></p><p>SWE</p><p>OFF ON</p></div>																																									

8-3. TEST POINT DIAGRAM Indoor controller board

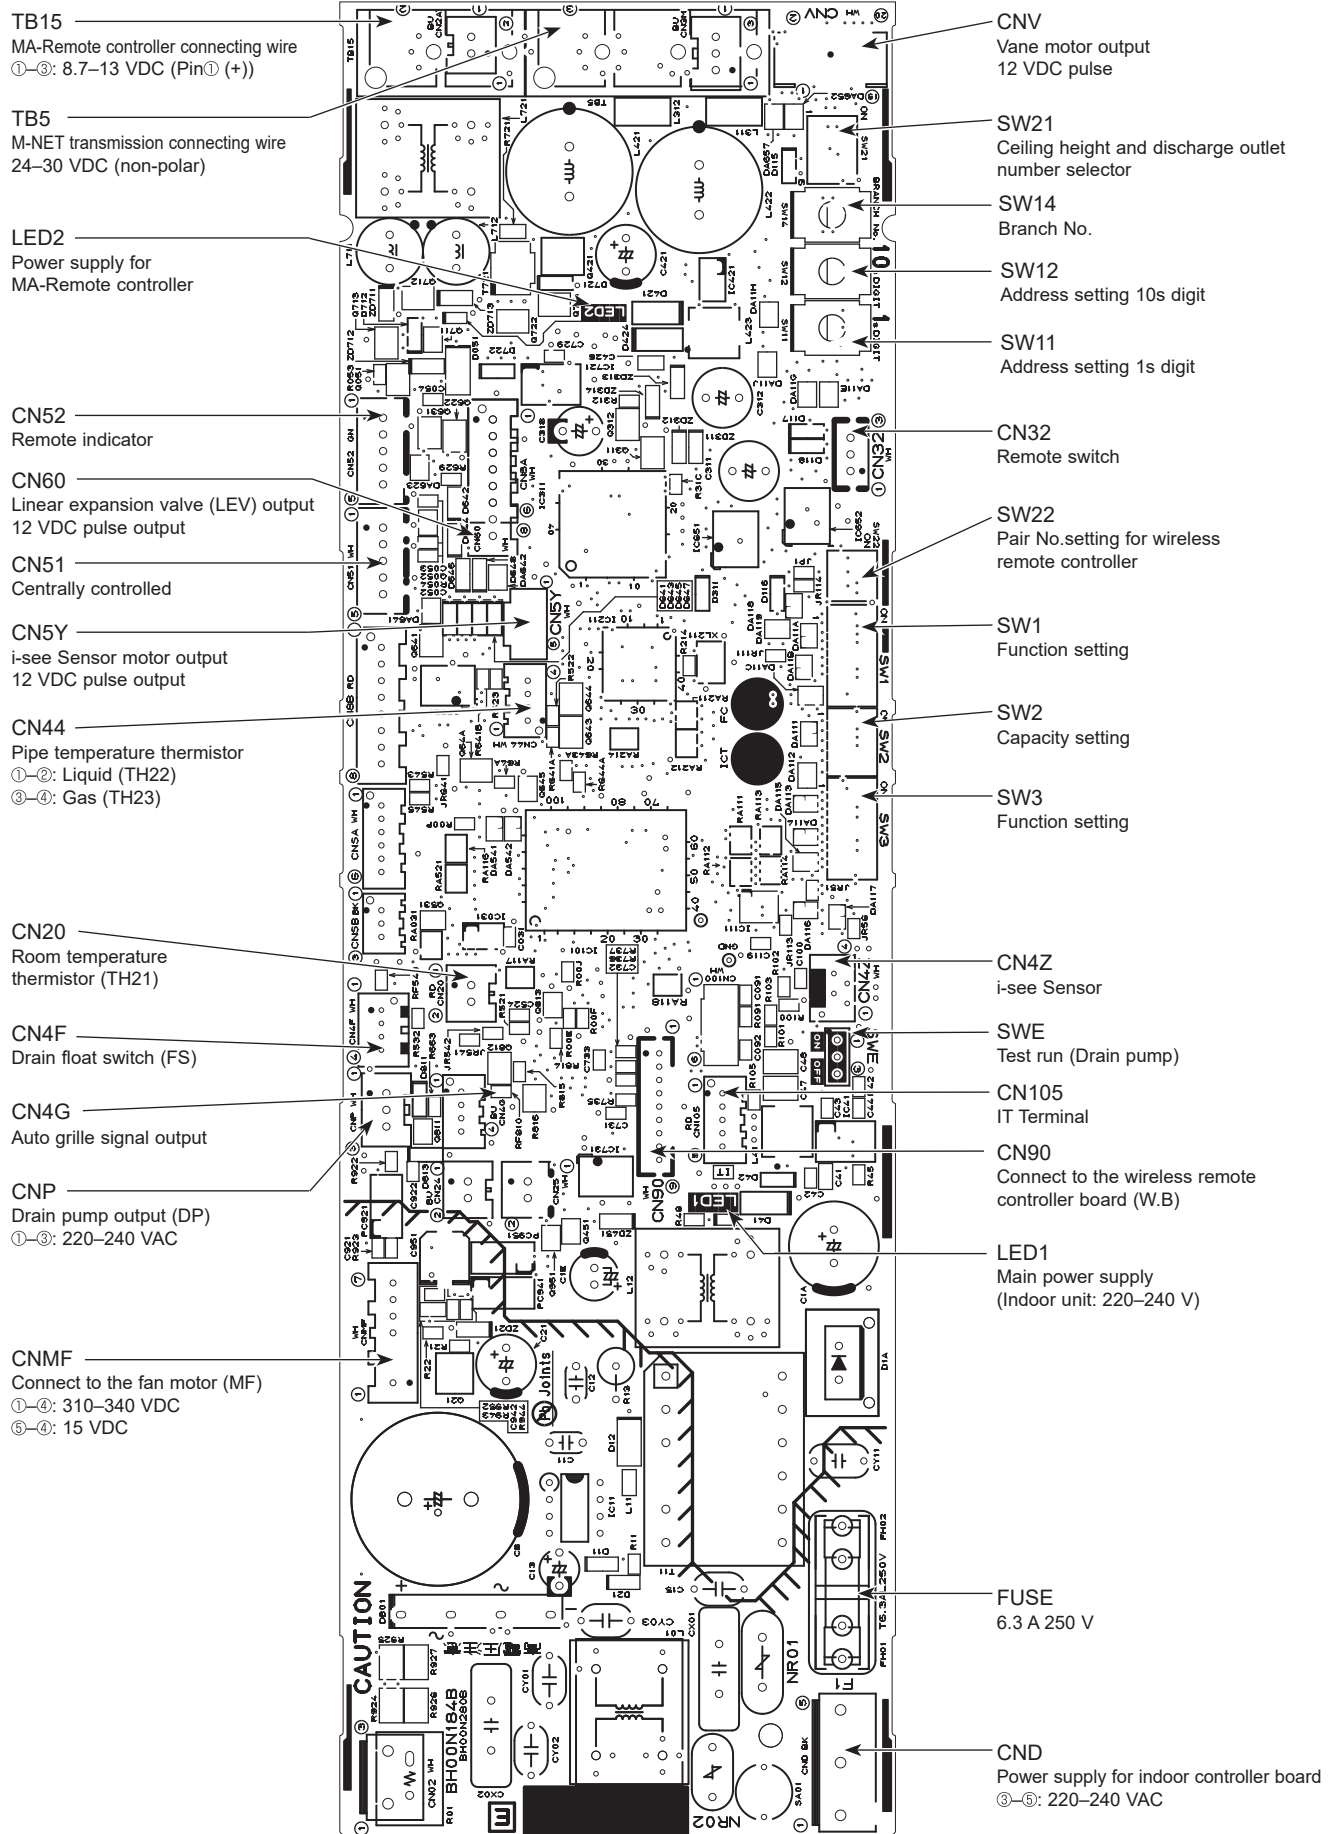

9-1. OPERATION (AUTOMATIC FILTER ELEVATION GRILLE: PLP-6EAJ/PLP-6EAJE)

(1) Normal operation

① UP/DOWN

Air intake grille is raised/lowered by commands of UP and DOWN.

Air intake grille does not move under the state of no-load detection or obstacle detection.

Air intake grille stops automatically at the set lowering distance from the ceiling level.

② STOP

It stops in the cases below :

- When it reaches the set lowering distance from the ceiling level.

It automatically stops after a predetermined period of lowering.

- When it is stored in the panel.

The air intake grille is judged to be stored in the panel when the storage detection switch is pressed for 5 seconds continuously.


- When receiving commands of STOP, DOWN while moving up or UP while moving down.

The STOP button is only available on the automatic filter elevation panel remote controller.

When the wired remote controller is used, there will be a slight delay in stopping due to transmission speed.

- When both string 1b and 2b are not loaded.

Only the string b in each UP/DOWN Machine has a tension detection switch.

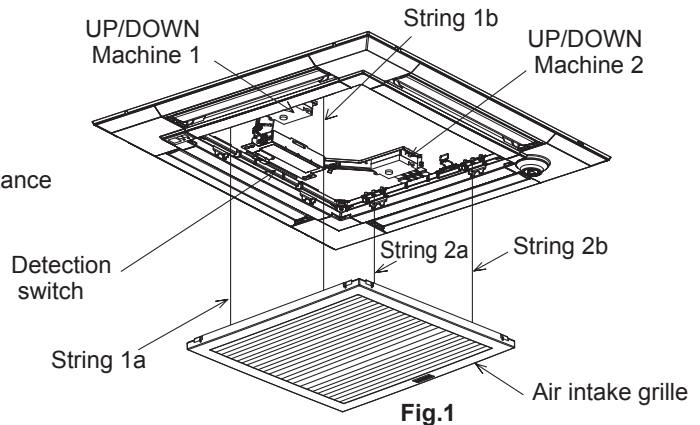

(2) Special operation

① Re-storage operation

Case : Obstruction of the raising air intake grille before storage or malfunction of storage detection switch

Re-storage operation will be performed when the intake grille has been raised the set distance but the storage detection switch is not engaged.

In this case, the operation below will be repeated up to 4 times.

10 cm down → 30 cm up → ... → 10 cm down → 30 cm up

② No-load detection

Case : UP/DOWN commands with no grille suspended.

When both string 1b and string 2b are not loaded, the strings will not move.

③ Obstacle detection

Case : Making contact with something while lowering.

Should the loads on the string 1b and string 2b be removed due to the air intake grille making contact with something while lowering, the lowering operation will stop. The air intake grille will then be raised 10 cm and stop again.

[EMERGENCY OPERATION]

1. If the wireless remote controller for ELEVATION PANEL is faulty or lost, operation will be possible using the emergency up/down switch at the wireless signal receiver or wired remote controller.


- For the operation using the emergency up/down switch at the wireless signal receiver, refer to SW1 and SW2 on the [LEGEND] in the next page.

2. When machine for ELEVATION PANEL breaks down, a intake grille is fixed for a while, and the operation of the unit can be done.

- Refer to installation manual with the grille for the details such as an installation method.

9-2. ELECTRICAL CIRCUIT (Controller board and wiring diagram (Panel))

9-2-1 DIP SW

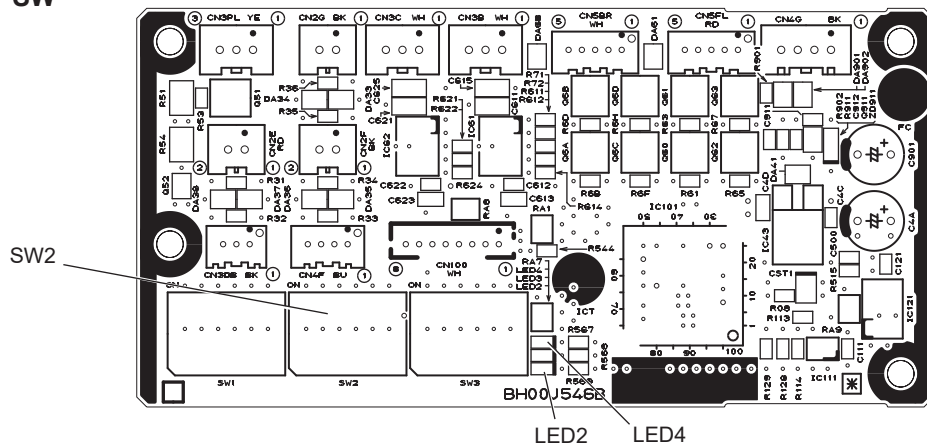

[LEGEND]

SYMBOL	NAME
U.B	ELEVATION PANEL CONTROLLER BOARD
LED2	LED ORANGE (INTAKE GRILLE CONDITION (See table *1))
LED4	LED GREEN (COMMUNICATION WITH INDOOR UNIT)
U.K 1	ELEVATION MACHINE
M	MOTOR (ELEVATION)
LS21	DETECTION SWITCH (STRING TENSION)
I.B	INDOOR UNIT CONTROLLER BOARD
W.B	PCB OF SIGNAL RECEIVER
BZ	BUZZER
RU	RECEIVING UNIT
LED1	LED GREEN (OPERATION INDICATION)
LED2	LED ORANGE (PREPARATION FOR HEATING)
SW1	EMERGENCY HEATING (LONG PRESS FOR OVER 2 SECONDS) INTAKE GRILLE/DOWN (SHORT PRESS)
SW2	EMERGENCY COOLING (LONG PRESS FOR OVER 2 SECONDS) INTAKE GRILLE/UP (SHORT PRESS)
LS1	DETECTION SWITCH (INTAKE GRILLE STORAGE)
R.B	WIRED REMOTE CONTROLLER


<*2> SW2 on U.B

LOWERING DISTANCE	SET UP	LOWERING DISTANCE	SET UP
1.2m	ON OFF 1 2 3 4 5 6	2.8m	ON OFF 1 2 3 4 5 6
1.6m (Initial setting)	ON OFF 1 2 3 4 5 6	3.2m	ON OFF 1 2 3 4 5 6
2.0m	ON OFF 1 2 3 4 5 6	3.6m	ON OFF 1 2 3 4 5 6
2.4m	ON OFF 1 2 3 4 5 6	4.0m	ON OFF 1 2 3 4 5 6

Note: The actual lowering distance might be different from the distance in the table 2 since it can also be set using the wired remote controller.

[EMERGENCY OPERATION]

- If the wireless remote controller for ELEVATION PANEL is faulty or lost, operation will be possible using the emergency up/down switch at the wireless signal receiver or wired remote controller.
 - For the operation using the emergency up/down switch at the wireless signal receiver, refer to SW1 and SW2 on the left [LEGEND].
- When machine for ELEVATION PANEL breaks down, a intake grille is fixed for a while, and the operation of the unit can be done.
 - Refer to installation manual with the grille for the details such as an installation method.

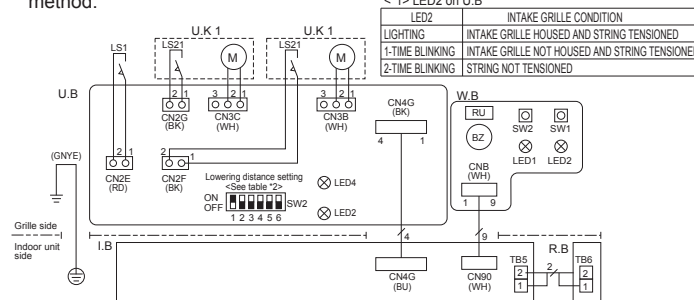

[Note]

- Symbols used in wiring diagram above are, : Connector, : Terminal (block).
- The black square (■) indicates a switch position.

9-2-2. Checkpoint of trouble

<LED 2 Orange display>

- Turn OFF : No power supply
- Blink : Storage detection switch ON (short)
- One blink : Storage detection switch OFF (open)
- Two blinks : Tension detection switch OFF (open)

<LED 4 Green display>

- Blink : Connecting

<controller board>

Check item	Checkpoint	Normal	Remarks
Up/down controller P.C. board supply voltage	CN4A (between 1-2)	11-14 V AC	—
Up/down machine supply voltage	CN3B (between 1-2) CN3C (between 1-2)	10-13.5 V DC	Check when instructing up/down with LED blinking once.

<Up/down machine>





Check item	Checkpoint	Normal	Check contents
Storage detection switch	CN2E	open or short	Check if it is short by pressing push switch.
Tension detection switch	CN2F, CN2G	open or short	Check if it is short when string b is tensioned.
Motor	CN3B, CN3C	5-20 Ω	Check if it is not open or short.
Entwining strings	Pull string	Retention: about 2 kgf	Check if string is drawn out by pulling with 4 kgf.


9-3. TROUBLESHOOTING




Problem	Possible Reason	Corrective Action
Intake grille does not function with operation of the remote controller.	Air-conditioner is running.	Stop running the air-conditioner and try again.
	Power failure	After recovering from power failure, try again.
	Batteries are not inserted into the wireless remote controller. Or battery power is running low.	Install or replace the battery.
	There is something on the intake grille. Or something is stuck in the intake grille.	Remove the objects or obstacles from the intake grille. Or, remove the stuck object.
Intake grille cannot be placed in the correct position.	There is something on the intake grille.	Remove the objects or obstacles from the intake grille.
	Filter is not properly installed.	Lower the intake grille again and check whether the filter is installed in the correct position.
	Intake grille is not hung with all 4 hooks.	Lower the intake grille again and hang the hook on the intake grille.
Intake grille stops lowering in mid flow. (Intake grille would not lower any further.)	Because the intake grille has finished lowering to the auto-stop position.	This is normal. Note: If you want to change the setting for the lowering distance, contact your dealer.
Noises are made during up/down operation. (While intake grille is moving up/down.)	This is the noise made when the string is winded and unwound.	This is normal.
Noises are made while placing the intake grille in.	This is the operational noise for placing the intake grille in securely.	
Intake grille repeats rising and lowering several times while being placed in the correct position.	This is the operation for placing the intake grille in securely.	
Intake grille leans toward one side during the up/down operation.	The speeds of winding each string is slightly different.	

→ : Indicates the visible parts in the photos/figures.

Be careful when removing heavy parts.

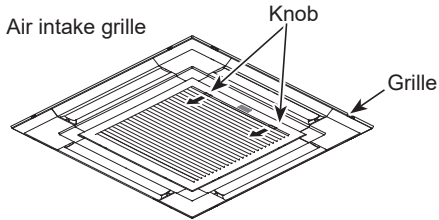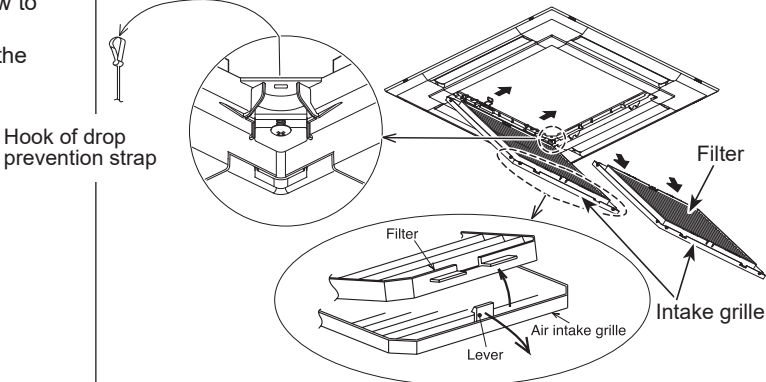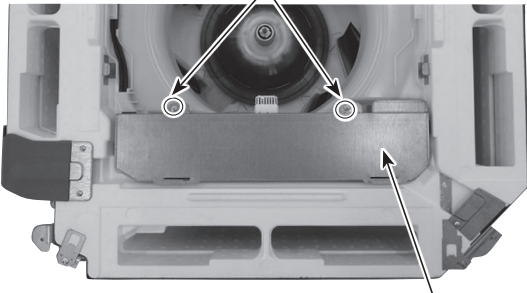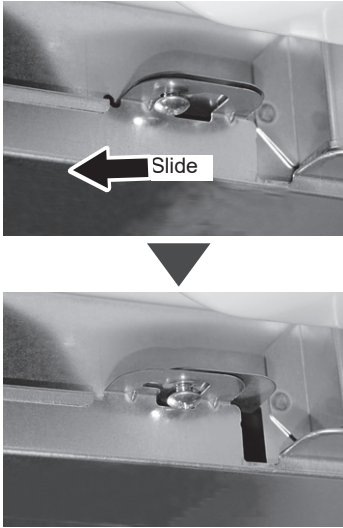OPERATING PROCEDURE	PHOTOS/FIGURES
1. Removing the filter <ol style="list-style-type: none"> (1) Slide the knob of air intake grille toward the arrow to open the air intake grille. (See Figure 1) (2) Pull down the lever of the air intake grille to remove the filter. (See Figure 2) 	Figure 1 
2. Removing the air intake grille <ol style="list-style-type: none"> (1) Slide the knob of air intake grille toward the arrow to open the air intake grille. (See Figure 1) (2) Remove the hook of drop prevention strap from the panel. (3) Remove the air intake grille. 	Figure 2 
3. Removing the electrical box cover <ol style="list-style-type: none"> (1) Remove the air intake grille and the filter. (Refer to procedure 2) (2) Loosen the 2 electrical box cover fixing screws (M4×10) approximately 2 to 3 mm. (See Photo 1) (3) Slide the electrical box cover toward the arrow to remove. (See Photo 2) 	Photo 1  Photo 2 



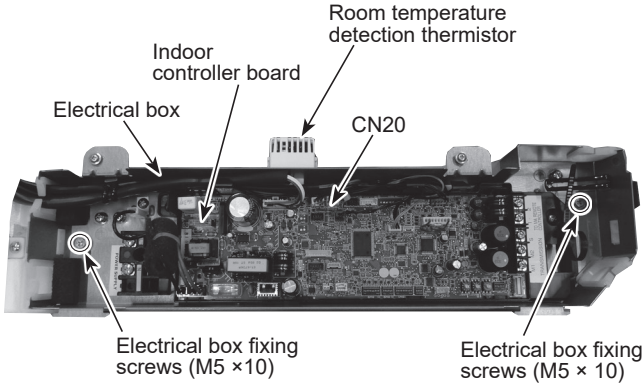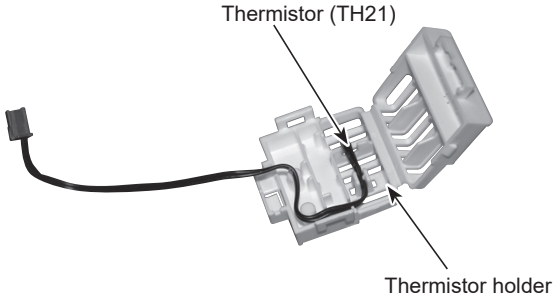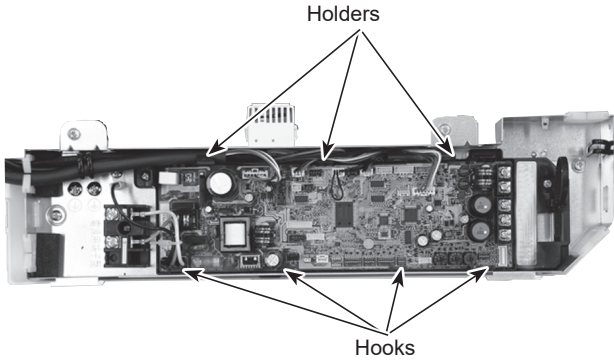OPERATING PROCEDURE	PHOTOS/FIGURES
<p>4. Removing the room temperature thermistor (TH21)</p> <ol style="list-style-type: none">(1) Remove the electrical box cover. (See Photo 1 and 2)(2) Disconnect the connector CN20 (Red) from the indoor controller board.(3) Remove the room temperature thermistor with its holder. (See Photo 4)	<p>Photo 3</p>  <p>Photo 4</p> 
<p>5. Removing the indoor controller board (I.B)</p> <ol style="list-style-type: none">(1) Remove the electrical box cover. (See Photo 1 and 2)(2) Disconnect the connectors: CNMF (White) for fan motor CNV (White) for vane motor CN5Y (White) for motor for i-see Sensor (Option) CN4Z (White) for sensor for i-see Sensor (Option) CN90 (White) for signal receiver (Option) CNP (White) for drain pump CN4F (White) for float switch CN44 (White) for thermistor (TH22/TH23) CN60 (White) for LEV CN01 (Black) for Indoor/Outdoor connecting line CN3C (Blue) for Indoor/Outdoor transmission <p>Disconnect the connectors for optional parts, if any.</p> <ol style="list-style-type: none">(3) Disconnect the lead wire connected to the TB5 on the indoor controller board. TB5: M-NET transmission connecting wire(4) For the unit controlled with the wireless remote controller, disconnect the lead wire connected to the TB15 on the indoor controller board.(5) Remove the indoor controller board (3 holders/4 hooks). (See Photo 5)	<p>Photo 5</p> 

OPERATING PROCEDURE

6. Removing the electrical box

- (1) Remove the electrical box cover (See Photo 1 and 2) and the connectors (Refer to procedure 5).
 - (2) Remove the electrical box fixing screws (M5×10: 2 screws). (See Photo 3)
- <Electrical parts in the electrical box>
- Terminal block for earth and reactor
 - Indoor controller board
 - Thermistor (TH)
- (3) Remove the electrical box (2 hooks).

7. Removing the turbo fan

- (1) Remove the electrical box. (See Photo 3 and refer to procedure 6)
- (2) Remove the bell mouth (tapping screw 4×10: 2 screws). (See Photo 6)
- (3) Remove the nut (M8 × 1) and a washer. (See Photo 7 and 8.)
- (4) Remove the turbo fan.

Note 1: When assembling the turbo fan, attach it so that its tabs fit the holes of washer.

Note 2: Nut tightening torque: 4.5 ± 0.5 Nm.

Turbo fan

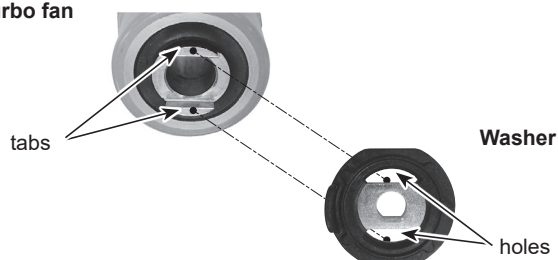


Photo 8



Turn this way to tighten. Turn this way to loosen.
(The same directions as the fan rotation.)

PHOTOS/FIGURES

Photo 6


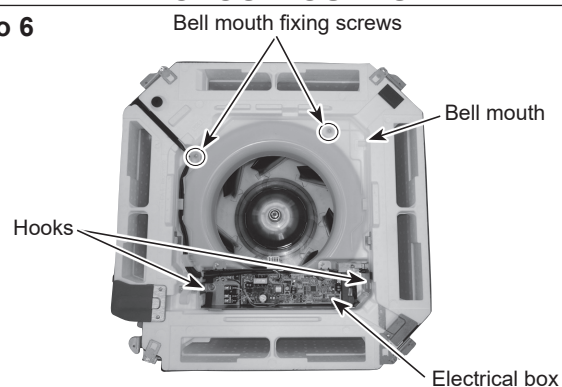



Photo 7

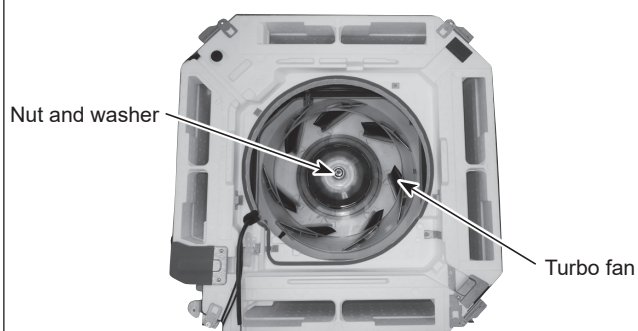

< Nut and washer >



Photo 9

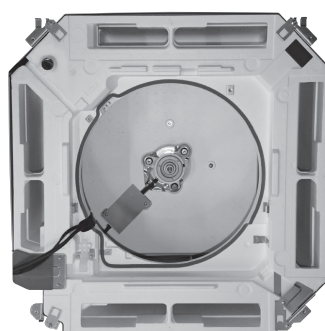


OPERATING PROCEDURE

8. Removing the fan motor (MF)

- (1) Remove the turbo fan. (See Photo 8 and refer to procedure 7)
- (2) Remove the lead cover (tapping screw 4×10: 2 screws). (See Photo 10)
- (3) Loosen the 2 clamps.
- (4) Remove the 3 nuts and washers (M5).
- (5) Remove the fan motor.
- (6) Remove the 3 rubber mounts.

Figure 3: Partial cross section

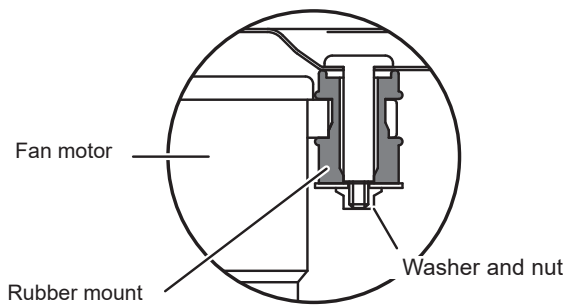

Note: When re-attaching the motor mount, make sure that the thicker end faces the motor shaft.

9. Removing the panel

- (1) Remove the electrical box fixing cover. (See Photo 1)
- (2) Disconnect the connector for vane motor (CNV: White). (Refer to procedure 5)
- (3) Loosen the 4 corner panel fixing screws (tapping screw 4×16). (See Figure 4)
- (4) Slide the corner panel to the direction of the arrow 1, and remove the corner panel. (See Figure 4)
- (5) Remove the 4 installation screws (M5×28). (See Photo 11)
- (6) Release the 2 temporary hanging hooks to remove the grille. (See Photo 12)

PHOTOS/FIGURES

Photo 10

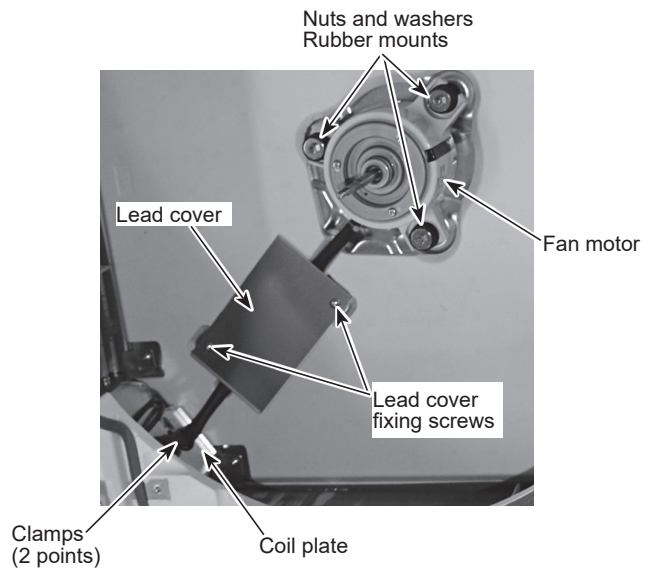


Figure 4

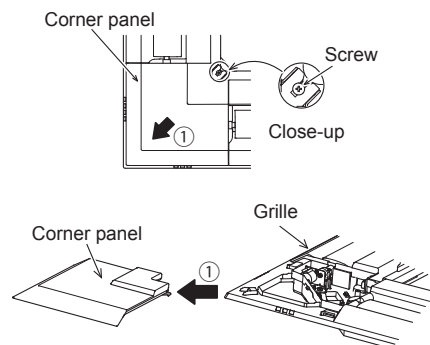


Photo 11




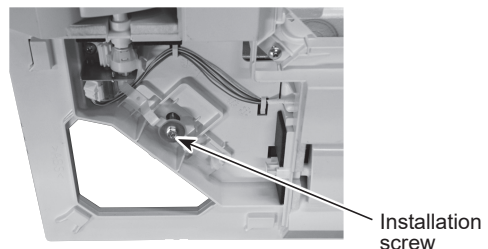


Photo 12

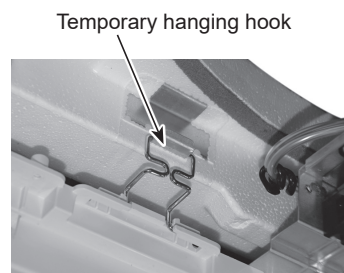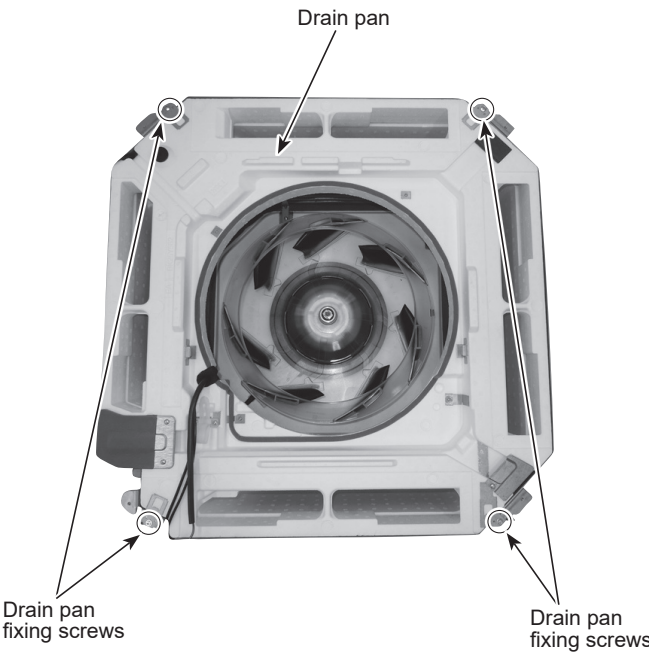

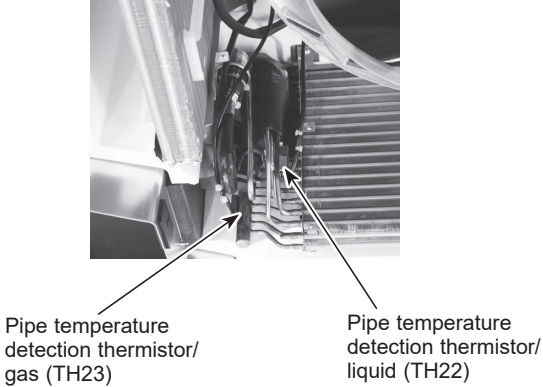

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>10. Removing the drain pan</p> <ol style="list-style-type: none">(1) Remove the electrical box. (See photo 3 and refer to procedure 6)(2) Remove the bell mouth (tapping screw 4×10 : 2 screws). (See Photo 6)(3) Remove the drain pan (screw M5×10: 4 screws).	<p>Photo 13</p>  <p>Drain pan</p> <p>Drain pan fixing screws</p>
<p>11. Removing the pipe temperature/liquid thermistor (TH22) and condenser/evaporator temperature thermistor (TH23)</p> <ol style="list-style-type: none">(1) Remove the drain pan (Refer to procedure 10) and loosen the 2 clamps of the coil plate. (See Photo 10)(2) Remove the coil plate (tapping screw 4×10: 2 screws).(3) Disconnect the pipe temperature/liquid thermistor (TH22) and condenser/evaporator temperature thermistor (TH23) from the holder.	<p>Photo 14</p>  <p>Pipe temperature detection thermistor/ gas (TH23)</p> <p>Pipe temperature detection thermistor/ liquid (TH22)</p>

OPERATING PROCEDURE

12. Removing the drain pump (DP)

- (1) Remove the drain pan. (Refer to procedure 10)
- (2) Cut the hose band and remove the hose.
- (3) Loosen the clamp of the drain pump.
- (4) Remove the drain pump (tapping screw 4×10: 2 screws/2 hooks).
- (5) Cut the drain pump base and lead wire fixing band. (See Figure 5)
- (6) Remove the lead wire of the drain pump from the clamp of the drain pump base. (See Figure 5)
- (7) Remove the drain pump (tapping screw: 3 screws). (See Figure 6)

PHOTOS/FIGURES

Photo 15

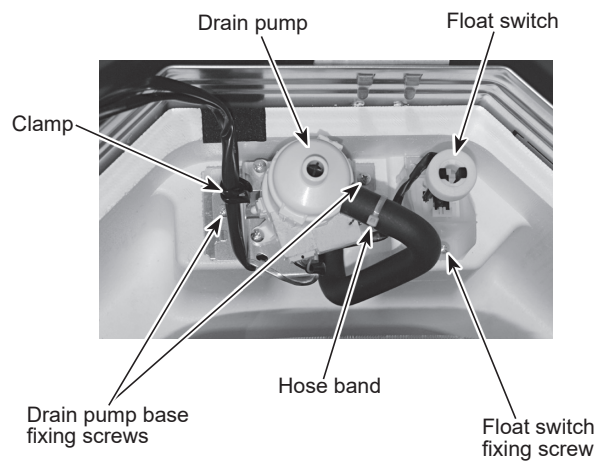


Figure 6


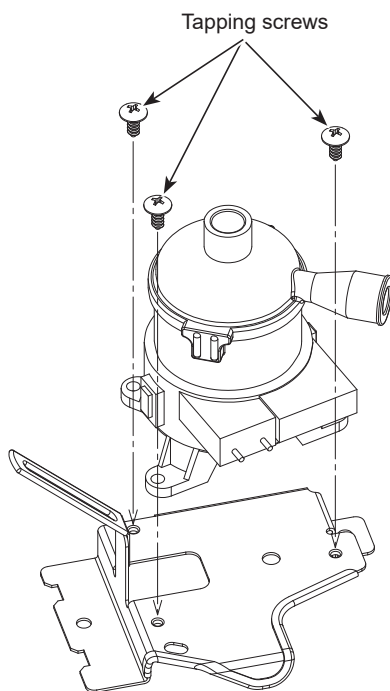


Figure 5

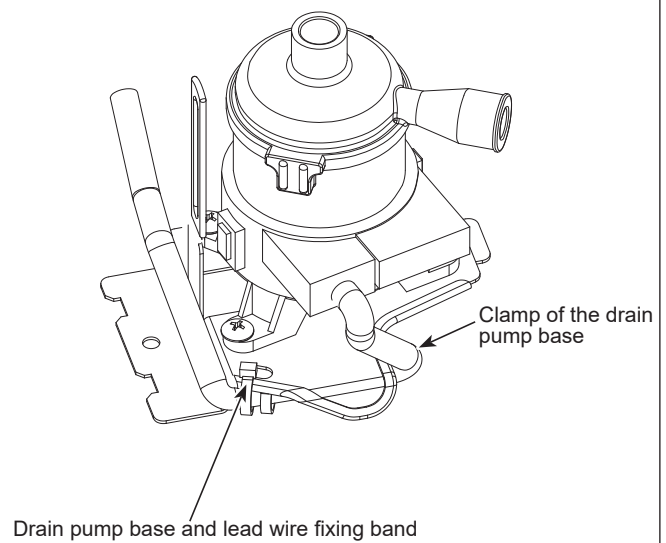


OPERATING PROCEDURE

13. Removing the float switch (FS)

- (1) Remove the drain pan. (Refer to procedure 10)
- (2) Loosen the clamp of the drain pump. (See Photo 15)
- (3) Remove the float switch (tapping screw 4×10: 1 screw/1 hook). (See Photo 15)
- (4) Remove the float switch base and the lead wire fixing band. (See Photo 16)
- (5) Remove the lead wire from the U shaped portion of the float switch base. (See Photo 16)
- (6) Slide the float switch towards the arrow to remove from the float switch base.

PHOTOS/FIGURES

Photo 16

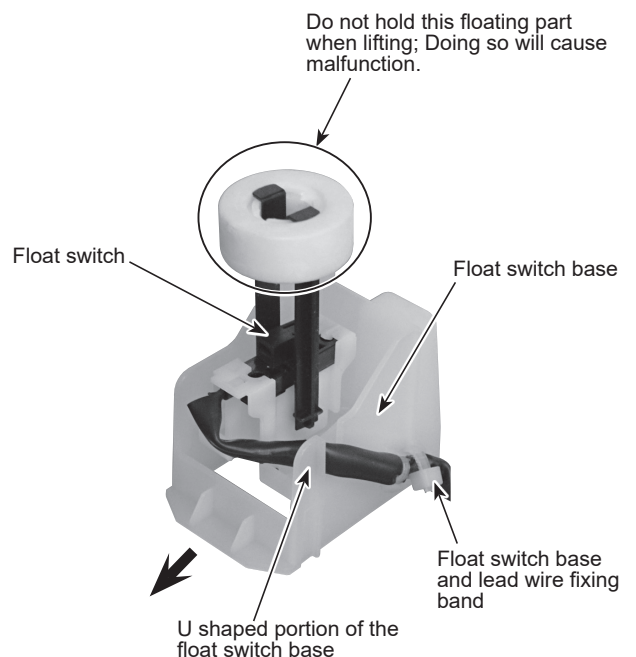

14. Removing the heat exchanger

- (1) Remove the drain pan. (Refer to procedure 10)
- (2) Remove the piping cover (tapping screw 4×10: 3 screws).
- (3) Remove the coil plate (tapping screw 4×10: 2 screws).
- (4) Remove the heat exchanger fixing screws (tapping screw 4×10: 2 screws).
- (5) Remove the coil support (tapping screw 4×10: 1 screw each)
 - M20-80: 1 coil support (See photo 17)
 - M100, 125: 3 coil supports (See photo 18)
- (6) Remove the heat exchanger.

Photo 18


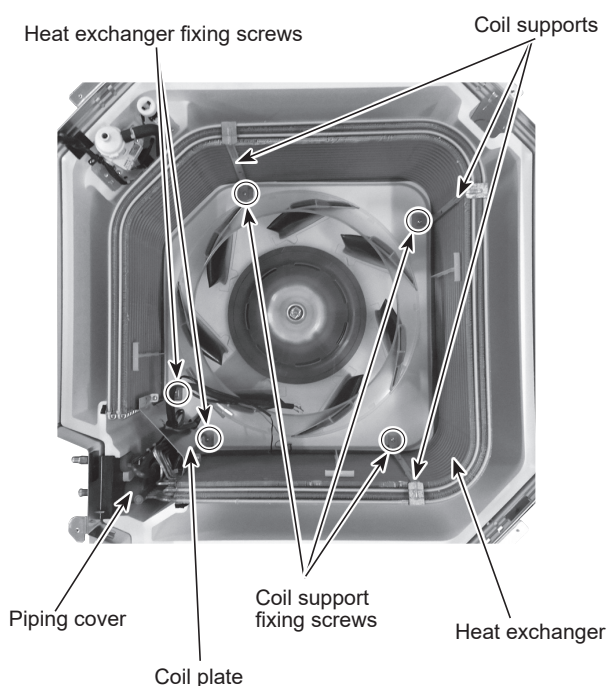



Photo 17

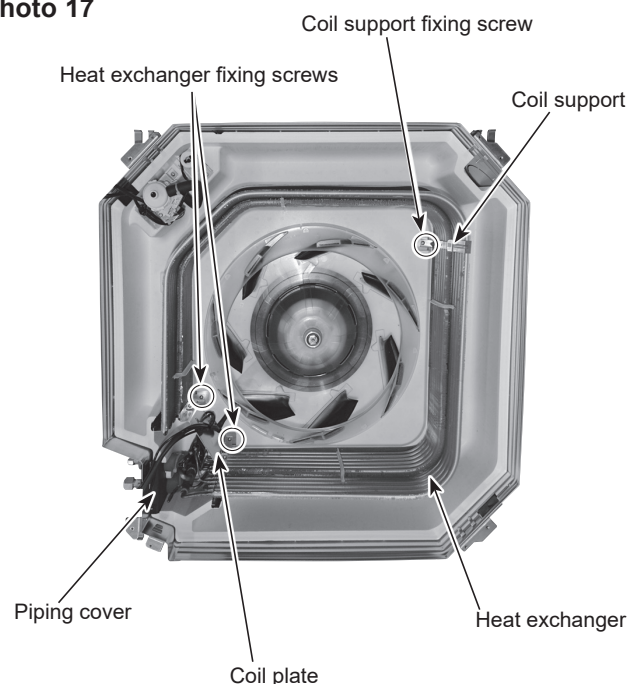

11-1. REMOTE CONTROLLER FUNCTIONS

<PAR-41MAA>

Controller interface

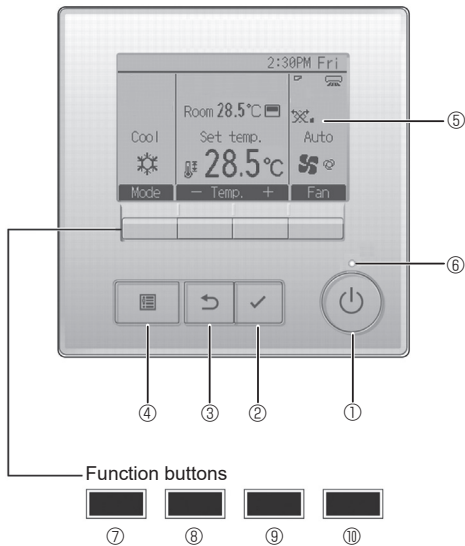

① [ON/OFF] button

Press to turn ON/OFF the indoor unit.

② [SELECT] button

Press to save the setting.

③ [RETURN] button

Press to return to the previous screen.

④ [MENU] button

Press to bring up the Main menu.

⑤ Backlit LCD

Operation settings will appear.


When the backlight is off, pressing any button turns the backlight on and it will stay lit for a certain period of time depending on the screen.

When the backlight is off, pressing any button turns the backlight on and does not perform its function. (except for the [ON/OFF] button)

The functions of the function buttons change depending on the screen.

Refer to the button function guide that appears at the bottom of the LCD for the functions they serve on a given screen.

When the system is centrally controlled, the button function guide that corresponds to the locked button will not appear.

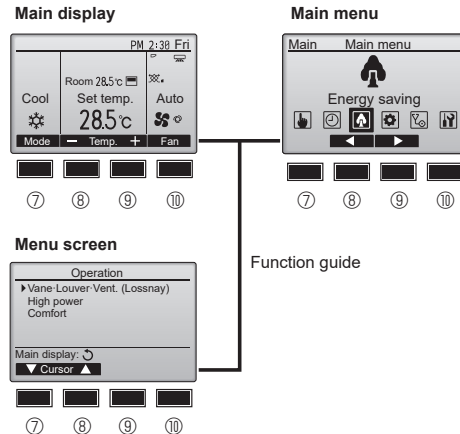

⑥ ON/OFF lamp

This lamp lights up in green while the unit is in operation. It blinks while the remote controller is starting up or when there is an error.

⑦ Function button [F1]

Main display: Press to change the operation mode.

Menu screen: The button function varies with the screen.

⑧ Function button [F2]

Main display: Press to decrease temperature.

Main menu: Press to move the cursor left.

Menu screen: The button function varies with the screen.

⑨ Function button [F3]

Main display: Press to increase temperature.

Main menu: Press to move the cursor right.

Menu screen: The button function varies with the screen.

⑩ Function button [F4]

Main display: Press to change the fan speed.


Menu screen: The button function varies with the screen.

Display


The main display can be displayed in two different modes: "Full" and "Basic". The initial setting is "Full". To switch to the "Basic" mode, change the setting on the Main display setting. (Refer to operation manual included with remote controller.)

<Full mode>

* All icons are displayed for explanation.

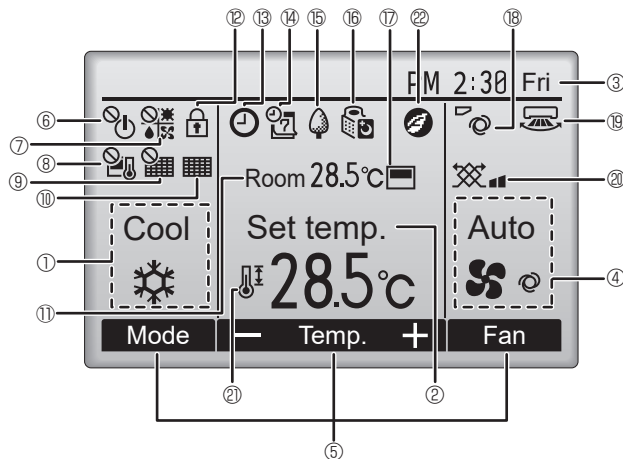

<Basic mode>

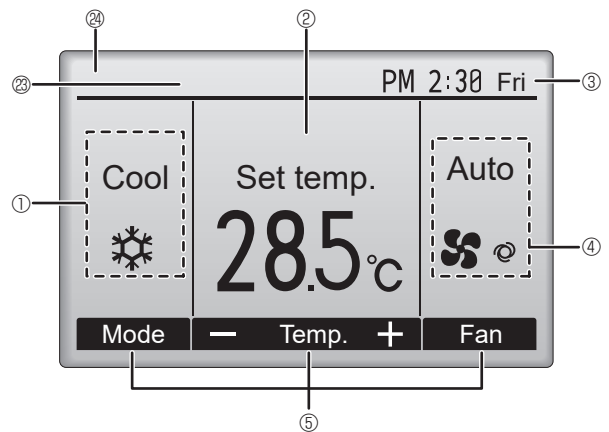

① Operation mode

② Preset temperature

③ Clock

④ Fan speed

⑤ Button function guide

Functions of the corresponding buttons appear here.



Appears when the ON/OFF operation is centrally controlled.



Appears when the operation mode is centrally controlled.



Appears when the preset temperature is centrally controlled.



Appears when the filter reset function is centrally controlled.



Indicates when filter needs maintenance.

⑪ Room temperature



Appears when the buttons are locked.



Appears when the On/Off timer, Night setback, or Auto-off timer function is enabled.



appears when the timer is disabled by the centralized control system.



Appears when the Weekly timer is enabled.



Appears while the units are operated in the energy saving mode. (Will not appear on some models of indoor units)



Appears while the outdoor units are operated in the silent mode.



Appears when the built-in thermistor on the remote controller is activated to monitor the room temperature (⑪).



appears when the thermistor on the indoor unit is activated to monitor the room temperature.



Indicates the vane setting.



*1

Indicates the louver setting.



Indicates the ventilation setting.



Appears when the preset temperature range is restricted.



*1

Appears when an energy saving operation is performed using a "3D i-See sensor" function.

②③ Centrally controlled

Appears for a certain period of time when a centrally-controlled item is operated.


②④ Preliminary error display

A check code appears during the preliminary error.

Most settings (except ON/OFF, mode, fan speed, temperature) can be made from the Main menu.

*1 These functions are not applied to the floor standing models.


Menu structure

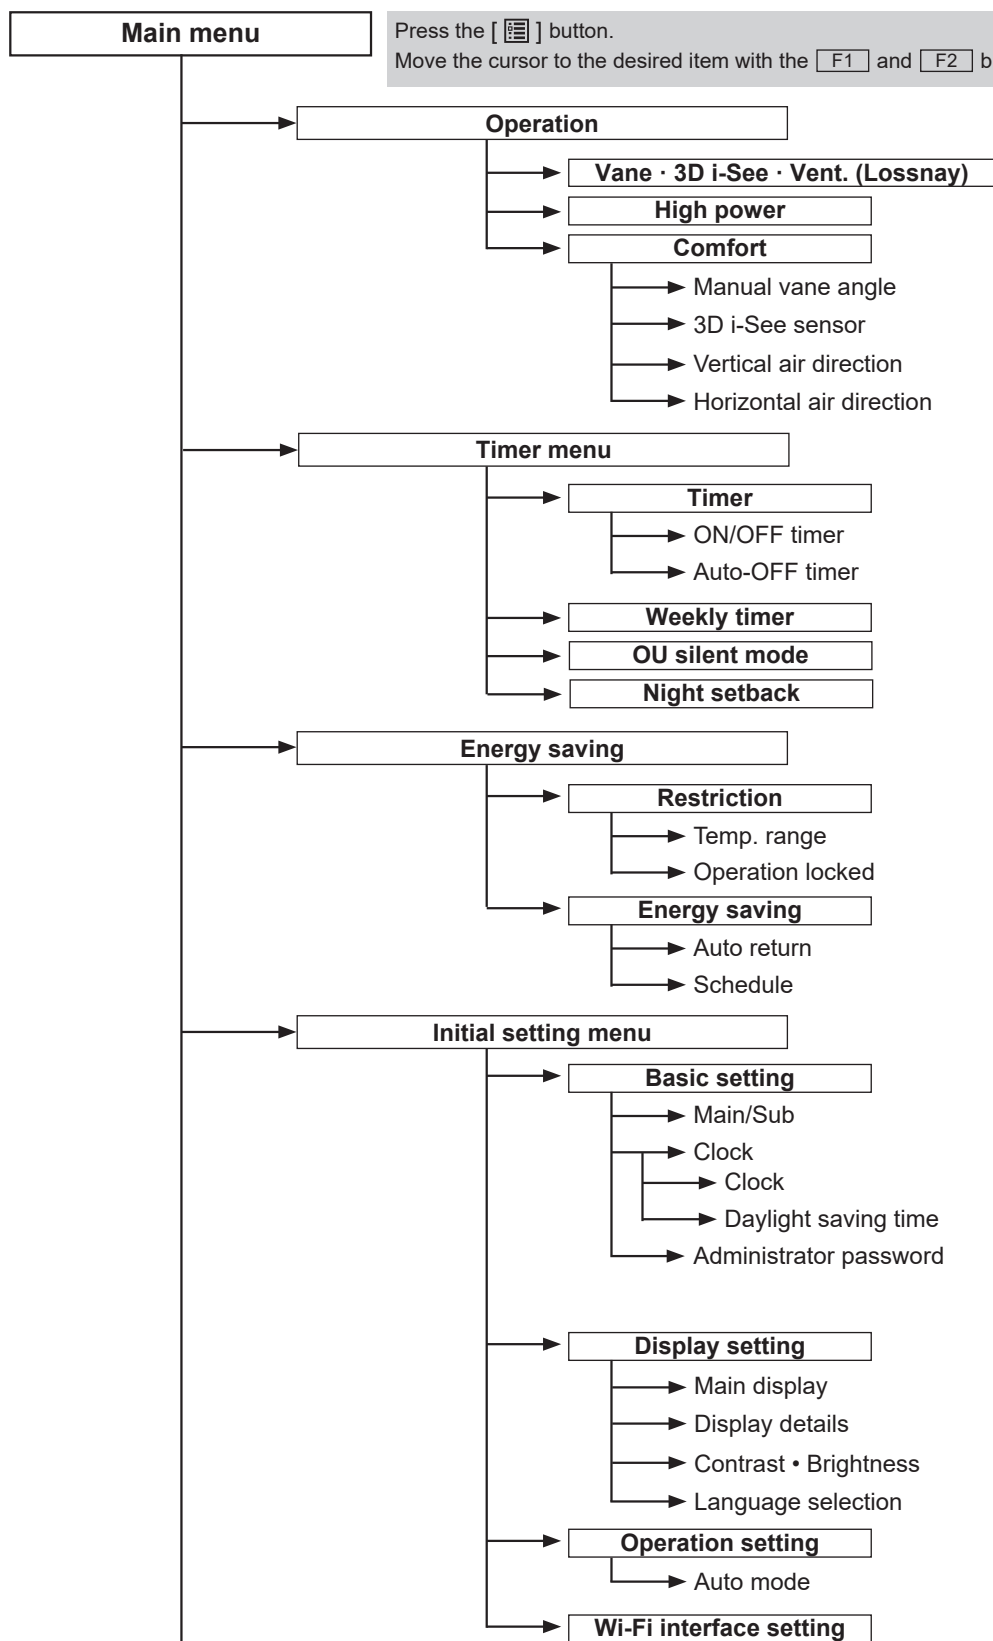

Continue to the next page.

Not all functions are available on all models of indoor units.

Continue from the previous page.

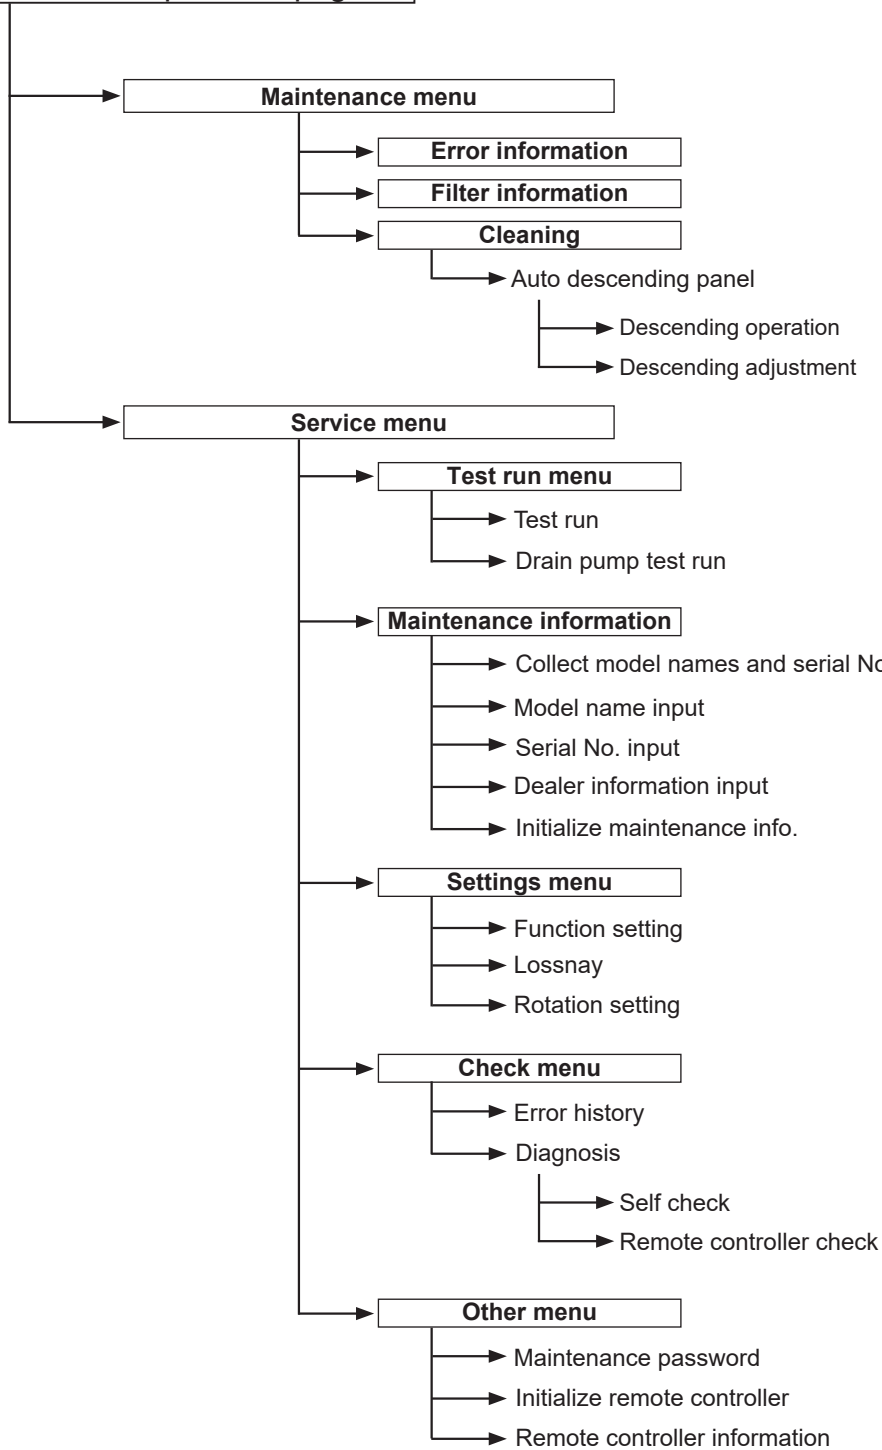

Not all functions are available on all models of indoor units.

Main menu list

Main menu	Setting and display items		Setting details
Operation	Vane · 3D i-See · Vent. (Vane.Vent. (Lossnay))		Vane: Use to set the vertical air direction. Louver: Use to set the horizontal air direction. 3D i-See sensor: This setting is available only for the air conditioners that support easy setting function of motion sensing air direction. Vent: Use to set the amount of ventilation.
	High power ^{*3}		Use to reach the comfortable room temperature quickly. • Units can be operated in the High-power mode for up to 30 minutes.
	Comfort	Manual vane angle	Vertical air direction • Sets the vertical airflow direction (vane) of each unit. Horizontal air direction • Sets the horizontal airflow direction (vane) of each unit.
		3D i-See sensor	Use to set the following functions for 3D i-See sensor. • Air distribution • Energy saving option • Seasonal airflow
Timer	Timer	ON/OFF timer ^{*1}	Use to set the operation ON/OFF times. • Time can be set in 5-minute increments.
		Auto-OFF timer	Use to set the Auto-OFF time. • Time can be set to a value from 30 to 240 in 10-minute increments.
	Weekly timer ^{*1, *2}		Use to set the weekly operation ON/OFF times. • Up to 8 operation patterns can be set for each day. (Not valid when the ON/OFF timer is enabled.)
	OU silent mode ^{*1, *3}		Use to set the time periods in which priority is given to quiet operation of outdoor units over temperature control. Set the Start/Stop times for each day of the week. • Select the desired silent level from "Normal," "Middle," and "Quiet."
	Night setback ^{*1}		Use to make Night setback settings. • Select "Yes" to enable the setting, and "No" to disable the setting. The temperature range and the start/stop times can be set.
Energy saving	Restriction	Temp. range ^{*2}	Use to restrict the preset temperature range. • Different temperature ranges can be set for different operation modes.
		Operation lock	Use to lock selected functions. • The locked functions cannot be operated.
	Energy saving	Auto return ^{*2}	Use to get the units to operate at the preset temperature after performing energy saving operation for a specified time period. • Time can be set to a value from 30 and 120 in 10-minute increments. (This function will not be valid when the preset temperature ranges are restricted.)
		Schedule ^{*1, *3}	Set the start/stop times to operate the units in the energy saving mode for each day of the week, and set the energy saving rate. • Up to 4 energy saving operation patterns can be set for each day. • Time can be set in 5-minute increments. • Energy saving rate can be set to a value from 0% or 50 to 90% in 10% increments.
	Energy data (for unit time, month, and day)		Displays the amount of power consumption during operation. • Unit time data: Data for the last one-month period can be displayed in 30-minute units. • Monthly/daily data: Data for the last 14-month period are displayed in day-and-month-units. * Data can be deleted. * Data are obtained based on the power consumption estimated from the operating state.

^{*1} Clock setting is required.

^{*2} 1°C increments.


^{*3} This function is available only when certain outdoor units are connected.

--

Main menu	Setting and display items		Setting details
Initial setting	Basic setting	Main/Sub	When connecting 2 remote controllers, one of them needs to be designated as a sub controller.
		Clock	Use to set the current time.
		Daylight saving time	Set the daylight saving time.
		Administrator password	The administrator password is required to make the settings for the following items. • Timer setting • Energy saving setting • Weekly timer setting • Restriction setting • Outdoor unit silent mode setting • Night set back
	Display setting	Main display	Use to switch between "Full" and "Basic" modes for the Main display, and use to change the background colors of the display to black.
		Display details	Make the settings for the remote controller related items as necessary. Clock: The initial settings are "Yes" and "24h" format. Temperature: Set either Celsius (°C) or Fahrenheit (°F). Room temp.: Set Show or Hide. Auto mode: Set Auto mode display or Only Auto display.
		Contrast • Brightness	Use to adjust screen contrast and brightness.
		Language selection	Use to select the desired language.
	Operation setting	Auto mode	Whether or not to use Auto mode can be selected by using the button. This setting is valid only when indoor units with Auto mode function are connected.
Maintenance	Error information		Use to check error information when an error occurs. • Check code, error source, refrigerant address, model name, manufacturing number, contact information (dealer's phone number) can be displayed. (The model name, manufacturing number, and contact information need to be registered in advance to be displayed.)
	Filter information		Use to check the filter status. • The filter sign can be reset.
	Cleaning	Auto descending panel	Use to lift and lower the auto descending panel (Optional parts).
Service	Test run		Select "Test run" from the Service menu to bring up the Test run menu. • Test run • Drain pump test run
	Input maintenance info.		Select "Input maintenance Info." from the Service menu to bring up the Maintenance information screen. The following settings can be made from the Maintenance Information screen. • Model name input • Serial No. input • Dealer information input • Initialize maintenance info.
	Settings	Function setting	Make the settings for the indoor unit functions via the remote controller as necessary.
		LOSSNAY setting	This setting is required only when the operation of CITY MULTI units is interlocked with LOSSNAY units.
	Check	Error history	Display the error history and execute "delete error history".
		Diagnosis	Self check: Error history of each unit can be checked via the remote controller. Remote controller check: When the remote controller does not work properly, use the remote controller checking function to troubleshoot the problem.
	Others	Maintenance password	Use to change the maintenance password.
		Initialize remote controller	Use to initialize the remote controller to the factory shipment status.
		Remote controller information	Use to display the remote controller model name, software version, and serial number.

<PAR-SL97A-E>


Controller interface

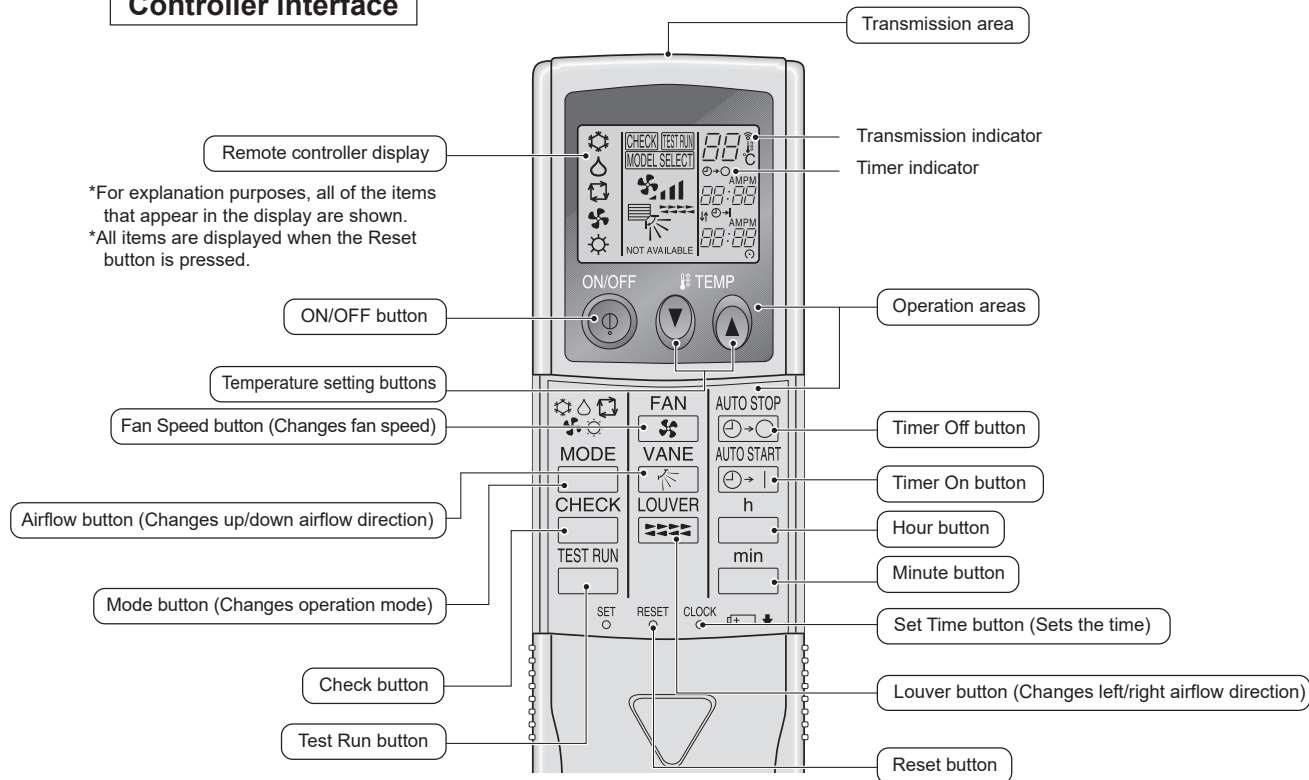

- When using the wireless remote controller, point it towards the receiver on the indoor unit.
- If the remote controller is operated within approximately two minutes after power is supplied to the indoor unit, the indoor unit may beep twice as the unit is performing the initial automatic check.
- The indoor unit beeps to confirm that the signal transmitted from the remote controller has been received. Signals can be received up to approximately 7 meters in a direct line from the indoor unit in an area 45° to the left and right of the unit. However, illumination such as fluorescent lights and strong light can affect the ability of the indoor unit to receive signals.
- If the operation lamp near the receiver on the indoor unit is blinking, the unit needs to be inspected. Consult your dealer for service.
- Handle the remote controller carefully! Do not drop the remote controller or subject it to strong shocks. In addition, do not get the remote controller wet or leave it in a location with high humidity.
- To avoid misplacing the remote controller, install the holder included with the remote controller on a wall and be sure to always place the remote controller in the holder after use.

<PAR-SL101A-E>


Controller interface

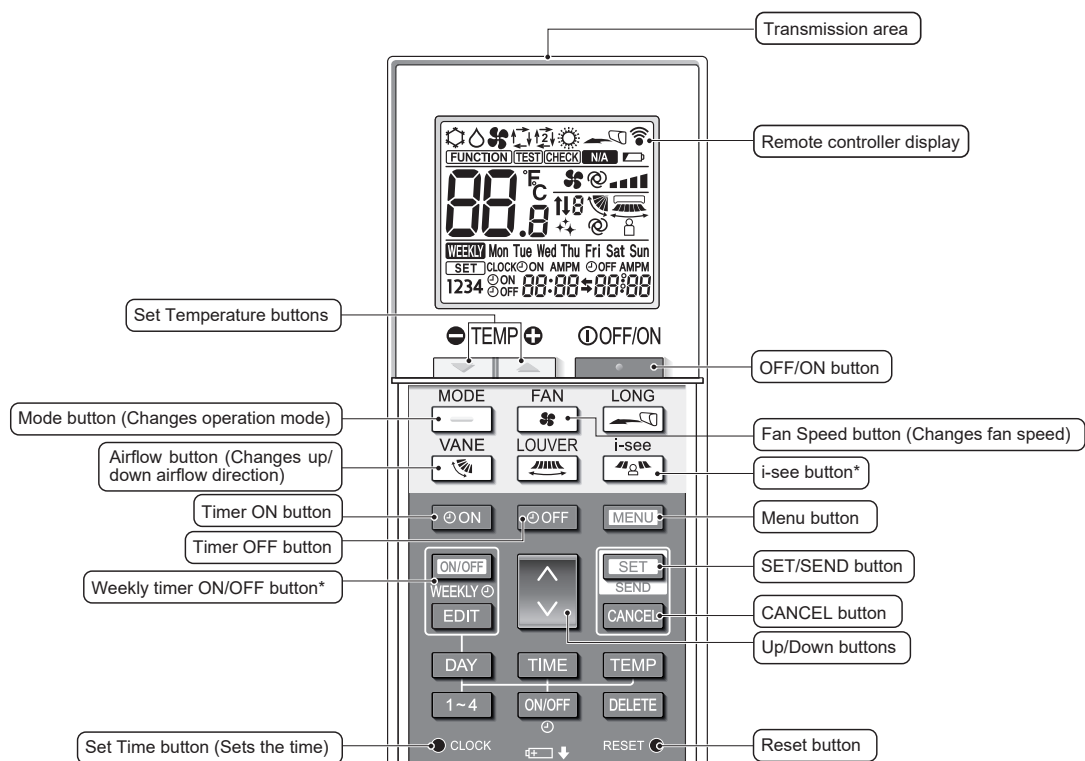

Note:


* This button is enabled or disabled depending on the model of the indoor unit.

Display

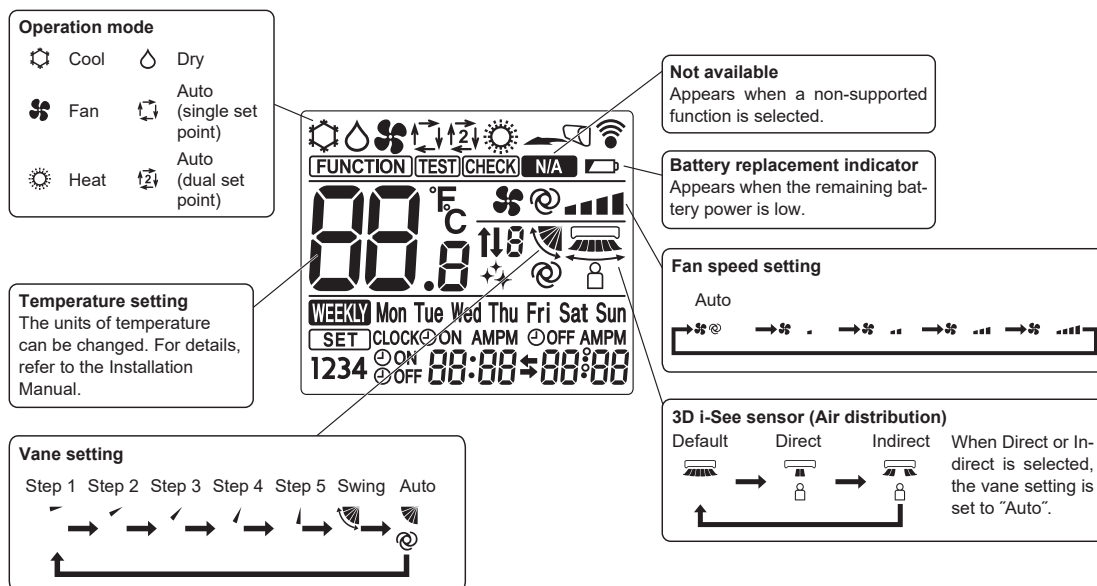

<PAR-U02MEDA>

Controller interface

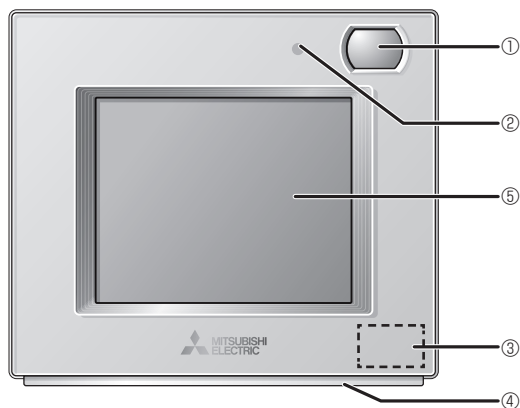

① Occupancy Sensor

The occupancy sensor detects vacancy for energy-save control.

② Brightness Sensor

The brightness sensor detects the brightness of the room for energy-save control.

③ Temperature & Humidity Sensor

The sensor detects the room temperature and the relative humidity.

④ LED Indicator

The LED indicator indicates the operation status in different colors. The LED indicator lights up during normal operation, lights off when units are stopped, and blinks when an error occurs.

⑤ Touch panel & Backlit LCD

The touch panel shows the operation settings screen. When the backlight is off, touching the panel turns the backlight on, and it will stay lit for a predetermined period of time.

11-2. ERROR INFORMATION

When an error occurs, the following screen will appear.
Check the error status, stop the operation, and consult your dealer.

1. Check code, error unit, refrigerant address, date and time of occurrence, model name, and serial number will appear.
The model name and serial number will appear only if the information have been registered.


Press the **[F1]** or **[F2]** button to go to the next page.

Error information 1/2

Error code	A3
Error unit	IU 8 Unit#1
Time Occurred	02/01 4:48

Reset error: Reset button

▼ Page ▲ Reset

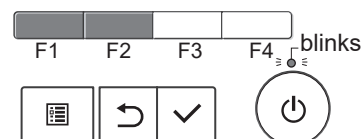

Contact information (dealer's phone number) will appear if the information has been registered.

Error information 2/2

Contact information

Dealer
Tel

Reset error: Reset button

▼ Page ▲ Reset

2. Press the **[F4]** button or the button to reset the error that is occurring.


Errors cannot be reset while the ON/OFF operation is prohibited.

Error information 1/2

Error code	A3
Error unit	IU 8 Unit#1
Time Occurred	02/01 4:48

Reset error: Reset button

▼ Page ▲ Reset

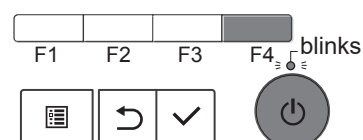


Select "OK" with the **[F4]** button.

Error reset

Reset current error?

Cancel OK




Error reset

Error reset

Main menu:


Navigating through the screens

- To go back to the Service menu button



• Checking the error information

While no errors are occurring, page 2/2 of the error information can be viewed by selecting "Error information" from the Maintenance menu. Errors cannot be reset from this screen.

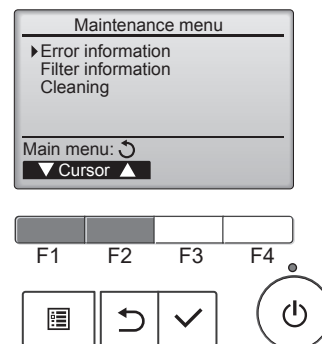


11-3. SERVICE MENU

Maintenance password is required

1. Select "Service" from the Main menu, and press the [✓] button.

*At the main display, the menu button and select "Service" to make the maintenance setting.

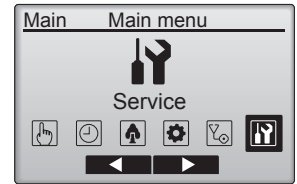

2. When the Service menu is selected, a window will appear asking for the password.



To enter the current maintenance password (4 numerical digits), move the cursor to the digit you want to change with the [F1] or [F2] button.



Set each number (0 through 9) with the [F3] or [F4] button.



Then, press the [✓] button.

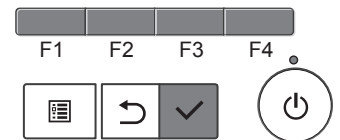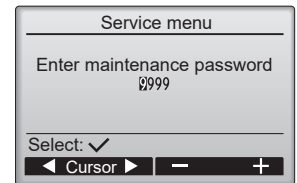

Note: The initial maintenance password is "9999". Change the default password as necessary to prevent unauthorized access. Have the password available for those who need it.

If you forget your maintenance password, you can initialize the password to the default password "9999" by pressing and holding the [F1] button for 10 seconds on the maintenance password setting screen.



3. If the password matches, the Service menu will appear.



Note: Air conditioning units may need to be stopped to make only at "Settings". There may be some settings that cannot be made when the system is centrally controlled.



A screen will appear that indicates the setting has been saved.

Navigating through the screens

- To go back to the Service menu[] button
- To return to the previous screen.....[] button

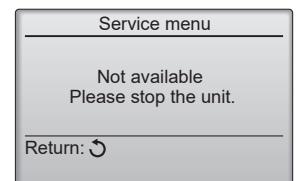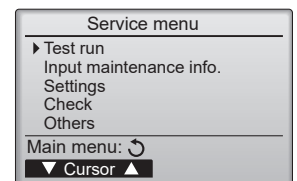



11-4. TEST RUN

11-4-1. PAR-41MAA



1. Select "Service" from the Main menu, and press the [✓] button.



Select "Test run" with the [F1] or [F2] button, and press the [✓] button.

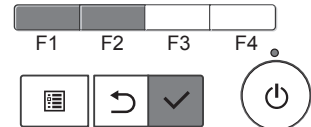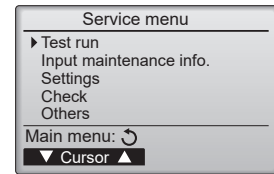

2. Select "Test run" with the [F1] or [F2] button, and press the [✓] button.

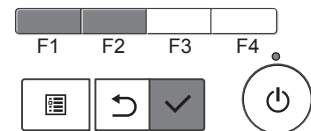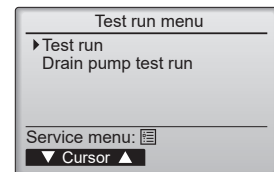

Test run operation



Press the [F1] button to go through the operation modes in the order of "Cool and Heat".

Cool mode: Check the cold air blows out.
Heat mode: Check the heat blows out.

Check the operation of the outdoor unit's fan.



Press the [✓] button and open the Vane setting screen.

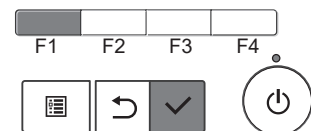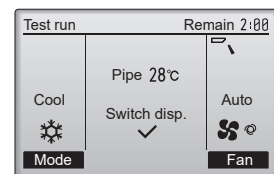

Auto vane check

Check the auto vane with the [F1] [F2] [F3] buttons.





Press the [↶] button to return to "Test run operation".



Press the [⏻] button.





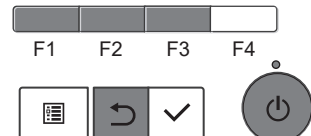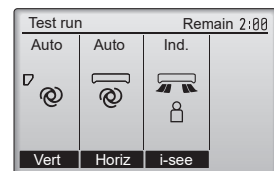





When the test run is completed, the "Test run menu" screen will appear.
The test run will automatically stop after 2 hours.

*The function is available only for the model with vanes.




11-4-2. PAR-SL97A-E

Measure an impedance between the power supply terminal block on the outdoor unit and ground with a 500 V Megger and check that it is equal to or greater than 1.0 MΩ.







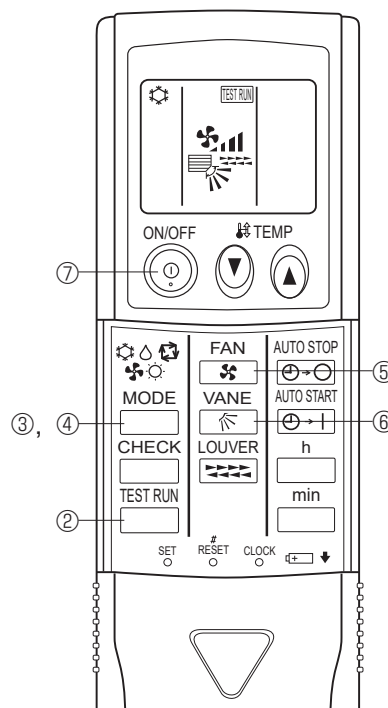







1. Turn on the main power to the unit.
2. Press the  button twice continuously.
(Start this operation from the status of remote controller display turned off.)
A  and current operation mode are displayed.
3. Press the  () button to activate  mode, then check whether cool air blows out from the unit.
4. Press the  () button to activate  mode, then check whether warm air blows out from the unit.
5. Press the  button and check whether strong air blows out from the unit.
6. Press the  button and check whether the auto vane operates properly.
7. Press the ON/OFF button to stop the test run.


Note:

- Point the remote controller towards the indoor unit receiver while following steps 2 to 7.
- It is not possible to run in FAN, DRY or AUTO mode.




11-4-3. PAR-SL101A-E


1. Press the  button ① to stop the air conditioner.
 - If the weekly timer is enabled ( is on), press the  button ③ to disable it ( is off).
2. Press the  button ② for 5 seconds.
 -  comes on and the unit enters the service mode.
3. Press the  button ②.
 -  ⑧ comes on and the unit enters the test run mode.
4. Press the following buttons to start the test run.
 - : Switch the operation mode between cooling and heating and start the test run.
 - : Switch the fan speed and start the test run.
 - : Switch the airflow direction and start the test run.
 - : Switch the louver and start the test run.
 - : Start the test run.
5. Stop the test run.
 - Press the  button ① to stop the test run.
 - After 2 hours, the stop signal is transmitted.

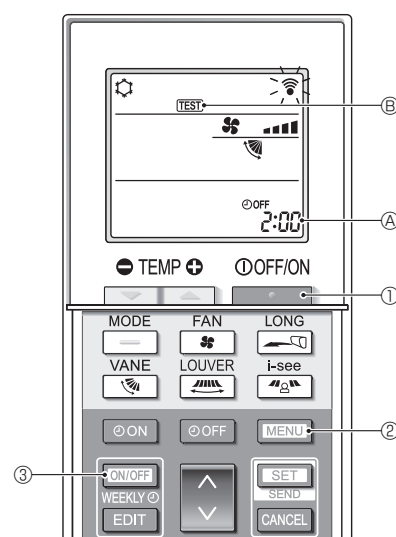

11-4-4. PAR-U02MEDA

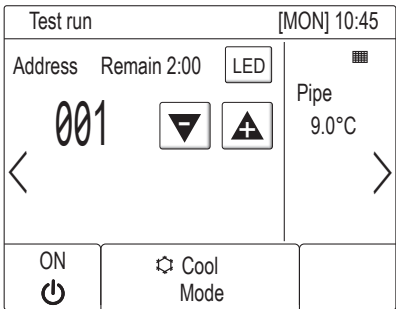

[Test run screen]

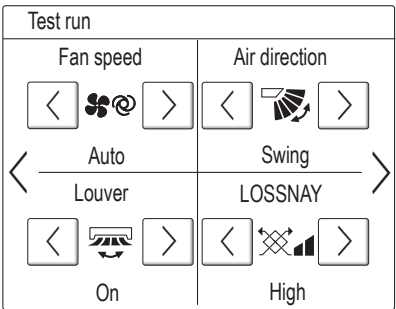

[Indoor unit setting screen]

- (a) Read the section about Test run in the indoor unit Installation Manual before performing a test run.
- (b) During the test run, indoor units will be forced to operate in the Thermo-ON status.
Except the set temperature, normal operation functions are accessible during test run.
- (c) By selecting the address of another indoor unit, the liquid pipe temperature of the selected unit can be monitored.
- (d) The test run will automatically end in two hours.

* When AHC is controlled from the controller
To monitor the operating status of AHC, touch the [<] button on the [Test run] screen and access the [General equipment] screen.
To set the humidity setting for the humidifier (when one is connected to the AHC), touch the [>] button on the [Indoor unit setting] screen.

11-5. FUNCTION SETTING

11-5-1. PAR-41MAA



1. Select "Service" from the Main menu, and press the [✓] button.



Select "Setting" from the Service menu, and press the [✓] button.



Select "Function setting", and press the [✓] button.

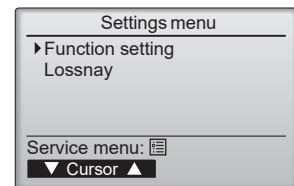

2. The Function setting screen will appear.

Press the [F1] or [F2] button to move the cursor to one of the following: M-NET address, function setting number, or setting value. Then, press the [F3] or [F4] button to change the settings to the desired settings.



Once the settings have been completed, press the [✓] button.

A screen will appear indicating that the settings information is being sent.




To check the current settings of a given unit, enter the setting for its M-NET address and function setting number, select Conf for the Function, and press the [✓] button.

A screen will appear indicating that the settings are being searched for. When the search is done, the current settings will appear.



When the settings information has been sent, a screen will appear indicating its completion.

To make additional settings, press the [↺] button to return to the screen shown in the above step. Set the function numbers for other indoor units by following the same steps.

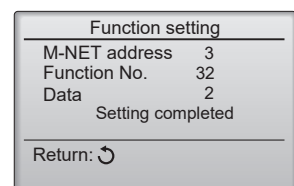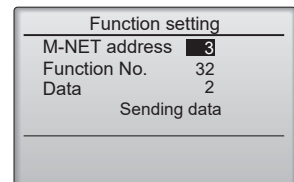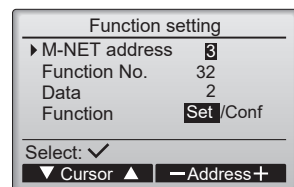


Note:

- Refer to the indoor unit Installation Manual for information about the factory settings of indoor units, function setting numbers, and setting values.
- Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.


11-5-2. PAR-SL97A-E

Functions can be selected with the wireless remote controller. Function selection using wireless remote controller is available only for refrigerant system with wireless function. Refrigerant address cannot be specified by the wireless remote controller.

[Flow of function selection procedure]

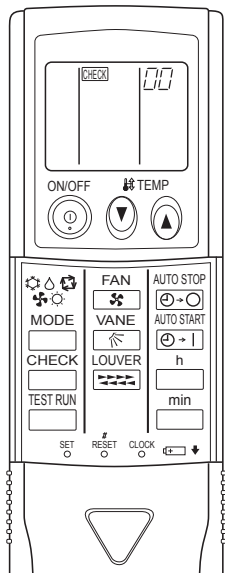

The flow of the function selection procedure is shown below. This example shows how to turn off the function that raises the set temperature by 4 degrees during HEAT operation. (Mode 24: 2)
The procedure is given after the flow chart.

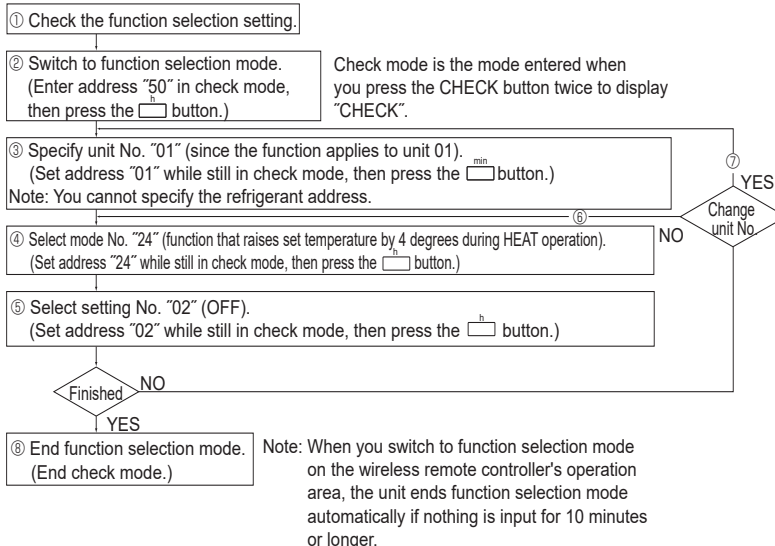

[Operating instructions]

1. Check the function settings.

2. Press the button twice continuously. → is lit and "00" blinks.

Press the button once to set "50". Direct the wireless remote controller toward the receiver of the indoor unit and press the button.

3. Set the unit number.

Press the button to set the unit number. (Press "01" to specify the indoor unit whose unit number is 01.)

Direct the wireless remote controller toward the receiver of the indoor unit and press the button.

By setting unit number with the button, specified indoor unit starts performing fan operation.

Detect which unit is assigned to which number using this function. If unit number is set to AL, all the indoor units in same refrigerant system start performing fan operation simultaneously.

Notes:

1. If a unit number that cannot be recognized by the unit is entered, 3 beeps of 0.4 seconds will be heard. Reenter the unit number setting.
2. If the signal was not received by the sensor, you will not hear a beep or a "double beep" may be heard. Reenter the unit number setting.

4. Select a mode.

Press the button to set a mode. Press "24" to turn on the function that raises the set temperature by 4 degrees during heat operation. Direct the wireless remote controller toward the sensor of the indoor unit and press the button.
→ The sensor-operation indicator will blink and beeps will be heard to indicate the current setting number.

Current setting number: 1 = 1 beep (1 second)
2 = 2 beeps (1 second each)
3 = 3 beeps (1 second each)

Notes:

1. If a mode number that cannot be recognized by the unit is entered, 3 beeps of 0.4 seconds will be heard. Reenter the mode number.
2. If the signal was not received by the sensor, you will not hear a beep or a "double beep" may be heard. Reenter the mode number.

5. Select the setting number.

Press the button to select the setting number. (02: Not available)

Direct the wireless remote controller toward the receiver of the indoor unit and press the button.
→ The sensor-operation indicator will blink and beeps will be heard to indicate the setting number.

Setting number: 1 = 2 beeps (0.4 seconds each)
2 = 2 beeps (0.4 seconds each, repeated twice)
3 = 2 beeps (0.4 seconds each, repeated 3 times)

Notes:

1. If a setting number that cannot be recognized by the unit is entered, the setting will turn back to the original setting.
2. If the signal was not received by the sensor, you will not hear a beep or a "double beep" may be heard. Reenter the setting number.
6. Repeat steps ④ and ⑤ to make an additional setting without changing unit number.
7. Repeat steps ③ to ⑤ to change unit number and make function settings on it.
8. Complete the function settings

Press button.

Do not use the wireless remote controller for 30 seconds after completing the function setting.

11-5-3. PAR-SL101A-E

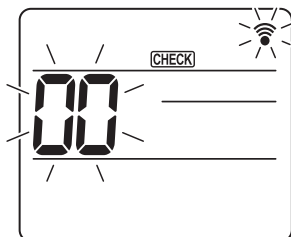


Fig. 1

1. Going to the function select mode
 Press the **[MENU]** button between of 5 seconds.
 (Start this operation from the status of remote controller display turned off.)
 [CHECK] is lit and "00" blinks. (Fig. 1)
 Press the **[↓]** button to set the "50".
 Direct the wireless remote controller toward the receiver of the indoor unit and press the **[SET]** button.

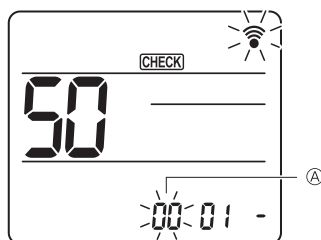


Fig. 2

2. Setting the unit number
 Press the **[↓]** button to set unit number **Ⓐ**. (Fig. 2)
 Direct the wireless remote controller toward the receiver of the indoor unit and press the **[SET]** button.

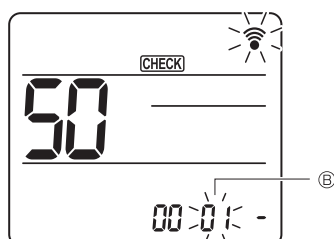


Fig. 3

3. Select a mode
 Press the **[↓]** button to set Mode number **Ⓑ**. (Fig. 3)
 Direct the wireless remote controller toward the receiver of the indoor unit and press the **[SET]** button.
 Current setting number:
 1=1 beep (1 second)
 2=2 beeps (1 second each)
 3=3 beeps (1 second each)

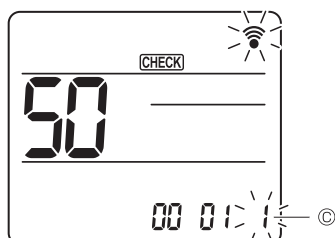


Fig. 4

4. Selecting the setting number
 Use the **[↓]** button to change the Setting number **Ⓒ**. (Fig. 4)
 Direct the wireless remote controller toward the receiver of the indoor unit and press the **[SET]** button.
5. To select multiple functions continuously
 Repeat select **③** and **④** to change multiple function settings continuously.
6. Complete function selection
 Direct the wireless remote controller toward the sensor of the indoor unit and press the **⓪OFF/ON** **[OFF/ON]** button.



Note: Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.

11-6. ERROR HISTORY


1. Select "Service" from the Main menu, and press the [✓] button.



Select "Check" with the [F1] or [F2] button, and press the [✓] button.

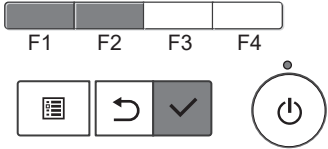
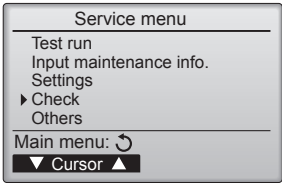


2. Select "Error history" with the [F1] or [F2] button, and press the [✓] button.

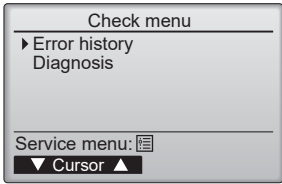

3. 16 error history records will appear.

4 records are shown per page, and the top record on the first page indicates the latest error record.

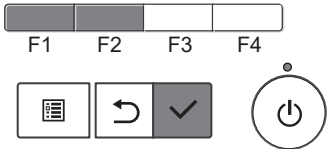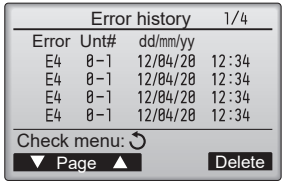

4. Deleting the error history

To delete the error history, press the [F4] button (Delete) on the screen that shows error history.
A confirmation screen will appear asking if you want to delete the error history.





Press the [F4] button (OK) to delete the history.



"Error history deleted" will appear on the screen.

Press the [↶] button to go back to the Check menu screen.

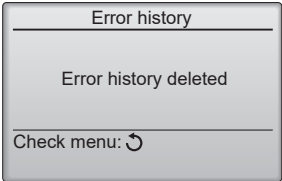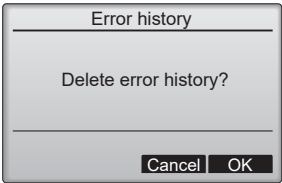

11-7. SELF-DIAGNOSIS



11-7-1. PAR-41MAA

1. Select "Service" from the Main menu, and press the [✓] button.

Select "Check" from the Service menu, and press the [✓] button.

Select "Diagnosis" from the Check menu, and press the [✓] button.



Select "Self check" with the [F1] or [F2] button, and press the [✓] button.

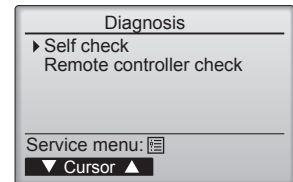


2. Select "Self check" from the Diagnosis menu, and press the [✓] button to view the Self check screen.

With the [F1] or [F2] button, enter the M-NET address, and press the [✓] button.

Check code, unit number, attribute, and indoor unit demand signal ON/OFF status at the contact will appear. "-" will appear if no error history is available.

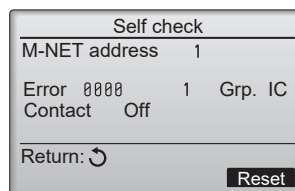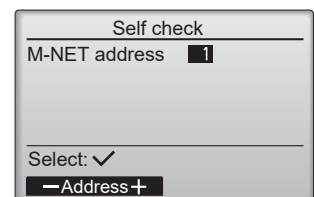



When there is no error history

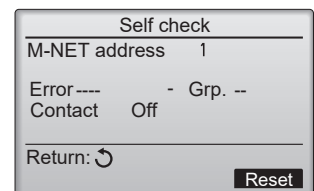

3. Resetting the error history

Press the [F4] button (Reset) on the screen that shows the error history. A confirmation screen will appear asking if you want to delete the error history.


Press the [F4] button (OK) to delete the error history. If deletion fails, "Request rejected" will appear, and "Unit not exist" will appear if indoor units that are correspond to the entered address are not found.

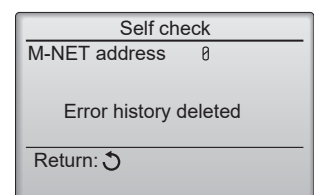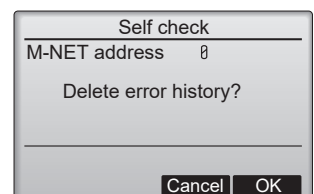

11-7-2. PAR-SL97A-E

When a malfunction occurs to air conditioner, both indoor unit and outdoor unit will stop and operation lamp blinks to inform unusual stop.

<Malfunction-diagnosis method at maintenance service>

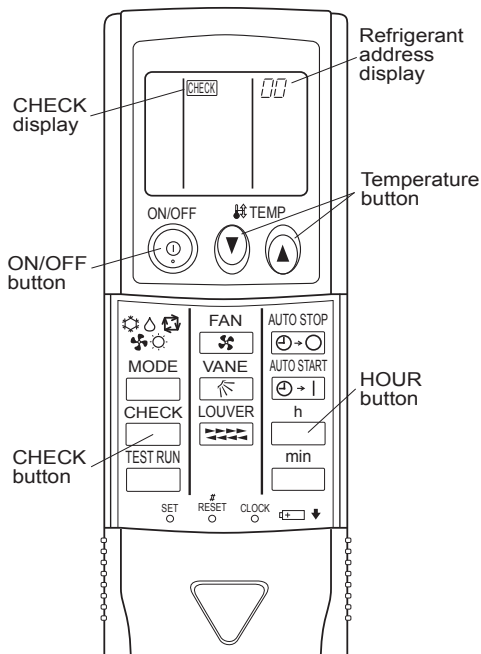


[Procedure]

1. Press the CHECK button twice.
 - "CHECK" lights, and refrigerant address "00" blinks.
 - Check that the remote controller's display has stopped before continuing.
2. Press the TEMP buttons.
 - Select the refrigerant address of the indoor unit for the self-diagnosis.

Note: Set refrigerant address using the outdoor unit's DIP switch (SW1). (For more information, see the outdoor unit installation manual.)
3. Point the remote controller at the sensor on the indoor unit and press the HOUR button.
 - If an air conditioner error occurs, the indoor unit's sensor emits an intermittent buzzer sound, the operation light blinks, and the check code is output.
 - (It takes 3 seconds at most for check code to appear.)
4. Point the remote controller at the sensor on the indoor unit and press the ON/OFF button.
 - The check mode is cancelled.

11-7-3. PAR-SL101A-E

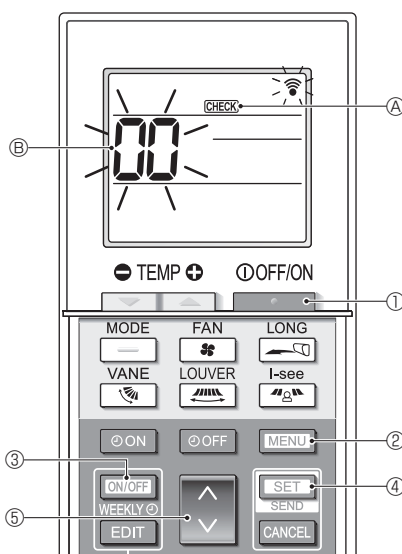

[Procedure]

1. Press the button ① to stop the air conditioner.
 - If the weekly timer is enabled (**WEEKLY** is on), press the button ③ to disable it (**WEEKLY** is off).
2. Press the button ② for 5 seconds.
 - ④ comes on and the unit enters the self-check mode.
3. Press the button ⑤ to select the refrigerant address (M-NET address) ⑥ of the indoor unit for which you want to perform the self-check.
4. Press the button ④.
 - If an error is detected, the check code is indicated by the number of beeps from the indoor unit and the number of blinks of the OPERATION INDICATOR lamp.
5. Press the button ①.
 - ④ and the refrigerant address (M-NET address) ⑥ go off and the self-check is completed.

11-8. REMOTE CONTROLLER CHECK


If operations cannot be completed with the remote controller, diagnose the remote controller with this function.

1. Select "Service" from the Main menu, and press the [✓] button.

Select "Check" from the Service menu, and press the [✓] button.

Select "Diagnosis" from the Check menu, and press the [✓] button.



Select "Remote controller check" with the [F1] or [F2] button, and press the [✓] button.

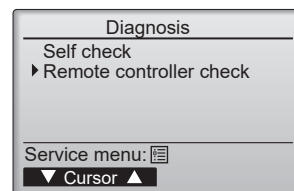

2. Select "Remote controller check" from the Diagnosis menu, and press the [✓] button to start the remote controller check and see the check results.

To cancel the remote controller check and exit the "Remote controller check" menu screen, press the [List] or the [Left Arrow] button.

The remote controller will not reboot itself.

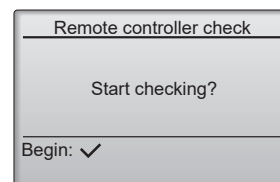


3.
 - OK: No problems are found with the remote controller. Check other parts for problems.
 - E3, 6832: There is noise on the transmission line, or the indoor unit or another remote controller is faulty. Check the transmission line and the other remote controllers.
 - NG (ALL0, ALL1): Send-receive circuit fault. The remote controller needs replacing.
 - ERC: The number of data errors is the discrepancy between the number of bits in the data transmitted from the remote controller and that of the data that was actually transmitted over the transmission line. If data errors are found, check the transmission line for external noise interference.

If the [✓] button is pressed after the remote controller check results are displayed, remote controller check will end, and the remote controller will automatically reboot itself.

Check the remote controller display and see if anything is displayed (including lines). Nothing will appear on the remote controller display if the correct voltage (8.5–12 VDC) is not supplied to the remote controller. If this is the case, check the remote controller wiring and indoor units.

Remote controller check results screen

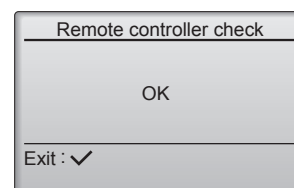

11-9. SPECIAL FUNCTION OPERATION SETTING

<PAR-U02MEDA>


*M-NET remote controller cannot be connected with a refrigerant system which includes branch box.

It is necessary to perform “group settings” and “Interlocked LOSSNAY” at making group settings of different refrigerant systems (multiple outdoor unit).

(A) Group settings: Enter the indoor unit controlled by the remote controller, check the content of entries, and clear entries, etc.


(B) Interlocked LOSSNAY: Used to set the linked operation of a Lossnay unit.

How to display the setup screen

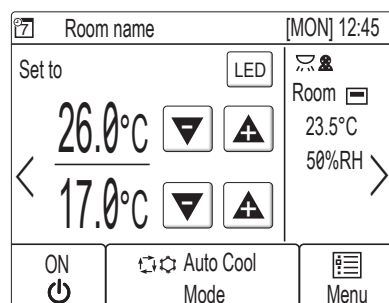


- HOME screen

Touch the [MENU] button.

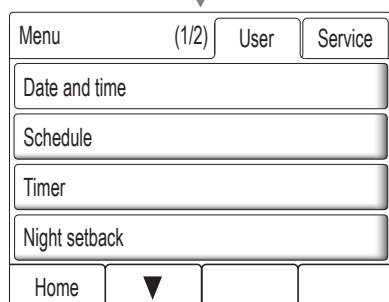


- Menu (User) screen

Touch the [Service] button.

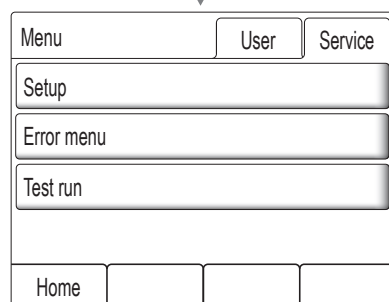

- Menu (Service) screen

Touch the [Setup] button.
Setup screen will appear.

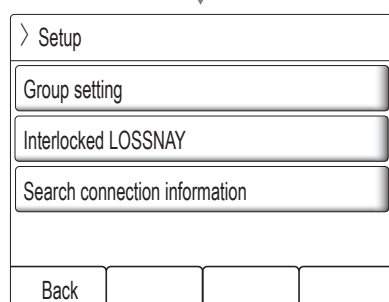

(a) Group setting

Use this screen to register the indoor units and the AHC to be controlled from the controller.

[Group setting]			
IC	Address	▼ 001 ▲	
001 002 003 004	Unit	IC	
005 006 007 008	Function	Set Del	
009 010 011 012			
013 014 015 016			
AHC 201			
Back			

1. Select an indoor unit or an AHC address in the [Address] field.
The number of units that can be registered.
Indoor unit: 16 units maximum
AHC: 1 unit maximum
* AHC cannot be controlled from the controller unless indoor units are registered with the system.
2. Touch the [Set] button to register the address, and [Del] to delete the address.
 - Successful address registration/deletion:
The registered address(es) will appear on the left side of the screen.
Deleted address will not appear on the screen.
 - Error:
"Request denied." or "Is not to be connected" will appear.

(b) Interlocked LOSSNAY

Use this function to interlock the operation of indoor units and LOSSNAY units.

[Interlocked LOSSNAY]			
001 IC 007 IC	Add. 1	▼ 001 ▲	
002 IC 008 IC	Add. 2	▼ 013 ▲	
003 IC 009 IC	Function	Set Conf Del	
004 IC 010 IC			
005 IC 011 IC			
006 IC 012 IC			
Back			

1. To register LOSSNAY units
Select the indoor unit address in the Add. 1 section.
Select the interlocked LOSSNAY address in the Add. 2 section.
Touch the [Set] button to save the setting.
2. To search for an interlocked setting
Touch the [Conf] button to display in the left column the addresses of the units that are interlocked with the unit whose address was set in the Add. 1 section.
3. To delete the interlock settings
After taking Step 2 above, select the address to be deleted in the Add. 2 section, and then touch the [Del] button.

When the setting or deletion is successfully completed, "Completed" will appear below [Function] field on the screen.
If setting or deletion fails, "Request denied" will appear below [Function] field on the screen.

(c) Search connection information

Use this screen to specify a unit and search for the controllers that are connected to the unit.

[Search connection information]			
001 IC	Address	▼ 051 ▲	
002 IC			
003 IC			
004 IC	Function	Conf	
005 IC			
006 IC			
Back			

1. Select an address in the [Address] field.
2. Touch the [Conf] button to search for the interlocked units.
The results will appear in the left column. (When multiple units are found, the addresses that do not fit on the first page will appear on the successive pages.)
 - Search error:
"Request denied." will appear.

After completing the settings, touch the [Back] button on the [Setup] screen. The message "Collecting the information from the air conditioner." will appear, and then the screen will jump to the HOME screen. This signals the completion of the setup process. Access the Service Menu from the HOME screen to make the settings for other items as necessary.

CITY MULTI

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN
