DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

x-MEXT-f-DX x-MEXT-f-DX DF

Direct expansion air conditioners for IT Cooling.



The picture of the unit is indicative and may vary depending on the model

- PERIMETER INSTALLATION
- COMPRESSORS HERMETICON/OFF
- SINGLE OR DOUBLE REFRIGERANT CIRCUIT
- AIR DELIVERY FROM THE BOTTOM OR FROM THE TOP
- PLUG FANS WITH EC ELECTRIC MOTOR
- ELECTRONIC EXPANSION VALVE
- AIR SUCTION UP TO 40°C



Mitsubishi Electric Europe B.V. Italian Branch

Campus, Energy Park Via Energy Park 14, 20871 Vimercate (MB)

GENERAL CHARACTERISTICS 5 INSTALLATION 7 PRODUCT FEATURES AND BENEFITS 8 F-GAS DIRECTIVE 8 IDENTIFICATION 8 STORAGE AND SHIPMENT TEMPERATURE 8 OPERATION LIMITS 9 THE SERIES 10 COMPONENTS OF THE UNIT 11 MAIN COMPONENTS 11 REMOTE CONDENSER 13 STANDARD EQUIPMENT 14 TECHNICAL DATA 15 REFRIGERANT CHARGE 16 DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 ELETRIC DATA 22 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B268 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: B693 - KIT LOW TEMPERATURE 36 ACCE	CERTIFICATIONS	4
PRODUCT FEATURES AND BENEFITS 8 F-GAS DIRECTIVE 8 IDENTIFICATION 8 STORAGE AND SHIPMENT TEMPERATURE 8 OPERATION LIMITS 9 THE SERIES 10 COMPONENTS OF THE UNIT 11 MAIN COMPONENTS 11 MEMOTE CONDENSER 13 STANDARD EQUIPMENT 14 TECHNICAL DATA 15 REFRIGERANT CHARGE 16 DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 ELETRIC DATA 22 MICROPROCESSOR CONTROL SYSTEM 22 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B680 – CLOSING BASEMENT 36 ACCESSORY: B691 - KIT LOW TEMPERATURE 36 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: B691 - LIQUID LINE SOLENOID VALVE 35 ACCESSORY: A547 – COSTANT AIR FLOW 36	GENERAL CHARACTERISTICS	5
F-GAS DIRECTIVE	INSTALLATION	7
IDENTIFICATION	PRODUCT FEATURES AND BENEFITS	8
STORAGE AND SHIPMENT TEMPERATURE 8 OPERATION LIMITS 9 THE SERIES 10 COMPONENTS OF THE UNIT 11 MAIN COMPONENTS 11 REMOTE CONDENSER 13 STANDARD EQUIPMENT 14 TECHNICAL DATA 15 REFRIGERANT CHARGE 16 DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 ELETRIC DATA 22 MICROPROCESSOR CONTROL SYSTEM 26 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B666 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 36 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 36 ACCESSORY: 601 – LIQUID LINE SOLENOID VALVE 35 ACCESSORY: 8448 – CONSTANT AIR FLOW 36 ACCESSORY: 8951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: 8952 - THREE-PHASE CONDENSER POWER SUPPLY 36 <t< td=""><td>F-GAS DIRECTIVE</td><td>8</td></t<>	F-GAS DIRECTIVE	8
OPERATION LIMITS 9 THE SERIES 10 COMPONENTS OF THE UNIT 11 MAIN COMPONENTS 11 REMOTE CONDENSER 13 STANDARD EQUIPMENT 14 TECHNICAL DATA 15 REFRIGERANT CHARGE 16 DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 BLETRIC DATA 22 MICROPROCESSOR CONTROL SYSTEM 26 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 36 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 36 ACCESSORY: 601 - LIQUID LINE SOLENOID VALVE 36 ACCESSORY: 5448 - CONSTANT PRELEVANCE 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - T	IDENTIFICATION	8
THE SERIES. 10 COMPONENTS OF THE UNIT 11 MAIN COMPONENTS 11 REMOTE CONDENSER 13 STANDARD EQUIPMENT 14 TECHNICAL DATA 15 REFRIGERANT CHARGE 16 DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 BLETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B660 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: A548 – CONSTANT PRELEVANCE 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 <t< td=""><td>STORAGE AND SHIPMENT TEMPERATURE</td><td>8</td></t<>	STORAGE AND SHIPMENT TEMPERATURE	8
COMPONENTS OF THE UNIT 11 MAIN COMPONENTS 11 REMOTE CONDENSER 13 STANDARD EQUIPMENT 14 TECHNICAL DATA 15 REFRIGERANT CHARGE 16 DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 BLETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: 601 - LIQUID LINE SOLENOID VALVE 35 ACCESSORY: A547 - COSTANT AIR FLOW 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 - POWER SUPPLY 400/3+N/50 36 ACCESSORY: B793 - NUMBERED WIRINGS + UK REQUESTS 36	OPERATION LIMITS	9
MAIN COMPONENTS 11 REMOTE CONDENSER 13 STANDARD EQUIPMENT 14 TECHNICAL DATA 15 REFRIGERANT CHARGE 16 DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 26 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 BLETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 – KIT LOW TEMPERATURE 35 ACCESSORY: 6691 – LIQUID LINE SOLENOID VALVE 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: A548 – CONSTANT PRELEVANCE 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY: B793 – NUMBERED WIRINGS + UK REQUESTS 36	THE SERIES	10
REMOTE CONDENSER	COMPONENTS OF THE UNIT	11
STANDARD EQUIPMENT 14 TECHNICAL DATA 15 REFRIGERANT CHARGE 16 DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 ELETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B690 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: A548 – CONSTANT PRELEVANCE 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY: B793 – NUMBERED WIRINGS + UK REQUESTS 36	MAIN COMPONENTS	11
TECHNICAL DATA 15 REFRIGERANT CHARGE 16 DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 ELETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: A548 – CONSTANT PRELEVANCE 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50	REMOTE CONDENSER	13
REFRIGERANT CHARGE 16 DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 ELETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B691 – KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: 601 – LIQUID LINE SOLENOID VALVE 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY: B793 – NUMBERED WIRINGS + UK REQUESTS 36	STANDARD EQUIPMENT	14
DUAL FLUID SYSTEM 18 WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 ELETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: A548 – CONSTANT PRELEVANCE 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY 383 – NUMBERED WIRINGS + UK REQUESTS 36	TECHNICAL DATA	15
WATER QUALITY OF THE HYDRAULIC CIRCUITS 18 ANTIFREEZE MIXTURES 20 REFRIGERANT SCHEME 21 ACUSTIC DATA 22 ELETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: 601 – LIQUID LINE SOLENOID VALVE 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY: B793 – NUMBERED WIRINGS + UK REQUESTS 36	REFRIGERANT CHARGE	16
ANTIFREEZE MIXTURES	DUAL FLUID SYSTEM	18
REFRIGERANT SCHEME 21 ACUSTIC DATA 22 ELETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: 601 – LIQUID LINE SOLENOID VALVE 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: A548 – CONSTANT PRELEVANCE 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY 383 – NUMBERED WIRINGS + UK REQUESTS 36	WATER QUALITY OF THE HYDRAULIC CIRCUITS	18
ACUSTIC DATA 22 ELETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: 601 – LIQUID LINE SOLENOID VALVE 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: A548 – CONSTANT PRELEVANCE 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY 383 – NUMBERED WIRINGS + UK REQUESTS 36	ANTIFREEZE MIXTURES	20
ELETRIC DATA 27 MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: 601 – LIQUID LINE SOLENOID VALVE 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: A548 – CONSTANT PRELEVANCE 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY 383 – NUMBERED WIRINGS + UK REQUESTS 36	REFRIGERANT SCHEME	21
MICROPROCESSOR CONTROL SYSTEM 28 ACCESSORIES 29 ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY 33 ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE 35 ACCESSORY: B680 – CLOSING BASEMENT 35 ACCESSORY: B691 - KIT LOW TEMPERATURE 35 ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER 35 ACCESSORY: 601 – LIQUID LINE SOLENOID VALVE 35 ACCESSORY: A547 – COSTANT AIR FLOW 36 ACCESSORY: A548 – CONSTANT PRELEVANCE 36 ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY 36 ACCESSORY: B793 – POWER SUPPLY 400/3+N/50 36 ACCESSORY 383 – NUMBERED WIRINGS + UK REQUESTS 36	ACUSTIC DATA	22
ACCESSORIES	ELETRIC DATA	27
ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY	MICROPROCESSOR CONTROL SYSTEM	28
ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE	ACCESSORIES	29
ACCESSORY: B680 – CLOSING BASEMENT	ACCESSORY: B263 – OVER AIR INTAKE – BOTTOM SUPPLY	33
ACCESSORY: B691 - KIT LOW TEMPERATURE	ACCESSORY: B266 – FRONT AIR DELIVERY – TOP INTAKE	35
ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER	ACCESSORY: B680 – CLOSING BASEMENT	35
ACCESSORY: 601 – LIQUID LINE SOLENOID VALVE	ACCESSORY: B691 - KIT LOW TEMPERATURE	35
ACCESSORY: A547 – COSTANT AIR FLOW	ACCESSORY: B692 - KIT LT+ ADDICTIONAL RECEIVER	35
ACCESSORY: A548 – CONSTANT PRELEVANCE	ACCESSORY: 601 – LIQUID LINE SOLENOID VALVE	35
ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY	ACCESSORY: A547 – COSTANT AIR FLOW	36
ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY	ACCESSORY: A548 - CONSTANT PRELEVANCE	36
ACCESSORY: B793 – POWER SUPPLY 400/3+N/50	ACCESSORY: B951 - SINGLE-PHASE CONDENSER POWER SUPPLY	36
ACCESSORY 383 – NUMBERED WIRINGS + UK REQUESTS36	ACCESSORY: B952 - THREE-PHASE CONDENSER POWER SUPPLY	36
	ACCESSORY: B793 – POWER SUPPLY 400/3+N/50	36
ACCESSORY: A842 – WITH NETWORK ANALYZER36	ACCESSORY 383 – NUMBERED WIRINGS + UK REQUESTS	36
	ACCESSORY: A842 – WITH NETWORK ANALYZER	36



ACCESSORY: 4180 – WITOUT SERIAL CARD	ACCESSORY: P113 – KIT DUAL POWER SUPPLY	
ACCESSORY: 4182 – SERIAL CARD LON	ACCESSORY: 4180 – WITOUT SERIAL CARD	37
ACCESSORY: 4184 – SERIAL CARD BACNET MS/TP RS485	ACCESSORY: 4181 – SERIAL CARD MODBUS	38
ACCESSORY: 4185 – SERIAL CARD BACNET OVER IP	ACCESSORY: 4182 – SERIAL CARD LON	38
ACCESSORY: 6461 - HPC (ONLY DUAL FLUID VERSION)	ACCESSORY: 4184 – SERIAL CARD BACNET MS/TP RS485	38
ACCESSORY: 1441 - KIPLINK + COMPACT KEYBOARD	ACCESSORY: 4185 – SERIAL CARD BACNET OVER IP	38
ACCESSORY: 1442 - KIPLINK + 7 INCH TOUCH SCREEN	ACCESSORY: 6461 - HPC (ONLY DUAL FLUID VERSION)	38
ACCESSORY: 6192 - COMPACT KEYBOARD	ACCESSORY: 1441 - KIPLINK + COMPACT KEYBOARD	39
ACCESSORY: 6196 – KIPLINK	ACCESSORY: 1442 - KIPLINK + 7 INCH TOUCH SCREEN	41
ACCESSORY: 6195 - COMPACT 7 INCH TOUCH SCREEN	ACCESSORY: 6192 - COMPACT KEYBOARD	41
ACCESSORY: C9261063 – REMOTE DISPLAY	ACCESSORY: 6196 – KIPLINK	41
ACCESSORY: P151 – LOWERED DISPLAY PER UNDER	ACCESSORY: 6195 - COMPACT 7 INCH TOUCH SCREEN	41
ACCESSORY: A492 - LEAKEAGE DETECTOR + ADDITIONAL RECEIVER	ACCESSORY: C9261063 – REMOTE DISPLAY	42
ACCESSORY: A501 – CLOOGGED FILTER SENSOR	ACCESSORY: P151 – LOWERED DISPLAY PER UNDER	43
ACCESSORY: A511 - SMOKE SENSOR	ACCESSORY: A492 - LEAKEAGE DETECTOR + ADDITIONAL RECEIVER	43
ACCESSORY: A521— FIRE SENSOR		
ACCESSORY: B811 – AIR FLOW SENSOR	ACCESSORY: A511 - SMOKE SENSOR	43
ACCESSORY: 4503 - FAST RESTART (ULTRACAP)	ACCESSORY: A521- FIRE SENSOR	43
ACCESSORY: 2412 - CONTROL PHASE SEQUENCE + CONTROL TENSION		
ACCESSORY: A381 – KIT CONDENSATE DRAIN PUMP		
ACCESSORY: A812 – WHIT DIRECT FREE COOLING	ACCESSORY: 2412 - CONTROL PHASE SEQUENCE + CONTROL TENSION	44
ACCESSORY: A791 – AIR TEMPERATURE CONTROL ON SUCTION AIR		
ACCESSORY: B803 - 3 WAY VALVE (ONLY DUAL FLUID VERSION)	ACCESSORY: A812 – WHIT DIRECT FREE COOLING	45
ACCESSORY: B807 - 2-WAY VALVE EPIV	ACCESSORY: A791 – AIR TEMPERATURE CONTROL ON SUCTION AIR	45
ACCESSORY: P201 – 2-WAY VALVE	ACCESSORY: B803 - 3 WAY VALVE (ONLY DUAL FLUID VERSION)	45
ACCESSORY: A431 – ELECTRIC HEATERS	ACCESSORY: B807 - 2-WAY VALVE EPIV	46
ACCESSORY: P051- DEUMIDIFICATION FUNCTION	ACCESSORY: P201 - 2-WAY VALVE	47
ACCESSORY: 4303 - HUMIDIFIER VAP. 8 KG/H UM08		
ACCESSORY: 4305 - HUMIDIFIER VAP. 15 KG/H UM15	ACCESSORY: P051- DEUMIDIFICATION FUNCTION	48
ACCESSORY: P161 - T/RH PROBE AIR SUCTION	ACCESSORY: 4303 - HUMIDIFIER VAP. 8 KG/H UM08	48
ACCESSORY: P071 - T/RH REMOTE PROBE (1 PROBE)	ACCESSORY: 4305 - HUMIDIFIER VAP. 15 KG/H UM15	48
ACCESSORY: P072 - T/RH REMOTE PROBE (2 PROBES)	ACCESSORY: P161 - T/RH PROBE AIR SUCTION	48
ACCESSORY: P073 - T/RH REMOTE PROBE (3 PROBES)50	ACCESSORY: P071 - T/RH REMOTE PROBE (1 PROBE)	49
	ACCESSORY: P072 - T/RH REMOTE PROBE (2 PROBES)	50
ACCESSORY: P074 - T/RH REMOTE PROBE (4 PROBES)50	ACCESSORY: P073 - T/RH REMOTE PROBE (3 PROBES)	50
	ACCESSORY: P074 - T/RH REMOTE PROBE (4 PROBES)	50



ACCESSORY: P080 – WITHOUT AIR FILTER	50
ACCESSORY: P084 - EPM10 50% AIR FILTER	50
ACCESSORY: P101 – KIT ANTI-SEISMIC ANCHOR	50
ACCESSORY: PLENUM	51
OPTIONAL ACCESSORY: A531 - DAMPER ON-OFF	52
OPTIONAL ACCESSORY: B981 - SUPPORTING FRAME H 350 – 500 MM	58
OPTIONAL ACCESSORY: B982 - SUPPORTING FRAME H 500 - 750 MM	59
OPTIONAL ACCESSORY: B983 - SUPPORTING FRAME H 750 - 1000 MM	59
OPTIONAL ACCESSORY: B991 – INSULATION	59
UNIT DRAWING	60
OVERHEAD FLOOR DRILLING FOR MACHINES UNDER	61
EXAMPLES OF MACHINE NOISE CALCULATION	67
AIR FILTER EXTRACTION	69
SHIPMENT: DIMENSIONS	71
SHIPMENT: WEIGHT	72
ACCESSORY PACKAGING DIMENSIONS AND SHIPMENT WEIGHTS	72

Liability disclaime

This publication has been prepared for information purposes only and does not constitute a binding offer by Mitsubishi Electric. Mitsubishi Electric has compiled the contents of this publication to the best of its knowledge. The information contained in this publication is subject to change without notice. Mitsubishi Electric expressly disclaims any liability for any direct or indirect damage, in the broadest sense, arising out of or in connection with the use and/or interpretation of this publication. All contents are copyrighted by Mitsubishi Electric.





ISO 9001 CERTIFICATIONQuality Management System



ISO 14001 CERTIFICATIONEnvironmental Management System



BS OHSAS 18001 CERTIFICATION
Occupational Health and Safety Management System

PRODUCT CERTIFICATIONS BY COUNTRY



CE MARKING

GENERAL CHARACTERISTICS

x-MEXT DX / DX DF

Data Book

DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02


INTRODUCTION

The direct expansion perimeter unit has been designed following a path aimed at satisfying specific requirements such as ease of installation, total front accessibility, and especially performance. These results were made possible by MEHITS' experience of more than 50 years in the field of IT Cooling.

This solution is ideal for cooling IT equipment with small to medium thermal loads (< 1000 kW), typically Enterprise, Edge and Colocation Datacenters but also battery rooms and UPSs. The entire range offers a wealth of configuration possibilities thanks to the large number of ACCESSORIES and versions available.

The available versions are shown here. For ease of reference, 2 Databooks have been created comprising two groups

DX / DX DF

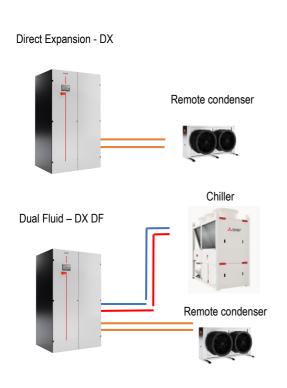


DW / DW FC / DW DF

Direct Expansion, water cooled - DW



Direct Expansion, water cooled + FC coil - DW FC



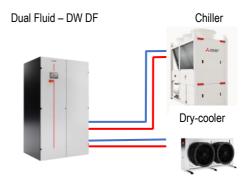



GENERAL CHARACTERISTICS

x-MEXT DX / DX DF

Data Book
DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02


FULL INVERTER Air conditioners for IT Cooling

- · Direct expansion, air-cooled
- · Prepared for remote air cooled condenser coupling;
- Compressor ON/OFF
- Plug fans of proprietary design with external rotor EC electric motors;
- Single or dual cooling circuit.
- Dual Fluid version available: the unit is equipped with two separate coils, one chilled water and one direct expansion.

The series, for perimeter installation, consists of 14 models available in the following versions:

- Air delivery upwards (Over) with air intake from the front through a honeycomb grille and air delivery upwards.
- Air supply downwards (Under) with air intake from the top of the machine and air supply downwards.

Cooling capacity: 34 ÷ 136 kW

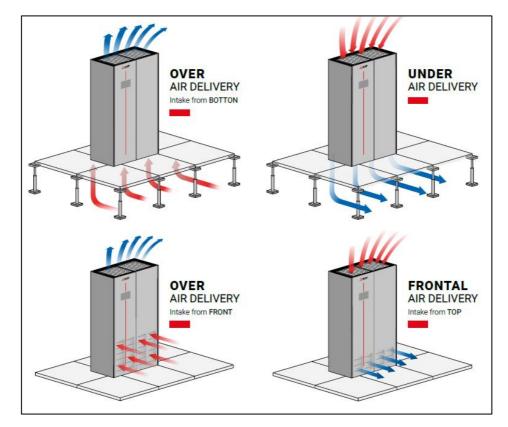

The machines are designed for internal installation. Construction solutions and internal layout allow high application flexibility and front access to the main components for inspection and routine maintenance.

The units require refrigerant gas charging, electrical and hydraulic connections. End-of-line test consisting of a functional test with reading and monitoring of operating parameters, alarm simulation, visual inspection.



INSTALLATION



UNDER AIR SUPPLY (U - UNDER)

Application suitable for server racks with ventilated front and rear doors.

The typical installation is a perimeter installation, the units are placed along the walls of the room.

Air distribution is from below, via the plenum formed by the floor of the building and the raised floor.

This solution is normally used in hi-tech air conditioning and is particularly suitable when the thermal load is distributed evenly in all areas of the room. The air is distributed by means of special diffusion tiles positioned in front of the row of racks. Hot air is expelled to the rear of the racks. For optimal installation, it is advisable to provide compartmentalisation of the cold aisle.



OVER AIR SUPPLY (O - OVER)

Application suitable for server racks with ventilated front and rear doors. The typical installation is a perimeter installation, the units are placed along the walls of the room. Air distribution is from the top of the unit directly into the room or via plenum or ducting. It is possible, through the application of a plenum with grilles on the supply air of the unit, to direct the flow through the adjustable fins of the grilles.

The system is normally applied in installations where it is not possible to provide a raised floor.

On request, in order to limit the acoustic dissipation in the environment, it is possible to supply a closing panel on the bottom, made of hot-galvanised sheet steel insulated with a special sound-absorbing material. This option is particularly suitable for installations on special floors (raised floors, wooden floors, etc.).

The basement closing panel is supplied assembled inside the basement and does not change the dimensions of the unit.



GENERAL CHARACTERISTICS

x-MEXT DX / DX DF

Data Book

DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

PRODUCT FEATURES AND BENEFITS

- Different compressors per circuit, with single or double compressor ON/OFF, guarantee maximum energy efficiency in all working conditions
- New Plug Fans of proprietary design with EC electric motors and composite material impeller (with recycled polymer base) ensuring reduced power consumption
- New maintenance-free fan motors;
- Fully modulating, able to follow the load increase of the data centre;
- Improved control software with advanced logic;
- Single or dual cooling circuit;
- Intake air temperature up to 40°C.

F-GAS DIRECTIVE

The units highlighted in this publication contain the fluorinated greenhouse gas <HFC R410A [GWP100 2088]>.

MODEL IDENTIFICATION

Air conditioners for IT Cooling Model: x-MEXT-f-G02-DX-O-029

x-MEXT Serie

-f- Compressor type

i = inverter
f = fixed speed

-G02- Refrigerant R410A

-DX- Version

DX = direct expansion

DF = Dual Fluid: direct expansion + chilled water coil

DW = direct expansion, water cooled

DW FC = direct expansion + FC coil, water cooled

DW DF = Dual Fluid: direct expansion + chilled water coil, water cooled

-O- Air supply


O = over air supply U = under air supply

-029- Model / Cooling capacity (kW)

TRANSPORT AND STORAGE TEMPERATURE

During transport and if the machine is not installed on receipt, place it in its packaging in a closed, dry and sun-protected environment at a temperature between -30°C and 45°C with no surface condensation.



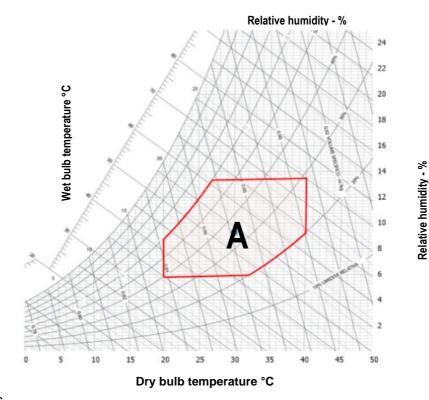

ROOM AIR CONDITIONS

Room air temperature:

12,5°C Minimum temperature with wet bulb.
24,5°C Maximum temperature with wet bulb.
20°C Minimum temperature with dry bulb.
40°C Maximum temperature with dry bulb.

AREA "A". Unit operating envelope.

Room air humidity:

20%UR Minimum relative humidity. 60%UR Maximum relative humidity.

EXTERNAL AMBIENT AIR TEMPERATURE

45°C - 50°C Depending on combination with external condensing unit

-20°C Minimum ambient air temperature

CHILLED WATER TEMPERATURE (Dual Fluid version)

6°C - 25 °C Water inlet temperature range

 Δ T 3°C Minimum temperature difference between chilled water inlet and outlet Δ T 10°C Maximum temperature difference between chilled water inlet and outlet

HYDRAULIC CIRCUIT (Dual Fluid system)

ΔP 5-150 kPa Allowed pressure drop on hydraulic circuit

16 bar Maximum operating pressure of the hydraulic circuit

All values are to be considered as indicative.

Operating temperatures are influenced by a number of variables such as:

- Unit operating conditions;
- Refrigeration load of the data centre;
- Microprocessor control settings.


POWER SUPPLY


± 10% Maximum supply voltage tolerance (V). ± 2% Maximum unbalance between phases.



UNDER (M - L - XL)




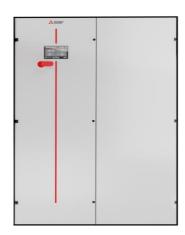

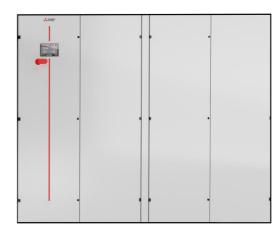

OVER (M - L - XL)



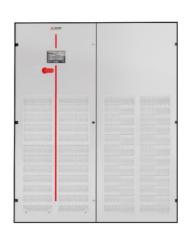



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

MAIN COMPONENTS









FRAMEWORK

- The structure is designed to ensure complete frontal accessibility of all components requiring adjustment and routine maintenance
- Internal sheet steel panelling with protective surface treatment according to UNI ISO 9227/ASTMB117 and ISO 7253.
- Front aesthetic panels colour RAL 9006 with wrinkled finish, hinged with quick release system to simplify removal.
- Side and rear aesthetic panels colour RAL 7016 with wrinkled finish, fully removable.
- Panelling insulated internally with polyurethane foam mat
- Air flow OVER version:
 - Air intake from the front through honeycomb grille and air flow upwards
 - Air intake from the bottom base and air discharge to the top
- Air flow UNDER version
 - Air intake from the top and air supply downwards.
 - Air intake from above and air discharge to the front with basement closure
- Containment compartment for electrical panel on front side for direct access to adjustment and control components;

FILTER SECTION

- Air filters with 60% COARSE efficiency (according to ISO EN 16890), with synthetic fibre filter media for high aeraulic efficiency.
- Access to air filters:

OVER version

- for all machines front access

UNDER version

- for all machines filter extraction is from the top
- Dirty filter sensor for signalling via air-side differential pressure switch.

SECTION ON/OFF COMPRESSOR

- Single or double on/off compressor for each refrigerant circuit ON/OFF compressor features:
 - ON/OFF scroll compressor with spiral profile optimised for R410A refrigerant.
 - Three-phase 2-pole electric motor with direct starting.

FOR ALL COMPRESSORS:

- Crankcase heater for each compressor
- Anti-vibration rubber mounts

FAN SECTION

- The fan section is contained within the machine and comprises:
- Centrifugal fans with backward curved blades of proprietary design, without scroll (Plug-Fan), directly coupled to external rotor electric motor.
- Impeller made of composite material with 100% recycled polymer base.
- Brushless type EC synchronous electric motor with integrated electronic commutation system with continuous speed variation. Motor speed regulation is achieved via the "EC" (Electronic Commutation) system, which controls the motor based on a signal from the microprocessor control.
- Fan control via ModBus. In the event of a fault, the control stops the fan concerned, indicating the type of fault. A machine with more than one fan is not stopped.
- Adjustable head.







M and L size units:

- All-aluminium micro-channel evaporator, a solution that allows the refrigerant charge in the circuit to be kept to a minimum and reduces the pressure drop on the air side of the machine, thus increasing the overall efficiency of the unit
- Peraluman coil support frame with integrated filter support
- Peraluman condensate water collector with flexible PVC drain.
- Intake and supply air temperature probes for regulating and monitoring unit operation.
- Flood sensor (with positioning on the room floor) for alarm indication in the event of water presence.

XL size units:

- Finned pack heat exchanger with copper tubes and high-efficiency aluminium fins, specifically developed to ensure a high heat exchange coefficient and low pressure drops.
- Filter support frame upstream of the evaporator with integrated filter support
- Peraluman condensate water collector with flexible PVC drain.
- Intake and supply air temperature probes for regulating and monitoring unit operation.
- Flood sensor (with positioning on the room floor) for alarm indication in the event of water presence.




- 4-row water cooling coil with copper tubes, aluminium finning and hot-dip galvanised sheet metal frame.
- Motorised 2-way valve with 0-10 VDC control and emergency manual override
- Temperature probe on water inlet
- Copper water pipes with anti-condensation insulation

REFRIGERANT CIRCUIT

The air conditioner is supplied with a nitrogen sealing charge.

Components for each cooling circuit:

- Electronic expansion valve. The valve enables high system performance and efficiency thanks to a precise response to temperature and pressure variations.
- Liquid and moisture indicator.
- Filter drier and deacidifier on the liquid line.
- Pressure transducers with indication, control and protection function on the high and low pressure lines.
- Safety pressure switch with manual reset on the high pressure line.
- Liquid receiver
- Oil separator at compressor outlet
- Safety valve on oil separator and liquid receiver
- Copper refrigerant piping with anti-condensation insulation on suction line.
- Lubricating oil charge
- Taps on gas delivery and liquid return for connection to remote air condenser.
- Proportional 0÷10V signal for remote air condenser condensation control system.
- Condensation control with continuous variation of remote condenser fan speed for operation at outside temperatures down to -20°C.

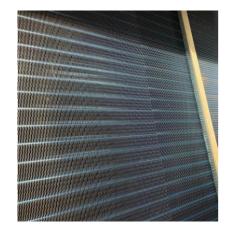





ELECTRICAL PANEL

In accordance with EN60204-1, suitable for indoor installation, complete with

- General lock-door disconnector on front panel;
- Magnetothermal protection switches for compressors and fans.
- Remote control switches for compressor ON/OFF, heating elements and humidifier (when optional). BLDC inverter compressors and treatment fans with EC electric motor do not have contactors.
- Transformer for powering auxiliary circuits and microprocessor.
- Numbered electrical cables.
- Terminal block for:

OUTPUTS

- Voltage-free deviation contact for general alarm 1,2.
- Voltage-free contact for fan system status signalling.
- Voltage-free contact smoke/fire sensor (sensors are accessory)
 INPUTS
- Remote enabling.
- Supply voltage: 400/3/50.

CONTROL SISTEM

Microprocessor for monitoring the operating states of the unit.

- The system includes:
- Integrated clock for displaying/storing date and time of alarms;
- Internal memory for recording events that have occurred;
- Provision for housing additional connectivity board: MODBUS, LON, BACNET MS/TP RS485, BACNET OVER IP. Electronic boards are accessory;
- Main component operating hours counter;
- Flash" memory for data storage in the event of power failure;
- Menu-driven management with password protection;
- Demand Limit function (only for units with double refrigerant circuit);
- LAN connection (max 15 units).

REMOTE CONDENSER



Peraluman aluminium alloy remote air condensers with microchannel condenser coil:

- with AC axial fan and standard acoustic enclosure MEGR-MC-A
- with AC axial fan and low-noise acoustic enclosure MEGR-MC-SL-A
- · with EC axial fan and standard acoustic enclosure MEGR-MC-E
- · with EC axial fan and low-noise acoustic enclosure MEGR-MC-SL-E

Remote air cooled condensers with copper tubes and aluminium fins:

- with AC axial fan and standard acoustic enclosure MEGR-TF-A
- with AC axial fan and low-noise acoustic enclosure MEGR-TF-SL-A
- · with EC axial fan and standard acoustic enclosure MEGR-TF-E
- with EC axial fan and low-noise acoustic enclosure MEGR-TF-SL-E



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

STANDARD EQUIPMENT



ELECTRONIC EXPANSION VALVE

The electronic expansion valve serves to precisely control overheating under various environmental conditions and is regulated by the controller.

6192 – COMPACT KEYBOARD



The unit is equipped with the controller connected to a 6-button keyboard and graphic display on which all information is displayed in English or with easily identifiable symbols.

A491 - FLOOD SENSOR



The system includes an electronic relay installed in the electrical panel of the machine and a water detector.

The electrical connections for the probe and the alarm contact are present in the machine's terminal board.

Sensor is supplied to be connected and installed at customer care.

B670 - UPPER PROTECTION GRILLE

In the OVER units the top protective grille is provided, it is possible to request that the grille be removed (combination with plenum/ducting).

A501 - CLOGGED FILTER SENSOR

The system includes a differential pressure switch installed in the electrical panel or in the front of the indoor unit and the plastic hoses for the relief of the pressure upstream and downstream the air filters.

Control range: 0.3 ... 4.0 mbar (30 ... 400 Pa) Differential for intervention: 0.15 mbar (15 Pa)



B804 2 WAY VALVE 0/10V - (DX DF VERSION)

The water flow control in the finned coil is carried out by a 2-way modulating ball valve of the equipercentage type with characterisation disc.



TECHNICAL DATA

x-MEXT DX / DX DF

Data Book

DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

TECHNICAL DATA - UNDER / OVER version

Air supply (1)		U/O						
MODEL		035	038	042	047	048	054	061
FRAME		M	M	M	M	L	L	L
COOLING CAPACITY (2)								
Total	[kW]	34,6	38,4	42,3	48,0	48,1	54,3	61,6
Sensible	[kW]	34,6	38,4	42,3	48,0	48,1	54,3	61,6
SHR (3)		1	1	1	1	1	1	1
Total power input (Comp. + Fans.)	[kW]	8,13	9,30	10,70	12,70	10,50	12,30	14,60
"EC" SUPPLY FANS	[n]	1	1	1	1	2	2	2
Air flow	[m ³ /h]	8000	9000	10000	11000	13000	14000	16000
Nominal external static pressure	[Pa]	20	20	20	20	20	20	20
Power input (4)	[kW]	0,78	1,04	1,40	1,84	1,58	1,87	2,69
COMPRESSOR		Scroll						
BLDC compressor	[n]	0	0	0	0	0	0	0
ON/OFF compressor	[n]	1	1	1	1	1	1	2
Cooling capacity control		ON/OFF						
Compressor power input	[kW]	7,35	8,26	9,28	10,90	8,95	11,90	14,10
AIR FILTERS	[n]	2	2	2	2	2	2	2
Efficiency (ISO EN 16890)	COARSE	60%	60%	60%	60%	60%	60%	60%
GAS circuits	[n]	1	1	1	1	1	1	1
POWER SUPPLY	V/Ph/Hz	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50
ENERGY EFFICIENCY INDEX (2)								
EER - Energy Efficiency Ratio (5)	[kW/kW]	4,26	4,13	3,95	3,78	4,58	4,41	4,22
DIMENSIONS								
Length	[mm]	1142	1142	1142	1142	1600	1600	1600
Width	[mm]	885	885	885	885	885	885	885
Height	[mm]	1980	1980	1980	1980	1980	1980	1980
NET WEIGHT Over	[kg]	370	384	386	388	485	486	520
NET WEIGHT Under	[kg]	378	392	395	396	502	503	537
REFRIGERANT CONNECTIONS								
Gas supply	[mm Ø]	18	18	22	22	22	22	28
Liquid return	[mm Ø]	16	16	18	18	18	18	18
HYDRAULIC CONNECTIONS								
CONDENSATE DISCHARGE								
Rubber pipe – internal diameter	[mm Ø]	19	19	19	19	19	19	19

THE COOLING CAPACITY DOES NOT CONSIDER THE SUPPLY FAN MOTOR THERMAL LOAD

- 1. U = Under, Downflof / O = Over, Upflow
- 2. Gross value. Parameters referred to entering air at 30°C 35% RH; condensing temperature 45°C; ESP=20Pa.
- 3. SHR = Sensible cooling capacity / Total cooling capacity
- 4. Corresponding to the nominal external static pressure.
- 5. The Energy Efficiency Index does not consider the remote air-cooled condenser.

The units highlighted in this publication contain <HFC R410A [GWP100 2088]> fluorinated greenhouse gas.

NOTE

Below 30% of cooling capacity, the inverter compressor enters the "cycling" area in which the compressor operates with ON / OFF cycles below the minimum modulation frequency (operation only for short periods). SELECT THE UNIT IN THE MODULATION FIELD.



TECHNICAL DATA

x-MEXT DX / DX DF

Data Book

DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

Air supply (1) MODEL		U / O 070	U / O 075	U / O 076	U / O 085	U / O 098	U / O 125	U / O 136
FRAME		L	L	XL	XL	XL	XL	XL
COOLING CAPACITY (2)		_						
Total	[kW]	68,9	74,7	76,1	85,5	98,7	126	137
Sensible	[kW]	68,9	74,7	76,1	85,5	98,7	126	137
SHR (3)		1	1	1	1	1	1	1
Total power input (Comp. + Fans.)	[kW	17,3	19,7	17,5	20,5	24,8	34,2	37,9
"EC" SUPPLY FANS	[n]	2	2	3	3	3	3	3
Air flow	[m ³ /h]	17000	18000	17000	20000	23000	27000	27000
Nominal external static pressure	[Pa]	20	20	20	20	20	20	20
Power input (4)	[kW]	3,24	3,84	1,63	2,51	3,81	6,07	6,16
COMPRESSOR		Scroll						
BLDC compressor	[n]	0	0	0	0	0	0	0
ON/OFF compressor	[n]	2	2	2	2	2	4	4
Cooling capacity control		ON/OFF						
Compressor power input	[kW]	14,1	15,8	15,9	18,0	21,0	28,2	31,7
AIR FILTERS	[n]	2	2	2	2	2	2	2
Efficiency (ISO EN 16890)	COARSE	60%	60%	60%	60%	60%	60%	60%
GAS circuits	[n]	1	1	1	1	1	2	2
POWER SUPPLY	V/Ph/Hz	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50	400/3/50
ENERGY EFFICIENCY INDEX (2)								
EER - Energy Efficiency Ratio (5)	[kW/kW]	3,98	3,79	4,35	4,17	3,98	3,68	3,61
DIMENSIONS								
Length	[mm]	1600	1600	2550	2550	2550	2550	2550
Width	[mm]	885	885	885	885	885	885	885
Height	[mm]	1980	1980	1980	1980	1980	1980	1980
NET WEIGHT Over	[kg]	520	545	829	834	836	943	998
NET WEIGHT Under	[kg]	537	561	870	875	877	984	1039
REFRIGERANT CONNECTIONS								
gas supply	[mm Ø]	28	28	2 x 18	2 x 22	2 x 22	2 x 28	2 x 28
Liquid return	[mm Ø]	18	18	2 x 16	2 x 18	2 x 18	2 x 18	2 x 18
HYDRAULIC CONNECTIONS								
CONDENSATE DISCHARGE								
Rubber pipe – internal diameter	[mm Ø]	19	19	19	19	19	19	19

THE COOLING CAPACITY DOES NOT CONSIDER THE SUPPLY FAN MOTOR THERMAL LOAD

- 1. U = Under, Downflof / O = Over, Upflow
- 2. Gross value. Parameters referred to entering air at 30°C 35% RH; condensing temperature 45°C; ESP=20Pa.
- 3. SHR = Sensible cooling capacity / Total cooling capacity
- 4. Corresponding to the nominal external static pressure.
- 5. The Energy Efficiency Index does not consider the remote air-cooled condenser.

The units highlighted in this publication contain <HFC R410A [GWP100 2088]> fluorinated greenhouse gas.

NOTE

Below 30% of cooling capacity, the inverter compressor enters the "cycling" area in which the compressor operates with ON / OFF cycles below the minimum modulation frequency (operation only for short periods). SELECT THE UNIT IN THE MODULATION FIELD.



REFRIGERANT CHARGE

The air conditioner is supplied with a minimum R410A refrigerant charge. **Refrigerant must be charged.** The following table shows the refrigerant charge that must be introduced for the air conditioner only. Remote condenser, connections pipes and optional are excluded.

Air supply (1)		U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O
MODEL		035	038	042	047	048	054	061	070	075	076	085	98	125	136
FRAME		M	M	М	М	L	L	L	L	L	XL	XL	XL	XL	XL
REFRIGERANT								R41	I0A						
Gas circuits x Refrigerant charge (2)	n x kg	1 x 5,5	1 x 6	1 x 7,1	1 x 7,1	1 x 7,2	1 x 7,2	1 x 8,9	1 x 8,8	1 x 10	2 x 8	2 x 8,1	2 x 8,1	2 x 9,7	2 x 10,9
HFC R410A - F Gas - CO ₂ equivalent	t	11,5	12,5	14,8	14,8	15	15	18,6	18,4	20,9	33,4	33,8	33,8	40,5	45,5

^{1.} U = Under, downflow / O = Over, upflow

For air conditioners with double refrigerant circuit is indicated the number of circuits x the charge of a single circuit.


PRESSURE RELIEF VALVE

The pressure relief valve of the refrigerant circuit is installed in the machines when required by Directive 2014/68/EU. The valve is installed on liquid receiver and oil separator of each refrigerant circuit of the machine with the purpose to protect the circuit from overpressure.

It is up to the installer to check whether the system complies with the 2014/68 / EU standard regarding the installation of the pressure relief valve.

By plant we mean the complete system that includes the internal machine, the remote condenser and the connecting pipes

	Pressure relief valve on the evaporator exit	Pressure relief valve on liquid receiver	Possible pressure relief valve in addition (by the installer)
Model	[bar]	[bar]	[bar]
35	29,5	45	45
38	29,5	45	45
42	29,5	45	45
47	29,5	45	45
48	29,5	45	45
54	29,5	45	45
61	29,5	45	45
70	29,5	45	45
75	29,5	45	45
76	29,5	45	45
85	29,5	45	45
98	29,5	45	45
125	29,5	45	45
136	29,5	45	45

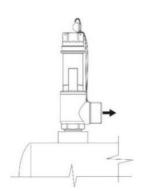

Exhaust flow CONNECTION Ø 3/4" G - M

^{2.} Refrigerant charge required for the air conditioner only operation. Remote condenser, connections pipes and optional are excluded.

RECOMMENDED REFRIGERANT LINES

Diameter of the recommended refrigerant lines for connection to MEHITS S.p.A. air conditioners and referred to "EQUIVALENT LENGHT".

Please always refer to the "INSTALLATION DIAGRAM" to properly select all necessary components

Verify the need to use pressure limiting devices (safety valves) where not already provided for by Directive 2014/68 / EU.

Nominal diameter: Refrigerant connection of the indoor unit. In some cases, the diameter of the refrigerant lines may not correspond with the nominal diameter. This is completely normal. It is enough to provide a reduction fitting to adjust the diameter.

PIPE DIAMETER

SI	Ø [mm]	16	18	22	28
thickness [mm]		1	1	1	1,5
IMPERIAL	Ø [inches]	5/8"	3/4"	7/8"	1 1/8"
IWPERIAL	thickness [mm]	1	1	1	1,25

				Equivalent lenght [m]													
MODELLO		P_nom [kW]	Ø Nominal [mm]	5													
035	Gas supply	34,64	18			Ø 18 n	nm						Ø 22	mm			
033	Liquid return	34,04	16			Ø 16 n	nm			Ç	ð 18 mr	n			Ø 22 mm		
038	Gas supply	38,43	18		Ø1	8 mm						Ø	22 mm	1			
030	Liquid return	30,43	16	Ø 16 mm						Ø 18	3 mm				Ø 22 mm		
042	Gas supply	42,33	22					Ø 2	22 mm						Ø 28 mm		
042	Liquid return	42,33	18				Ø 18 n	nm						Ø 22	mm		
047	Gas supply	47,96	22				Ø	22 mm						Q	9 28 mm		
047	Liquid return	47,30	18			Ø 1	18 mm						Q	7 22 mm	1		
048	Gas supply	48,13	22				Ø	22 mm						Q	9 28 mm		
040	Liquid return	40,13	18			Ø 1	18 mm						Q	7 22 mm	1		
054	Gas supply	54,35	22			Ø 2	22 mm						Q	7 28 mm	1		
004	Liquid return	34,33	18			Ø 18 n				Ø 22 mm							
061	Gas supply	61,55	22			Ø2	22 mm			Ø 28 mm							
001	Liquid return	01,55	18		Ø1	8 mm						Ø	22 mm	ı			
070	Gas supply	70,39	28		Ø2	2 mm				Ø 28 mm							
070	Liquid return	70,53	18	Ç	Ø 18 m	ım				Ø 22	2 mm				Ø 28 mm		
075	Gas supply	75,79	28		Ø2	2 mm						Ø	28 mm	1			
075	Liquid return	73,73	18	Ç	Ø 18 m	ım			Q	ð 22 mr	n				Ø 28 mm		
076	Gas supply	76,09	2x18		Ø1	8 mm						Ø	22 mm	1			
070	Liquid return	70,03	2x 16			Ø 16 n	nm			Ø 18	3 mm				Ø 22 mm		
085	Gas supply	85,51	2x 22					Ø 2	22 mm						Ø 28 mm		
003	Liquid return	03,31	2x 18				Ø 18 n	nm						Ø 22	mm		
098	Gas supply	98,69	2x 22	Ø 22 mm											9 28 mm		
030	Liquid return	30,03	2x 18	Ø 18 mm									Q	7 22 mm	1		
125	Gas supply	125.7	2x 28	Ø 22 mm							Ø	28 mm	1				
123	Liquid return	120,1	2x 18	Ø 18 mm					Ø 22	2 mm				Ø 28 mm			
136	Gas supply	136	2x 28	Ø 22 mm Ø 28 mm													
130	Liquid return	100	2x 18	(Ø 18 m	ım			Q	ð 22 mr	n				Ø 28 mm		

For equivalent lengths over 330ft, please contact the Manufacturer's Sales Office.




Apply the diagram to any refrigerant circuit of the machine


Difference in height between the machines in absolute value.


Maximum equivalent length of the connecting pipes: 100m

LEGENDA

- Air conditioner
- 2. Remote air-cooled condenser
- 3. Gas supply line
- 4. Liquid return line
- 5. Trap. Foresee a trap every 5m of the rising pipe
- Additional liquid receiver, external to the machine – By the Installer.
 It is suggested for:
- Plants with refrigerant lines with an equivalent length of more than 25 meters
- Systems with refrigerant lines of any length and operating at outdoor temperatures below 0°C.
- Solenoid valve for liquid line. Optional accessory of the machine suggested for plants with refrigerant pipe longer than 10m.
- 8. Check valve By the Installer. The valve must be installed on the liquid line close the condenser. The valve prevents the return of liquid in the condenser, particularly in the case of plant shutdown during the winter season.

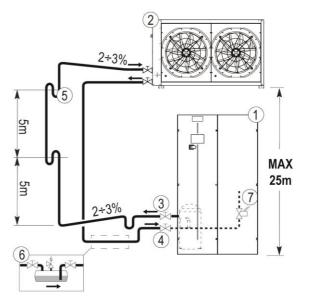

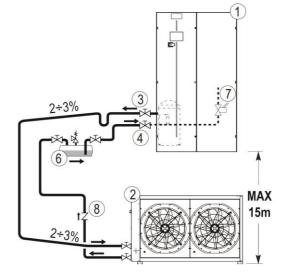

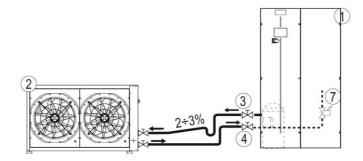

WARNING

It is necessary to provide the refrigerant charge for the connection pipes and for the remote air-cooled condenser


Charge refrigerant in the suitable quantity and lubricant oil in 10% ratio of charged refrigerant. Lubricant oil must be the same type as the charged one as shown on the compressor plate.



DUAL FLUID SYSTEM

The DUAL FLUID system allows for a system with two separate cooling sources:

- Chilled water battery;
- Direct expansion coil;

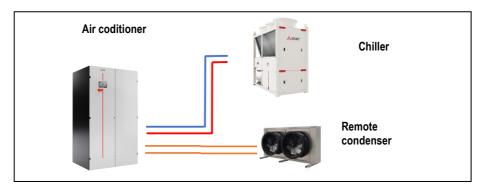

The microprocessor control automatically manages the system, activating the most convenient cooling circuit according to the set parameters. This system allows many system problems to be solved simply and in a small space, including:

- System supplied with well water in reserve to the main cooling circuit.
- Dual supply system with two independent sources. This solution is used when redundancy of the cooling system must be guaranteed. Temperature control is carried out with the same logic as the main coil.

TECHICANL DATA CHILLED WATER COIL

AIR SUPPLY (1)		U/O											
MODEL		035	038	042	047	048	054	061	070	075	076	85	98
FRAME		M	M	M	M	L	L	L	L	L	XL	XL	XL
COOLING CAPACITY (2)													
Total	kW	36,2	39,8	43,2	46,1	57,0	60,5	66,8	68,6	72,6	80,8	90,9	101
Sensible	kW	36,2	39,8	43,2	46,1	57,0	60,5	66,8	68,6	72,6	80,8	90,9	101
SHR (3)		1,00	1,00	1,00	1,00	1,00	1,00	1,00	1,00	1,00	1,00	1,00	1,00
COOLING COIL													
Water flow (2)	$m^3/$	5,18	5,72	6,19	6,62	8,17	8,67	9,57	9,86	10,4	11,6	13,0	14,4
dP coil + valve (2)	kPa	33,5	39,6	45,9	51,5	32,5	36,0	43,0	45,1	49,9	36,0	44,3	53,2
Content water	1	9,2	9,2	9,2	9,2	12,5	12,5	12,5	12,5	12,5	20,3	20,3	20,3
HYDRAULIC CONNECTIONS													
INLET / OUTLET WATER - ISO 7/1	Ø	1 ½"	1 ½"	1 ½"	1 ½"	2"	2"	2"	2"	2"	2 ½"	2 ½"	2 ½"

THE COOLING CAPACITY DOES NOT TAKE THE THERMAL LOAD OF THE FAN INTO ACCOUNT

U = Under, Downflow / O = Over, Upflow

- 1. Gross value. Parameters referred to entering air at 30°C-35%UR and chilled water 10-16°C 0% glicole
- 2. SHR = Sensible cooling capacity / Total cooling capacity

2-WAY BALL VALVE FOR CHILLED WATER FLOW CONTROL (Dual Fluid version)



The water flow control in the finned coil is acieved through a **2-way modulating ball valve** with equal percentage flow control ensured by the integrated characterizing disc.

This type of valve offers the following series of benefits:

- Equal percentage flow control.
- · No peaks initial flow.
- Excellent stability control thanks to the integrated characterizing disc.
- Excellent characteristic in partialisation.
- · Stability in control.
- · Maintenance free.
- · Self-cleaning.

CHARACTERISTICS OF THE 2-WAY BALL VALVE

- Closing seal with leakage rate in Class A (EN 12266-1)
- Maximum fluid pressure Ps=1600kPa
- Maximum closing pressure (Close-off) ΔPs=1400kPa

The rotative actuator is controlled by a signal 0 ... 10VDC from the microprocessor controller. The actuator is equipped with an emergency button for manual operation and is maintenance-free.

WATER QUALITY OF THE HYDRAULIC CIRCUITS

The values shown in the table must be guaranteed during the entire life cycle of the machine

	Description	Symbol	Range
1	Hydrogen Ions	рН	7.5 ÷ 9
2	Presence of calcium (Ca) and magnesium (Mg)	Hardness	4 ÷ 8.5 °D
3	Chlorine ions	Cl ⁻	< 150 ppm
4	Iron Ions	Fe ³⁺	< 0.5 ppm
5	Manganese lons	Mn ²⁺	< 0.05 ppm
6	Carbon dioxide	CO ₂	< 10 ppm
7	Hydrogen sulphide	H₂S	< 50 ppb
8	Oxygen	O ₂	< 0.1 ppm
9	Chlorine	Cl ₂	< 0.5 ppm
10	Ammonia NH₃	NH ₃	< 0.5 ppm
11	Ratio between carbonates and sulphates	HCO ₃ -/SO ₄ ²⁻	> 1
12	Sulphate ions	SO ₄	< 100 ppm
13	Phosphate ions	PO ₄ ³⁻	< 2.0 ppm

Where: 1/1.78°D = 1°Fr con 1°Fr = 10 gr CaCO₃ / m³

ppm = parts for millions ppb = parts for billion

Explanatory notes:

ref.1: A greater concentration of hydrogen ions (pH) than 9 implies a high risk of deposits, whereas a lower pH than 7 implies a high risk of corresion

ref.2: The hardness measures the amount of Ca and Mg carbonate dissolved in the water with a temperature lower than 100°C (temporary hardness). A high hardness implies a high risk of deposits.

ref.3: The concentration of chloride ions with higher values than those indicated causes corrosion.

ref. 4 - 5 - 8: The presence of iron and manganese ions and oxygen leads to corrosion.

ref.6 - 7: Carbon dioxide and hydrogen sulphide are impurities that promote corrosion.

ref.9: Usually in water from the waterworks it is a value of between 0.2 and 0.3 ppm. High values cause corrosion.

ref.10: The presence of ammonia reinforces the oxidising power of oxygen

ref.11: Below the value shown in the table, there is a risk of corrosion due to the trigger of galvanic currents between copper and other less noble metals.

ref.12: The presence of sulphates ions triggers corrosion phenomenon.

ref.13: The presence of phosphates ions triggers corrosion phenomenon.



TECHNICAL DATA

x-MEXT DX / DX DF

Data Book
DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

It is necessary to carry out periodic checks, with withdrawals at different points of the hydraulic system. During the first year of operation, checks are recommended every 4 months which can be reduced every 6 months starting from the second year of operation.

WARNING:

Values of the parameters outside the indicated ranges can lead to the formation of deposits and limescale and/or favour corrosive phenomena within the plant. For operating fluids other than water (mixtures of ethylene and propylene glycol) it is recommended to use specific inhibitors, designed to offer thermal stability within the operating temperature range and protection against corrosion. It is necessary that, in the presence of dirty and / or aggressive waters, an intermediate heat exchanger is installed upstream of the heat exchangers

ANTIFREEZE MIXTURES

In systems that are not adequately protected by electric heaters, protect the water circuit with anti-freeze mixture when the outside air temperature may fall below 5°C.

				%	sug	geste	d by v	veigh	t	
		%	0	12	20	30	35	40	45	50
Ethylene glycol	Minimun external air temperature	°C	5	0	-5	-10	-15	-20	-25	-30
Propylene glycol	Minimun external air temperature	°C	5	2	-3	-9	-13	-17	-23	-29

The values are indicative and may significantly vary depending on the glycol manufacturer. Refer to your glycol supplier for detail. The values consider a precautionary difference of 5°C between the minimum ambient air temperature and the freezing temperature of the mixture.

In the hydraulic circuit do not send fluids other than water or mixtures with ethylene / propylene glycol. If other products are provided, in addition to mixtures of water and ethylene or propylene glycol, contact the Manufacturer to check the compatibility with the machine components.




REFRIGERANT CIRCUIT for DX and DF DX versions

Below refrigerant diagrams for version with single or double refrigerant circuit. The diagrams refer to the standard configuration, without optional.


LEGENDA

- C1 / C2: ON/OFF compressor 1 / 2
- R1 / R2: compressor carter heater
- CND: condensator
- EVP: evaporator
- BPH: High pressure transducer
- **BPL:** Low pressure transducer
- SPH: high-pressure switch
- OS: oil separator
- YR: non-return valve
- VS: relief valve
- FG: refrigerant gas FILTER
- IP: Passage indicator
- VE: Exspansion valve
- T: temperature probe
- RU: taps
- RL: liquid receiver




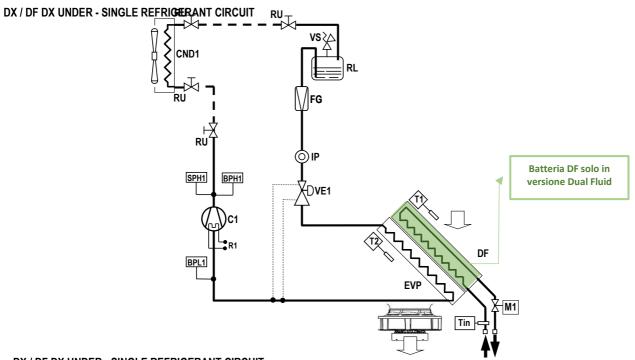

DX / DF DX UNDER - SINGLE REFRIGERANT CIRCUIT

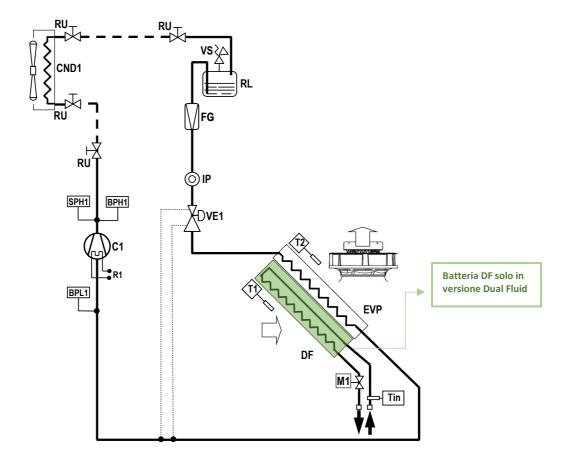

DX / DF DX UNDER - DOUBLE REFRIGERANT CIRCUIT

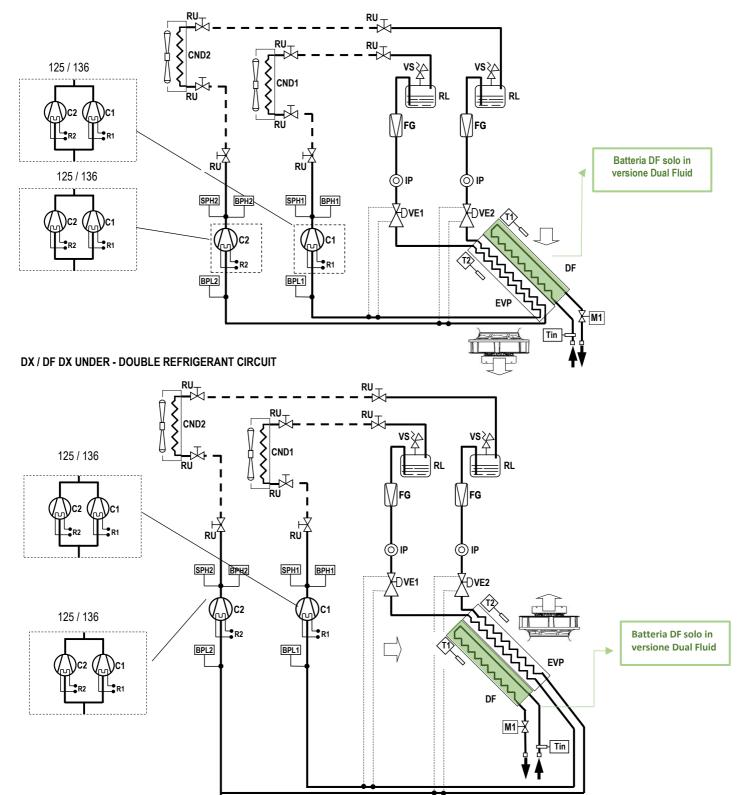

ACOUSTIC DATA

x-MEXT DX / DX DF

Data Book
DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

Acoustic data of the standard machine at full load working conditions.

WARNING:

In a closed room the noise produced by a sound source reaches the listener in two different ways:

- Directly
- Reflected from the surrounding walls, floor, ceiling, from furniture.
- With the same sound source, the noise produced in a closed room is greater than that produced outdoors. In fact, the sound pressure level generated by the source, must be added to the one reflected from the room. Also, the shape of the room affects the sound.

Version DX

Model		U/O													
Frame		035	038	042	047	048	054	061	070	075	076	85	98	125	136
Cooling capacity		M	M	M	M	L	L	L	L	L	XL	XL	XL	XL	XL
Sound level ISO 3744 (1)															
On supply - Under	dB (A)	63,4	65,8	68,1	70,1	65,3	66,8	69,6	72,6	73,2	65,7	69,1	70,2	73,6	73,6
On return - Under	dB (A)	54,4	56,6	58,3	59,7	56,9	58	58,2	60,5	61,6	57,5	59,5	60,5	61,8	62,6
On the front - Under	dB (A)	39,5	41,9	43,5	44,9	42,4	43,5	43,7	46,1	47,2	43,4	45,5	46,5	47,7	48,6
On supply - Over	dB (A)	63,3	65,8	68	70	65,3	66,8	69,6	72,6	73,2	65,7	69,1	70,3	73,6	73,6
On return - Over (2)	dB (A)	56,9	59,5	60,7	61,8	60,6	61,6	59,2	60,7	62,9	62,3	63,6	64,6	63,4	65,6
On front – Over (3)	dB (A)	39,4	41,4	42,9	44,4	42,4	43,3	43,8	46,4	46,9	43,7	45,2	46,1	48,2	48,2

- 1. Noise pressure level at 1 meter in free field ISO 3744
- 2. Air intake from the front
- 3. Air intake from the bottom

Version DX DF

Model		U/O											
Frame		035	038	042	047	048	054	061	070	075	076	85	98
Cooling capacity		M	M	M	M	L	L	L	L	L	XL	XL	XL
Sound level ISO 3744 (1)	dB (A)	60,2	62,7	65	67,1	58,1	59,7	62,6	63,9	65,1	62,9	66,4	62,4
On supply - Under	dB (A)	50	51,8	53,5	54,7	51,9	52,7	51,9	52,7	54,2	53,1	55	54,9
On return - Under	dB (A)	38,6	40,9	42,5	43,7	41,2	42,1	40,6	41,6	43,6	44,4	46,2	46,2
On the front - Under	dB (A)	60,2	62,7	65	67,1	58,1	59,7	62,6	63,9	65,1	62,9	66,4	62,4
On supply - Over	dB (A)	56,7	59,3	60,5	61,5	60,4	61,5	58,5	59,7	62,3	62,2	63,4	64,4
On return - Over (2)	dB (A)	39	41,3	42,6	43,5	42,2	43,1	40,8	41,7	44	43,6	44,9	45,7
On front – Over (3)	dB (A)	60,2	62,7	65	67,1	58,1	59,7	62,6	63,9	65,1	62,9	66,4	62,4

- 1. Noise pressure level at 1 meter in free field ISO 3744
- 2. Air intake from the front
- 3. Air intake from the bottom



Electrical data of the system at full load working conditions.

Version		U/O													
Model		035	038	042	047	048	054	061	070	075	076	85	98	125	136
Frame		M	M	M	M	L	L	L	L	L	XL	XL	XL	XL	XL
Dower cumby	\//nh/ L =	400/	400/	400/	400/	400/	400/	400/	400/	400/	400/	400/	400/	400/	400/
Power supply	V/ph/Hz	3/50	3/50	3/50	3/50	3/50	3/50	3/50	3/50	3/50	3/50	3/50	3/50	3/50	3/50
Maximum current input (FLA)	Α	25,1	26,8	29,9	35,5	35,4	41,0	43,5	49,2	52,6	52,6	58,7	75,4	91,9	98,7

1. U = Under, Downflof / O = Over, Upflow

WARNING:

The electric data indicated refer only to the indoor unit.

Optional accessory electric data are included within the dedicated chapters and must be added.

Please refer to ELĆA WORLD selection program to calculate the electrical data of the air conditioner according to the requested optional ACCESSORIES.

The remote air-cooled condenser is not included because it has independent power supply.



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02



Controller



Keyboard and Display

The unit is equipped with the controller connected to a 6 keys keyboard with graphic display on which all information in English language or easily identifiable symbols are displayed.


The controller disposes of a "flash" memory that preserves the information even in absence of power supply. Part of memory is dedicated to the registration of intervened events - up to 200 events.

The system can manage up to 4 T/H probes on air intake, 4 T/H probes on air delivery, 4 remote T/H probes and a T/H probe for outdoor air.


DISPLAY - KEYBOARD FUNCTIONS

	ALARM	Alarm presence with red light. Push for alarm description. In case of more alarms scroll by UP / DOWN.
Prg	PRG	Menu list, scrolled by UP/DOWN: Unit; Set-point; In/Out; Clock; History; User; Service; Factory. ENTER to execute.
Esc	ESC	Home. Used to come back to the previous menu level or to the main screen.
•	UP DOWN	Changes pages and values of sets. By pressing in HOME mask, the synoptic of the main controls is displayed.
4	ENTER	Moving the cursor on adjustable Program(s) fields to confirm the changes. Press ENTER to get out the fields.

DISPLAY - MAIN MASK

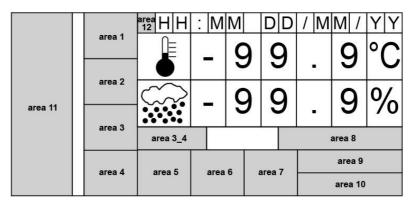

The main mask shows time, date, room temperature and humidity values (if the relative probe is present) and areas for displaying operating and alarm status with dedicated icons



Area 2: Status detail

Area 3: Type of event (only in case of an event)

Area 3_A: Code and type of event

Area 4: Active cooling devices

Area 5: Active free-cooling devices

Area 6: Active humidity devices

Area 7: Active heating devices

Area 8: on / off parameters

Area 9: BMS address

Area 10: LAN address

Area 11: Schematic representation of units

Area 12: Active function presence icon



Touch 7" Display (accessory)



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

CONNECTIVITY

Through the optional serial port, the microprocessor control enables communication with the modern buildings BMS systems with the following protocols: MODBUS; LON; BACNET MS/TP RS485; BACNET OVER IP.


PASSWORD

Level 1: On request of the End User. Allowing to reach USER menu

Level 2: Asks to Service: Allowing to reach SERVICE menu

Level 3: Asks to Service: Allowing to reach FACTORY menu

No passwords request to enter: UNIT, SETPOINT, IN/OUT, CLOCK, HISTORY menu

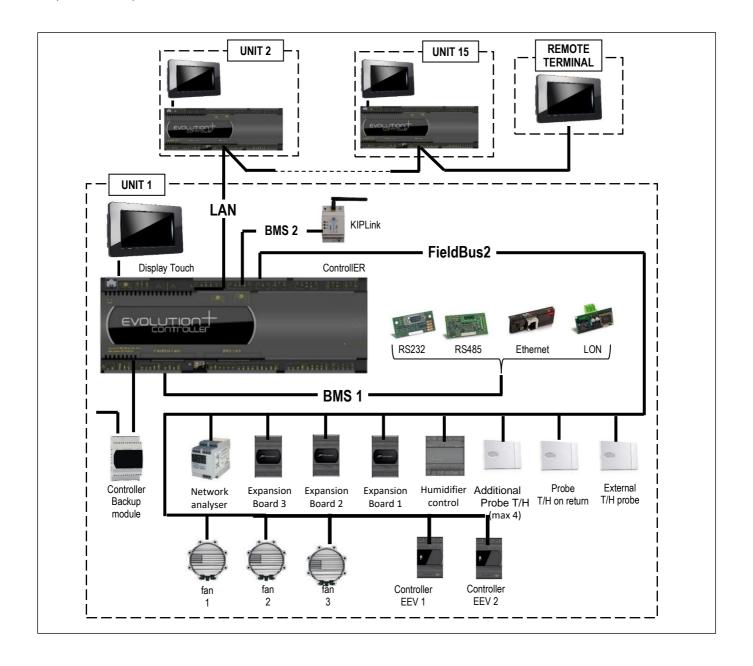



LAN NETWORK

The LAN is part of the control software and it is possible to connect up to 15 units.

This type of connection allows to control the units in coherent way, moreover the units can be controlled and managed from a shared remote terminal.

LAN ADRESS LIST

Unit n.	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	Remote Terminal
Adress Controllor	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	
Display & Keyboard adress	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	32


The unit connection to the local network (LAN) allows to perform the following functions:


- Balancing the operating hours among the different units by rotating the reserve units.
- Turning on the reserve units in case other units should turn off due to an alarm, maintenance or power feed interruption.
- Turning on reserve units to offset the excessive thermal load.
- Operating with all units based on the average temperature and humidity values read by the temperature probes only in the operating units.
- DYNAMIC MASTER function that makes the role of the Master unit dynamic. In case of alarm, shutdown, maintenance, power failure, etc. on the Master unit, the function automatically elects a new Master unit.

UNIT FIXING BRACKET

The bracket is supplied as an assembly kit, with bolts for fixing it to the unit.

It is a safety device that must be installed together with the unit and fixed to a structural part at the installation site (wall, structure, etc.) to avoid the risk of the unit toppling over due to external causes (accidental impacts, earthquakes, etc.). Wall fixing screws are not supplied.

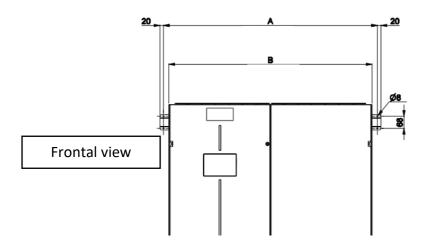

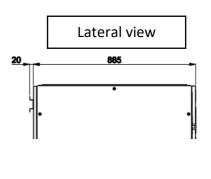

Frame		М	L	XL
Dimension A	mm	1202	1660	2610
Dimension B	mm	1142	1600	2550

DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES

B263 Over air delivery – bottom intake	
B266 Front. Air delivery – top intake	
B681	£
	I
unit base in OVER version.	
B670Without upper protection grille	
B691Outdoor low temperature kit	
B692l.t kit + additional receiver	
B693Additional receiver	
601 Liquid line solenoid valve	
A547 Costant air flow. Automatic aisle air flow regulation system	
The system controls the rotation speed of the fans so that t	he
air flow rate is kept constant by means of a differential	
pressure transmitter connected to the microprocessor conti	rol
A548Costant prevalence. Automatic aisle air pressure regulation	
system. The system controls the rotation speed of the fans	to
keep the air pressure constant via a differential pressure	
transmitter connected to the microprocessor control.	
B951 power supply remote condenser single-phase	
B952 power supply remote condenser three-phase	
383 Numbered wirings + UK requests	
P181 network analyzer (standard machine) Multifunction tool fo	r
calculating and displaying electrical measurements of the	
machine	
P111 / P113dual power supply. Dual power supply system with	
automatic change-over.	
P111 – Dual power supply	
P113 - Dual power supply KIT. Supplied in kit	
4181 / 4182 / 4184 / 4185 serial cards:	
4181 – serial card MODBUS;	
4182 – serial card LON;	
4184 – serial card BACNET MS/TP RS485;	
4185 – serial card BACNET OVER IP.	
6461 HPC	
6461 HPC.	
1441 KIPlink + COMPACT KEYBARD	
1441KIPlink + COMPACT KEYBARD 1442KIPlink+ TOUCH SCREEN 7'	
1441KIPlink + COMPACT KEYBARD 1442KIPlink+ TOUCH SCREEN 7' 6195TOUCH SCREEN 7 '	
1441KIPlink + COMPACT KEYBARD 1442KIPlink+ TOUCH SCREEN 7' 6195TOUCH SCREEN 7 '	
1441KIPlink + COMPACT KEYBARD 1442KIPlink+ TOUCH SCREEN 7' 6195TOUCH SCREEN 7 ' 6196KIPlink	
1441KIPlink + COMPACT KEYBARD 1442KIPlink+ TOUCH SCREEN 7' 6195TOUCH SCREEN 7 ' 6196KIPlink C9261063Remote Display	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	
1441	ed



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

P071 / P072 / P073 / P074 Sonda T/RH remota. Combined Temperature / Ambient Humidity Probe. For remote installation, in addition to the

combined probe on the machine air intake. P101.....Earthquake anchor kit P084...... Air filter ePM₁₀ 50%. Highly efficient regenerable air filter (secondo ISO EN 16890). B961-B971......PL. EMPTY B962-B972......PL. EMPTY + INSULATION B963-B973...... PL. EMPTY + DAMPER B964-B974.....PL. EMPTY INSULATION+DAMPER B965-B975...... PL. 1 GRILLE **B966-B976......PL. 1 GRILLE INSULATION** B967-B977......PL. 1 GRILLE + DAMPER B968-B978......PL. 1 GRILLE INSULATION +DAMPER B969-B979..... PL. 3 GRILLES B96A-B97A.....PL. 3 GRILLES INSULATION B96B-B97B...... PL. 3 GRILLES + DAMPER B96C-B97C.....PL. 3 GRILLES INSULATION +DAMPER B96D......PL. FILTER ePM1 50% B96E PL. FILTER ePM1 50%+DAMPER B96FPL. SILENCED B96G.....PL. SILENCED+DAMPER B96H.....PL. SILENCED+1 GRILLE B96I......PL. SILENCED+1 GRILLE+DAMPER B97D.....PL. FILTER COARSE 60% TASCA B97EPL. FILT COARSE 60% TASCA+DAMPER B97FPL. FILTER COARSE 60% B97G.....PL. FILTER COARSE 60%+GRILLE B97H.....PL. FREE-COOLING A531 (6) DAMPER on-off. The non-return damper is contained in a frame installed on the air supply of the machine. B981......SUPPORTING FRAME H255-450MM **B982......SUPPORTING FRAME H450-750MM** B983..... SUPPORTING FRAME H750-1000MM B991.....INSULATION INSULATION

MANDATORY COMBINATIONS OF ACCESSORIES


 The presence of the "6461 - HPC software enabling" accessory requires the presence of the "1441 - Kiplink + COMPACT KEYBOARD" accessory

9969 NYLON PACKAGING, WOODEN CAGE 9976 PALLET AND NYLON PACKING

- The presence of the accessory "B97H PL. FREE-COOLING" requires obligatorily the presence of accessory "A812 -Direct free cooling management".
- The presence of accessory "P051 Dehumidification function" obligatorily requires the presence of accessory "P161 Air intake T/rH probe".
- 4. The presence of the "A812 Direct free-cooling management" accessory obligatorily requires the presence of the "P161 T/rH probe air intake" accessory
- 5. The presence of ACCESSORIES "4303 / 4305 Vapour humidifier" requires obligatory presence of accessory "P161 T/rH probe air intake".
- The presence of the accessory "A531 On-off damper" requires obligatorily the presence of the accessory "9969 Wood cage packing".



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

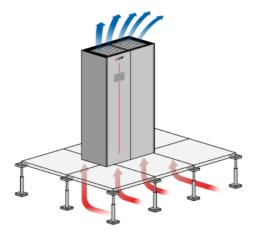

OPTIONAL ACCESSORIES: B263 - OVER AIR DELIVERY - BOTTOM INTAKE

Available for OVER units.


Thanks to the special design of the base, it is possible to provide air intake from the bottom of the unit. The air flow rate is the nominal one.

The accessory provides for blind front panelling and is incompatible with the unit's internal filters.

P083 AIR FILTER COARSE 60%

P084 AIR FILTER ePM10 50%

It is necessary to provide filtering of the air entering the machine. In the case of combination with a plenum with filters, it is necessary to guarantee access to the filters for cleaning and replacement operations.

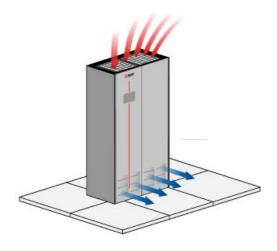

OPTIONAL ACCESSORIES: B266 - FRONT. AIR DELIVERY - TOP INTAKE

Available for UNDER versions, the accessory provides a grille to front panel to ensure front air delivery, we recommend the combination with a plenum with grille to improve system performance.

The accessory is suitable for application in server rooms where it is not possible to provide a raised floor or ducting of the air supply, where there are server racks with ventilated front and rear doors.

The typical installation is of the perimeter type, the units are positioned along the walls of the room, the units draw in air from the top and send it horizontally into the cold aisle for cooling the racks. Warm air is expelled from the racks at the top or from the back.


ACCESSORIES: B680 - BASEMENT CLOSURE

Available for the OVER version with FRONTAL RECOVERY or UNDER version with accessory B266 "FRONTAL RECOVERY - HIGH RECOVERY", the accessory provides a panel to close the base of the unit, which prevents the flow of air in the lower part of the machine



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: B691 - OUTDOOR LOW TEMPERATURE KIT

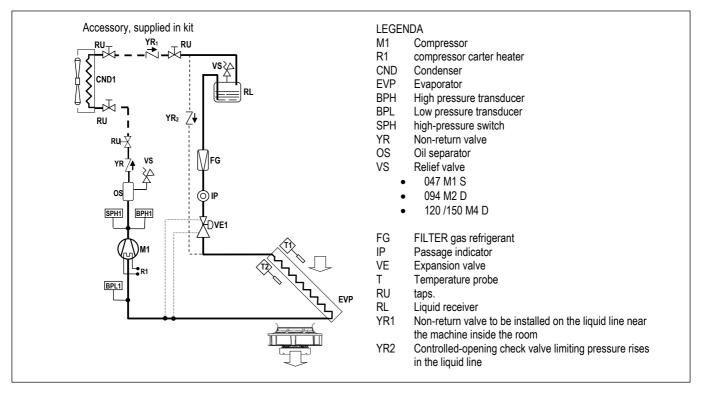

The system is necessary to ensure correct start-up and operation of the unit at very low outside air temperatures: between -20°C and -40°C. (The minimum attainable temperature depends on the remote condenser combined, with AC fans (-40°) or EC fans (-35°)

The accessory provides, for each refrigerant circuit

- A check valve (YR1), supplied in kit form, to be installed inside the room in the vicinity of the machine, on the liquid line exiting
 the external remote condenser. It prevents the migration of refrigerant in its liquid state to the condenser in conditions of low
 outside air temperature.
- A check valve (YR2) with controlled opening, factory installed on the machine. Limits any pressure rise in the section of the liquid line between the expansion valve and the check valve (YR1).

OPTIONAL ACCESSORIES: B693 - ADDITIONAL RECEIVER

In those installations with equivalent lengths of refrigerant lines of more than 25 m, the installation of an additional liquid receiver is recommended, to be installed on the liquid line outside the unit

OPTIONAL ACCESSORIES: B692 - L.T KIT + ADDITIONAL RECEIVER

An additional liquid receiver can be requested in addition to the low temperature kit to be installed on the liquid line outside the unit (see recommended minimum volumes in the table below)

MINIMUM RECOMMENDED VOLUME TABLE:

		035	038	042	047	048	054	061	070	075	076	085	098	125	136	
MODEL		M	M	M	M	L	L	L	L	L	XL	XL	XL	XL	XL	
Additional liquid receiver volume	ı	4,8	4,8	6	6	6	6	8	8	8	2x6	2x6	2x6	2x8	2x8	

Liquid receivers are supplied with safety valve



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: 601 - SOLENOID VALVE ON LIQUID LINE



The accessory has the function of closing the liquid line, in the event of the machine stopping or blackout, avoiding the risk of liquid refrigerant migration into the evaporator. Recommended accessory for:

- Refrigerating lines greater than 10m in equivalent length.
- Machines equipped with electronic expansion valve.

OPTIONAL ACCESSORIES: A547 - COSTANT AIR FLOW

The accessory provides for the installation of a differential pressure transducer which allows the fan speed to be regulated guaranteeing the flow rate set-point that can be set by the controller, within the limits established by the manufacturer. With the intervention of the functions that require modulation of the fan flow rate (humidification, dehumidification, heating with electric heaters) the constant flow rate control is temporarily deactivated to leave room for regulation.

OPTIONAL ACCESSORIES: A548 - COSTANT PRESSURE



The optional is a differential pressure sensor with a 0...20mA output signal. The device is installed in the machine.

The sensor is connected to the microprocessor control of the indoor unit and allows the control of:

A548 - CONSTANT PREVALENCE

The system controls the air pressure in the raised floor (Under version) or in the duct (Over version). Through the relief piping of the room pressure (low pressure side) and the air supply of the fan (high pressure side) the fan rotation speed is controlled to keep the air pressure constant.

Pressure control range from 0 to 100 Pa.

OPTIONAL ACCESSORIES: B792 - POWER SUPPLY 400/3+N/50

OPTIONAL ACCESSORIES B951 - REMOTE CONDENSER POWER SUPPLY SINGLE-PHASE

L'ACCESSORYo permette di alimentare un condensatore remoto monofase direttamente dalla macchina interna. Il quadro elettrico della macchina interna è predisposto con i componenti elettrici di protezione e morsettiera per il collegamento elettrico al condensatore. L'ACCESSORYo non è compatibile con le alimentazioni senza il neutro

OPTIONAL ACCESSORIES B952 - REMOTE CONDENSER POWER SUPPLY THREE-PHASE

The accessory allows a three-phase remote condenser to be supplied directly from the indoor machine.

The electrical panel of the indoor machine is prepared with the electrical protection components and terminal board for the electrical connection to the capacitor.

OPTIONAL ACCESSORIES 383 – NUMBERED WIRINGS + UK REQUESTS

The machine's electrical cables are all numbered for easy identification. For the power section it is possible to change the colour for the UK market.

CABLE	383 - COLOUR FOR UK
EARTH	YELLOW / GREEN
NEUTRAL	BLUE SKY
PHASE 1 (L1)	BROWN
PHASE 2 (L2)	BLACK
PHASE 3 (L3)	GREY
PHASE	RED



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: P181 - NETWORK ANALYZER



This device provides continuous measurement of power consumption, monitoring current, voltage and power. These values are sent to unit microprocessor via RS485 serial cable, as shown on the unit wiring diagram.

The displayed variables are:

- · Phase to phase voltage, only for three-phase units;
- · Phase voltage (phase-neutral);
- · Phase current;
- Neutral current only for three-phase units;
- · Active phase power, only for three-phase units;
- · Total active power;
- · Active energy;
- Hour counts



INTERNAL INSTALLATION

The optional is installed within the electrical box downstream the main switch with door safety lock and includes:

- · Network transducer;
- Current transformers, one for each power supply phase cable.

OPTIONAL ACCESSORIES: P111 - DUAL POWER SUPPLY



The accessory requires a mandatory neutral supply.

The accessory is not available for voltages 460/3/60 and 460/3+N/60.

The ATS system constantly monitors the power line and switches in the event of voltage anomalies or a phase failure.

The system can be set up with 2 operating logics:

1. Line 1 priority:

In the event of a fault on line I, the system switches to line II; once the fault on line 1 has been resolved, the system switches back to the priority line.

2. No priority line.

In the event of a fault on line I the system swaps over to line II, the return to line I only takes place in the event of a fault on line II

Manual operation is also possible by inserting the handle into the ATS. For continuous operation of the unit, the combination of the dual power supply with the fast restart system is recommended: in the event of a power failure, the fast restart system keeps the microprocessor powered for a few minutes, preventing it from restarting. The remote capacitor must be powered by the automatic switch. We recommend the accessory: "P191 Remote condenser power supply" from the electrical panel of the indoor unit". If accessory "P181 Mains analyser" is selected, it is not possible to select accessory P111 Dual power supply, but only "P113 Dual power supply kit".

OPTIONAL ACCESSORIES: P113 - KIT DUAL POWER SUPPLY

MOUNTING KIT

For M and L sizes, the accessory is positioned inside the unit's electrical cabinet.

For XL sizes the accessory is to be installed externally, the accessory is supplied in a kit with an IP3X-rated containment box.



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: 4180 - WITHOUT PROVISION FOR REMOTE CONNECTIVITY

OPTIONAL ACCESSORIES: 4181 - MODBUS PROTOCOL SERIAL CARD



The board is installed at the factory.

The serial board allows the ModBus communication protocol to be used via the RS485 3-wire physical connection.

OPTIONAL ACCESSORIES: 4182 - LON PROTOCOL SERIAL CARD



The board is installed at the factory. The serial board allows the LonWorks communication protocol to be used via the FTT-10 physical connection. The manufacturer

provides the serial card and the .NXE and .XIF files necessary for LonWorks engineers to configure the network.

to configure the network. The board is programmed by the technician in charge of integration.

For all technical information, refer to the Interface Manual

OPTIONAL ACCESSORIES: 4184 - BACNET MS/TP RS485 SERIAL CARD



The board is installed at the factory. The serial board allows the BACnet MS/TP communication protocol to be used via the 3-wire RS 485 physical connection. For all technical information, please refer to the Interface Manual.

OPTIONAL ACCESSORIES: 4185 - BACNET OVER IP SERIAL CARD



The board is installed at the factory.

The serial board allows the use of BACnet IP, Modbus TCP/IP and SNMP communication protocols

via the physical Ethernet standard. The supervision network is realised by the technicians who develop the BACnet interfacing. The interfacing database is that for the Modbus protocol. The manufacturer will supply the boards and the .MIB file necessary for the technicians to configure the network.

The programming of the board is the responsibility of the integrator.

Please refer to the Interfacing Manual for all technical information and what is necessary to connect to the Internet for displaying and modifying variables. The board is installed at the factory.

The serial board allows the use of BACnet IP, Modbus TCP/IP and SNMP communication protocols

via the physical Ethernet standard. The supervision network is realised by the technicians who develop the BACnet interfacing. The interfacing database is that for the Modbus protocol. The manufacturer will supply the boards and the .MIB file necessary for the technicians to configure the network.

The programming of the board is the responsibility of the integrator.

Please refer to the Interfacing Manual for all technical information and what is necessary to connect to the Internet for displaying and modifying variables.



OPTIONAL ACCESSORIES: 6461 - HPC (SOLO UNITÀ DUAL FLUID)



Hydronic Plant Connect

HPC is the **new advanced and fully integrated control function** designed by MEHITS for hydronic plant optimization. It connects MEHITS chillers and indoor CRAH units without any external devices.

INFRASTRUCTURE

The HPC function is based on LAN groups and the KIPlink network (KIPLAN).


- Every indoor and outdoor unit must be equipped with KIPlink.
- Every outdoor unit must be equipped with Multi Manager.
- HPC supports up to 20 LAN groups of indoor air conditioners (max 15 units per group) and 1 LAN group of outdoor chillers (max 8 units).
- HPC requires a KIPLAN (KIPlink network) made up of one unit per each LAN group.

The result is a KIPLAN made of 1 chiller unit (KIP Master), and up to 20 indoor units (KIP Clients).

• KIPLAN network allows HPC data communication between the different LAN groups (indoor and outdoor).

KIPlink allows direct access to all HPC variables and parameters with devoted menus and pages.

The most important parameters are also available on the Compact/Large Keyboard.

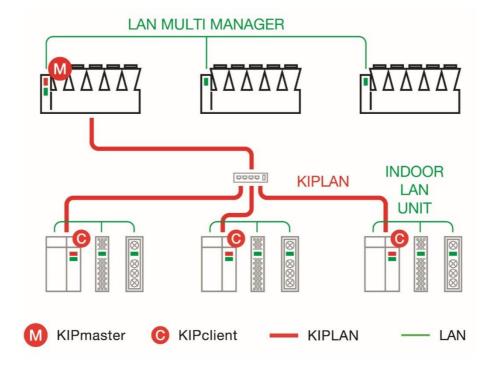

Further information is available in the dedicated Manuals (W3000+, Evolution+, KIPlink).

WORKING LOGICS

The HPC control logics enhance the system efficiency leveraging on partial loads, redundant units, and favourable ambient conditions.

HPC acts on time intervals. The time lapse between each HPC action can be set from 1 to 500 minutes. The time left until the AV action is visible in the KIPlink group interface section.

According to the instantaneous operating conditions detected in the chilled water system, HPC regulates: the chillers' set-point, the pumps' speed, and the indoor air conditioners' valves and fans.



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

The main variables taken into consideration are:

- Cooling demand of each indoor unit group (room temperature, fans' speed, valve opening)
- Chilled water temperature
- Pumps' speed
- Chillers' group operating status (outdoor air temperature, FC availability)

The highest benefits are achieved in systems with VSD pumps and free-cooling chillers.

The highest benefits are achieved in systems with VSD pumps and free-cooling chillers.

IT cooling load satisfaction is paramount. HPC always gives priority to room cooling dependability. Therefore, actions are taken on the basis of the indoor unit groups' status.

There are 4 operating modes, in order of priority:

1. Reset

When the cooling demand of at least one group of indoor units suddenly increases.

HPC contribution is reset and suspended until the Reset message is active.

The system immediately increases the cooling capacity.

2. Reduce

When the cooling demand of at least one group of indoor units slightly increases.

HPC contribution is reduced. The system increases the cooling capacity.

3. Optimization On

When the cooling demand of all groups of indoor units remains stable or decreases.

HPC optimizes the system by increasing its contribution.

4. No Action

When the cooling demand of all groups of indoor units remains stable or decreases, but HPC has already pushed the system to the best performance achievable in the current conditions.

No further action is taken.



PLUS

- Fully in house developed and patent pending
- Completely integrated, no need for any external devices
- Based on proprietary logics and devices (Multi Manager, KIPlink)
- Energy simulations, comparisons, and payback analysis available on ELCA software Ideal to complete the package of a MEHITS chilled water system (chillers and CRAHs)



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: 1441 - CONTROLLO UNITÀ VIA KIPLINK + COMPACT KEYBOARD OPTIONAL ACCESSORIES: 1442 - CONTROLLO UNITÀ VIA KIPLINK + 7 INCH TOUCH SCREEN

OPTIONAL ACCESSORIES: 6192 - COMPACT KEYBOARD

OPTIONAL ACCESSORIES: 6196 - CONTROLLO UNITÀ VIA KIPLINK

The optional is factory installed.

KIPlink is an innovative system based on Wi-Fi technology that allows to operate on a unit directly from Smartphone

or Tablet via an APP. The optional is factory installed.

KIPlink is an innovative system based on Wi-Fi technology that allows to operate on a unit directly from Smartphone

or Tablet via an APP.





WI-FI MODULE

- Standard: IEEE 802.11n 802.11g
- Frequencies: 2.4 2.4835 GHz
- Output power: <20 dBm (equivalent to <100mW)
- Safety: WPA2
- Flow: < 20m

APP MEHITS

Operating System: Android 5® or higher, IOS 8® or higher, Windows 10® or higher

Download: Google Play®, Apple Store® and Microsoft Store®.

HOW TO USE KIPLINK

KIPlink can be used in three ways:

Proximity keyboard:

Approaching the machine with a Smartphone or a Tablet with the MEHITS APP installed, you can connect to the unit via Wi-Fi and you can control it as you would from the standard controller keyboard. It is possible to switch the unit on and off, change the sets and reset alarms. Knowing the relative passwords, you access the parameters of the USER, SERVICE and MANUFACTURER menus.

Local Monitoring:

Using a Smartphone, a Tablet or PC connected to the LAN of the building where the unit is also connected. Access is via WEB via a browser. The system has two access profiles: ONLY READ and READ & WRITE. ONLY READ allows only the visualization of the parameters and it is not possible to control the unit.

READ & WRITE allows you to switch the unit on and off, change the sets and reset alarms. Knowing the relative passwords, you access the parameters of the USER, SERVICE and MANUFACTURER menus.

Remote monitoring:

You can use a Smartphone, Tablet or PC connected to the VPN of the building where the unit is also connected to monitor the unit from any geographical location where there is an internet connection. Use a secure VPN to avoid access by third parties who could compromise operation of the unit. The user is responsible for ensuring a secure connection.



Client 1 Client 2 Client 3 Client 4

STORING DATA

The system can store some data on a 1GB MicroSD card to be installed on the device. The data can be used for Service diagnostics. The card is not provided.

KIPLink NETWORK

It is possible to set up mixed networks consisting of several KIPLink devices (10 maximum), to display information from different devices (called Client KIPLink) on one single device (called Master KIPLink).

The information is collected from the various Client KIPLink devices connected to EVOLUTION+ / W3000 TE/ CX-4 controllers and sent through the Wi-Fi or Ethernet network to the Master KIPLink device, which stores them and makes them available through an appropriate user interface. The connection with the Master KIPlink can take place via Wi-Fi, via Ethernet or a combination of the two. For complete information on the KIPlink system, please consult the relative technical documentation.




OPTIONAL ACCESSORIES: 6195 - COMPACT 7 INCH TOUCH SCREEN

The optional is factory installed.

7" touch-screen graphic display with 16.7 million colors for the management and monitoring of operating and alarm status.

The Display is equipped with a MicroUSB 2.0 port for the service connection.

The navigation bars are always present on the display to allow quick and intuitive navigation..

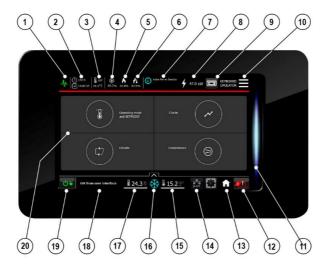

TOP NAVIGATION BAR

- 1. Status of connection with the controller. Green: connection OK; Red: connection Error
- 2. Time and date
- 3. External temperature value by dedicated probe
- 4. Active percentage of Cooling
- 5. Active percentage of Heating
- 6. Active percentage of Post-Heating
- 7. Unit active functions
- 8. Power meter readings
- 9. PGD1 keyboard emulator
- 10. Rapid access to the menu (Quick menu)

BOTTOM NAVIGATION BAR

- 11. Light bar for machine status identification
- 12. Alarm button to access the alarm management screen and the number of active alarms
- 13. Home button for returning to the Homepage
- 14. pLAN network
- 15. Temperature of outlet air or percentage of humidity.
- 16. Operating mode button.
- 17. Inlet air temperature
- 18. Unit status
- 19. On/Off button

DISPLAY AREA

- 20. Main menu a. Operating mode and Set-Point
- b. Circuits
- c. Charts
- d. Compressors

For complete information on Graphic Display system, please consult the relative technical documentation.



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: C9261063 - REMOTE DISPLAY



The display is supplied but not installed at the factory.

If a group of units is connected via LAN (UP TO 15), it is possible to view all the parameters of each individual unit via a single display.

The display kit consists of:

- a PGD physical keyboard
- a 1 m cable
- a T shunt card

OPTIONAL ACCESSORIES: P151 - LOWERED DISPLAY FOR UNDER

The accessory is recommended for UNDER units when the plenum on the air supply is provided.

The display/keyboard located on the front panel of the machine is installed lowered by 51 cm to facilitate its consultation and use. The accessory is not compatible with touch displays.

OPTIONAL ACCESSORIES: A491 - WATER LEACKAGE DETECTOR

OPTIONAL ACCESSORIES: A492 - WATER LEACKAGE DETECTOR + ADDITIONAL

DETECTOR



The system includes an electronic relay installed in the electrical panel of the indoor machine and 2 water detectors to be connected in series.

The electrical connections for the probe and the alarm contact are present in the indoor machine's terminal board.

The sensors are supplied to be connected and installed at customer care.

OPTIONAL ACCESSORIES: A511 - SMOKE DETECTORS

Is possible to install one or both of the following sensors. Sensors are supplied in mounting kit. Installation within the room at customer care.



The device in supplied in mounting kit.

The optical smoke detector senses the presence of combustion by-products (visible smoke) and activates an alarm.

The operating principle is based on the light scattering technique (Tyndall effect). The device is in conformity to EN 54-7 standard.

Technical features:

	1	T	
Material	ABS	Relative humidity	<93% not-
Power supply	1228 Vdc	Index of protection	IP 20
Normal current	50µA 24 Vdc	Testing by magnet	Yes
Alarm current	25mA 24 Vdc	Relay	max. 1A
LED visibility	360° (double led)	Signal repeater	14mA 24 Vdc
Storage temperature	-10+70°C	Covered area	40m2 max.
Operating temperature	-10+70°C	Shielded connection	Min. 0.5 mm2
Max. speed air	0.2 m/s	Colour	White

Supplied with unit to be connected and installed at customer care close to the unit.



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES A521 - FIRE DETECTOR

The device in supplied in mounting kit.

The fire detector has been designed to identify temperatures at which fires may start. When the temperature exceeds the set threshold or when there is a rapid variation in temperature, the relay is activated to signal an alarm. The device is in conformity to EN 54-5 standard.

Technical features:



Material	ABS		Index of protection	IP 20
Power supply	1228 \	/dc	Testing by magnet	Yes
Normal current	50µA 24	Vdc	Relay	max. 1A 30Vdc
Alarm current	25mA 24	1 Vdc	Signal repeater	14mA - 24 Vdc
LED visibility	360°	(double	Alarm temperature threshold	62°C
Storage temperature	-10+7	0°C	Covered area	40m2 max.
Operating temperature	-10+7	0°C	Shielded connection cable	Min. 0.5 mm2
Relative humidity	<93%	non-	Colour	White

Supplied with unit to be connected and installed at customer care close to the unit

OPTIONAL ACCESSORIES B811 - AIR FLOW SENSOR



The system includes a differential pressure switch installed in the electrical cabinet or in the front compartment of the machine and the plastic piping for pressure measurement at the fan inlet.

Operating range: 0.2 ... 2.0 mbar (20 ... 200 Pa)

Tripping differential: 0.1 mbar (10 Pa)

Tripping value fixed at 0.2 mbar, cannot be changed.

OPTIONAL ACCESSORIES 4503 - FAST RESTART (ULTRACAP)



The accessory is installed inside the unit's electrical panel.

In the event of brief blackouts or power surges, it keeps the unit's microprocessor powered for a few minutes and ensures the rapid resumption of machine operation when normal power supply conditions are restored.

OPTIONAL ACCESSORIES 2412 - PHASE SEQUENCE CONTROL




The system monitors the correct sequence of the power supply phases and the status of the supply voltage, intervening in the event of undervoltage, overvoltage and incorrect phase rotation.

The accessory is installed in the electrical panel downstream from the main lockout switch and in the event of an alarm stops the unit's operation or prevents it from starting.



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES ACCESSORY: A381 - KIT CONDENSATE DRAIN PUMP

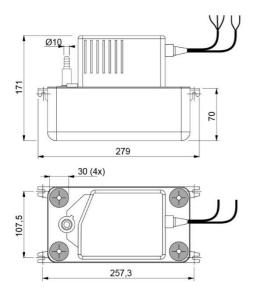

The accessory is supplied in kit form and involves the installation outside the machine of a condensate booster pump equipped with a tank with a microswitch float switch to activate the pump.

Together with the pump, 10 metres of anti-crushing spiral-type discharge pipe is supplied.

Operation of the pump is fully automatic, and any pump faults and overfilling can be seen by the controller.

The pump is suitable for the evacuation of humidifier discharge water, if fitted.

WARNINGS


Maximum delivery height: 5.0 m


For all the machines the optional accessory is supplied in mounting kit.

TECHNICAL DATA
Power supply: 230V~ 50Hz
Electrical data: 70W – 0,67A
Maximum water flow: 500 l/h
Maximum delivery height: 5.0 m
Sound level: 45dBA a 1 m
Maximum water temperature: 70°C

Water acidity: pH>2.5
Tray volume: 2.0 I

Protection IP 20

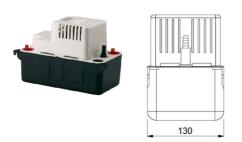

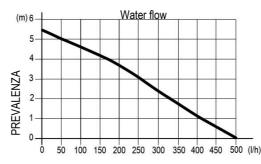

	dis	charge	ength of positions of the property of the prop	s (Ø
Discharge head	5m	10m	20m	30m
1m	380	300	240	190
2m	310	260	200	150
3m	240	200	145	110
4m	150	130	80	60
5m	30	20	0	0

OPTIONAL ACCESSORIES: A812 - WITH DIRECT FREE-COOLING

Preparation of the machine and control cabinet for direct free-cooling system, combination with "B97H - PLENUM FREE COOLING" accessory required.

OPTIONAL ACCESSORIES: A791 - AIR TEMPERATURE CONTROL ON SUCTION AIR.

Machine set-up for room air temperature control with probes on air intake.

OPTIONAL ACCESSORIES: A181 - WITH SOUND PROOF JACKET



The system consists of a soundproof jacket for each compressor to reduce the sound level of the unit.



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: A431 - ELECTRIC HEATERS

Electric heater consisting of finned aluminum elements, ensuring low surface temperature and deleting the air ionization problems. The optional is installed downstream the main cooling coil.

In electric heaters with three working steps the activation is binary type.

Components:

- · Electric heater in aluminium armoured elements with integral fins
- Electrical control
- Safety thermostat.

Temperature control on suction air.

TECHNICAL DATA

AIR SUPPLY (1)		U/O	U/O	U/O	U/O	U/O									
MODEL		035	038	042	047	048	054	061	070	075	076	85	98	125	136
FRAME		M	М	M	М	L	L	L	L	L	XL	XL	XL	XL	XL
HEATING CAPACITY		6,8	6,8	6,8	6,8	13,5	13,5	13,5	13,5	13,5	18	18	18	18	18
Absorbed current (OA)	Α	9,8	9,8	9,8	9,8	19,5	19,5	19,5	19,5	19,5	26	26	26	26	26
First working step	kW	2,3	2,3	2,3	2,3	4,5	4,5	4,5	4,5	4,5	6,3	6,3	6,3	6,3	6,3
Second working step	kW	4,5	4,5	4,5	4,5	9,0	9,0	9,0	9,0	9,0	11,7	11,7	11,7	11,7	11,7
Third working step	kW	2,3 + 4,5	2,3 + 4,5	2,3 + 4,5	2,3 + 4,5	4,5 + 9,0	6,0 + 12,0								

- 1. U = Under, downflow / O = Over, upflow
- 2. Value to be added to the weight of the standard unit.

OPTIONAL ACCESSORIES: B803 - 3-WAY BALL VALVE (Version DX DF)

2-way motorised valve with 0÷10 VDC control and emergency manual override, for creating the third by-pass route in the hydraulic circuit.

The accessory is factory installed inside the unit and does not change its overall dimensions.

This type of valve offers the following set of benefits:

- Equipercentage characteristic
- Absence of initial flow peaks
- Excellent control stability due to the control disc
- Excellent partialisation characteristic
- Control stability
- Maintenance-free
- Self-cleaning

3-WAY BALL VALVE FEATURES

- Sealing with leakage rate class A (EN 12266-1)
- Maximum fluid pressure Ps=1600kPa
- Maximum closing pressure (Close-off) ∆Ps=1400kPa

The rotary actuator is controlled by a 0 ... 10 VDC signal from the microprocessor control.

The actuator is equipped with an emergency manual override button and is maintenance-free.

Model		35	38	42	47	48	54	61	70	75	76	85	98
FRAME		М	М	М	М	L	L	L	L	L	XL	XL	XL
3 WAY VALVE													
kv	[m3/h]	16	16	16	16	16	16	16	16	16	-	-	-

(*) accessory not available for XL frame

1. U = Under, Downflow / O = Over, Upflow

IMPORTANT

For further information, please refer to chapter "CALCULATION OF THE LOAD LOSS OF A VALVE AS A FUNCTION OF WATER FLOW".



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: B807 - 2-WAY VALVE EPIV (Version DX DF)



Accessory to the cooling coil and replaces the 2-way valve.

Pressure-independent EPIV regulating ball valve with electronic flow control.

The accessory is factory installed inside the unit and does not change its overall dimensions. This valve type offers the following set of benefits:

- Equipercentage characteristic and control disc.
- Excellent control stability regardless of pressure variations and under all load conditions.
- Maintenance-free.
- Self-cleaning.

EPIV VALVE FEATURES

- Sealed with leakage rate class A (EN 12266-1).
- Maximum fluid pressure Ps=1600kPa.
- Maximum closing pressure (Close-off) ΔPs=1400kPa.
- Maximum differential pressure ∆Pmax=350kPa.

The rotary actuator is controlled by a 0 ... 10 VDC signal and is optimised for this valve type. The valve opens by turning anti-clockwise and closes by turning clockwise. The actuator is equipped with a button for manual emergency operation and is maintenance-free..

Model		35	38	42	47	48	54	61	70	75	76	85	98
FRAME		M	М	M	M	L	L	L	L	L	XL	XL	XL
3 WAY VALVE													
kv	[m3/h]	14,2	14,2	14,2	14,2	21,3	21,3	21,3	21,3	21,3	32	32	32

OPTIONAL ACCESSORIES: P051 - DEUMIDIFICATION FUNCTION

The accessory "P161 T/RH air intake probe" must be present. Components:

- T / rH air intake probe.
- Electronic dew-point temperature control system for combined intervention of cooling power output and air flow rate

OPTIONAL ACCESSORIES: 4303 - HUMIDIFIER VAP. 8 kg/h UM08

OPTIONAL ACCESSORIES: 4305 - HUMIDIFIER VAP. 15 kg/h UM15

Accessory not available for 460/3/60 and 460/3+N/60 power supply.

Immersed electrode modulating steam humidifier equipped with electronic control with modulating steam delivery, complete with safety and operating ACCESSORIES.

A metal cover over the kettle ensures high levels of safety during operation.

Flammability safety standard UL94: V0.

The accessory includes the combined air intake temperature/humidity probe and control board.

The accessory is factory fitted and only requires a hydraulic connection for water filling.

Water is discharged from the humidifier directly into the unit's condensate drain pan and is then conveyed to the outside via the condensate drain pipe.

It is recommended to install a FILTER and a shut-off valve on the water inlet pipe.

CHARACTERISTICS OF THE SUPPLY WATER

The quality of the used water influences the evaporation process, so the humidifier can be fed with **not-treated water**, **only when potable and non-demineralised**



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02



Humidifier control board

LIMIT VALUES

			Min	Max
Hydrogen ions	pН		7	8,5
Specific conductivity at 20°C	σ R, 20 °C	μS/cm	350	750
Total dissolved solids	TDS	mg/l	(1)	(1)
Dry residue at 180°C	R ₁₈₀	mg/l	(1)	(1)
Total hardness	TH	mg/l CaCO₃	100 (2)	400
Temporary hardness		mg/l CaCO₃	60 (3)	300
Iron + Manganese		mg/l Fe + Mn	0	0,2
Chlorides		ppm Cl	0	30
Silica		mg/l SiO ₂	0	20
Residual chlorine		mg/l Cl-	0	0,2
Calcium sulphate		mg/l CaSO ₄	0	100
Metallic impurities		mg/l	0	0
Solvents, diluents, soaps, lubricants		mg/l	0	0

- (1) Values depending on specific conductivity; in general: TDS \cong 0,93 * $\sigma_{R, 20\,^{\circ}\text{C}}$; $R_{180} \cong 0.65 * \sigma_{R}$
- (2) Not lower than 200% of the chloride content in mg/l di Cl
- (3) Not lower than 300% of the chloride content in mg/l di Cl

WARNING:

- Use only with drinking water.
- There is no reliable relationship between hardness and water conductivity
- Do not treat water with softeners! This could cause corrosion of the electrodes or the formation of foam, leading to potential operating problems or failures.
- Do not add disinfectants or corrosion inhibiters to water, as these substances are potentially irritant.
- Is absolutely forbidden to use well water, industrial water or water drawn from cooling circuits; in general, avoid using potentially contaminated water, either from a chemical or bacteriological point of view.

TECHNICAL DATA

				U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O	U/O
				035	038	042	047	048	054	061	070	075	076	85	98	125	136
				М	М	М	М	L	L	L	L	L	XL	XL	XL	XL	XL
VAPOUR PRODUCTION	kg/h	8	15	8	8	8	8	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15
Power input	kW	6	11,3	8	8	8	8	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15
Absorbed current (OA)	Α	8,7	16,2	8	8	8	8	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15
Max absorbed current (OA)	Α	12,4	23	8	8	8	8	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15
Water content	1	6,4	10,3	8	8	8	8	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15
Max water supply pressure	Bar	1÷8	1÷8	8	8	8	8	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15
NET WEIGHT (2)	kg	10	16	8	8	8	8	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15
HYDRAULIC CONNECTION				8	8	8	8	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15
WATER INLET - ISO 228/1 - G M	Ø	3/4"	3/4"	8	8	8	8	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15
WATER OUTLET – external diameter		19	19					8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15	8/15

- 1. U = Under, downflow / O = Over, upflow
- 2. Value to be added to the weight of the standard unit. Does not include the weight of the water content.

OPTIONAL ACCESSORIES: P161 - RETURN AIR PROBE T/RH

The accessory replaces the temperature probe installed on the air intake in the indoor unit. The probe is supplied with the following options:

- Humidifier installation.
- Dehumidification system



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES P071 – REMOTE PROBE T/RH (1 probe)
OPTIONAL ACCESSORIES P072 - REMOTE PROBE T/RH (2 probe)
OPTIONAL ACCESSORIES P073 - REMOTE PROBE T/RH (3 probe)
OPTIONAL ACCESSORIES P074 - REMOTE PROBE T/RH (4 probe)



In addition to the on-board temperature probes, the unit's control can manage up to 4 remote T/RH probes (optional), to measure the return and the delivery air temperature in different positions.

Depending on the individual characteristics of the room and the cooling equipment, the customer can choose where to install the additional probes to achieve best measurement results (N. add. return probes + N. add. delivery probes ≤ 4).

The probes can be configured from the Service menu of the controller.

The probes that are enabled, contribute to the calculation of the return and delivery temperature used for capacity adjustment purposes.

The customer can choose between different types of calculation:

- Temperature of the first probe enabled
- Average temperature of the probes
- Highest temperature of the probes
- Lowest temperature of the probes.

Notes:

If a probe is connected but not enabled, its measurement can still be read on the display and by the BMS, but it is not used to calculate the adjustment temperature. It is possible to disable the probe on the unit and use only the remote probes for capacity adjustment purpose.

- P071: One Combined Temperature / Humidity sensor for remote installation. The optional is added to the on-board temperature sensors.
- P072: Two Combined Temperature / Humidity sensors for remote installation. The optional is added to the on-board temperature sensors.
- P073: Three Combined Temperature / Humidity sensors for remote installation. The optional is added to the on-board temperature sensors.
- P074: Four Combined Temperature / Humidity sensors for remote installation. The optional is added to the on-board temperature sensors

OPTIONAL ACCESSORIES: P080 – WITHOUT AIR FILTER
OPTIONAL ACCESSORIES: P084 – AIR FILTER ePM10 50%

WITHOUT AIR FILTER

The unit is supplied without air filters, improving the unit's energy efficiency. This configuration is only allowed when the unit is installed in a condition where the incoming air is already filtered (filtration system in the room, in the ducting, combination with plenum with filters on the unit's return)

AIR FILTER ePM10 50%

Air filters with ePM10 50 per cent efficiency (according to ISO EN 16890), replacing standard filters, guarantee a higher degree of filtration combined with a long service life and minimal energy consumption



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: P101 - EARTHQUAKE ANCHOR KIT

The accessory available for the indoor unit and supplied as an assembly kit consists of two lateral supports to be fixed to the sides of the unit and to the support surface.


This is a safety device that must be fitted by the customer before installing the unit and fixed to a structural part with adequate strength at the installation site to avoid the risk of displacement and/or overturning due to earthquakes.


Screws for fixing the unit to the structure are not supplied and fixing the unit to the structure is the responsibility of the Customer.

To guarantee earthquake resistance, the unit must be secured to a structural part with adequate strength with 4 M10 steel screws (not supplied).

The presence of the "ANTISISMIC ANCHORAGE KIT" accessory requires the installation of the "UNIT FIXING BRACKET".

The accessory excludes the installation of the plenum and unit support frame.






FRAME		M	L	XL
Dimension B	mm	1142	1600	2550

DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORY: PLENUM

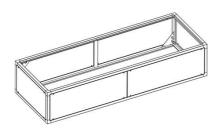

The x-MEXT series is supplied with a wide range of plenums to meet the most varied customer requirements.

The optimised structure guarantees easy installation of the plenum in the different configurations: using the connection devices supplied with the plenum, it is possible to connect the accessory to the machine from the inside (without compromising its aesthetics), quickly and easily.

The design guarantees front access for all devices requiring periodic maintenance Removal of the filters from the front of the unit is always guaranteed

Internal sheet steel panelling with protective surface treatment according to UNI ISO 9227/ASTMB117 and ISO 7253.

Aesthetic panels with wrinkled finish, front panels colour RAL 9006, side and rear panels colour RAL 7016, completely removable by removing the fixing screws. Panelling insulated internally with polyurethane foam mattress.

The accessory is supplied separately and installation on the unit is the responsibility of the customer. The x-MEXT series is supplied with a wide range of plenums to meet the most varied customer requirements.

PLENUM		M	L	XL
Height	[mm]	510	510	510
Width	[mm]	1142	1600	2550
Depth	[mm]	882	882	882

OPTIONAL ACCESSORY: B961/B971 - EMPTY PLENUM

OPTIONAL ACCESSORY: B962/B972 - EMPTY PLENUM + INSULATION

The plenum is empty and can be used to raise the air intake/outlet point.

- The front panels can be removed for inspection or to remove the filters from the unit.
- Available in INSULATION version.

			M	L	XL
INSTALLATION					
UNDER	Supply		X	X	X
UNDER	Return		X	X	X
OVER	Supply		X	X	X
OVER	Return				
WEIGHT			М	L	XL
EMPTY PLENU	М	[kg]	53,3	60	84
EMPTY PLENU	M + INSULATION	[kg]	60,2	70,8	98,4

OPTIONAL ACCESSORY: B965/B975 - PLENUM 1 GRILLE OPTIONAL ACCESSORY: B969/B979 - PLENUM 3 GRILLES

OPTIONAL ACCESSORY: B966/B976 - PLENUM 1 GRILLE + INSULATION OPTIONAL ACCESSORY: B96A/B97A - PLENUM 3 GRILLES + INSULATION

The plenum must be installed on both the supply and return lines of the machine and allows the flow of air to be directed.

- Available in the version with one GRILLE on the front panel
- Available in the version with one GRILLE on the front panel and one GRILLE for each side panel
- Front panels can be removed for inspection or to remove the filters from the unit
- Available in the version with INSULATION



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

			M	L	XL
INSTALLATION					
UNDER	Supply		X	X	X
UNDER	Return		X	X	X
OVER	Supply		X	X	X
OVER	Return				
WEIGHT			M	L	XL
PLENUM + 1/3 G	RILLES	[kg]	60,1	72	100
PLENUM + 1/3 G	RILLES + INSULATION	[kg]	64,6	77,4	107,2

OPTIONAL ACCESSORY: B963/B973 - EMPTY PLENUM + DAMPER
OPTIONAL ACCESSORY: B964/B974 - EMPTY PLENUM + DAMPER + INSULATION

The plenum must be installed above the unit and allows the unit to be excluded from air circulation when it is in OFF mode.

- Front panels can be removed for inspection or to remove the filters from the unit
- Available in the version with INSULATION

			M	L	XL
INSTALLATION					
UNDER	Supply				
UNDER	Return		X	X	X
OVER	Supply		X	X	X
OVER	Return				
WEIGHT			M	L	XL
PLENUM + DAMP	ER	[kg]	61,6	72	104
PLENUM + DAMP	ER + INSULATION	[kg]	68,8	82,8	118,4

OPTIONAL ACCESSORY: B967/B977 - PLENUM 1 GRILLE + DAMPER OPTIONAL ACCESSORY: B96B/B97B - PLENUM 3 GRILLES + DAMPER

OPTIONAL ACCESSORY: B968/B978 - PLENUM 1 GRILLE + DAMPER + INSULATION OPTIONAL ACCESSORY: B96C/B97C - PLENUM 3 GRILLES + DAMPER + INSULATION

The plenum must be installed on the delivery side of the unit and allows the flow of outgoing air to be directed; when the unit is in OFF, it is possible to exclude it from air circulation by closing the damper.

- Front panels can be removed for inspection or to remove the filters from the unit
- Available in the version with INSULATION

			M	L	XL
INSTALLATION					
UNDER	Supply				
	Return				
OVED	Supply		X	X	X
OVER	Return				
WEIGHT			M	L	XL
PLENUM + 1/3 GRILLES + DAMPER		[kg]	69,6	84	120
PLENUM + 1/3 GRILLES + DAMPER + INSULATION		[kg]	73,2	89,4	127,2
PLENUM + 1/3 GF	Return RILLES + DAMPER		M 69,6	L 84	XL 120



OPTIONAL ACCESSORY: B96F - PLENUM SILENCED OPTIONAL ACCESSORY: B96H - PLENUM SILENCED 1 GRILLE

The plenum must be installed on the discharge side of the machine and provides a noise reduction.

- Front panels can be removed for inspection or to remove filters from the unit
- Available in a version with a GRILLE on the front panel

			М	L	XL
INSTALLATION					
LINDED	Supply		X	X	X
UNDER	Return				
OVED	Supply		X	X	X
OVER	Return				
WEIGHT			М	L	XL
PLENUM SILENCE)	[kg]	59	68	94
PLENUM + SILENCED + 1 GRILLE		[kg]	67	80	110

OPTIONAL ACCESSORY: B96G - PLENUM SILENCED + DAMPER
OPTIONAL ACCESSORY: B96I - PLENUM SILENCED + 1 GRILLE + DAMPER

The plenum must be installed on the delivery side of the machine and allows a reduction in noise, when the unit is in OFF mode it is possible to exclude it from air circulation by closing the damper.

- Front panels can be removed for inspection or to remove filters from the unit
- Available in a version with a GRILLE on the front panel

			M	L	XL
INSTALLATION					
UNDER	Supply				
UNDER	Return				
OVER	Supply		X	X	X
OVER	Return				
WEIGHT			M	L	XL
SILENCED PLENUM + DAMPER		[kg]	67,6	80	114
SILENCED PLENUM + 1 GRILLE + DAMPER		[kg]	75,6	92	130

OPTIONAL ACCESSORY: B96D - PLENUM + FILTER ePM 1 50%

The plenum with rigid pocket filters must be installed on the machine's supply air and provides additional filtering of the air leaving the unit, depending on the type of FILTER installed.

- Available with FILTER for particulate matter 1 µm, 50% efficiency
- Front panels can be removed for inspection or to remove the filters from the unit

			M	L	XL
INSTALLATION					
UNDER	Supply		X	X	X
UNDER	Return				
OVER	Supply		X	X	X
OVER	Return				
WEIGHT			M	L	XL
PLENUM + FILTER	R ePM 1 50%	[kg]	59	68	94



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORY: B96E - PLENUM + FILTER ePM 1 50% + DAMPER

The plenum with rigid bag filters in combination with the Damper must be installed on the unit's delivery side; it guarantees additional filtering of the air leaving the unit, depending on the type of FILTER installed, and the possibility of excluding the unit from air circulation when it is in OFF mode.

- Available with FILTER for particulate matter 1 um. 50% efficiency
- Front panels can be removed for inspection or to remove the filters from the unit

		M	L	XL
INSTALLATION				
UNDER	Supply			
UNDER	Return			
OVED	Supply	X	X	X
OVER	Return			
WEIGHT		M	L	XL
PLENUM + FILTE	R ePM 1 50% + DAMPER [ka]	67.6	80	114

OPTIONAL ACCESSORY: B97D - PLENUM + FILTER COARSE 60% A TASCA OPTIONAL ACCESSORY: B97E - PLENUM + FILTER COARSE 60% A TASCA + DAMPER

The plenum with soft pocket filters must be installed on the return side of the unit and provides better aeraulic efficiency than standard filters.

- It is possible to remove the front panels for inspection or to remove the filters from the unit.
- Available in version with Damper.

			М	L	XL
INSTALLATION					
UNDER	Supply Return		X	X	X
OVER	Supply Return				
WEIGHT			M	L	XL
PLENUM + FILTER COARSE 60%		[kg]	59	68	94
PLENUM + FILTER	COARSE 60% + DAMPER	[kg]	67,6	80	114

OPTIONAL ACCESSORY: B97F - PLENUM + FILTER COARSE 60% OPTIONAL ACCESSORY: B97G - PLENUM + FILTER COARSE 60% + 1 GRILLE

The plenum with filters is designed in combination with the OVER units with intake from the basement, to filter the aeraulic flow in entrance to the evaporating coil.

The accessory must be installed on the unit's intake and access to the filters must be guaranteed for routine maintenance operations

- It is possible to remove the front panels for inspection or to remove the filters from the unit

			M	L	XL
INSTALLATION					
UNDER	Supply				
UNDER	Return				
OVED	Supply				
OVER	Return		X	X	X
WEIGHT			M	L	XL
PLENUM + FILTER COARSE 60%		[kg]	59	68	94
PLENUM + FILTER COARSE 60% + 1 GRILLE		[kg]	59	68	94



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORY: B97H - PLENUM FREE COOLING

The plenum must be installed on the air intake of the machine and allows, under certain thermo-hygrometric conditions, the room to be conditioned to be cooled directly with the air coming from outside, disposing of the thermal load without the contribution of the cooling circuit.

The damper has a double septum and the microprocessor system continuously regulates the quantity of external air to be introduced into the room to be conditioned according to the set-point. It is possible to remove the front panels for inspection or to remove the filters from the unit.

			M	L	XL
INSTALLATION					
UNDED	Supply				
UNDER	Return		X	X	X
OVER	Supply				
OVER	Return				
WEIGHT			M	L	XL
PLENUM + DAMP	ER FC	[kg]	61,6	72	104

DAMPER AIR EXHAUST - Not provided

WARNING


IT IS COMPULSORY TO INSTALL IN THE ROOM TO BE CONDITIONED A MOTORIZED DAMPER APPROPRIATELY DIMENSIONED FOR THE EXHAUSTION OF AIR FROM THE ROOM DURING FREE-COOLING OPERATION.

During free-cooling operation, the air conditioner supplies ambient air directly into the room, this causes an increase in air pressure inside the room.

The exhaustion damper avoids the increase in pressure in the room.

The damper must be installed at the highest point of the room to exhaust excess hot air to the outside. Install the damper if possible, in opposite position to air conditioner.


The damper is controlled by the modulating signal 0-10Vdc of the free-cooling control of the air conditioner. The 24Vac power supply of the servomotor and the 0-10Vdc free-cooling signal is available on the unit's electrical terminal block (see wiring diagram for connections). Air exhaustion must be protected with a rain cover and a grille (at Customer care). The electrical connection cables are not supplied.

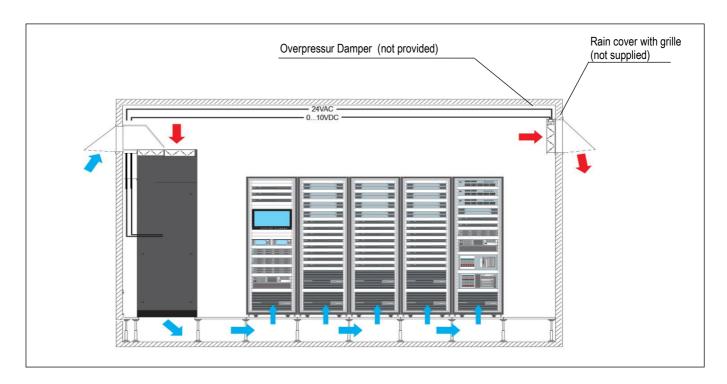



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: A531 - DAMPER ON-OFF

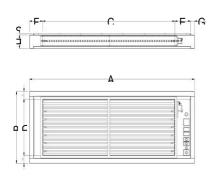

Motorised ON/OFF non-return air damper positioned above the unit in both UNDER and OVER versions.

The Damper opens when the fans start up to allow the correct flow of air into the unit during operation. When the unit has an alarm or when it is set to OFF, the Damper closes excluding the unit from air circulation.

In the UNDER version the Damper is equipped with levers that allow it to be lifted without the use of tools, to guarantee easy and safe removal of the air filters from the front during normal maintenance operations.

The accessory can be supplied together with the plenum and support frame, for details please refer to the dedicated chapter.

The accessory mandatorily requires the presence of accessory "9973 Packaging with wooden cage".

STRUCTURE

- Sheet steel frame with protective surface treatment according to UNI ISO 9227/ASTMB117 and ISO 7253, and painted with epoxy powders. Colour RAL 9005;
- Damper with opposed fins made of sheet steel;
- Servo motor for damper control;
- Terminal box for electrical connection to the unit.

DAMPER ON/OFF		M	L	XL
N° DAMPERS	[-]	1	1	2
Height *	[mm]	80	80	80
Lenght Damper *	[mm]	969	1423	1133
Depth Damper *	[mm]	750	750	750
WEIGHT Damper *	[kg]	8,6	12	10

^{*} Data referred to single Damper


OPTIONAL ACCESSORIES: B981 - SUPPORTING FRAME H 350 - 500 mm OPTIONAL ACCESSORIES: B982 - SUPPORTING FRAME H 500 - 750 mm OPTIONAL ACCESSORIES: B983 - SUPPORTING FRAME H 750 - 1000 mm

The accessory is supplied as an assembly kit and includes the unit's support frame and its attachment to the machine base (internal fixing).

The new design allows for easy installation and quick height adjustment. The footprint is completely integrated into the machine's floor plan. It is not possible to install the support frame together with the plenums underneath the machine.

The frame is available in 3 different heights for installation flexibility.



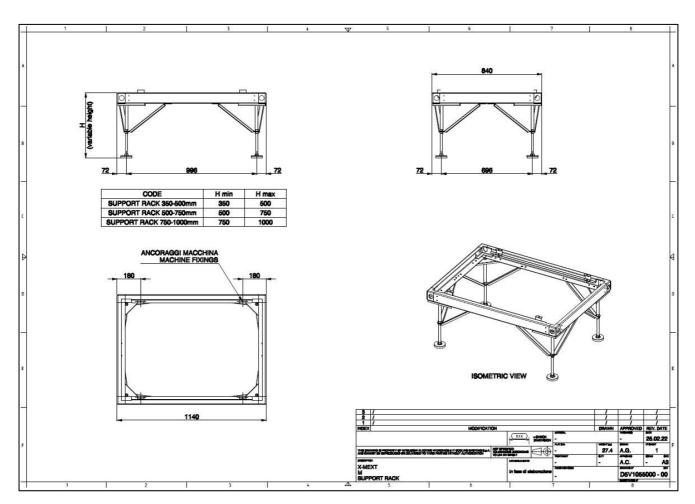

PXXX - H max 500		М	L	XL
Min Height	Mm	350	350	350
Max Height	Mm	500	500	500
WEIGHT	[kg]	27,4	39,5	48,5
PXXX - H max 750		M	L	XL
Min Height	Mm	500	500	500
Max Height	Mm	750	750	750
WEIGHT	[kg]	27,7	39,8	48,8
PXXX - H max 1000)	M	L	XL
Min Height	Mm	750	750	750
Max Height	Mm	1000	1000	1000
WEIGHT	[kg]	28	40,1	49,1

DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

OPTIONAL ACCESSORIES: B991 - INSULATION

The accessory is designed to acoustically insulate the air-conditioning unit's panels. The sound pressure reduction of the unit is approximately

2dB(A). The reduction refers only to the radiated sound level values or the front of the unit (blind front panels).

The noise data on the suction and discharge outlets are not reduced.

The rear, side and front panels (not grilled) consist of:

- External part with painted sheet metal panel
- Sound-absorbing insulation
- Inner part in hot-dip galvanised sheet steel

The insulation provides fire protection comparable to Class 0 according to EN 13501-1.


The accessory, when combined with the OVER units, obligatorily requires that the air intake is made from the base of the unit and the presence of the blind front panel.

The accessory increases the WEIGHT of the unit.


WEIGHT							
FRAME		M	L	XL			
UNDER/OVER	kg	36	44	144			



M UNDER Dimensions in mm

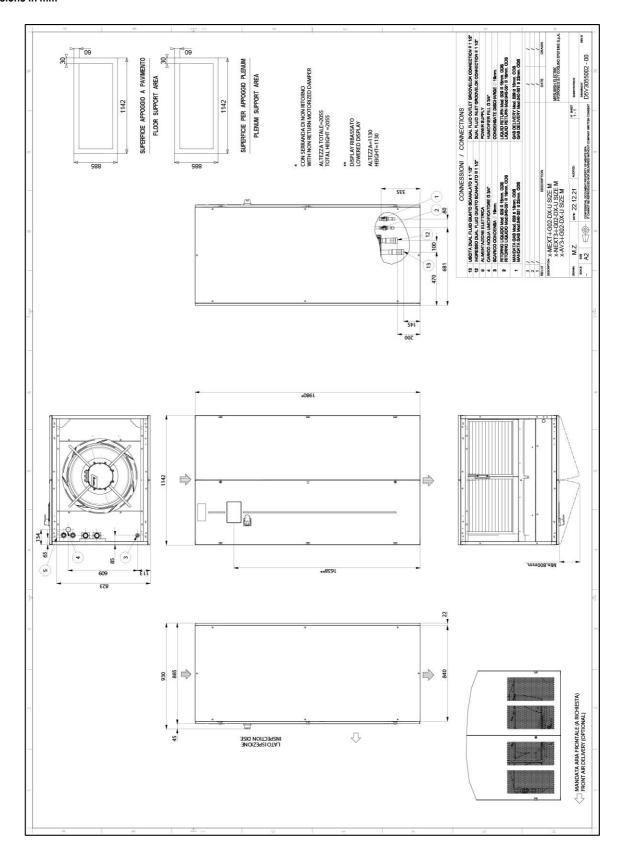


M OVER Dimensions in mm

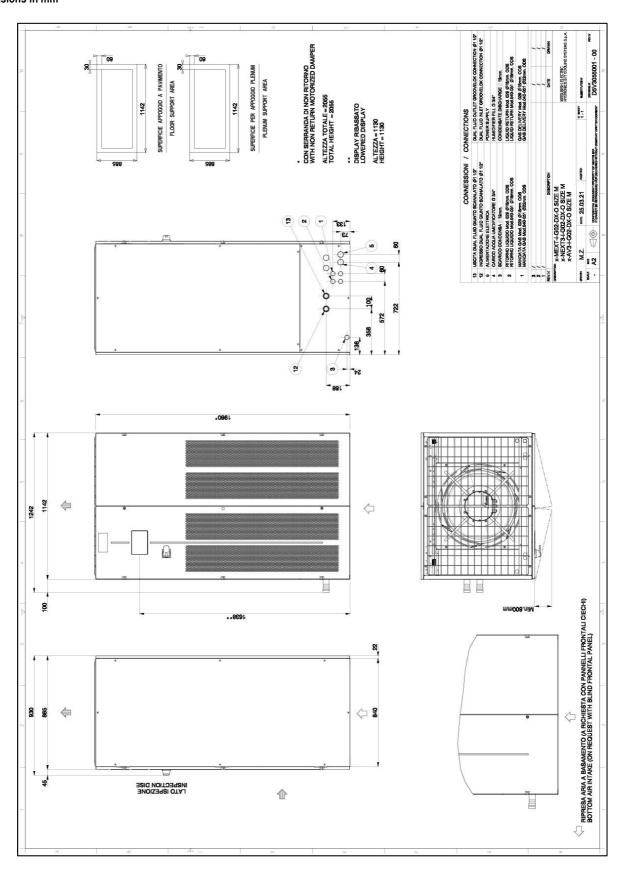




L UNDER Dimensions in mm

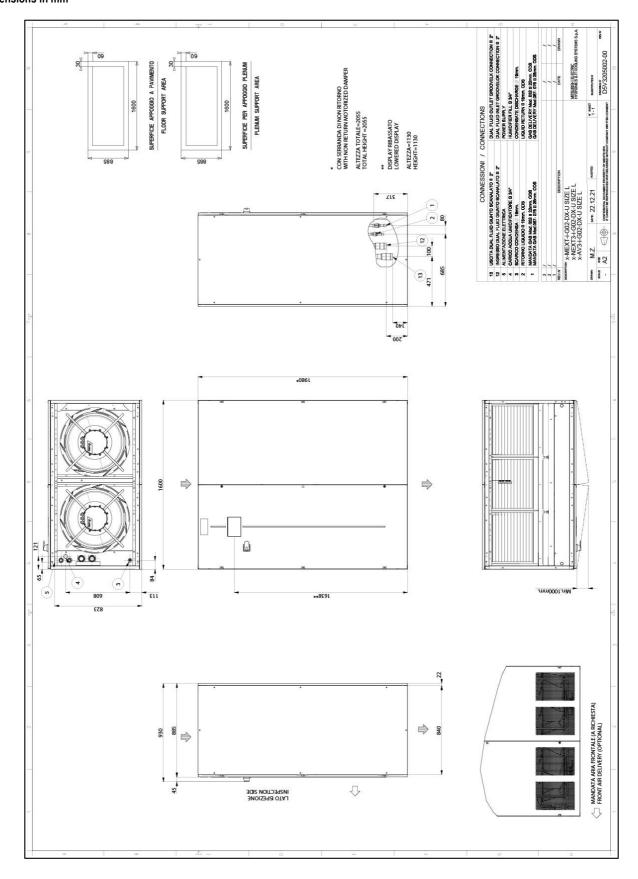




L OVER Dimensions in mm

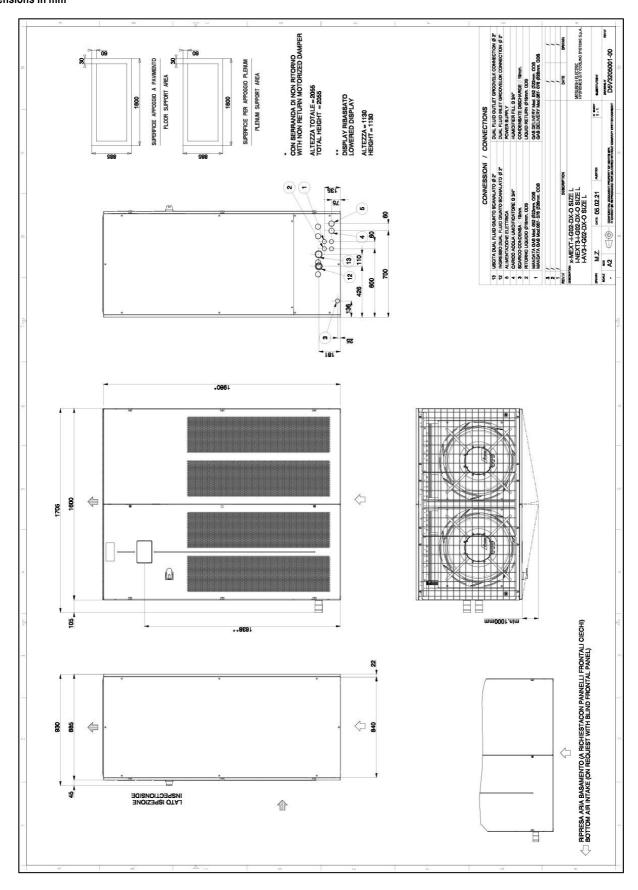




XL UNDER Dimensions in mm

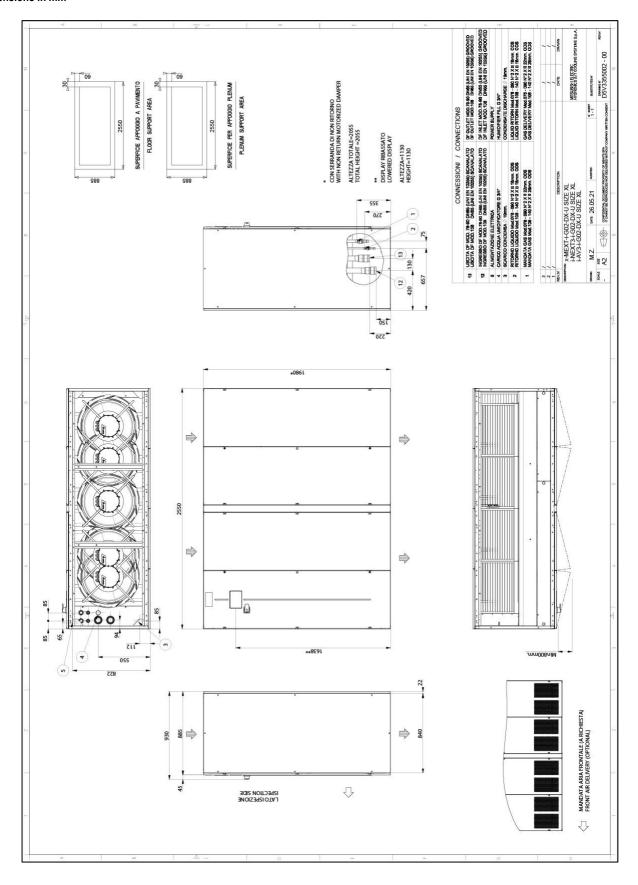



XL OVER Dimensions in mm

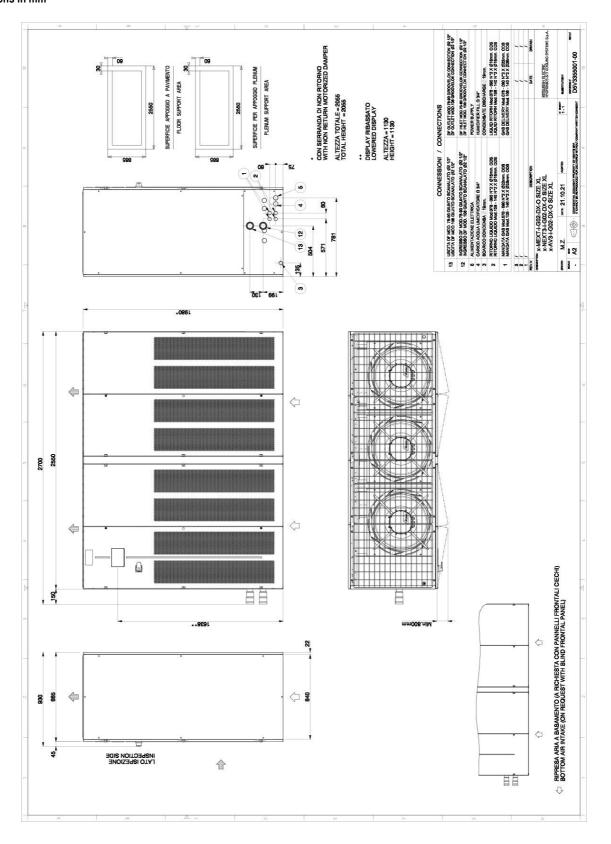




DRILLING OF RAISED FLOOR FOR UNDER MACHINES

x-MEXT DX / DX DF

Data Book
DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02


DRILLING OF RAISED FLOOR WITHOUT SUPPORT FRAME

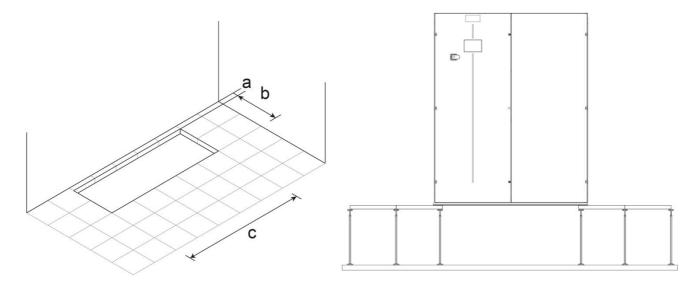

Provide a hole of the size shown in the table

FRAME		M	L	XL
а	mm	60	60	60
b	mm	765	765	765
C	mm	1082	1540	2490

DRILLING OF RAISED FLOOR WITH SUPPORT FRAME

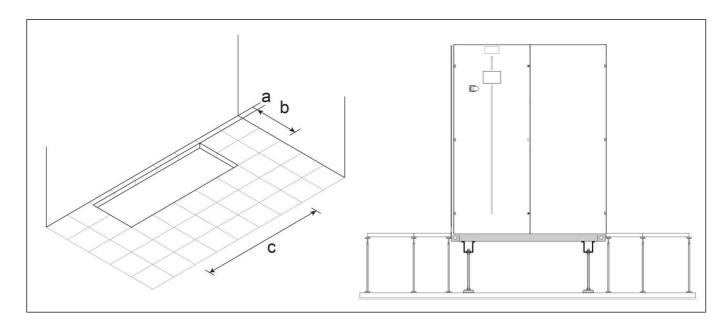

Provide a hole of the size shown in the table


FRAME		М	L	XL
а	mm	25	25	25
b	mm	840	840	840
С	mm	1142	1600	2250



DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

EXAMPLE FOR MACHINES NOISE EMISSION CALCULATION

UNDER MACHINE WITH DUCT ON AIR INTAKE

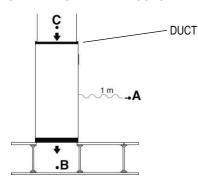


Lp **A** = Front side Under catalogue value

Lp B = Air delivery Under catalogue value

Lp **C** = Air intake Under catalogue value

The points **B** and **C** do not influence the point **A**

UNDER MACHINE WITH PLENUM ON AIR DELIVERY

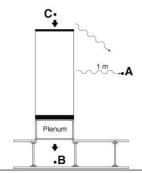

Lp A = Front side Under catalogue value


Lp ${\bf B}$ = Air delivery Under catalogue value –plenum noise reduction

Lp **C** = Air intake Under catalogue value

Lp A+C =
$$10 \log_{10} \left(10 + 10 \right)$$

The points **B** and **C** do not influence the point **A**

UNDER MACHINE WITH PLENUM ON AIR INTAKE

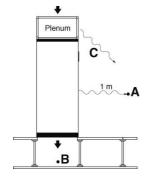


Lp **A** = Front side Under catalogue value

Lp **B** = Air delivery Under catalogue value –plenum noise reduction

Lp C = Air intake Under catalogue value

Lp **A+C** =
$$10 \log_{10} \left(10 + 10 \right)$$

OVER MACHINE WITH DUCT

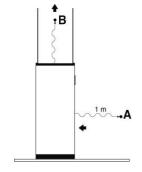

Lp **A** = Air intake Over catalogue value


Lp **B** = Air delivery Over catalogue value

The points B and C do not influence the point A

DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

EXAMPLE FOR MACHINES NOISE EMISSION CALCULATION



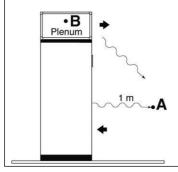


Lp A = Air intake Over catalogue value

Lp B = Air delivery Over catalogue value – plenum noise reduction

Lp **A+B** =
$$10 \log_{10} \left(10^{\frac{\text{LpA}}{10}} + 10^{\frac{\text{LpC}}{10}} \right)$$

OVER MACHINE WITH DUCT AND PLENUM ON AIR DELIVERY

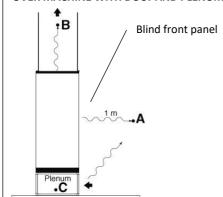

Lp A = Front side Over catalogue value


Lp B = Air delivery Over catalogue value

Lp C = Lp A + 6dB(A) - plenum noise reduction

Lp **A+C** =
$$10 \log_{10} \left(10 \frac{\text{LpA}}{10} + 10 \frac{\text{LpC}}{10} \right)$$

The point **B** do not influence the point **A+C**

OVER MACHINE WITH DUCT AND PLENUM ON AIR DELIVERY

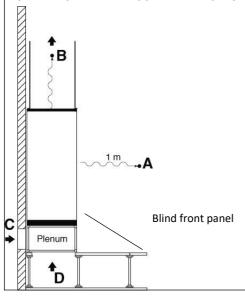

Lp A = Front side Over catalogue value

Lp B = Air delivery Over catalogue value

Lp C = Lp D = Lp A + 6 dB(A) - plenum noise reduction

The points B, C and D do not influence the point A

IMPORTANT

The declared noise levels are intended in free field conditions.

The noise pressure level of an installed unit is affected by the room acoustic characteristics.

Please consider an average noise increase of +4/+6 dB(A).

VALVE PRESSURE DROP CALCULATION AS FUNCTION OF WATER FLOW RATE

x-MEXT DX / DX DF

Data Book

DB_ME_x-MEXT-f-G02-DX_102022_EN_rev02

Flow coefficient kv defines the water flow (between 5°C and 40°C) expressed in m₃/h that cross a valve with a pressure drop of 1bar (100kPa).

With this data is possible to calculate the localized pressure drop as function of the water flow rate. dP = (Q / kv) 2

dP (bar) = localized pressure drop of valve;

Q (m₃/h) = water flow rate – it varies according to the desired operating condition;

kv (m₃/h) = valve flow coefficient.

The formula allows to calculate the value of the localized pressure drop (in bar).

The pressure drops values showed on the documentation are supplied in kPa.

Is possible to change from one unit to another through the following conversion.

1 bar = 100 kPa




AIR FILTERS REPLACEMENT FOR UNDER VERSION MACHINES SIZE M - L - XL


Thanks to the new design of the unit, it is possible to extract the air filters for routine maintenance operations from the front of the machine, both in installations with free unit intake and when there is a plenum, ducting or damper.

The air filters are foldable and allow easy extraction. When a return plenum is present, the front panel of the plenum must be removed using the screws provided to access the air filters.

When a damper is present, there is a lifting system that locks the damper in the open position, guaranteeing access to the filtering section.

When ducting is present, access to the filtering section must be provided by means of a removable door.

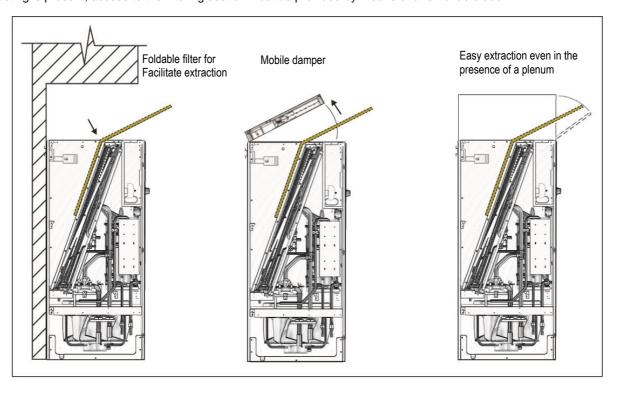

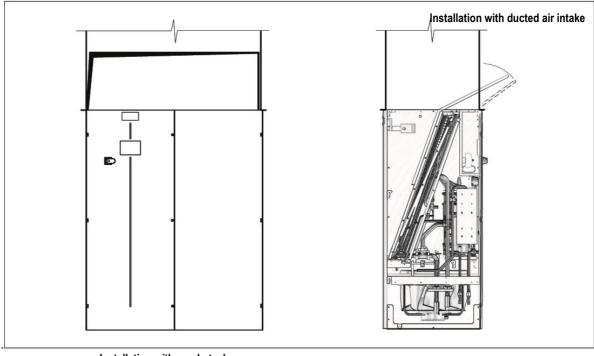

Installation with an obstacle on the upper side




SHIPMENT: PACKAGING DIMENSIONS

Values referred to basic machine. The presence of some ACCESSORIES increases the weight of machine. The machines are shipped on pallet and covered with shrink wrap.


On request packing on pallet covered with shrink wrap and wooden cage.

STANDARD PACKING DIMENSIONS: Pallet + Nylon

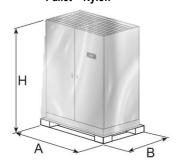

FRAME	A (mm)	B (mm)	H (mm)
M	1410	1115	2185
L	1870	1115	2185
ΧI	2830	1115	2185

OPTIONAL 9969: Pallet + Wooden cage + Nylon

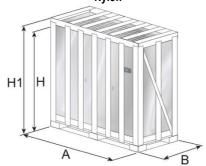

FRAME	A (mm)	B (mm)	H (mm)	H1 (*) (mm)
M	1410	1115	2275	2425
L	1870	1115	2275	2425
XL	2830	1115	2275	2425

H1 (*) = Packaging height with Damper installed on unit

SHIPMENT WEIGHT

STANDARD PACKING - DX

Model		35	38	42	47	48	54	61	70	75	76	85	98	125	136
Frame		M	M	M	M	L	L	L	L	L	XL	XL	XL	XL	XL
WEIGHT UNDER	kg	401	415	418	419	532	533	567	567	594	911	916	918	1025	1080
WEIGHT OVER	kg	393	407	410	411	515	516	550	550	578	871	876	878	985	1040

ACCESSORYO 9969: WOODEN CAGE PACKING - DX

Model		35	38	42	47	48	54	61	70	75	76	85	98	125	136
Frame		М	M	M	M	L	L	L	L	L	XL	XL	XL	XL	XL
WEIGHT UNDER	kg	446	460	463	464	584	585	619	619	646	983	988	990	1097	1152
WEIGHT UNDER (1)	kg	451	465	468	469	590	591	625	625	652	991	996	998	1105	1160
WEIGHT OVER	kg	438	452	455	456	567	568	602	602	630	943	948	950	1057	1112
WEIGHT OVER (1)	kg	443	457	460	461	573	574	608	608	636	951	956	958	1065	1120

⁽¹⁾ Machine with accessory A531 Damper on/off - WEIGHT Damper to add up

STANDARD PACKING - DF DX

Modello		35	38	42	47	48	54	61	70	75	76	85	98
Grandezza		M	M	M	M	L	L	L	L	L	XL	XL	XL
Peso UNDER	kg	457	471	474	475	607	609	642	642	670	968	972	975
Peso OVER	kg	448	462	465	466	590	592	625	625	653	927	931	934




OPTIONAL ACCESSORY 9969: WOODEN CAGE PACKING - DF DX

Model		35	38	42	47	48	54	61	70	75	76	85	98
Frame		М	M	M	M	L	L	L	L	L	XL	XL	XL
WEIGHT UNDER	kg	502	516	519	520	659	661	694	694	722	1040	1044	1047
WEIGHT UNDER (1)	kg	507	521	524	525	665	667	700	700	728	1048	1052	1055
WEIGHT OVER	kg	493	507	510	511	642	644	677	677	705	999	1003	1006
WEIGHT OVER (1)	kg	498	512	515	516	648	650	683	683	711	1007	1011	1014

⁽¹⁾ Machine with accessory A531 Damper on/off - WEIGHT Damper to add up

ACCESSORIES PACKING DIMENSIONS AND SHIPMENT WEIGHT

Dimensions/weights pallet		М	L	XL
WEIGHT pallet (to add at WEIGHT accessory)	[kg]	25	33	50
Lenght	[mm]	1410	1870	2830
Width	[mm]	1115	1115	1115
Plenum				
Packing type	[-]	Pallet +	film termor	etraibile
Height	[mm]	660	660	660
Support frame				
Packing type	[-]	Pallet +	film termor	etraibile
Height	[mm]	400	400	400

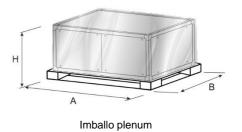

Kit additional liquid receiver		4,8L	6L	8L
Packing type	[-]	Ca	irdboard b	ox
Packing WEIGHT	[kg]	7	8	9
Leght	[mm]	500	500	500
Width	[mm]	400	400	400
height	[mm]	400	400	400




Imballo telaio di supporto


Kit dual power supply		M	L	XL
Packing type	[-]	Cardboa	ard box	Cardboard plastic
WEIGHT packing	[kg]	5	5	12
Lenght	[mm]	500	500	600
Width	[mm]	400	400	450
Height	[mm]	210	210	228,5



KIT DUAL POWER SUPPLY FOR SIZES M/L

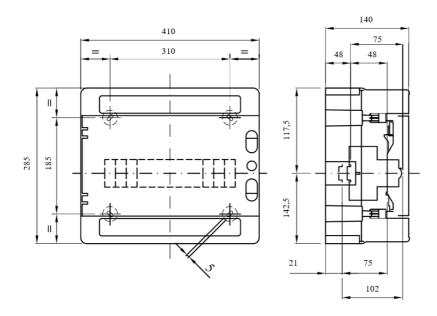

KIT DUAL POWER SUPPLY FOR SIZE XL

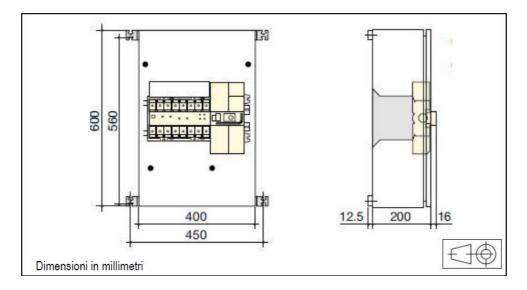



Mitsubishi Electric Europe B.V. Italian Branch

Campus, Energy Park Via Energy Park 14, 20871 Vimercate (MB)