

TECHNICAL & SERVICE MANUAL

Series PLFY Ceiling Cassettes

Indoor unit

[Model names]

PLFY-WL20VEM-E
PLFY-WL20VEM-ET
PLFY-WL25VEM-E
PLFY-WL25VEM-ET
PLFY-WL32VEM-E

PLFY-WL32VEM-ET

PLFY-WL40VEM-E

PLFY-WL40VEM-ET

PLFY-WL50VEM-E

PLFY-WL50VEM-ET

PLFY-WL63VEM-E

PLFY-WL63VEM-ET

PLFY-WL80VEM-E

PLFY-WL80VEM-ET

PLFY-WL100VEM-E

PLFY-WL100VEM-ET

PLFY-WL125VEM-E

PLFY-WL125VEM-ET

[Service Ref.]

PLFY-WL20VEM-E.UK
PLFY-WL20VEM-ET.UK
PLFY-WL25VEM-E.UK
PLFY-WL25VEM-ET.UK
PLFY-WL32VEM-E.UK
PLFY-WL32VEM-ER1.UK
PLFY-WL32VEM-ET.UK
PLFY-WL32VEM-ETR1.UK
PLFY-WL40VEM-E.UK
PLFY-WL40VEM-ER1.UK
PLFY-WL40VEM-ET.UK
PLFY-WL40VEM-ETR1.UK
PLFY-WL50VEM-E.UK
PLFY-WL50VEM-ER1.UK
PLFY-WL50VEM-ET.UK
PLFY-WL50VEM-ETR1.UK
PLFY-WL63VEM-E.UK
PLFY-WL63VEM-ET.UK
PLFY-WL80VEM-E.UK
PLFY-WL80VEM-ET.UK
PLFY-WL100VEM-E.UK
PLFY-WL100VEM-ET.UK
PLFY-WL125VEM-E.UK
PLFY-WL125VEM-ET.UK

Revision:


- PLP-6EAB has been added in REVISED EDITION-B.

UCH723A is void.

Grille model

[Model names]

PLP-6EA
PLP-6EAE
PLP-6EAL
PLP-6EAL
PLP-6EAL
PLP-6EAL
PLP-6EAL
PLP-6EAL
PLP-6EAL
PLP-6EAL
PLP-6EAL
PLP-6EAL

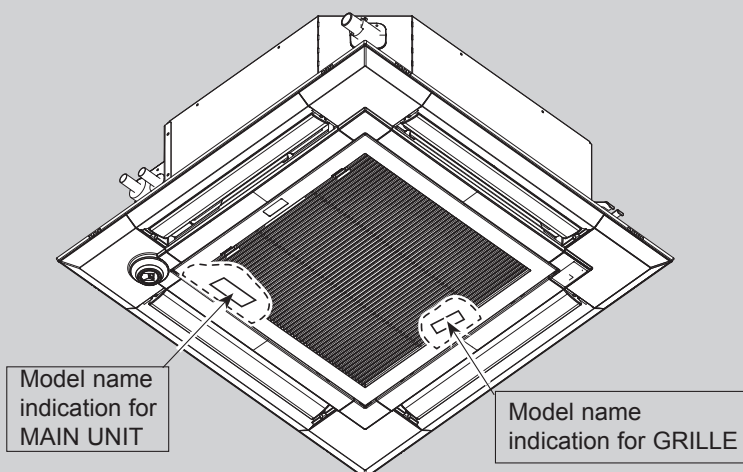

INDOOR UNIT

CONTENTS

TECHNICAL CHANGES.....	2
1. SAFETY PRECAUTION.....	2
2. PARTS NAMES AND FUNCTIONS.....	2
3. SPECIFICATIONS.....	3
4. 4-WAY AIRFLOW SYSTEM.....	9
5. OUTLINES AND DIMENSIONS.....	12
6. WIRING DIAGRAM.....	13
7. REFRIGERANT SYSTEM DIAGRAM.....	14
8. TROUBLESHOOTING.....	14
9. SPECIAL FUNCTION.....	21
10. DISASSEMBLY PROCEDURE.....	24
11. REMOTE CONTROLLER.....	31

PARTS CATALOG (OCB723)

CITY MULTI

TECHNICAL CHANGES

PLFY-WL32VEM-E.UK	→	PLFY-WL32VEM-ER1.UK
PLFY-WL32VEM-ET.UK	→	PLFY-WL32VEM-ETR1.UK
PLFY-WL40VEM-E.UK	→	PLFY-WL40VEM-ER1.UK
PLFY-WL40VEM-ET.UK	→	PLFY-WL40VEM-ETR1.UK
PLFY-WL50VEM-E.UK	→	PLFY-WL50VEM-ER1.UK
PLFY-WL50VEM-ET.UK	→	PLFY-WL50VEM-ETR1.UK

• Some connectable indoor units have been added.

1 SAFETY PRECAUTION

Cautions for units utilizing refrigerant R410A

⚠ CAUTION

Do not use the existing water piping.


Store the piping materials indoors, and keep both ends of the pipes sealed until immediately before installation. Keep the joints wrapped in plastic bags. If dust or dirt enters the water circuit, it may damage the heat exchanger and cause water leakage.

Only use water.

Only use clean water as a refrigerant. The use of water outside the specification may damage the refrigerant circuit.

2 PARTS NAMES AND FUNCTIONS

2-1. Indoor unit

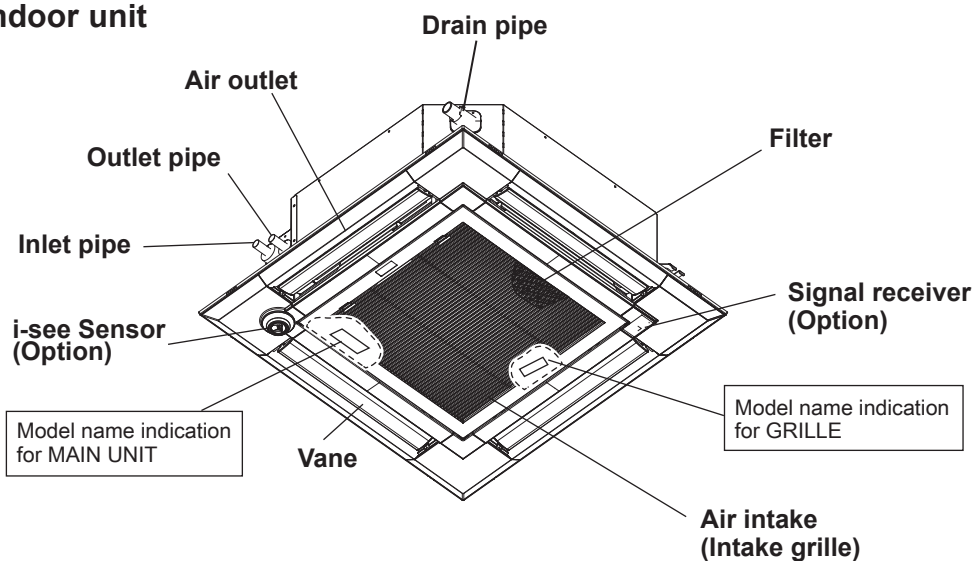

2-2. WIRED REMOTE CONTROLLER <PAR-40MAA>

The functions which can be used are restricted according to each model.

○ : Supported ✕ : Unsupported

	Function	PAR-40MAA	
		Slim	CITY MULTI
Body	Product size H × W × D (mm)	120 × 120 × 14.5	
	LCD	Full Dot LCD	
	Backlight	○	
Energy saving	Energy saving operation schedule	○	✕
	Automatic return to the preset temperature	○	
Restriction	Setting the temperature range restriction	○	
Function*	Operation lock function	○	
	Weekly timer	○	
	ON/OFF timer	○	
	High Power	○	✕
	Manual vane angle	○	

*Some functions may not be available depending on model types.

Refer to "11-1. REMOTE CONTROLLER FUNCTIONS" for details.

3-1. SPECIFICATIONS

Model			PLFY-WL20VEM-E PLFY-WL20VEM-ET	PLFY-WL25VEM-E PLFY-WL25VEM-ET	PLFY-WL32VEM-E PLFY-WL32VEM-ET	PLFY-WL40VEM-E PLFY-WL40VEM-ET	PLFY-WL50VEM-E PLFY-WL50VEM-ET
Power source			1-phase 220–240 V 50 Hz, 1-phase 220 V 60 Hz				
Cooling capacity (Nominal)	*1	kW	2.2	2.8	3.6	4.5	5.6
	*1	kcal/h	1,900	2,400	3,100	3,900	4,800
	*1	BTU/h	7,500	9,600	12,300	15,400	19,100
	*2	kcal/h	2,000	2,500	3,150	4,000	5,000
	Power input	kW	0.03				0.04
	Current input	A	0.26	0.29	0.33	0.35	0.40
Heating capacity (Nominal)	*3	kW	2.5	3.2	4.0	5.0	6.3
	*3	kcal/h	2,200	2,800	3,400	4,300	5,400
	*3	BTU/h	8,500	10,900	13,600	17,100	21,500
	Power input	kW	0.03				0.04
	Current input	A	0.20	0.23	0.27	0.29	0.34
External finish			Galvanized steel sheet				
External dimension H × W × D		mm	258 × 840 × 840				
		in	10-3/16 × 33-3/32 × 33-3/32				
Net weight		kg (lb)	18 (40)		20 (44)		
Grille	model	PLP-6EA					
	External finish		MUNSELL (1.0Y 9.2/0.2)				
	Dimension H × W × D	mm	40 × 950 × 950				
		in	1-9/16 × 37-13/32 × 37-13/32				
	Net weight		kg (lb)	5 (11)			
Heat exchanger			Cross fin (Aluminum fin and copper tube)				
FAN			Turbo fan × 1				
	External static press.	Pa	0				
		mmH ₂ O	0				
	Motor type		DC motor				
	Motor output		0.050				
	Driving mechanism		Direct-drive				
	Airflow rate (Low-Mid2- Mid1-High)	m ³ /min	12 - 13 - 14 - 15	12 - 13 - 15 - 17	14 - 15 - 16 - 17	14 - 15 - 16 - 17	14 - 16 - 18 - 20
		L/s	200 - 217 - 233 - 250	200 - 217 - 250 - 283	233 - 250 - 267 - 283	233 - 250 - 267 - 283	233 - 267 - 300 - 333
cfm		424 - 459 - 494 - 530	424 - 459 - 530 - 600	494 - 530 - 565 - 600	494 - 530 - 565 - 600	494 - 565 - 636 - 706	
Sound pressure level (Low-Mid2-Mid1-High) (measured in anechoic room)		dB <A>	24 - 26 - 27 - 28	24 - 26 - 28 - 30	26 - 27 - 29 - 30	26 - 28 - 29 - 31	27 - 29 - 31 - 33
Insulation material			PS				
Air filter			PP honeycomb				
Protection device			Fuse				
Connectable outdoor unit			HYBRID CITY MULTI/CMB-WM-V-AA, CMB-WM-V-AB/CMH-WM-V-A				
Water pipe dimensions	Water inlet	mm I.D.	20				
	Water outlet	mm I.D.	20				
Field drain pipe size		mm (in)	O.D. 32 mm (1-1/4") (PVC pipe VP-25 connectable)				
Standard attachment	Document Accessory	Installation Manual, Instruction Book					
Optional parts	Grille **1		PLP-6EA				
	Air outlet shutter plate		PAC-SJ37SP-E				
	High efficiency filter element **2		PAC-SH59KF-E				
	Multi-function casement		PAC-SJ41TM-E				
	Valve kit		PAC-SK04VK-E (WL10 to 50 available)				
			PAC-SK35VK-E (WL10 to 125 available)				
		Lead wire	PAC-SK40LW-E				
		Attachment plate	PAC-SK39AP-E				
	Remark		**1. PLFY-VEM series should be used together with PLP-6EA. **2. PAC-SJ41TM-E is necessary to use with filter PAC-SH59KF-E.				
Installation			Details on foundation work, duct work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual.				
*1 Nominal cooling condition			*2 Nominal cooling condition			*3 Nominal heating condition	
Indoor : 27°CDB/19°CWB (81°FDB/66°FWB)			27°CDB/19.5°CWB (81°FDB/67°FWB)			20°CDB (68°FDB)	
Outdoor : 35°CDB (95°FDB)			35°CDB (95°FDB)			7°CDB/6°CWB (45°FDB/43°FWB)	
Pipe length : 7.5 m (24-9/16 ft)			5 m (16-3/8 ft)			7.5 m (24-9/16 ft)	
Level difference : 0 m (0 ft)			0 m (0 ft)			0 m (0 ft)	
Notes:							
1. Nominal conditions *1 to *3 are subject to JIS B8615-1.							
2. Due to continuing improvement, above specification may be subject to change without notice.							



Model			PLFY-WL63VEM-E PLFY-WL63VEM-ET	PLFY-WL80VEM-E PLFY-WL80VEM-ET	PLFY-WL100VEM-E PLFY-WL100VEM-ET	PLFY-WL125VEM-E PLFY-WL125VEM-ET	
Power source			1-phase 220–240 V 50 Hz, 1-phase 220 V 60 Hz				
Cooling capacity (Nominal)	*1 kW		7.1	9.0	11.2	14.0	
	*1 kcal/h		6,100	7,700	9,600	12,000	
	*1 BTU/h		24,200	30,700	38,200	47,800	
	*2 kcal/h		6,300	8,000	10,000	12,500	
	Power input	kW	0.04	0.05	0.08	0.11	
	Current input	A	0.40	0.46	0.66	1.05	
Heating capacity (Nominal)	*3 kW		8.0	10.0	12.5	16.0	
	*3 kcal/h		6,900	8,600	10,800	13,800	
	*3 BTU/h		27,300	34,100	42,700	54,600	
	Power input	kW	0.04	0.05	0.08	0.11	
	Current input	A	0.34	0.40	0.60	0.99	
External finish			Galvanized steel sheet				
External dimension H × W × D		mm	298 × 840 × 840				
		in	11-47/64 × 33-3/32 × 33-3/32				
Net weight		kg (lb)	23 (51)			25 (55)	
Grille	model		PLP-6EA				
	External finish		MUNSELL (1.0Y 9.2/0.2)				
	Dimension H × W × D	mm	40 × 950 × 950				
		in	1-9/16 × 37-13/32 × 37-13/32				
	Net weight		kg (lb)	5 (11)			
Heat exchanger			Cross fin (Aluminum fin and copper tube)				
FAN			Turbo fan × 1				
	External static press.	Pa	0				
		mmH ₂ O	0				
	Motor type		DC motor				
	Motor output		0.120				
	Driving mechanism		Direct-drive				
	Airflow rate (Low-Mid2- Mid1-High)	m ³ /min	15 - 17 - 19 - 21	15 - 18 - 21 - 23	19 - 23 - 26 - 30	20 - 25 - 30 - 35	
		L/s	250 - 283 - 317 - 350	250 - 300 - 350 - 383	317 - 383 - 433 - 500	333 - 417 - 500 - 583	
cfm		530 - 600 - 671 - 742	530 - 636 - 742 - 812	671 - 812 - 918 - 1059	706 - 883 - 1059 - 1236		
Sound pressure level (Low-Mid2-Mid1-High) (measured in anechoic room)		dB <A>	27 - 29 - 31 - 33	27 - 30 - 33 - 35	31 - 35 - 37 - 40	33 - 37 - 40 - 46	
Insulation material			PS				
Air filter			PP honeycomb				
Protection device			Fuse				
Connectable outdoor unit			HYBRID CITY MULTI/CMB-WM-V-AA, CMB-WM-V-AB/CMH-WM-V-A				
Water pipe dimensions	Water inlet	mm I.D.	30				
	Water outlet	mm I.D.	30				
Field drain pipe size		mm (in)	O.D. 32 mm (1-1/4") (PVC pipe VP-25 connectable)				
Standard attachment	Document Accessory	Installation Manual, Instruction Book					
Optional parts	Grille **1		PLP-6EA				
	Air outlet shutter plate		PAC-SJ37SP-E				
	High efficiency filter element **2		PAC-SH59KF-E				
	Multi-function casement		PAC-SJ41TM-E				
	Valve kit		PAC-SK04VK-E (WL10 to 50 available)				
			PAC-SK35VK-E (WL10 to 125 available)				
		Lead wire	PAC-SK40LW-E				
		Attachment plate	PAC-SK39AP-E				
	Remark		**1. PLFY-VEM series should be used together with PLP-6EA. **2. PAC-SJ41TM-E is necessary to use with filter PAC-SH59KF-E.				
Installation			Details on foundation work, duct work, insulation work, electrical wiring, power source switch, and other items shall be referred to the Installation Manual.				
*1 Nominal cooling condition			*2 Nominal cooling condition			*3 Nominal heating condition	Unit converter
Indoor : 27°CDB/19°CWB (81°FDB/66°FWB)			27°CDB/19.5°CWB (81°FDB/67°FWB)			20°CDB (68°FDB)	kcal/h = kW × 860 Btu/h = kW × 3,412 cfm = m ³ /min × 35.31 lb = kg/0.4536 *Above specification data is subject to rounding variation.
Outdoor : 35°CDB (95°FDB)			35°CDB (95°FDB)			7°CDB/6°CWB (45°FDB/43°FWB)	
Pipe length : 7.5 m (24-9/16 ft)			5 m (16-3/8 ft)			7.5 m (24-9/16 ft)	
Level difference : 0 m (0 ft)			0 m (0 ft)			0 m (0 ft)	
Notes:							
1. Nominal conditions *1 to *3 are subject to JIS B8615-1.							
2. Due to continuing improvement, above specification may be subject to change without notice.							


3-2. ELECTRICAL PARTS SPECIFICATIONS

Model name Parts name	Symbol	PLFY-WL•VEM-E/ET								
		20	25	32	40	50	63	80	100	125
Room temperature thermistor	TH21	Resistance 0°C/15 kΩ, 10°C/9.6 kΩ, 20°C/6.3 kΩ, 25°C/5.4 kΩ, 30°C/4.3 kΩ, 40°C/3.0 kΩ								
Inlet pipe thermistor	TH22	Resistance 0°C/15 kΩ, 10°C/9.6 kΩ, 20°C/6.3 kΩ, 25°C/5.4 kΩ, 30°C/4.3 kΩ, 40°C/3.0 kΩ								
Outlet pipe thermistor	TH23	Resistance 0°C/15 kΩ, 10°C/9.6 kΩ, 20°C/6.3 kΩ, 25°C/5.4 kΩ, 30°C/4.3 kΩ, 40°C/3.0 kΩ								
Fuse (Indoor controller board)	FUSE	250 V 6.3 A								
Fan motor	MF	8-pole OUTPUT 50 W					8-pole OUTPUT 120 W			
Vane motor	MV	MSBPC20M13 DC12 V 300 Ω/phase								
Drain pump	DP	PMD-12D13ME INPUT 3 W 24ℓ/Hr								
Drain float switch	FS	Open / Short detection								
Power supply terminal block	TB2	(L, N) Rated to 330 V 30 A *								
Transmission terminal block	TB5	(M1, M2, S) Rated to 250 V 20 A *								
MA remote controller terminal block	TB15	(1, 2) Rated to 250 V 10 A *								

*Refer to WIRING DIAGRAM for the supplied voltage.

3-3. SOUND PRESSURE LEVEL

PLFY-WL •VEM-E




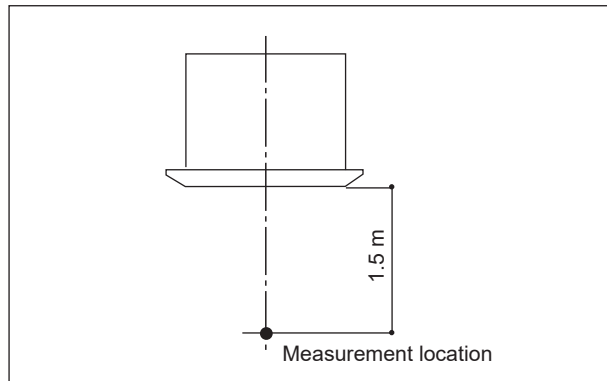


Note: Measured in anechoic room.

Sound pressure level at anechoic room : Low-Mid2-Mid1-High


Model name	Sound pressure level dB (A)
PLFY-WL20VEM-E PLFY-WL20VEM-ET	24 - 26 - 27 - 28
PLFY-WL25VEM-E PLFY-WL25VEM-ET	24 - 26 - 28 - 30
PLFY-WL32VEM-E PLFY-WL32VEM-ET	26 - 27 - 29 - 30
PLFY-WL40VEM-E PLFY-WL40VEM-ET	26 - 28 - 29 - 31
PLFY-WL50VEM-E PLFY-WL50VEM-ET	27 - 29 - 31 - 33
PLFY-WL63VEM-E PLFY-WL63VEM-ET	27 - 29 - 31 - 33
PLFY-WL80VEM-E PLFY-WL80VEM-ET	27 - 30 - 33 - 35
PLFY-WL100VEM-E PLFY-WL100VEM-ET	31 - 35 - 37 - 40
PLFY-WL125VEM-E PLFY-WL125VEM-ET	33 - 37 - 40 - 46

3-4. NC CURVES

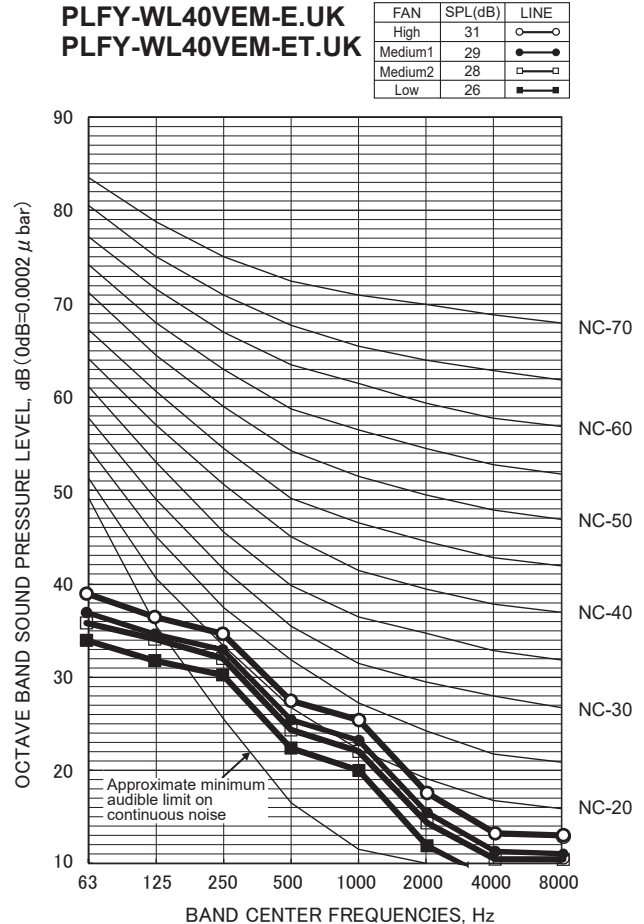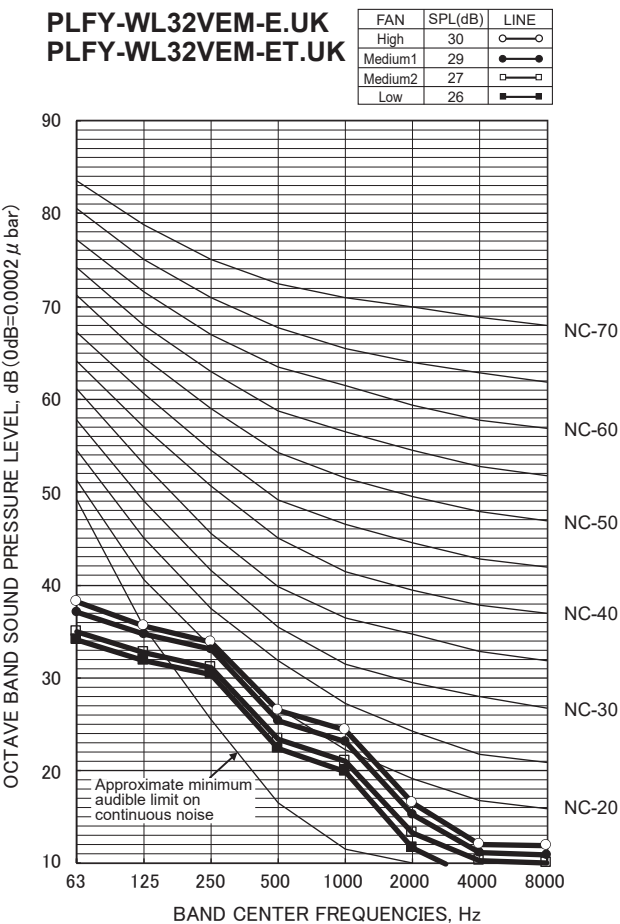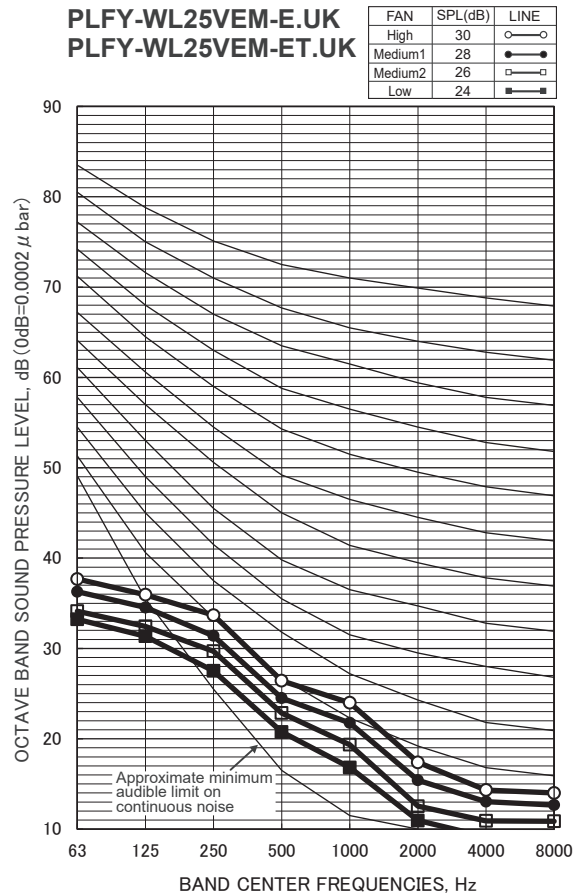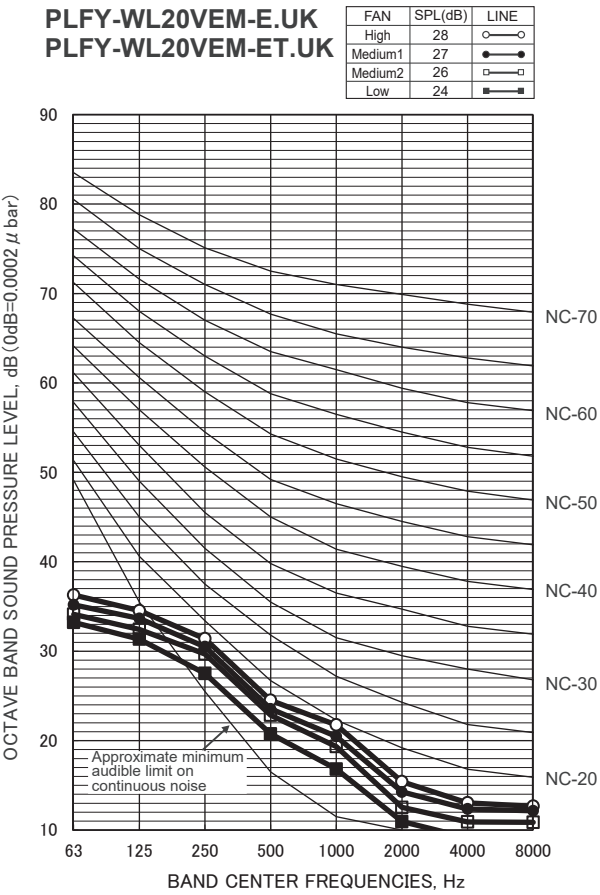


**PLFY-WL50VEM-E.UK
PLFY-WL50VEM-ET.UK**

FAN	SPL(dB)	LINE
High	33	○—○
Medium1	31	●—●
Medium2	29	□—□
Low	27	■—■

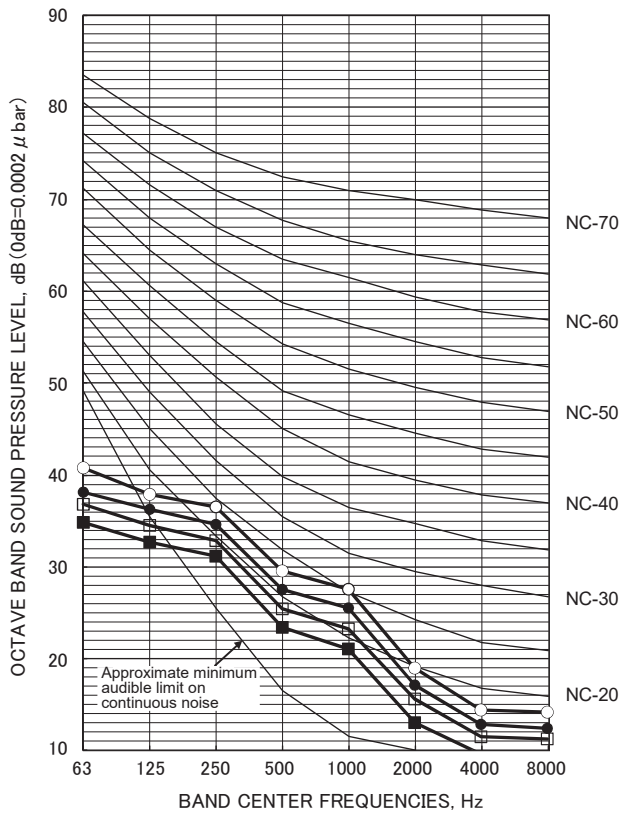


**PLFY-WL63VEM-E.UK
PLFY-WL63VEM-ET.UK**

FAN	SPL(dB)	LINE
High	33	○—○
Medium1	31	●—●
Medium2	29	□—□
Low	27	■—■

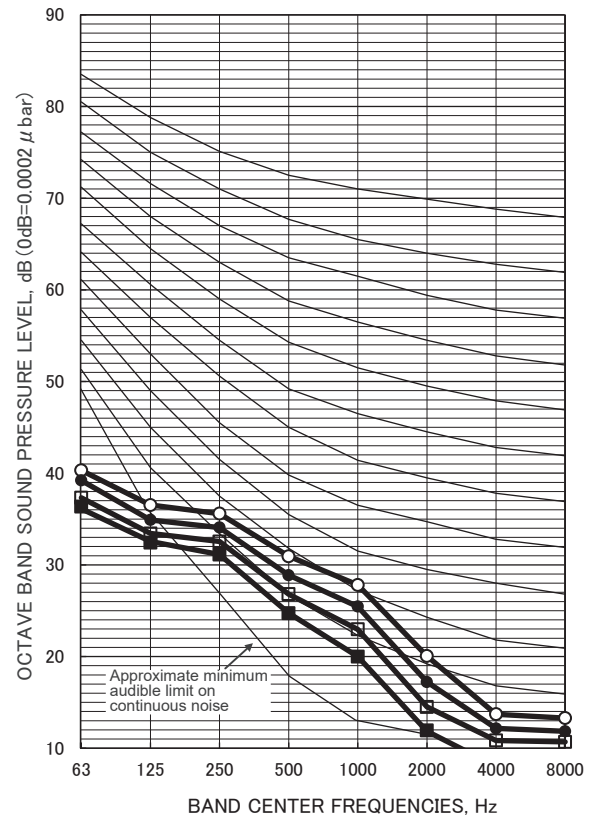


**PLFY-WL80VEM-E.UK
PLFY-WL80VEM-ET.UK**

FAN	SPL(dB)	LINE
High	35	○—○
Medium1	33	●—●
Medium2	30	□—□
Low	27	■—■

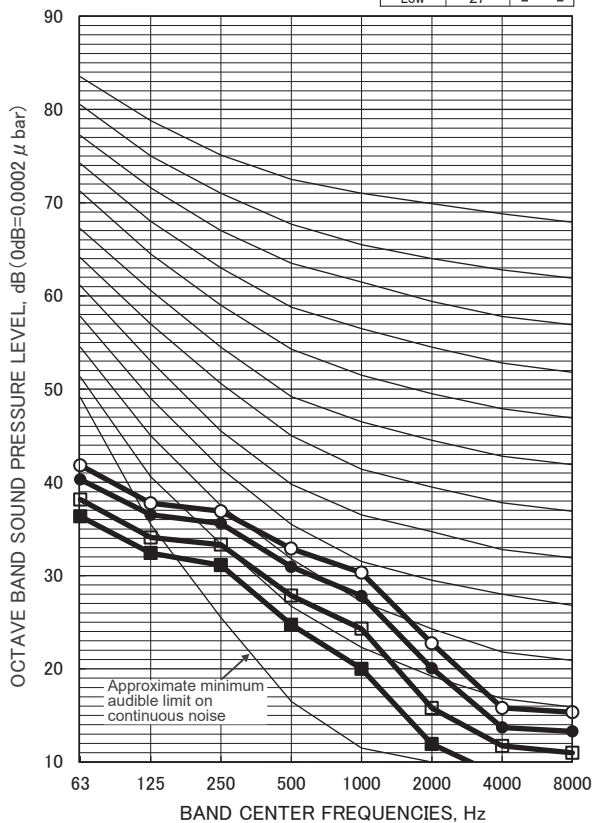


**PLFY-WL100VEM-E.UK
PLFY-WL100VEM-ET.UK**

FAN	SPL(dB)	LINE
High	40	○—○
Medium1	37	●—●
Medium2	35	□—□
Low	31	■—■

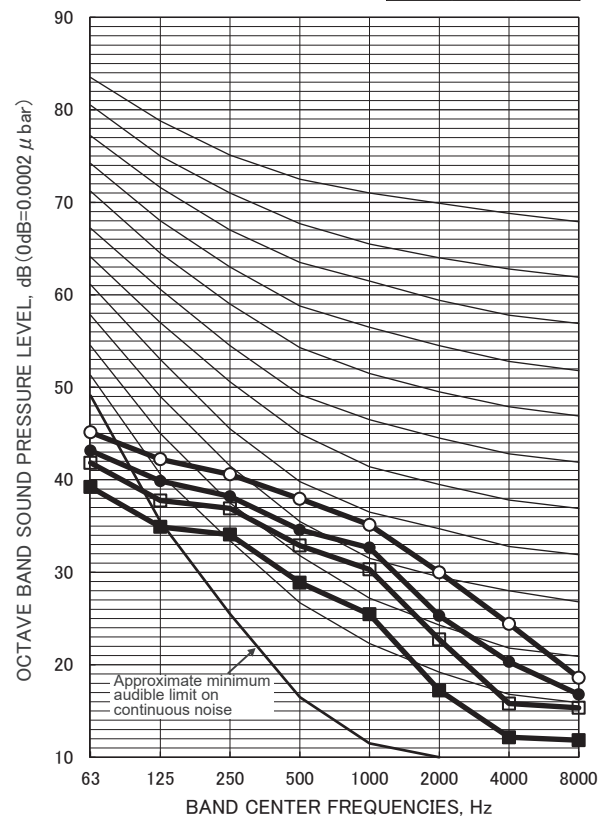

PLFY-WL125VEM-E.UK
PLFY-WL125VEM-ET.UK

FAN	SPL(dB)	LINE
High	46	○—○
Medium1	40	●—●
Medium2	37	□—□
Low	33	■—■

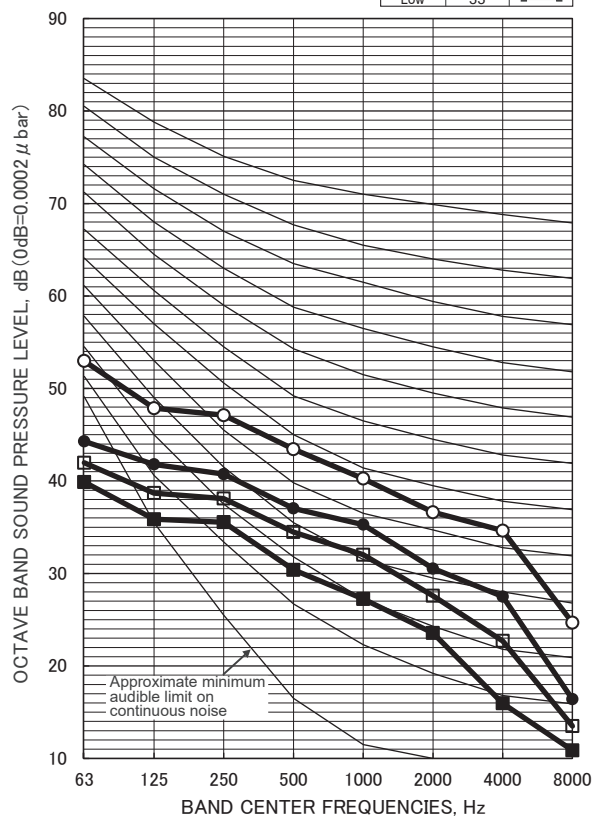




4-1. PLACEMENT OF THE AIR OUTLETS

- For this grille, the blowout direction comes in 11 patterns.

Also, by setting switch on the controller board to the appropriate settings, you can adjust the airflow and speed. Select the settings from Table1 according to the location in which you want to install the unit.

- Decide on the pattern of the airflow direction.

<Table 1>

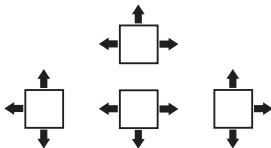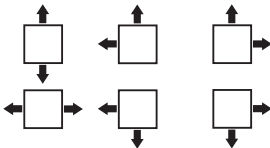
	4-direction	3-direction	2-direction
Blowout direction pattern	Pattern 1 Initial setting 	Pattern 4 1 air outlet fully closed 	Pattern 6 2 air outlet fully closed 

Note1.

For 3- and 2-direction settings, please use the air outlet shutter plate (option).

- According to the number of air outlets and height of the ceiling to install the unit, be sure to set up the switch (SW21) on the circuit board to the appropriate setting.

- Correspondence of ceiling heights to the number of air outlets

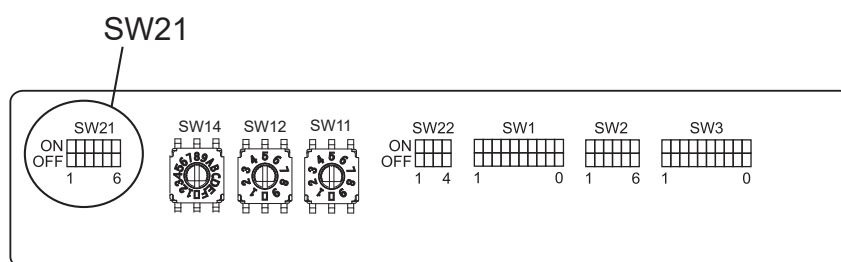

			PLFY-WL20/25/32/40/50/63/80/100/125VEM-E PLFY-WL20/25/32/40/50/63/80/100/125VEM-ET					
			Silent		Standard		High ceiling	
			SW21-1	SW21-2	SW21-1	SW21-2	SW21-1	SW21-2
			OFF	ON	OFF	OFF	ON	OFF
4 direction	SW21-3	OFF	2.5 m		2.7 m		3.5 m	
	SW21-4	ON						
3 direction	SW21-3	OFF	2.7 m		3.0 m		3.5 m	
	SW21-4	OFF						
2 direction	SW21-3	ON	3.0 m		3.3 m		3.5 m	
	SW21-4	OFF						

4-2. BRANCH DUCT HOLE AND FRESH AIR INTAKE HOLE

At the time of installation, use the duct holes (cut out) located at the positions shown in following diagram, as and when required.

- A fresh air intake hole for the optional multi-functional casement can also be made.


Note:

The figures marked with * in the drawing below represent the dimensions of the main unit excluding those of the optional multi-functional casement.

When installing the optional multi-functional casement, add 135 mm to the dimensions marked on the figure.

When installing the branch ducts, be sure to insulate adequately.

Otherwise, condensation and dripping may occur.

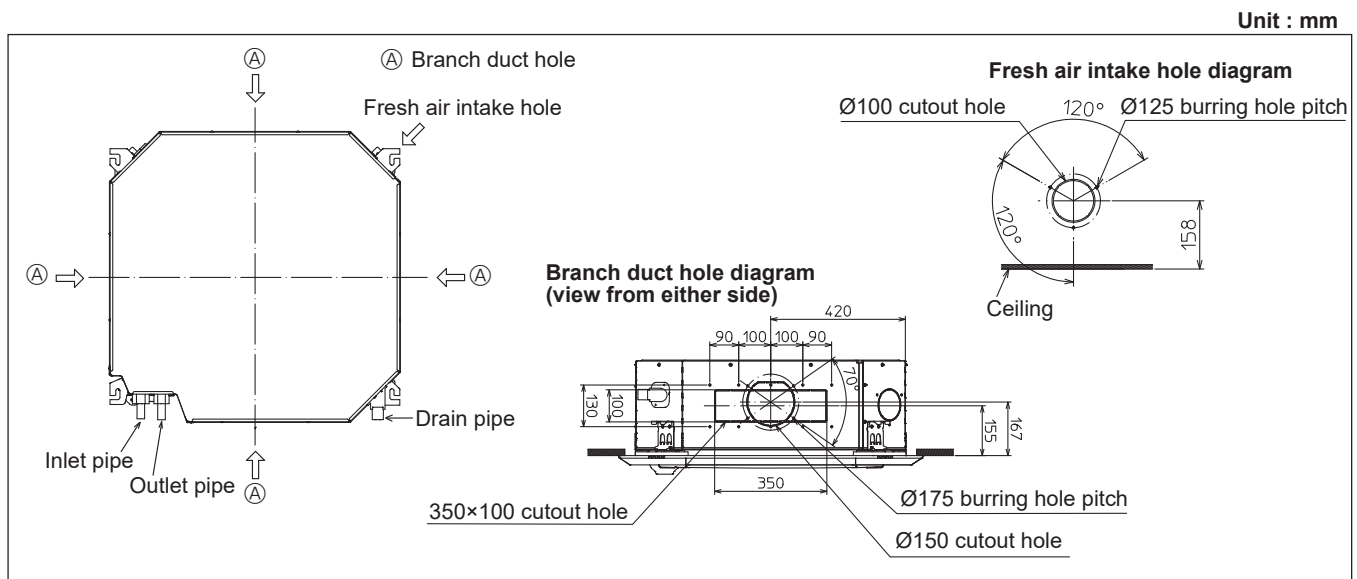


4-3. OPERATION IN CONJUNCTION WITH DUCT FAN (Booster fan)

- Whenever the indoor unit is operating, the duct fan also operates.

- (1) Connect the optional multiple remote controller adapter (PAC-SA88HA-E) to the connector CN51 on the indoor controller board.
- (2) Drive the relay after connecting the 12 VDC relay between the Yellow and Orange connector lines.

MB: Electromagnetic switch power relay for duct fan.


X: Auxiliary relay (For 12 VDC, coil rating: 1.0 W or smaller)

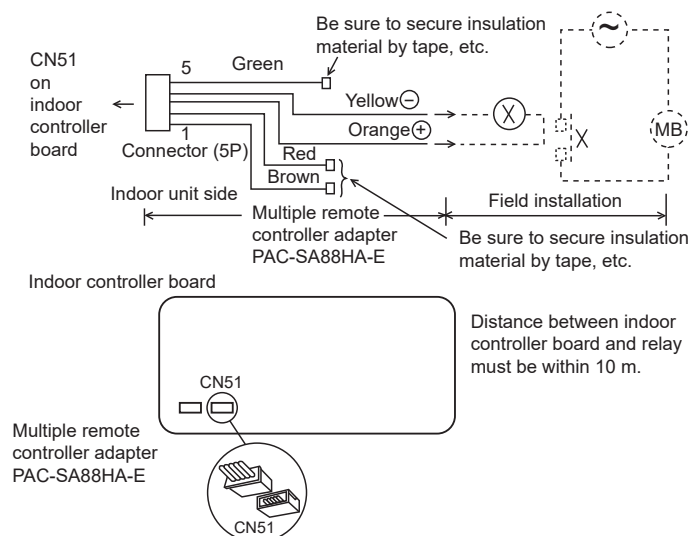


4-4. FRESH AIR INTAKE AMOUNT & STATIC PRESSURE CHARACTERISTICS

PLFY-WL20/25/32/40/50/63/80/100/125VEM-E
PLFY-WL20/25/32/40/50/63/80/100/125VEM-ET


Taking air into the unit

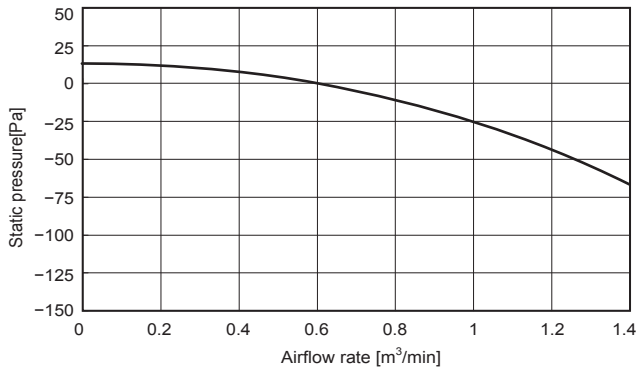


Multi-functional casement + Standard filter

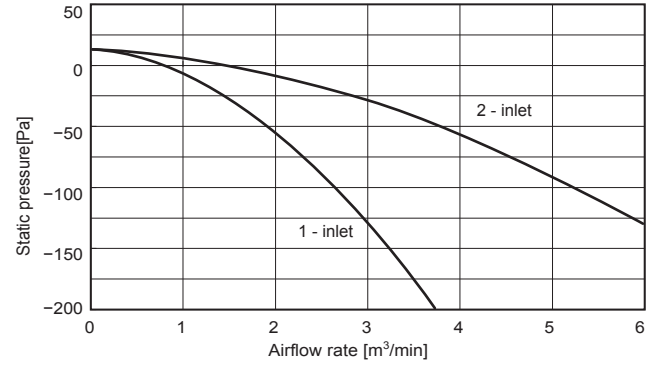

Multi-functional casement + High efficiency filter

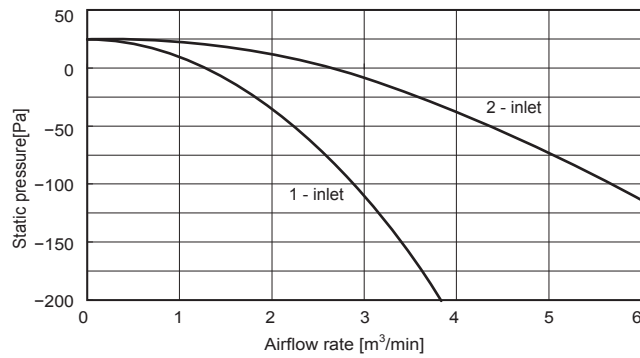

How to read curves

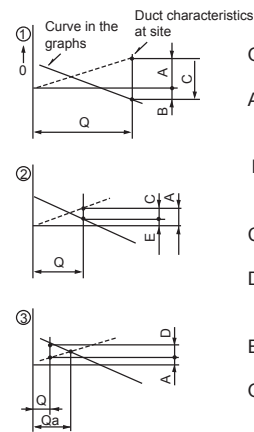

- Q...Designed amount of fresh air intake
<m³/min>
- A...Static pressure loss of fresh air
intake air duct system with airflow
amount Q <Pa>
- B...Forced static pressure at air condi-
tioner inlet with airflow amount Q
<Pa>
- C...Static pressure of booster fan with
airflow amount Q <Pa>
- D...Static pressure loss increase amount
of fresh air intake duct system for
airflow amount Q <Pa>
- E...Static pressure of indoor unit with
airflow amount Q <Pa>
- Qa...Estimated amount of fresh air
intake without D <m³/min>


Technical drawing of the automatic filter wheel unit, showing side and top views with dimensions and labels.

Side View (Top):



- Overall height: 400mm MAX
- Mounting to CEILING
- Internal components: FILTER, AIR INTAKE GRILLE

Top View (Bottom):


- Overall diameter: 158
- Mounting holes: Ø12.5 BURNING-HOLE PITCH SET-SCREWING SLOTS
- Central hole: Ø100 CIRCUT HOLE
- Angle between mounting holes: 120°
- Mounting to CEILING

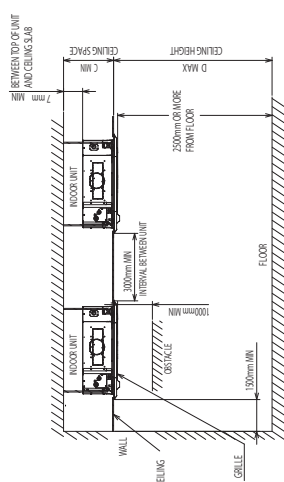


1. CHOOSE THE GAUGE NUMBER FOR THE BENCHMARK GUIDELINES.
2. REMOVE THE SUSPENSION BOLT FOR BENCHMARK RESISTANCE AS NEEDED.
3. FOR THE SUSPENSION BOLT, USE AN ISO M10 X 18.
4. FOR SAMPLE 1, USE P1 25, Q12, Q37, Q42, Q80 (PROCURED AT THE LOCAL SITE).
5. BASE SAMPLE 10MM FROM THE CEILING.
- 5.1. ELECTRIC ALUMINUM BAR BEING USED FOR THE SUSPENSION.
6. MAKE SURE TO SLACK THE ELECTRICAL WIRE UTILITER BOLT.
7. CONTROL THE WIRE'S CONNECTION.
8. HEIGHT OF THE HOOK UNIT IS 560 TO BE ADJUSTED.
9. WHEN INSTALLING THE BAW-HOOKS, BE SURE TO INSURE ARE ADEQUATELY OVERLAPPING AND DRIPPING WIRE INSIDE.
10. IT BECOMES THE CAUSE OF EMPLOYERS MEAN END.
11. AS FOR THE NECESSARY INSTALLATION SERVICE, PLEASE REFER TO THE
12. FOR THE DIFFERENCE IN THE OPTIMAL HANGING HEIGHT, REFER TO
13. A FULL FUNCTIONAL CASHMENT. REFER TO SPECIAL DRAWING.

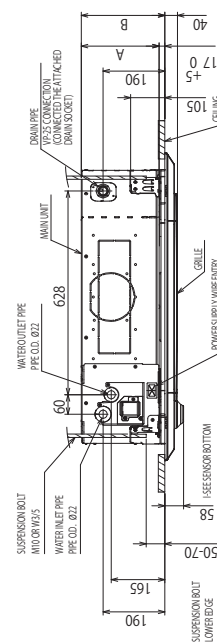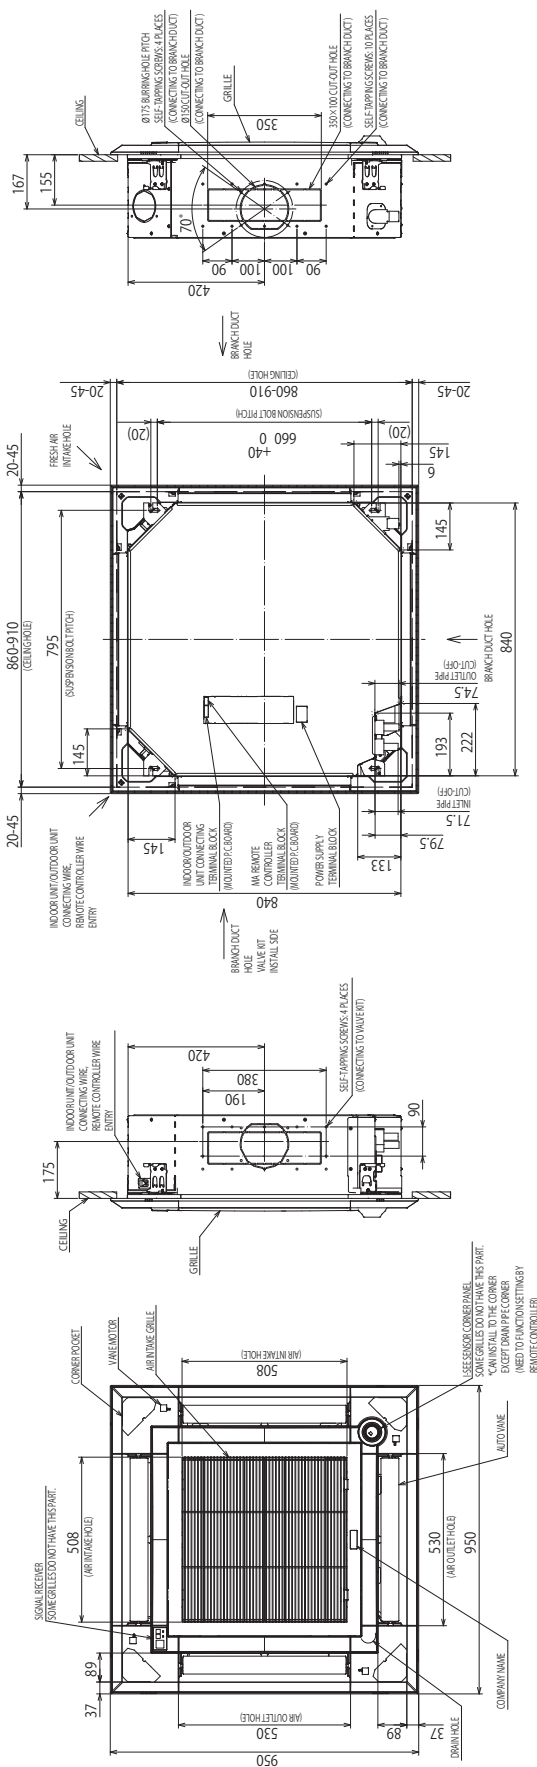

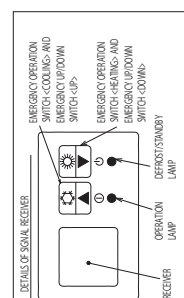

MODELS		A	B	C	D
ML	20/25/32/40/50	241	258	265	3500
	63/80				
	100/115F	281	298	305	4500



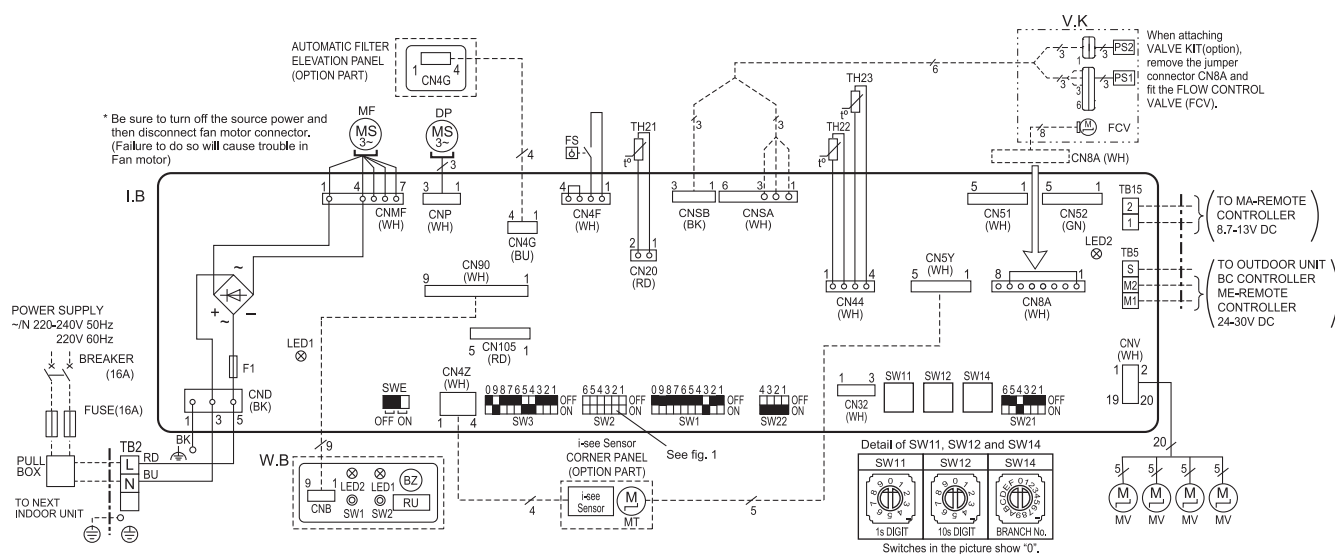








WIRING DIAGRAM



NOTES:

1. At servicing for outdoor unit, always follow the wiring diagram of outdoor unit.
2. In case of using MA-Remote controller, please connect to TB15.
(Remote controller wire is non-polar.)
3. In case of using ME-Remote controller, please connect to TB5.
(Transmission line is non-polar.)
4. Symbol [S] of TB5 is the shield wire connection.
5. Symbols used in wiring diagram are,
 : terminal block,
  : connector.
6. The setting of SW2 differs in the capacity.
For the detail, refer to the fig. 1.
7. Make sure to turn off the indoor and the outdoor units before replacing indoor controller board.
8. ■ is the switch position.

<fig. 1> SW2 (CAPACITY CODE)


MODELS	SW2	MODELS	SW2	MODELS	SW2
WL20	ON OFF  1 2 3 4 5 6	WL25	ON OFF  1 2 3 4 5 6	WL32	ON OFF  1 2 3 4 5 6
WL40	ON OFF  1 2 3 4 5 6	WL50	ON OFF  1 2 3 4 5 6	WL63	ON OFF  1 2 3 4 5 6
WL80	ON OFF  1 2 3 4 5 6	WL100	ON OFF  1 2 3 4 5 6	WL125	ON OFF  1 2 3 4 5 6

【LEGEND】

SYMBOL		NAME		SYMBOL		NAME	
I	B	INDOOR CONTROLLER BOARD		TH21	TERMISTOR	ROOM TEMP. DETECTION (0°C/15kΩ, 25°C/5.4kΩ)	
CN32	CONNECTOR	REMOTE SWITCH		TH22		PIPE TEMP. DETECTION / INLET (0°C/15kΩ, 25°C/5.4kΩ)	
CN52		CENTRALLY CONTROL		TH23		PIPE TEMP. DETECTION / OUTLET (0°C/15kΩ, 25°C/5.4kΩ)	
CN105		REMOTE INDICATION					
		IT TERMINAL					
F1	FUSE (T 6.3AL 250V)						
SW1	SWITCH	MODE SELECTION		T82	TERMINAL	POWER SUPPLY	
SW2		CAPACITY CODE		B5	BLOCK	TRANSMISSION	
SW3		MODE SELECTION		TB15		MA-REMOTE CONTROLLER	
SW11		ADDRESS SETTING 1s DIGIT		OPTION PART			
SW12		ADDRESS SETTING 10s DIGIT		W.B	PCB FOR WIRELESS REMOTE CONTROLLER		
SW14		BRANCH NO.		BZ	BUZZER		
SW21		CEILING HEAT		LED1	LED (OPERATION INDICATION - GREEN)		
		DISCHARGE OUTLET NUMBER		LED2	LED (PREPARATION FOR HEATING - ORANGE)		
		OPTION SELECTOR		RU	RECEIVING UNIT		
SW22		PAIR NO. (SETTING)		SW1	EMERGENCY OPERATION (HEAT / DOWN)		
WE		DRAIN PUMP (TEST MODE)		SW2	EMERGENCY OPERATION (COOL / UP)		
DP	DRAIN PUMP			MT	1-see SENSOR MOTOR		
FS	DRAIN FLOAT SWITCH			V.K	VALVE KIT		
MF	FAN MOTOR			PS1	PRESSURE SENSOR 1 (INLET)		
MV	VANE MOTOR			PS2	PRESSURE SENSOR 2 (OUTLET)		
				FCV	FLOW CONTROL VALVE		

LED on indoor board for service





Mark	Meaning	Function
LED1	Main power supply	Main Power supply (Indoor unit:220-240V AC) power on → lamp is lit
LED2	Power supply for MA-Remote controller	Power supply for MA-Remote controller on → lamp is lit


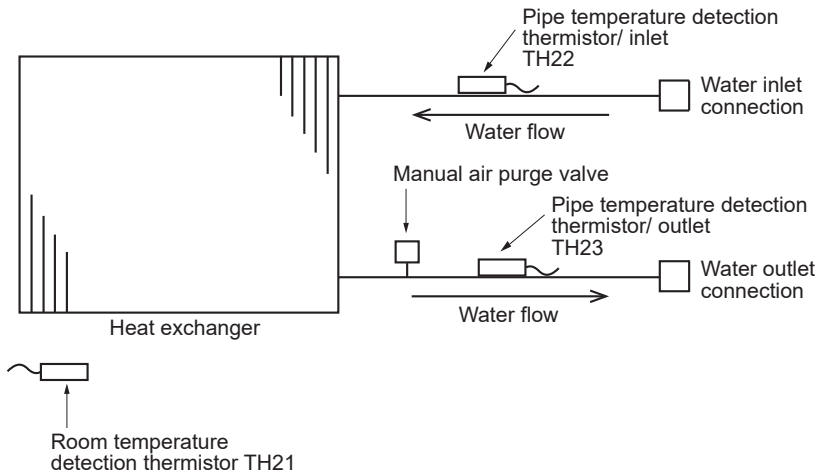


WATER PIPE CONNECTION SIZE

Item	Model name	PLFY-WL20/25/32/40/50VEM-E PLFY-WL20/25/32/40/50VEM-ET	PLFY-WL63/80/100/125VEM-E PLFY-WL63/80/100/125VEM-ET
Water outlet		Min. I.D. 20 [mm]	Min. I.D. 30 [mm]
Water inlet		Min. I.D. 20 [mm]	Min. I.D. 30 [mm]

8-1. HOW TO CHECK THE PARTS

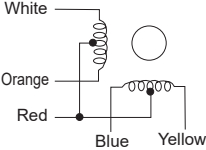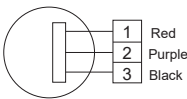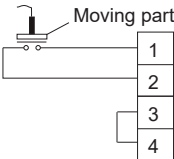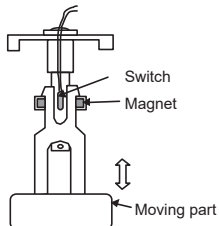Parts name	Checkpoints		
Room temperature detection thermistor (TH21) Pipe temperature detection thermistor/inlet (TH22) Pipe temperature detection thermistor/outlet (TH23)	Disconnect the connectors, then measure the resistance with a multimeter. (At ambient temperatures of 10 to 30℃) Refer to “8-1-1. Thermistor” for details.		
Vane motor (MV) 	Measure the resistance between the terminals with a multimeter. (At ambient temperatures of 20 to 30℃)		
	Connector	Normal	Abnormal
	Red - Yellow (⑤-③, ⑩-⑧, ⑮-⑬, ⑳-⑱)	300 Ω ± 7%	Open or short
	Red - Blue (⑤-①, ⑩-⑥, ⑮-⑪, ⑳-⑭)		
	Red - Orange (⑤-④, ⑩-⑨, ⑮-⑭, ⑳-⑱)		
	Red - White (⑤-②, ⑩-⑦, ⑮-⑫, ⑳-⑰)		
Drain pump (DP) 	<p>① Check if the drain float switch works properly.</p> <p>② Check if the drain pump works and drains water properly in cooling operation.</p> <p>③ If no water drains, confirm that the check code 2502 will not be displayed 10 minutes after the operation starts.</p> <p>Note: The drain pump for this model is driven by the internal DC motor, so it is not possible to measure the resistance between the terminals.</p> <p>Normal</p> <p>Red-Black: Input 13 VDC → The fan starts to rotate.</p> <p>Purple-Black: Abnormal (check code 2502) if it outputs 0-13 V square wave (5 pulses/rotation), and the number of rotation is not normal.</p>		
Fan motor (MF)	Refer to “8-1-4. DC Fan motor (fan motor/indoor controller board)”.		
Drain float switch (FS) 	Measure the resistance between the terminals with a multimeter.		
	State of moving part	Normal	Abnormal
	UP	Short	Other than short
	DOWN	Open	Other than open

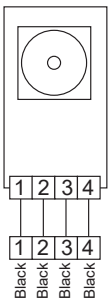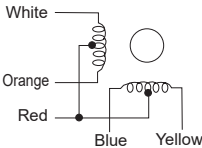Parts name	Checkpoints														
<div>i-see Sensor</div> <div></div>	<p>Turn the power ON while the i-see Sensor connector is connected to the CN4Z on indoor controller board. A communication between the indoor controller board and i-see Sensor board is made to detect the connection.</p> <p>Normal: When the operation starts, the motor for i-see Sensor is driven to rotate the i-see Sensor. Abnormal: The motor for i-see Sensor is not driven when the operation starts.</p> <p>Note: The voltage between the terminals cannot be measured accurately since it is pulse output.</p>														
<div>i-see Sensor motor (MT) (Option)</div> <div></div>	<p>Measure the resistance between the terminals with a multimeter. (At ambient temperatures of 20 to 30°C)</p> <table><tr><th>Connector</th><th>Normal</th><th>Abnormal</th></tr><tr><td>Red - Yellow</td><td rowspan="4">250 Ω ± 7%</td><td rowspan="4">Open or short</td></tr><tr><td>Red - Blue</td></tr><tr><td>Red - Orange</td></tr><tr><td>Red - White</td></tr></table>	Connector	Normal	Abnormal	Red - Yellow	250 Ω ± 7%	Open or short	Red - Blue	Red - Orange	Red - White					
Connector	Normal	Abnormal													
Red - Yellow	250 Ω ± 7%	Open or short													
Red - Blue															
Red - Orange															
Red - White															
<div>Pressure sensor (Optional parts)</div>	<div><div><div>▪ Pressure sensor (inner water) PS1</div><div>▪ Pressure sensor (outlet water) PS2</div><div>1. Check that the pressure sensor is connected.</div><div>2. Check the pressure sensor wiring for breakage.</div></div><div><div>Pressure 0-1.0 MPa [145 psi] Vout 0.5-4.5 V</div><div>0.392 V/ 0.098 MPa [14 psi]</div><div>Pressure [MPa] = 0.25 × Vout [V] - 0.125</div><div>Pressure [psi] = (0.25 × Vout [V] - 0.125) × 145</div></div><div><div><div><div>PS1</div><div><div>GND(RED)</div><div>Vout(Brown)</div><div>Vcc(DC5V)(Orange)</div></div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div><div>Connector CNSA (White)</div></div><div><div>PS2</div><div><div>GND(Blue)</div><div>Vout(White)</div><div>Vcc(DC5V)(Yellow)</div></div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div></div><div>Connector CNSB (Black)</div></div></div></div></div>														
<div>Flow control valve (FCV)</div> <div><div><div><div><div>M</div><div>FCV (Optional parts)</div></div><div><div>Yellow</div><div>Orange</div><div>Red</div><div>Green</div><div>Blue</div><div>Purple</div><div>White</div><div>Gray</div></div><div><div>1</div><div>2</div><div>3</div><div>4</div><div>5</div><div>6</div><div>7</div><div>8</div></div></div></div></div>	<p>Disconnect the connector then measure the resistance between terminals with a multimeter. Refer to "8-1-2. Flow control valve".</p> <table><tr><th colspan="4">Normal</th><th>Abnormal</th></tr><tr><td>1-5 Purple-Brown</td><td>2-5 Orange-Brown</td><td>3-5 Blue-Brown</td><td>4-5 Green-Brown</td><td rowspan="2">Open or short</td></tr><tr><td colspan="4">55 Ω ± 5.6 Ω (at 25°C)</td></tr></table>	Normal				Abnormal	1-5 Purple-Brown	2-5 Orange-Brown	3-5 Blue-Brown	4-5 Green-Brown	Open or short	55 Ω ± 5.6 Ω (at 25°C)			
Normal				Abnormal											
1-5 Purple-Brown	2-5 Orange-Brown	3-5 Blue-Brown	4-5 Green-Brown	Open or short											
55 Ω ± 5.6 Ω (at 25°C)															

8-1-1. Thermistor

<Thermistor characteristic graph>

Thermistors for lower temperature


Room temperature detection thermistor (TH21)
Pipe temperature detection thermistor/inlet (TH22)
Pipe temperature detection thermistor/outlet (TH23)

Thermistor $R_0=15 \text{ k}\Omega \pm 3\%$
Fixed number of $B=3480 \pm 1\%$

$$R_t = 15 \exp \left\{ 3480 \left(\frac{1}{273+t} - \frac{1}{273} \right) \right\}$$

0°C	15 kΩ
10°C	9.6 kΩ
20°C	6.3 kΩ
25°C	5.4 kΩ
30°C	4.3 kΩ
40°C	3.0 kΩ

< Thermistor for lower temperature >

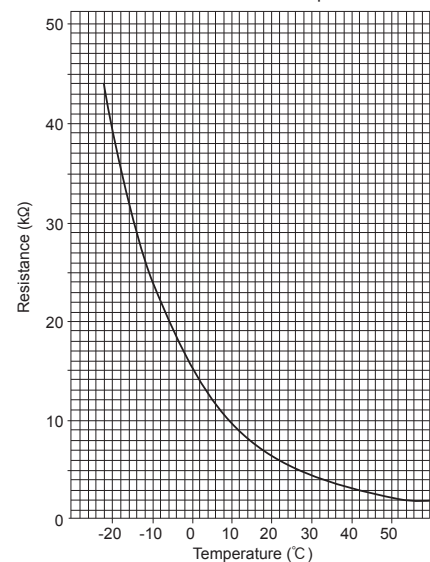


8-1-2. Flow control valve

1) Summary of flow control valve (FCV) operation

- The FCV is operated by a stepping motor, which operates by receiving a pulse signal from the indoor control board.
- The FCV position changes in response to the pulse signal.

Indoor control board and FCV connection

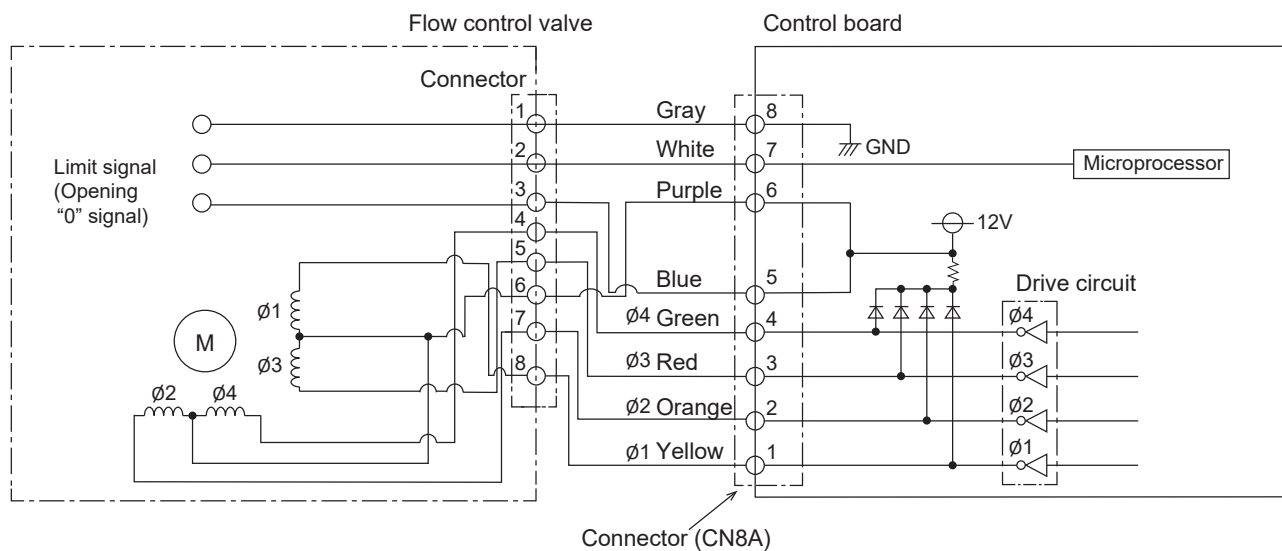


Pulse signal output and valve operation

Output (phase) number	Output status			
	1	2	3	4
ø1	OFF	ON	ON	OFF
ø2	ON	ON	OFF	OFF
ø3	ON	OFF	OFF	ON
ø4	OFF	OFF	ON	ON

The output pulse changes in the following order:


When the valve closes 1 → 2 → 3 → 4 → 1
 When the valve opens 4 → 3 → 2 → 1 → 4

2) FCV operation

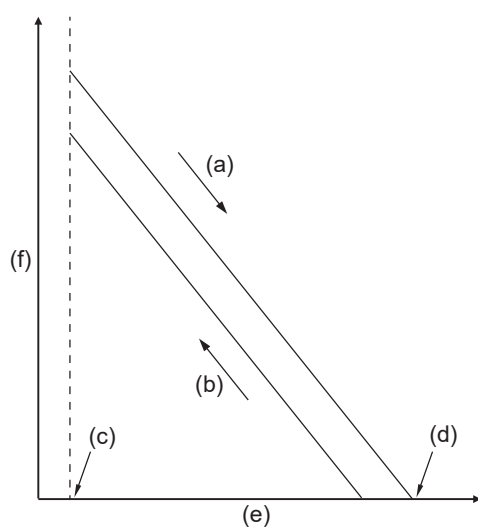

- (a) Close
- (b) Open
- (c) Fully open valve (85 pulses)
- (d) Fully close valve (770 pulses)
- (e) No. of pulses
- (f) Valve opening degree

8-1-3. Drain pump



1. Check if the drain float switch works properly.
2. Check if the drain pump works and drains water properly in cooling operation.
3. If no water drains, confirm that the check code 2502 will not be displayed 10 minutes after the operation starts.

Note: The drain pump for this model is driven by the internal DC motor, so it is not possible to measure the resistance between the terminals.

Normal

Red–Black: Input 13 VDC → The fan starts to rotate.

Purple–Black: Abnormal (check code 2502) if it outputs 0–13 V square wave (5 pulses/rotation), and the number of rotation is not normal.

8-1-4. DC Fan motor (fan motor/indoor controller board)


Check method of indoor fan motor (fan motor/indoor controller board)

① Notes

- High voltage is applied to the connector (CNMF) for the fan motor. Pay attention to the service.
- Do not pull out the connector (CNMF) for the motor with the power supply on.
(It causes trouble of the indoor controller board and fan motor.)





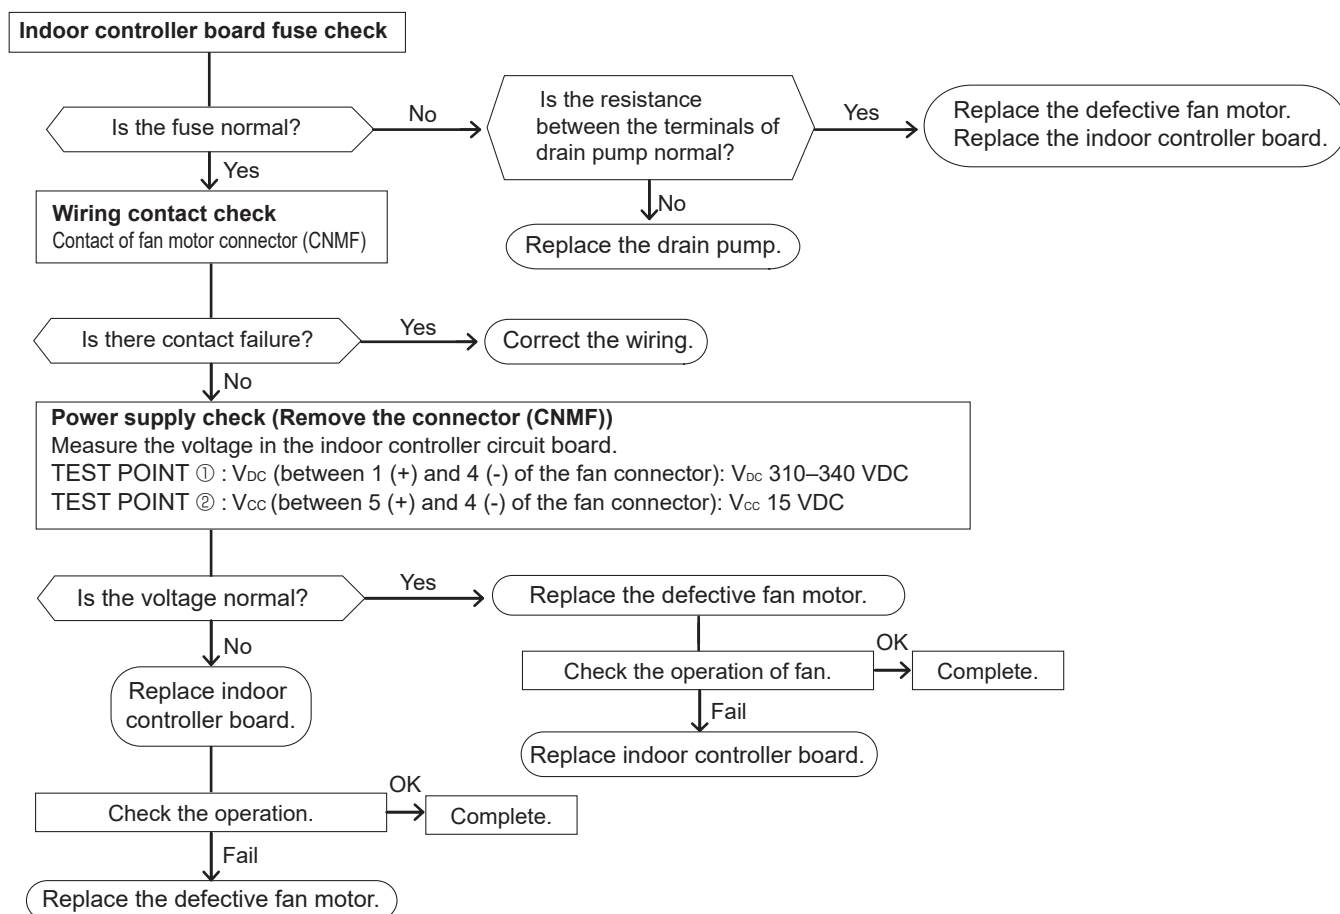
























② Self check

Conditions : The indoor fan cannot rotate.



8-2. FUNCTION OF DIP SWITCH

The black square (■) indicates a switch position.

Switch	Pole	Function	Operation by switch		Effective timing	Remarks																								
			ON	OFF																										
SW1 Function Selection	1	Thermistor <Room temperature detection> position	Built-in remote controller	Indoor unit	Under suspension	<div><Initial setting></div> <div>ON </div> <div>*1 Refer to <Table A> below.</div>																								
	2	Filter clogging detection	Provided	Not provided																										
	3	Filter cleaning	2,500 hr	100 hr																										
	4	Fresh air intake	Effective	Not effective																										
	5	Switching remote display	Thermo-ON signal display	Indicating fan operation ON/OFF																										
	6	—	—	—																										
	7	Airflow set in the case of thermo-OFF at heating mode	Low*1	Extra low*1																										
	8	Auto restart function	Setting airflow*1	Depends on SW1-7																										
	9	Power ON/OFF by breaker	Effective	Not effective																										
	0																													
SW2 Capacity code setting	1–6	<table><tr><td>MODELS</td><td>SW2</td><td>MODELS</td><td>SW2</td><td>MODELS</td><td>SW2</td></tr><tr><td>WL20</td><td></td><td>WL25</td><td></td><td>WL32</td><td></td></tr><tr><td>WL40</td><td></td><td>WL50</td><td></td><td>WL63</td><td></td></tr><tr><td>WL80</td><td></td><td>WL100</td><td></td><td>WL125</td><td></td></tr></table>			MODELS	SW2	MODELS	SW2	MODELS	SW2	WL20		WL25		WL32		WL40		WL50		WL63		WL80		WL100		WL125		Before power supply ON	Set while the unit is off. <Initial setting> Set for each capacity.
	MODELS	SW2	MODELS	SW2	MODELS	SW2																								
	WL20		WL25		WL32																									
	WL40		WL50		WL63																									
	WL80		WL100		WL125																									
	SW3 Function setting	1	Heat pump/Cooling only	Cooling only	Heat pump	Under suspension	<div><Initial setting></div> <div>ON </div> <div>*2 Refer to <Table D> below for SW3-5 and SW3-6.</div>																							
		2	—	—	—	Before power supply ON																								
		3	3D i-see Sensor positioning	The setting depends on the combination of SW3-3 and SW3-4. Refer to <Table B> below.		Under suspension																								
		4	Vane horizontal angle ①	Second setting*2	First setting*2																									
		5	Vane horizontal angle ②	Third setting*2	Depends on SW3-5																									
6		—	—	—																										
7		Heat 4 degrees up	Not effective	Effective																										
8		3D i-see Sensor ceiling height setting	The setting depends on the combination of SW3-9 and SW3-10. Refer to <Table C> below.																											
9																														
0																														

<Table A>

SW1-7	SW1-8	
OFF	OFF	Extra low
ON	OFF	Low
OFF	ON	Setting airflow
ON	ON	stop

<Table B>

SW3-3	SW3-4	
OFF	OFF	Setting ①
ON	OFF	Setting ②
OFF	ON	Setting ③
ON	ON	Setting ④

<Table C>

SW3-9	SW3-10	
OFF	OFF	Low ceiling
ON	OFF	Standard
OFF	ON	High ceiling
ON	ON	(High ceiling)

<Table D>

SW3-5	SW3-6	Vane setting	Initial setting	Setting	Vane position
OFF	OFF	Setting ①		Standard	Standard
ON	OFF	Setting ②	●	Less draft*3	Upward position than the standard
OFF	ON	Setting ③		Less smudging	Downward position than the standard
ON	ON	Unused		—	—














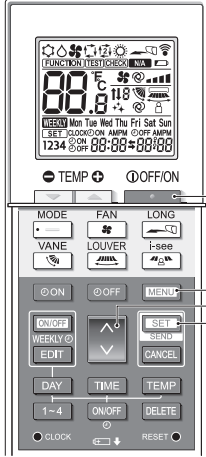
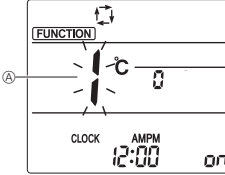
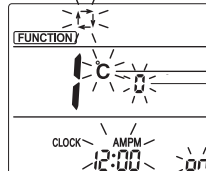



*3 In this setting, the ceiling may be smudged.

<Table E>

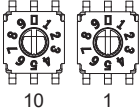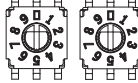Ceiling height		PLFY-WL20/25/32/40/50/63/80/100/125VEM-E PLFY-WL20/25/32/40/50/63/80/100/125VEM-ET					
		Silent		Standard		High ceiling	
Blowout directions		SW21-1	SW21-2	SW21-1	SW21-2	SW21-1	SW21-2
		OFF	ON	OFF	OFF	ON	OFF
4 directions	SW21-3	OFF					
	SW21-4	ON					
3 directions	SW21-3	OFF					
	SW21-4	OFF					
2 directions	SW21-3	ON					
	SW21-4	OFF					


Note: The setting with indicates the initial setting; To change it to other than , switch setting is necessary.

Continue to the next page

Switch	Pole	Function	Operation by switch		Effective timing	Remarks																																								
			ON	OFF																																										
SW11 1s digit address setting SW12 10s digit address setting	Rotary switch	<div>SW12 SW11</div> <div></div>	Address setting should be done when M-NET remote controller is being used.		Before power supply ON	<Initial setting> SW12 SW11 <div></div> This figure means "0".																																								
SW14 Connection No. setting	Rotary switch	<div>SW14</div> <div></div>	This is the switch to be used when the indoor unit is operated with R2 series outdoor unit as a set.			<Initial setting> SW14 <div></div> This figure means "0".																																								
SW21 Function Selection	1	Setting the ceiling height	Depending on the combination of SW21-1 and SW21-2. Refer to <Table E> on the previous page.		Under suspension	<Initial setting> ON  OFF  1 2 3 4 5 6																																								
	2	Setting the ceiling height	Depending on the combination of SW21-3 and SW21-4. Refer to <Table E> on the previous page.																																											
	3	Setting the number of air outlet	Option				Standard																																							
	4	Setting the number of air outlet	Not used				Not used																																							
	5	Setting for optional parts	Not used				Not used																																							
	6	Not used	Not used				Not used																																							
SW22 Function selection	Switch	<table><thead><tr><th></th><th>Function</th><th>ON</th><th>OFF</th></tr></thead><tbody><tr><td>1</td><td>—</td><td>—</td><td>—</td></tr><tr><td>2</td><td>—</td><td>—</td><td>—</td></tr><tr><td>3</td><td>Pair No. of wireless remote controller</td><td colspan="2" rowspan="2">Depends on the combination of SW22-3 and 22-4</td></tr><tr><td>4</td><td>Pair No. of wireless remote controller</td></tr></tbody></table> <ul style="list-style-type: none">To operate each indoor unit by each remote controller when installed 2 indoor units or more are near, Pair No. setting is necessary.<ul style="list-style-type: none">Pair No. setting is available with the 4 patterns.Make setting for SW22-3, 22-4 of indoor controller board and the Pair No. of wireless remote controller.Pair No. setting is not set necessarily when operating it by one remote controller.<ol style="list-style-type: none">Setting for indoor unit<ul style="list-style-type: none">Set SW22-3, 22-4 on the indoor controller board according to the table below.Wireless remote controller pair number:<ul style="list-style-type: none">Setting operation (Fig. 1 A)<ol style="list-style-type: none">Press the  button ① to stop the air conditioner.Press the  button ②.Check that function No."1" is displayed, and then press the  button ③. The Screen display setting screen will be displayed. (Fig. 2.)Pair No. changing operation (Fig. 2 B)<ol style="list-style-type: none">Press the  button ④.Each time the  button ④ is pressed, the pair No.0-3 changes.Press the  button ③ to check the setting.Press the  button ②. <table><thead><tr><th colspan="2">Indoor unit SW22</th><th colspan="2">Pair No. of wireless remote controller</th></tr><tr><th>SW22-3</th><th>SW22-4</th><th></th><th></th></tr></thead><tbody><tr><td>ON</td><td>ON</td><td>0</td><td>Initial setting</td></tr><tr><td>OFF</td><td>ON</td><td>1</td><td>—</td></tr><tr><td>ON</td><td>OFF</td><td>2</td><td>—</td></tr><tr><td>OFF</td><td>OFF</td><td>3-9</td><td>—</td></tr></tbody></table>		Function	ON	OFF	1	—	—	—	2	—	—	—	3	Pair No. of wireless remote controller	Depends on the combination of SW22-3 and 22-4		4	Pair No. of wireless remote controller	Indoor unit SW22		Pair No. of wireless remote controller		SW22-3	SW22-4			ON	ON	0	Initial setting	OFF	ON	1	—	ON	OFF	2	—	OFF	OFF	3-9	—	Under operation or suspension	<Initial setting>   Fig. 1  Fig. 2
			Function	ON	OFF																																									
1	—	—	—																																											
2	—	—	—																																											
3	Pair No. of wireless remote controller	Depends on the combination of SW22-3 and 22-4																																												
4	Pair No. of wireless remote controller																																													
Indoor unit SW22		Pair No. of wireless remote controller																																												
SW22-3	SW22-4																																													
ON	ON	0	Initial setting																																											
OFF	ON	1	—																																											
ON	OFF	2	—																																											
OFF	OFF	3-9	—																																											
SWE Test run for Drain pump	Connector	Drain pump and fan are activated simultaneously after the connector SWE is set to ON and turn on the power. <div><div>SWE</div><div></div><div>OFF ON</div></div> <div><div>SWE</div><div></div><div>OFF ON</div></div> The connector SWE is set to OFF after test run.	Under operation	<Initial setting> SWE <div></div> OFF ON																																										

8-3. TEST POINT DIAGRAM

Indoor controller board

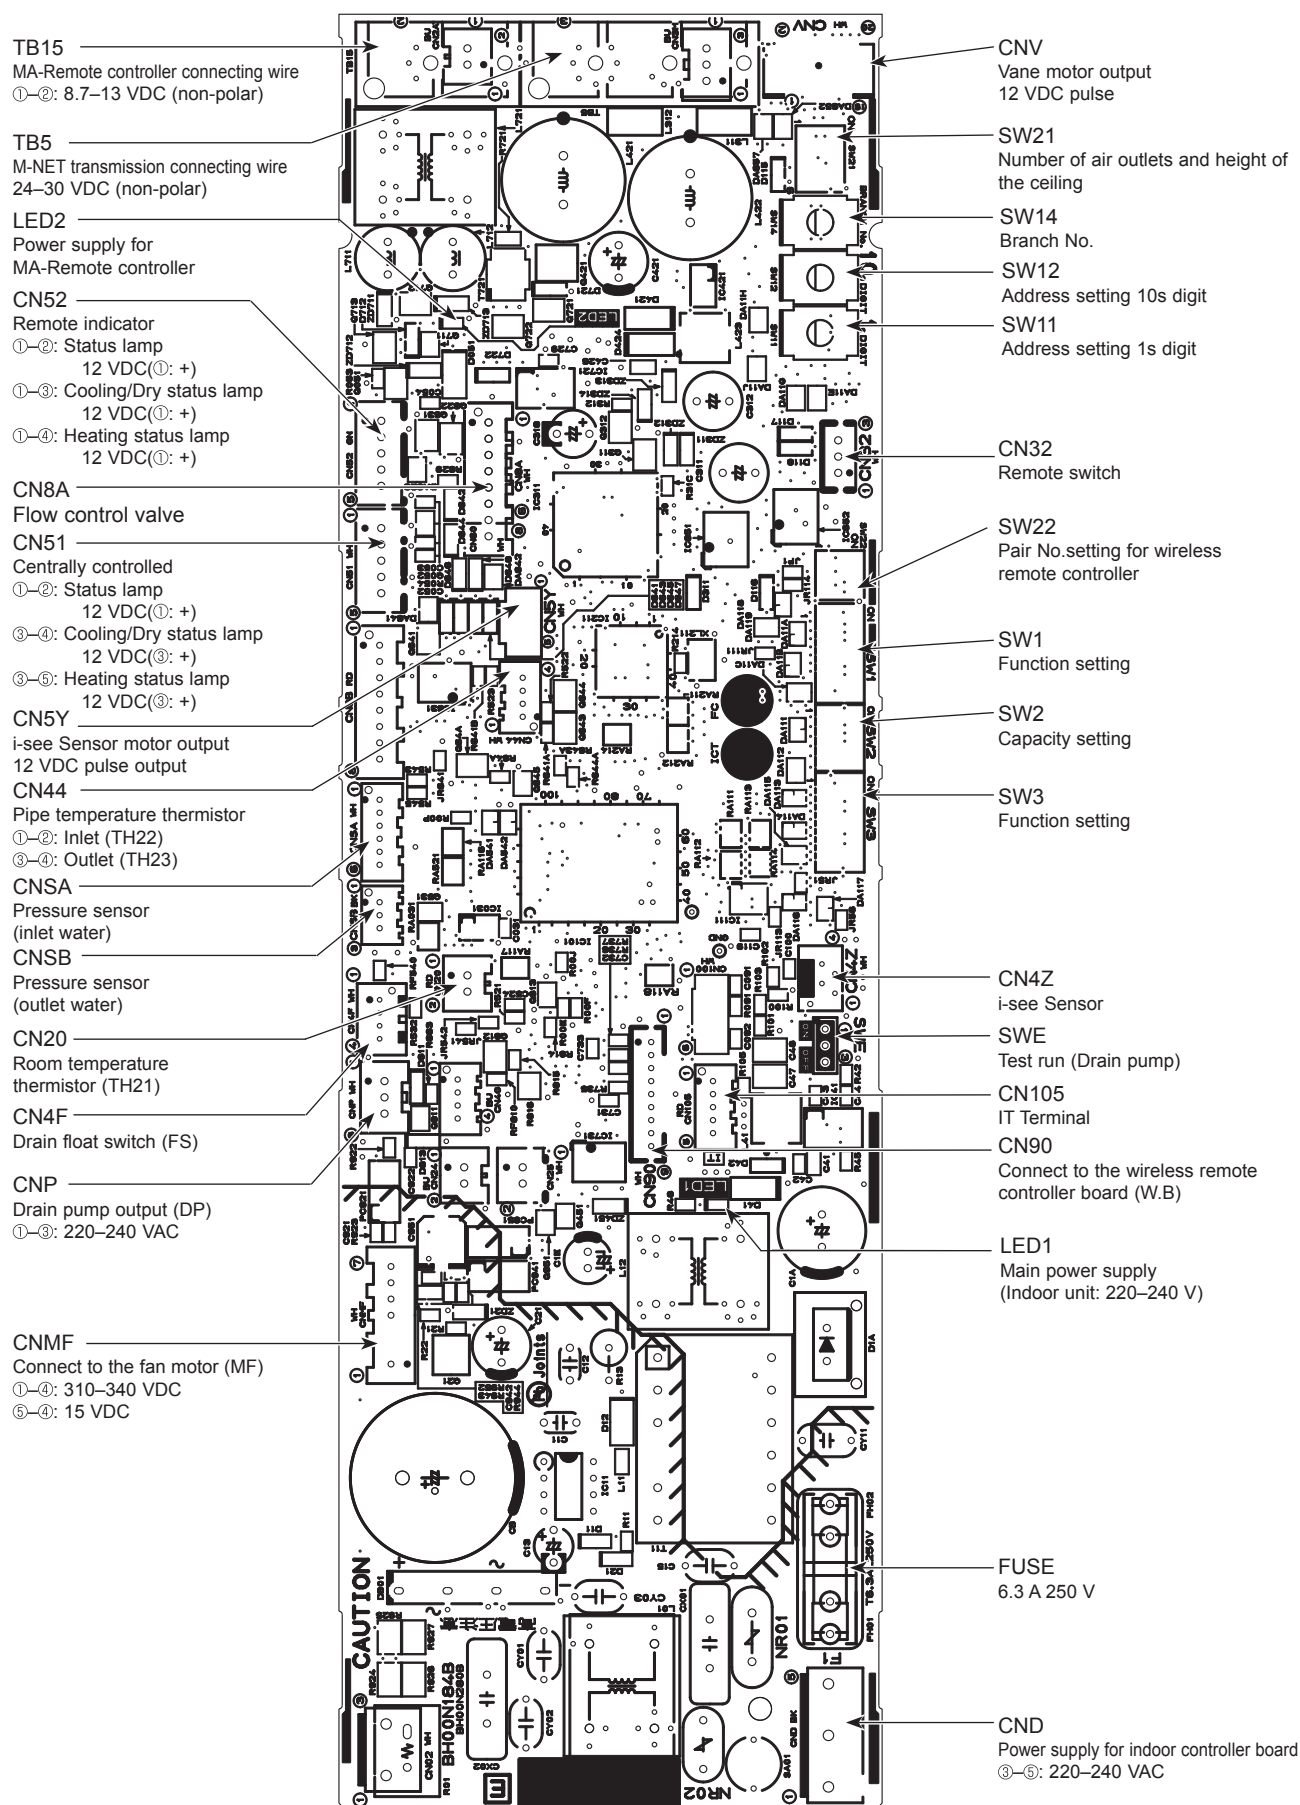

9-1. OPERATION (AUTOMATIC FILTER ELEVATION GRILLE: PLP-6EAJ/PLP-6EAJE)

(1) Normal operation

① UP/DOWN

Air intake grille is raised/lowered by commands of UP and DOWN.

Air intake grille does not move under the state of no-load detection or obstacle detection.

Air intake grille stops automatically at the set lowering distance from the ceiling level.

② STOP

It stops in the cases below :

- When it reaches the set lowering distance from the ceiling level.

It automatically stops after a predetermined period of lowering.

- When it is stored in the panel.

The air intake grille is judged to be stored in the panel when the storage detection switch is pressed for 5 seconds continuously.


- When receiving commands of STOP, DOWN while moving up or UP while moving down.

The STOP button is only available on the automatic filter elevation panel remote controller.

When the wired remote controller is used, there will be a slight delay in stopping due to transmission speed.

- When both string 1b and 2b are not loaded.

Only the string b in each UP/DOWN Machine has a tension detection switch.

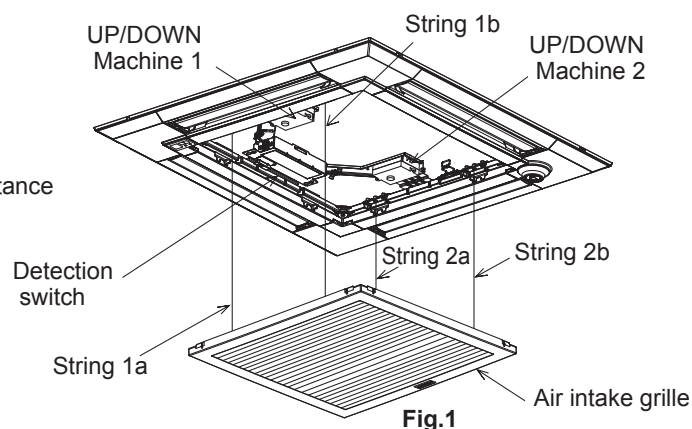

(2) Special operation

① Re-storage operation

Case : Obstruction of the raising air intake grille before storage or malfunction of storage detection switch

Re-storage operation will be performed when the intake grille has been raised the set distance but the storage detection switch is not engaged.

In this case, the operation below will be repeated up to 4 times.

10 cm down → 30 cm up → ... → 10 cm down → 30 cm up

② No-load detection

Case : UP/DOWN commands with no grille suspended.

When both string 1b and string 2b are not loaded, the strings will not move.

③ Obstacle detection

Case : Making contact with something while lowering.

Should the loads on the string 1b and string 2b be removed due to the air intake grille making contact with something while lowering, the lowering operation will stop. The air intake grille will then be raised 10 cm and stop again.

[EMERGENCY OPERATION]

1. If the wireless remote controller for ELEVATION PANEL is faulty or lost, operation will be possible using the emergency up/down switch at the wireless signal receiver or wired remote controller.


- For the operation using the emergency up/down switch at the wireless signal receiver, refer to SW1 and SW2 on the [LEGEND] in the next page.

2. When machine for ELEVATION PANEL breaks down, a intake grille is fixed for a while, and the operation of the unit can be done.

- Refer to installation manual with the grille for the details such as an installation method.

9-2. ELECTRICAL CIRCUIT (Controller board and wiring diagram (Panel))

9-2-1 DIP SW

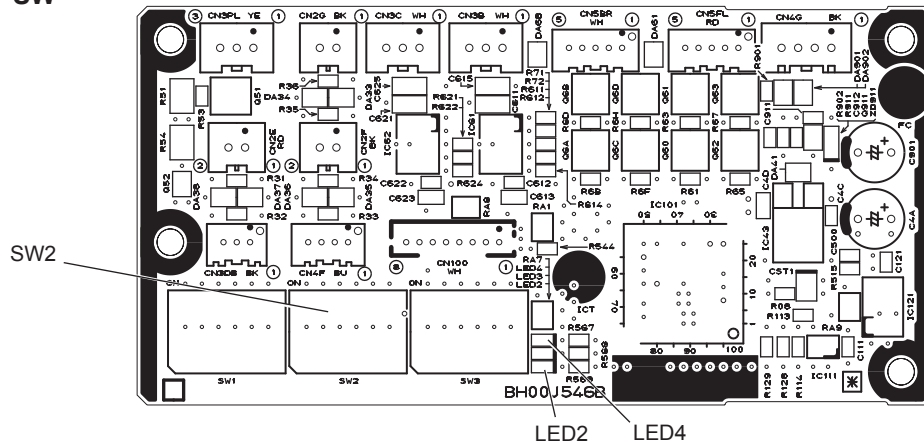

[LEGEND]

SYMBOL	NAME
U.B	ELEVATION PANEL CONTROLLER BOARD
LED2	LED ORANGE (INTAKE GRILLE CONDITION (See table *1))
LED4	LED GREEN (COMMUNICATION WITH INDOOR UNIT)
U.K 1	ELEVATION MACHINE
M	MOTOR (ELEVATION)
LS21	DETECTION SWITCH (STRING TENSION)
I.B	INDOOR UNIT CONTROLLER BOARD
W.B	PCB OF SIGNAL RECEIVER
BZ	BUZZER
RU	RECEIVING UNIT
LED1	LED GREEN (OPERATION INDICATION)
LED2	LED ORANGE (PREPARATION FOR HEATING)
SW1	EMERGENCY HEATING (LONG PRESS FOR OVER 2 SECONDS) INTAKE GRILLE/DOWN (SHORT PRESS)
SW2	EMERGENCY COOLING (LONG PRESS FOR OVER 2 SECONDS) INTAKE GRILLE/UP (SHORT PRESS)
LS1	DETECTION SWITCH (INTAKE GRILLE STORAGE)
R.B	WIRED REMOTE CONTROLLER


[EMERGENCY OPERATION]

- If the wireless remote controller for ELEVATION PANEL is faulty or lost, operation will be possible using the emergency up/down switch at the wireless signal receiver or wired remote controller.
 - For the operation using the emergency up/down switch at the wireless signal receiver, refer to SW1 and SW2 on the left [LEGEND].
- When machine for ELEVATION PANEL breaks down, an intake grille is fixed for a while, and the operation of the unit can be done.
 - Refer to installation manual with the grille for the details such as an installation method.

<*2> SW2 on U.B

LOWERING DISTANCE	SET UP	LOWERING DISTANCE	SET UP
1.2m	ON OFF [1 2 3 4 5 6]	2.8m	ON OFF [1 2 3 4 5 6]
1.6m (Initial setting)	ON OFF [1 2 3 4 5 6]	3.2m	ON OFF [1 2 3 4 5 6]
2.0m	ON OFF [1 2 3 4 5 6]	3.6m	ON OFF [1 2 3 4 5 6]
2.4m	ON OFF [1 2 3 4 5 6]	4.0m	ON OFF [1 2 3 4 5 6]

Note: The actual lowering distance might be different from the distance in the table 2 since it can also be set using the wired remote controller.

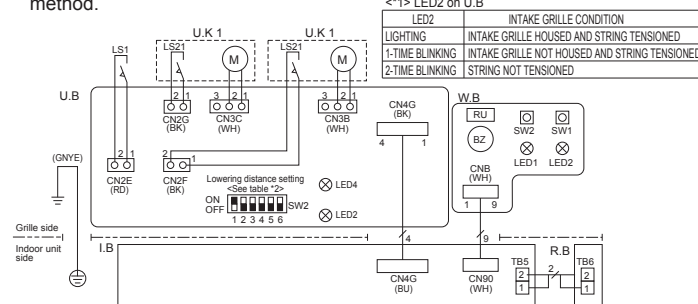

[Note]

- Symbols used in wiring diagram above are, [] : Connector, [] : Terminal (block).
- The black square (■) indicates a switch position.

9-2-2. Checkpoints of trouble

<LED 2 Orange display>

- Turn OFF : No power supply
- Blink : Storage detection switch ON (short)
- One blink : Storage detection switch OFF (open)
- Two blinks : Tension detection switch OFF (open)

<LED 4 Green display>

- Blink : Connecting

<controller board>

Check item	Check point	Normal	Remarks
Up/down controller P.C. board supply voltage	CN4A (between 1-2)	11-14 VAC	—
Up/down machine supply voltage	CN3B (between 1-2) CN3C (between 1-2)	10-13.5 VDC	Check when instructing up/down with LED blinking once.

<Up/down machine>

Check item	Check point	Normal	Check contents
Storage detection switch	CN2E	open or short	Check if it is short by pressing push switch.
Tension detection switch	CN2F, CN2G	open or short	Check if it is short when string b is tensioned.
Motor	CN3B, CN3C	5-20 Ω	Check if it is not open or short.
Entwining strings	Pull string	Retention: about 2 kgf	Check if string is drawn out by pulling with 4 kgf.





9-3. TROUBLESHOOTING

- Check the following points.




Problem	Possible Reason	Corrective Action
Intake grille does not function with operation of the remote controller.	Air-conditioner is running.	Stop running the air-conditioner and try again.
	Power failure	After recovering from power failure, try again.
	Batteries are not inserted into the wireless remote controller. Or battery power is running low.	Install or replace the battery.
	There is something on the intake grille. Or something is stuck in the intake grille.	Remove the objects or obstacles from the intake grille. Or, remove the stuck object.
Intake grille cannot be placed in the correct position.	There is something on the intake grille.	Remove the objects or obstacles from the intake grille.
	Filter is not properly installed.	Lower the intake grille again and check whether the filter is installed in the correct position.
	Intake grille is not hung with all 4 hooks.	Lower the intake grille again and hang the hook on the intake grille.
Intake grille stops lowering in mid flow. (Intake grille would not lower any further.)	Because the intake grille has finished lowering to the auto-stop position.	This is normal. Note: If you want to change the setting for the lowering distance, contact your dealer.
Noises are made during up/down operation. (While intake grille is moving up/down.)	This is the noise made when the string is winded and unwound.	This is normal.
Noises are made while placing the intake grille in.	This is the operational noise for placing the intake grille in securely.	
Intake grille repeats rising and lowering several times while being placed in the correct position.	This is the operation for placing the intake grille in securely.	
Intake grille leans toward one side during the up/down operation.	The speeds of winding each string is slightly different.	

————> : Indicates the visible parts in the photos/figures.
 -----> : Indicates the invisible parts in the photos/figures.

Be careful when removing heavy parts.

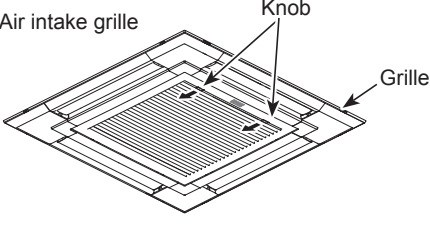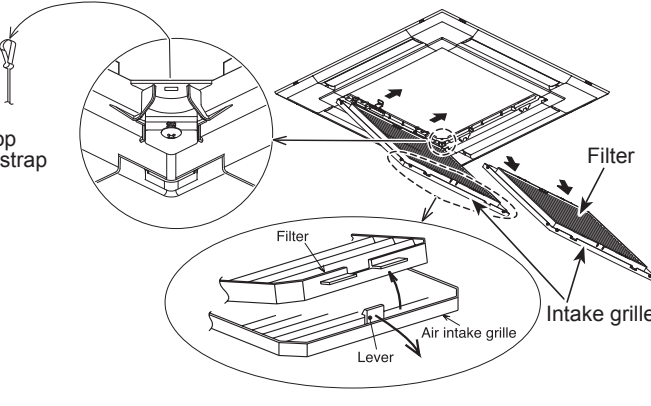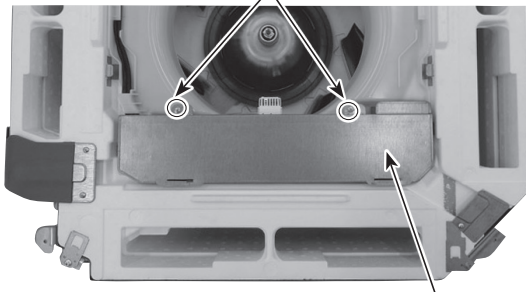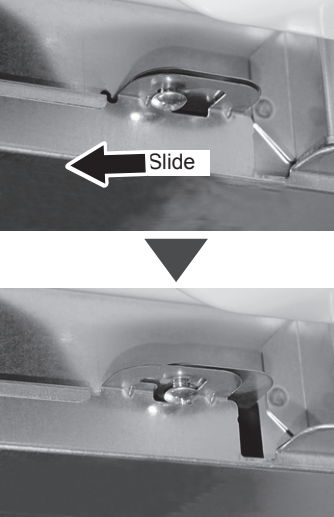OPERATING PROCEDURE	PHOTOS/FIGURES
1. Removing the filter (1) Slide the knob of air intake grille toward the arrow to open the air intake grille. (See Figure 1) (2) Pull down the lever of the air intake grille to remove the filter. (See Figure 2)	Figure 1 
2. Removing the air intake grille (1) Slide the knob of air intake grille toward the arrow to open the air intake grille. (See Figure 1) (2) Remove the hook of drop prevention strap from the panel. (3) Remove the air intake grille.	Figure 2 
3. Removing the electrical box cover (1) Remove the air intake grille and the filter. (Refer to procedure 2) (2) Loosen the 2 electrical box cover fixing screws (M4×10) approximately 2 to 3 mm. (See Photo 1) (3) Slide the electrical box cover toward the arrow to remove. (See Photo 2)	Photo 1  Photo 2 

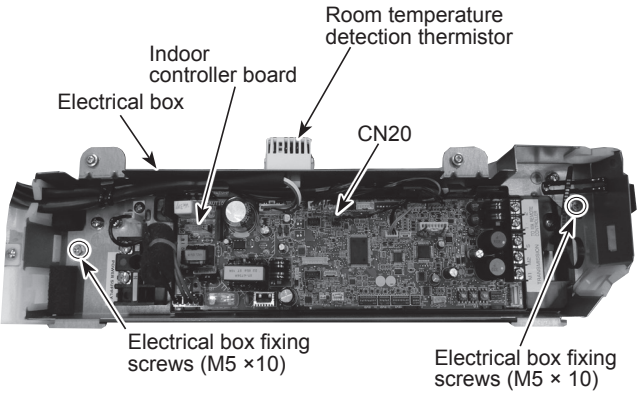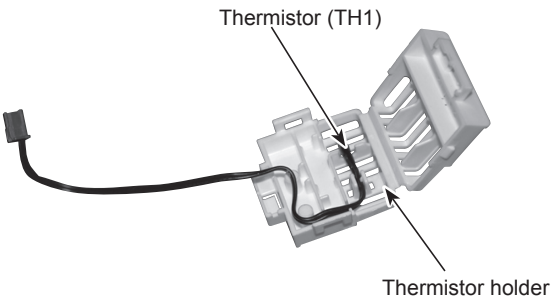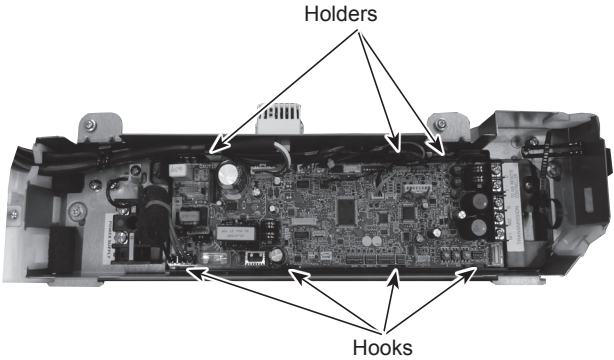

OPERATING PROCEDURE	PHOTOS/FIGURES
<p>4. Removing the room temperature thermistor (TH21)</p> <ol style="list-style-type: none">(1) Remove the electrical box cover. (See Photo 1 and 2)(2) Disconnect the connector CN20 (Red) from the indoor controller board.(3) Remove the room temperature thermistor with its holder. (See Photo 4)	<p>Photo 3</p>  <p>Photo 4</p> 
<p>5. Removing the indoor controller board (I.B)</p> <ol style="list-style-type: none">(1) Remove the electrical box cover. (See Photo 1 and 2)(2) Disconnect the connectors: CNMF (White) for fan motor CNV (White) for vane motor CN5Y (White) for motor for i-see Sensor (Option) CN4Z (White) for sensor for i-see Sensor (Option) CN90 (White) for signal receiver (Option) CNP (White) for drain pump CN4F (White) for float switch CN44 (White) for thermistor (TH22/TH23) CN01 (Black) for Indoor/Outdoor connecting line CN3C (Blue) for Indoor/Outdoor transmission <p>Disconnect the connectors for optional parts, if any.</p> <ol style="list-style-type: none">(3) Disconnect the lead wire connected to the TB5 on the indoor controller board. TB5: M-NET transmission connecting wire(4) For the unit controlled with the wireless remote controller, disconnect the lead wire connected to the TB15 on the indoor controller board.(5) Remove the indoor controller board (3 holders/4 hooks). (See Photo 5)	<p>Photo 5</p> 

OPERATING PROCEDURE

6. Removing the electrical box

- (1) Remove the electrical box cover (See Photo 1 and 2) and the connectors (Refer to procedure 5).
 - (2) Remove the electrical box fixing screws (M5×10: 2 screw). (See Photo 3)
- <Electrical parts in the electrical box>
- Terminal block for earth and reactor
 - Indoor controller board
 - Thermistor (TH)
- (3) Remove the electrical box (2 hooks).

7. Removing the turbo fan

- (1) Remove the electrical box. (See Photo 3 and refer to procedure 6)
- (2) Remove the bell mouth (tapping screw 4×10: 2 screws). (See Photo 6)

< With nut and washer >

- (3) Remove the nut (M8 × 1) and a washer. (See Photo 7 and 8.)
- (4) Remove the turbo fan.

Note 1: When assembling the turbo fan, attach it so that its tabs fit the holes of washer.

Note 2: Nut tightening torque: $4.5 \pm 0.5 \text{ N}\cdot\text{m}$.

Turbo fan

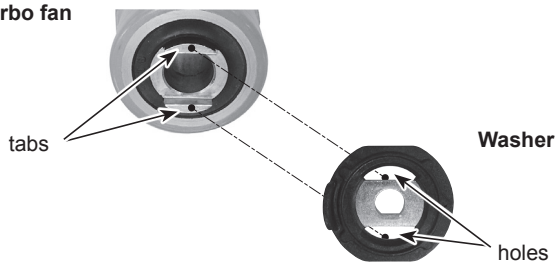


Photo 8



Turn this way to tighten. Turn this way to loosen.
(The same directions as the fan rotation.)

PHOTOS/FIGURES

Photo 6


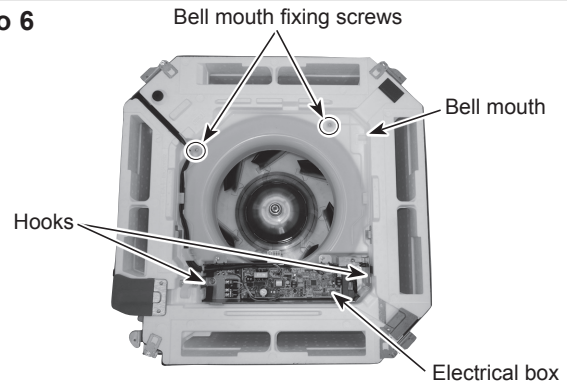



Photo 7

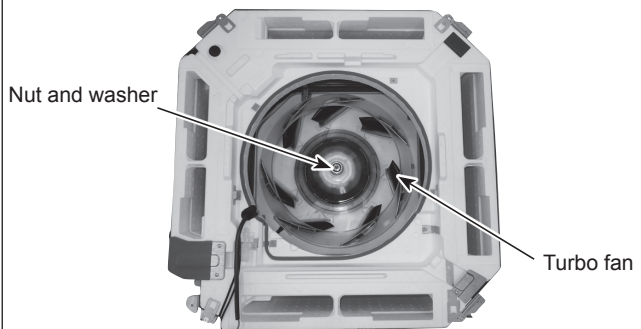







< Nut and washer >






Photo 9

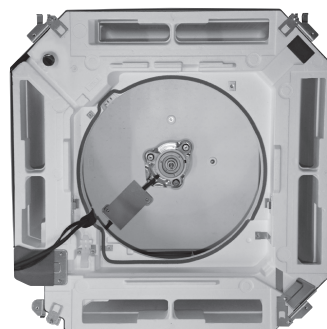



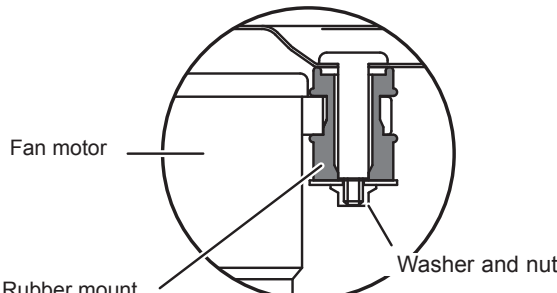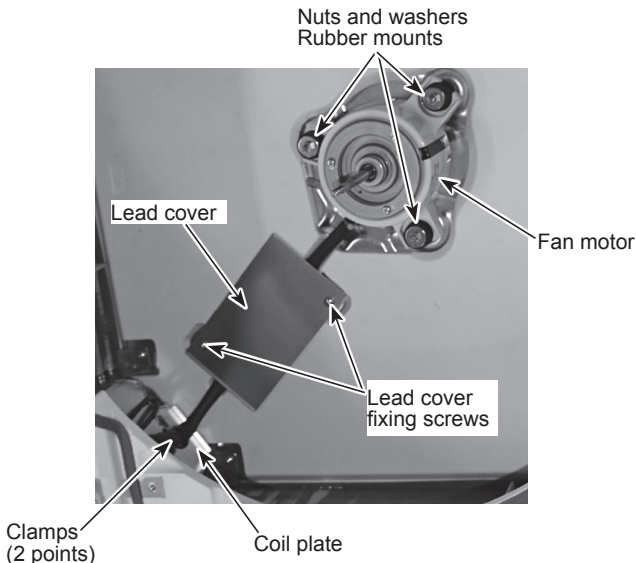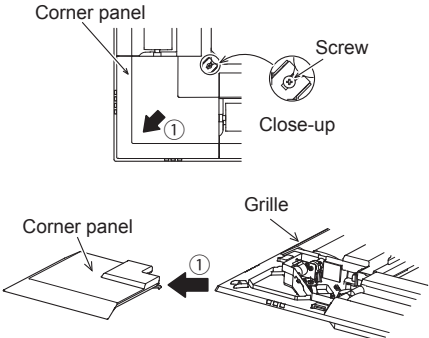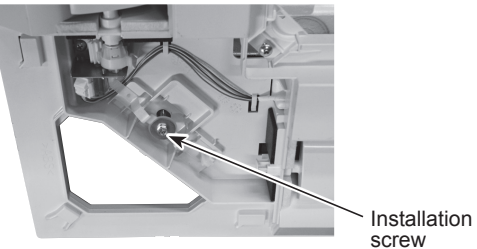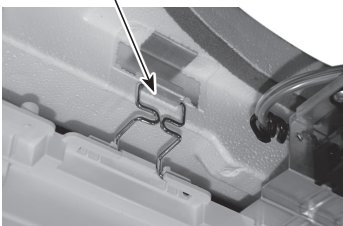OPERATING PROCEDURE	PHOTOS/FIGURES
<p>8. Removing the fan motor (MF)</p> <ol style="list-style-type: none">(1) Remove the turbo fan. (See Photo 8 and refer to procedure 7)(2) Remove the lead cover (tapping screw 4×10: 2 screws). (See Photo 10)(3) Loosen the 2 clamps.(4) Remove the 3 nuts and washers (M5).(5) Remove the fan motor.(6) Remove the 3 rubber mounts. <p>Figure 3: Partial cross section</p>  <p>Note: When re-attaching the motor mount, make sure that the thicker end faces the motor shaft.</p>	<p>Photo 10</p> 
<p>9. Removing the panel</p> <ol style="list-style-type: none">(1) Remove the electrical box fixing cover. (See Photo 1)(2) Disconnect the connector for vane motor (CNV: White). (Refer to procedure 5)(3) Loosen the 4 corner panel fixing screws (tapping screw 4×16). (See Figure 4)(4) Slide the corner panel to the direction of the arrow 1, and remove the corner panel. (See Figure 4)(5) Remove the 4 installation screws (M5×28). (See Photo 11)(6) Release the 2 temporary hanging hooks to remove the grille. (See Photo 12)	<p>Figure 4</p>  <p>Photo 11</p>  <p>Photo 12</p> 



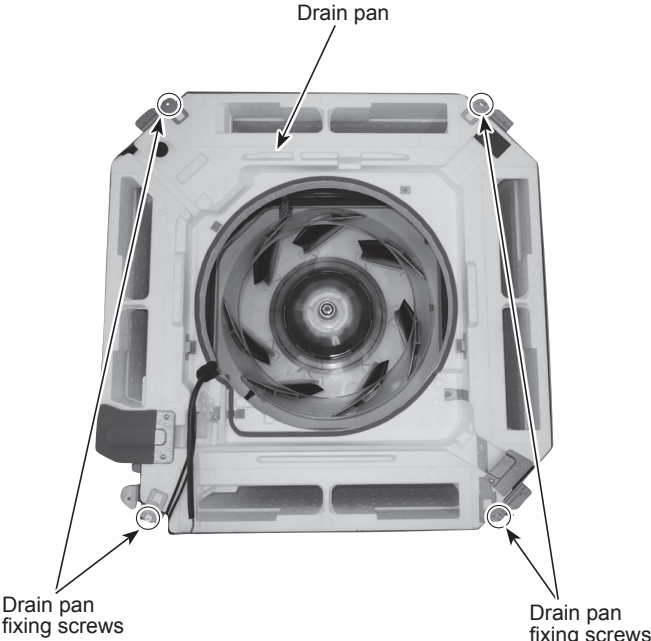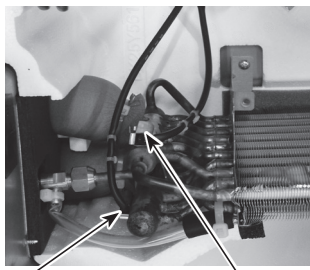OPERATING PROCEDURE	PHOTOS/FIGURES
<p>10. Removing the drain pan</p> <ul style="list-style-type: none">(1) Remove the electrical box. (See photo 3 and refer to procedure 6)(2) Remove the bell mouth (tapping screw 4×10 : 2 screws). (See Photo 6)(3) Remove the drain pan (screw M5×10: 4 screws).	<p>Photo 13</p>  <p>Drain pan</p> <p>Drain pan fixing screws</p>
<p>11. Removing the pipe temperature detection thermistor/inlet (TH22) and pipe temperature detection thermistor/outlet (TH23)</p> <ul style="list-style-type: none">(1) Remove the drain pan (Refer to procedure 10) and loosen the 2 clamps of the coil plate. (See Photo 10)(2) Remove the coil plate (tapping screw 4×10: 2 screws).(3) Disconnect the pipe temperature detection thermistor/inlet (TH22) and pipe temperature detection thermistor/outlet (TH23) from the holder.	<p>Photo 14</p>  <p>Pipe temperature detection thermistor/inlet (TH22)</p> <p>Pipe temperature detection thermistor/outlet (TH23)</p>

OPERATING PROCEDURE

12. Removing the drain pump (DP)

- (1) Remove the drain pan. (Refer to procedure 10)
- (2) Cut the hose band and remove the hose.
- (3) Loosen the clamp of the drain pump.
- (4) Remove the drain pump (tapping screw 4×10: 2 screws/2 hooks).
- (5) Cut the drain pump base and lead wire fixing band. (See Figure 5)
- (6) Remove the lead wire of the drain pump from the clamp of the drain pump base. (See Figure 5)
- (7) Remove the drain pump (tapping screw: 3 screws). (See Figure 6)

PHOTOS/FIGURES

Photo 15

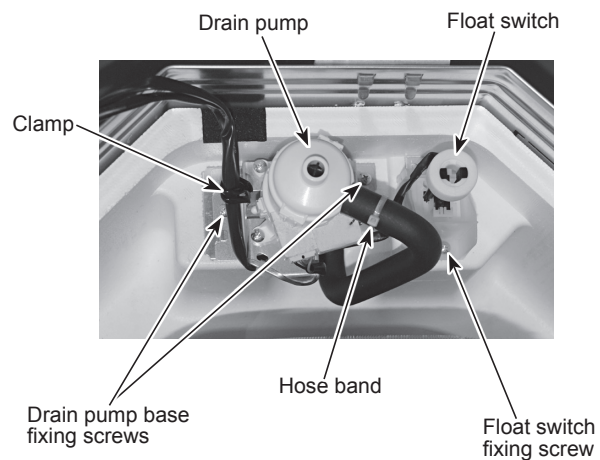


Figure 6


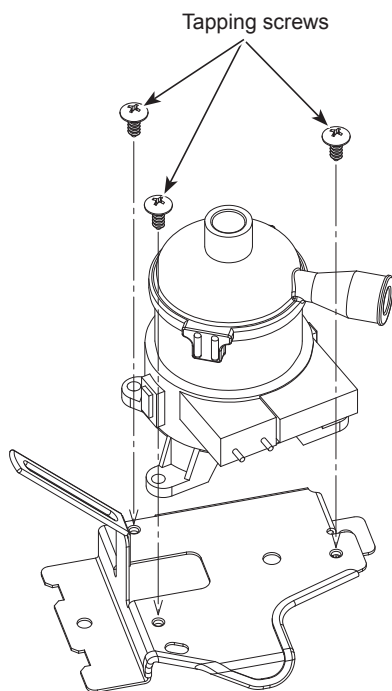


Figure 5

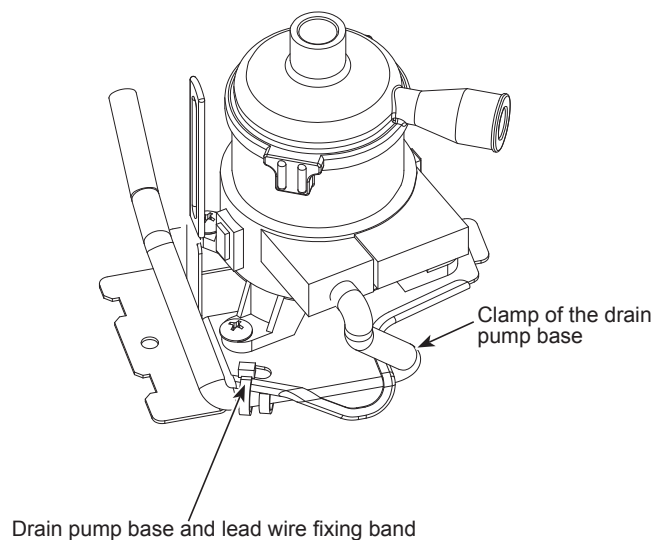


OPERATING PROCEDURE

13. Removing the float switch (FS)

- (1) Remove the drain pan. (Refer to procedure 10)
- (2) Loosen the clamp of the drain pump. (See Photo 15)
- (3) Remove the float switch (tapping screw 4×10: 1 screw/1 hook). (See Photo 15)
- (4) Remove the float switch base and the lead wire fixing band. (See Photo 16)
- (5) Remove the lead wire from the U shaped portion of the float switch base. (See Photo 16)
- (6) Slide the float switch towards the arrow to remove from the float switch base.

PHOTOS/FIGURES


Photo 16

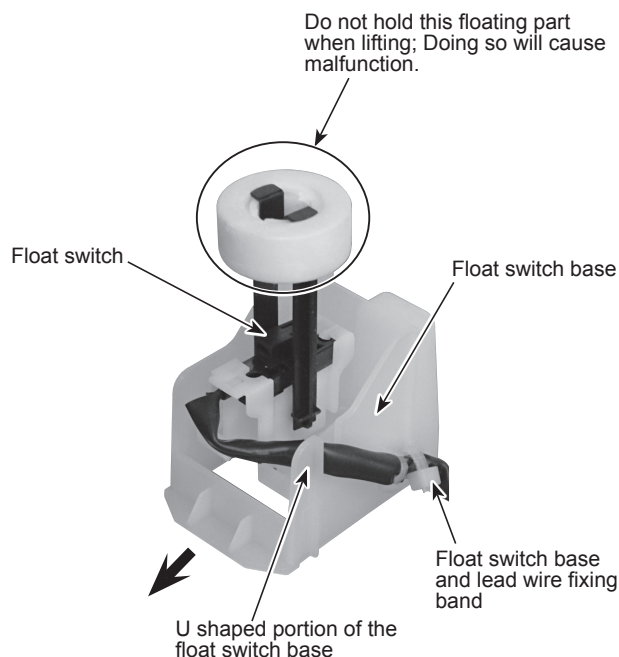


14. Removing the heat exchanger

- (1) Remove the drain pan. (Refer to procedure 10)
- (2) Remove the piping cover (tapping screw 4×10: 3 screws).
- (3) Remove the coil plate (tapping screw 4×10: 2 screws).
- (4) Remove the heat exchanger fixing screws (tapping screw 4×10: 2 screws).
- (5) Remove the coil support (tapping screw 4×10: 1 screw each) (See photo 17)
 - WL20-50: 1 coil support
 - WL63-125: 3 coil support
- (6) Remove the heat exchanger.

Photo 17

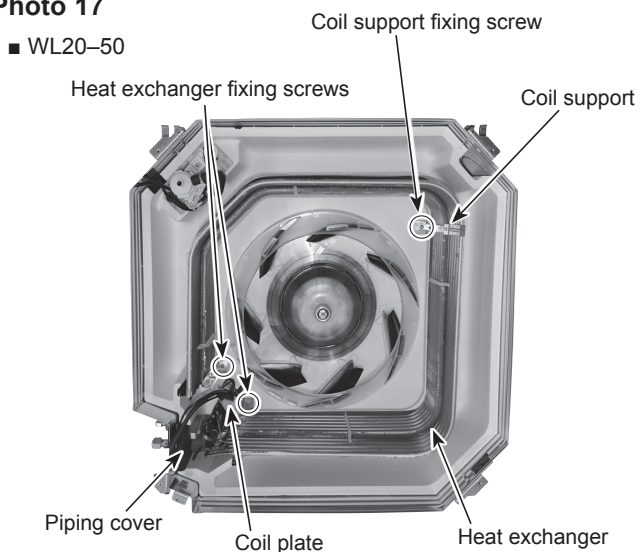


■ WL63-125

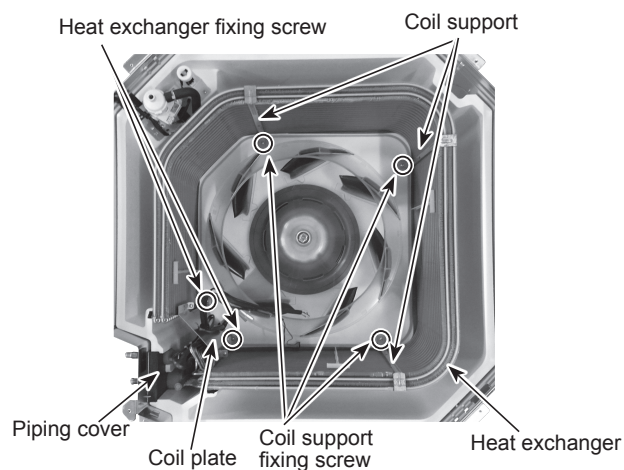

11-1. REMOTE CONTROLLER FUNCTIONS

<PAR-40MAA>

Controller interface

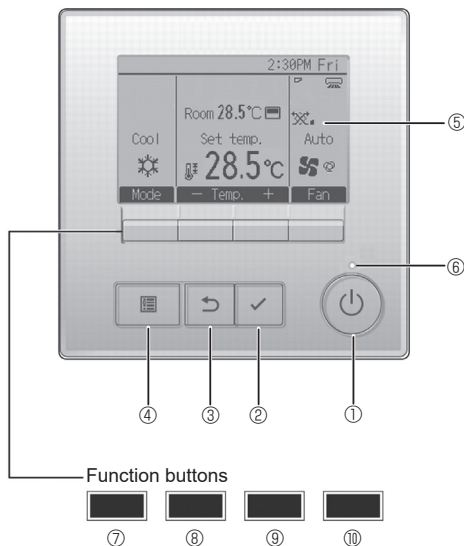

① [ON/OFF] button

Press to turn ON/OFF the indoor unit.

② [SELECT] button

Press to save the setting.

③ [RETURN] button

Press to return to the previous screen.

④ [MENU] button

Press to bring up the Main menu.

⑤ Backlit LCD

Operation settings will appear.

When the backlight is off, pressing any button turns the backlight on and it will stay lit for a certain period of time depending on the screen.


When the backlight is off, pressing any button turns the backlight on and does not perform its function. (except for the [ON/OFF] button)

The functions of the function buttons change depending on the screen.


Refer to the button function guide that appears at the bottom of the LCD for the functions they serve on a given screen.

When the system is centrally controlled, the button function guide that corresponds to the locked button will not appear.


Main display

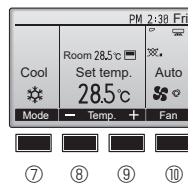

Main menu

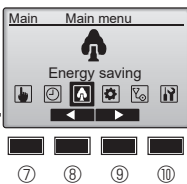

Menu screen

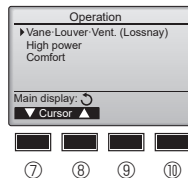

Function guide

⑥ ON/OFF lamp

This lamp lights up in green while the unit is in operation. It blinks while the remote controller is starting up or when there is an error.

⑦ Function button [F1]

Main display: Press to change the operation mode.

Menu screen: The button function varies with the screen.

⑧ Function button [F2]

Main display: Press to decrease temperature.

Main menu: Press to move the cursor left.

Menu screen: The button function varies with the screen.

⑨ Function button [F3]

Main display: Press to increase temperature.

Main menu: Press to move the cursor right.

Menu screen: The button function varies with the screen.

⑩ Function button [F4]

Main display: Press to change the fan speed.


Menu screen: The button function varies with the screen.

Display


The main display can be displayed in two different modes: "Full" and "Basic". The initial setting is "Full". To switch to the "Basic" mode, change the setting on the Main display setting. (Refer to operation manual included with remote controller.)

<Full mode>

* All icons are displayed for explanation.

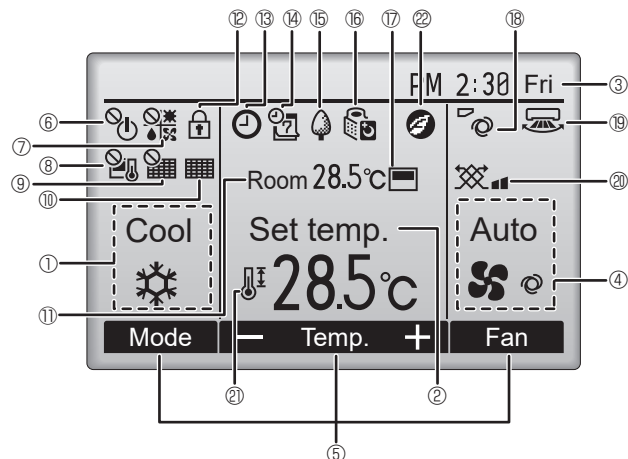

<Basic mode>

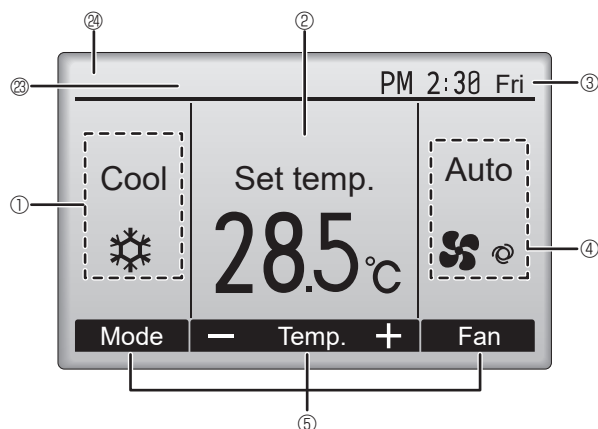

① Operation mode

② Preset temperature

③ Clock

④ Fan speed

⑤ Button function guide

Functions of the corresponding buttons appear here.



Appears when the ON/OFF operation is centrally controlled.



Appears when the operation mode is centrally controlled.



Appears when the preset temperature is centrally controlled.



Appears when the filter reset function is centrally controlled.



Indicates when filter needs maintenance.

⑪ Room temperature



Appears when the buttons are locked.



Appears when the On/Off timer, Night setback, or Auto-off timer function is enabled.

⓪ appears when the timer is disabled by the centralized control system.



Appears when the Weekly timer is enabled.



Appears while the units are operated in the energy saving mode. (Will not appear on some models of indoor units)



Appears while the outdoor units are operated in the silent mode.



Appears when the built-in thermistor on the remote controller is activated to monitor the room temperature (⑪).

⓪ appears when the thermistor on the indoor unit is activated to monitor the room temperature.



Indicates the vane setting.



Indicates the louver setting.



Indicates the ventilation setting.



Appears when the preset temperature range is restricted.



Appears when an energy saving operation is performed using a "3D i-see Sensor" function.

② Centrally controlled


Appears for a certain period of time when a centrally-controlled item is operated.

② Preliminary error display

A check code appears during the preliminary error.


Most settings (except ON/OFF, mode, fan speed, temperature) can be made from the Main menu.

Menu structure

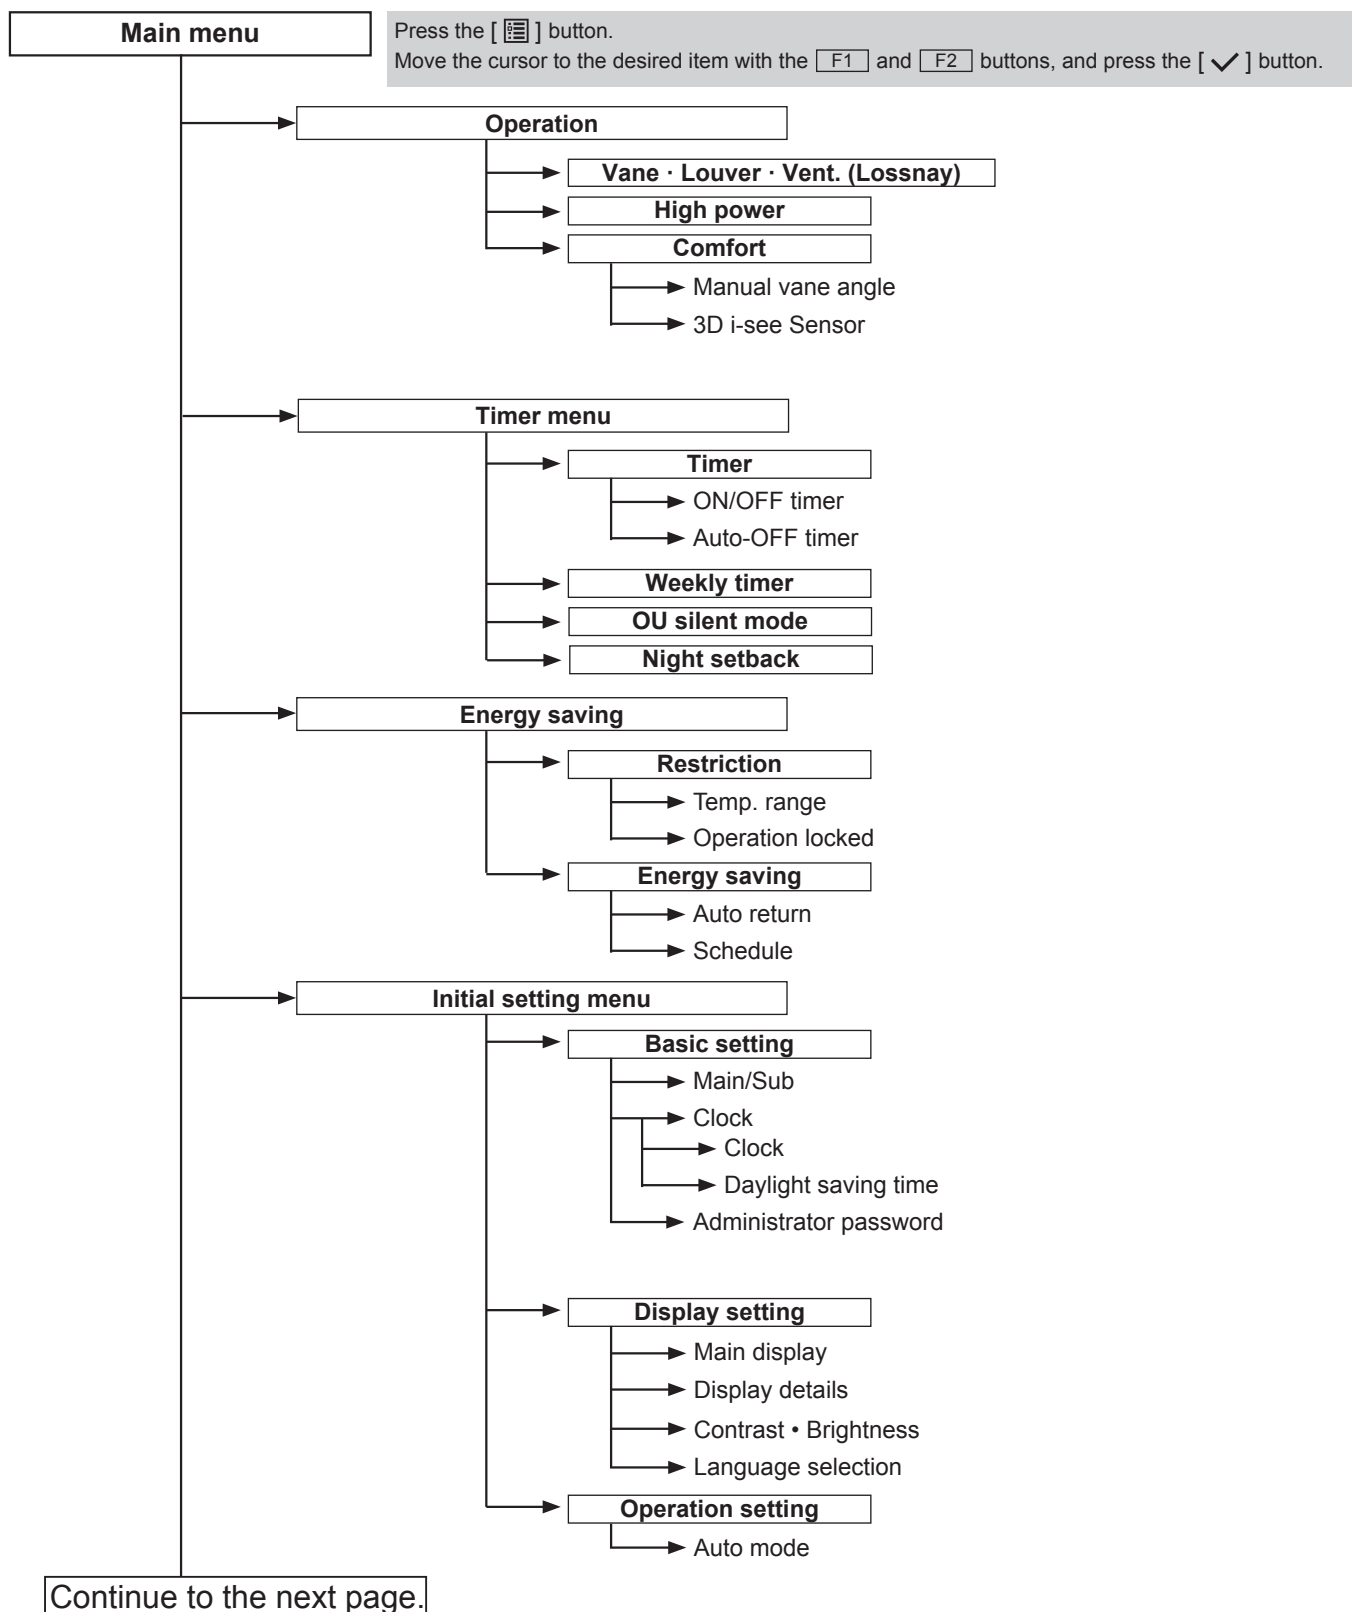

Not all functions are available on all models of indoor units.

Continue from the previous page.

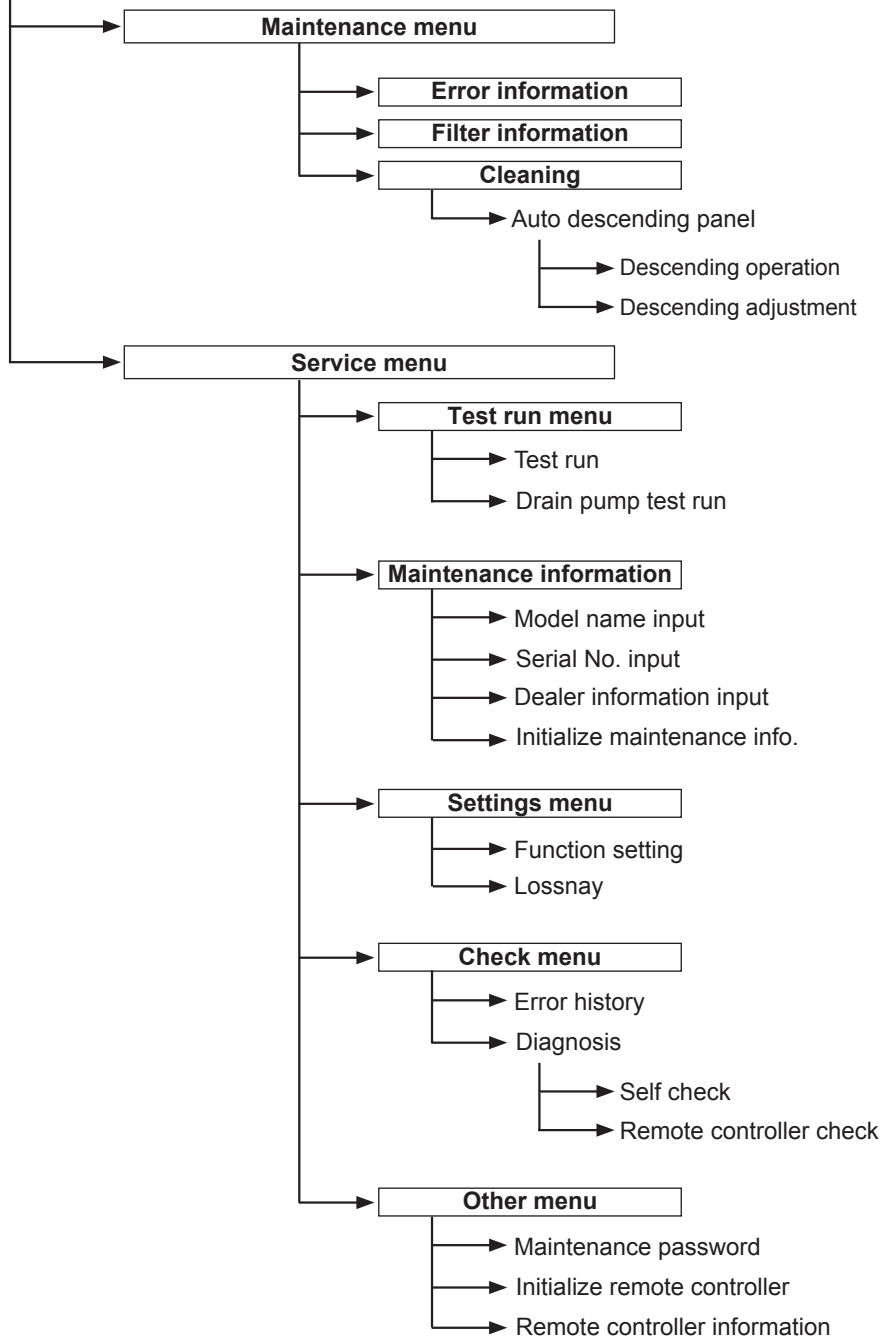

Not all functions are available on all models of indoor units.

Main menu list

Main menu	Setting and display items		Setting details
Operation	Vane · Louver · Vent. (Lossnay)		Use to set the vane angle. • Select a desired vane setting from 5 different settings. Use to turn ON/OFF the louver. • Select a desired setting from "ON" and "OFF." Use to set the amount of ventilation. • Select a desired setting from "Off," "Low," and "High."
	High power ^{*3}		Use to reach the comfortable room temperature quickly. • Units can be operated in the High-power mode for up to 30 minutes.
	Comfort	Manual vane angle	Use to fix each vane angle.
		3D i-see Sensor	Use to set the following functions for 3D i-see Sensor. • Air distribution • Energy saving option • Seasonal airflow
Timer	Timer	ON/OFF timer ^{*1}	Use to set the operation ON/OFF times. • Time can be set in 5-minute increments.
		Auto-OFF timer	Use to set the Auto-OFF time. • Time can be set to a value from 30 to 240 in 10-minute increments.
	Weekly timer ^{*1, *2}		Use to set the weekly operation ON/OFF times. • Up to 8 operation patterns can be set for each day. (Not valid when the ON/OFF timer is enabled.)
	OU silent mode ^{*1, *3}		Use to set the time periods in which priority is given to quiet operation of outdoor units over temperature control. Set the Start/Stop times for each day of the week. • Select the desired silent level from "Normal," "Middle," and "Quiet."
	Night setback ^{*1}		Use to make Night setback settings. • Select "Yes" to enable the setting, and "No" to disable the setting. The temperature range and the start/stop times can be set.
Energy saving	Restriction	Temp. range ^{*2}	Use to restrict the preset temperature range. • Different temperature ranges can be set for different operation modes.
		Operation lock	Use to lock selected functions. • The locked functions cannot be operated.
	Energy saving	Auto return ^{*2}	Use to get the units to operate at the preset temperature after performing energy saving operation for a specified time period. • Time can be set to a value from 30 and 120 in 10-minute increments. (This function will not be valid when the preset temperature ranges are restricted.)
		Schedule ^{*1}	Set the start/stop times to operate the units in the energy saving mode for each day of the week, and set the energy saving rate. • Up to 4 energy saving operation patterns can be set for each day. • Time can be set in 5-minute increments. • Energy saving rate can be set to a value from 0% or 50 to 90% in 10% increments.

^{*1} Clock setting is required.

^{*2} 1°C increments.


^{*3} This function can only be set when certain outdoor units are connected.



Main menu	Setting and display items		Setting details
Initial setting	Basic setting	Main/Sub	When connecting 2 remote controllers, one of them needs to be designated as a sub controller.
		Clock	Use to set the current time.
		Daylight saving time	Set the daylight saving time.
		Administrator password	The administrator password is required to make the settings for the following items. • Timer setting • Energy saving setting • Weekly timer setting • Restriction setting • Outdoor unit silent mode setting • Night set back
	Display setting	Main display	Use to switch between "Full" and "Basic" modes for the Main display, and use to change the background colors of the display to black.
		Display details	Make the settings for the remote controller related items as necessary. Clock: The initial settings are "Yes" and "24h" format. Temperature: Set either Celsius (°C) or Fahrenheit (°F). Room temp. : Set Show or Hide. Auto mode: Set Auto mode display or Only Auto display.
		Contrast • Brightness	Use to adjust screen contrast and brightness.
		Language selection	Use to select the desired language.
	Operation setting	Auto mode	Whether or not to use Auto mode can be selected by using the button. This setting is valid only when indoor units with Auto mode function are connected.
Maintenance	Error information		Use to check error information when an error occurs. • Check code, error source, refrigerant address, model name, manufacturing number, contact information (dealer's phone number) can be displayed. (The model name, manufacturing number, and contact information need to be registered in advance to be displayed.)
	Filter information		Use to check the filter status. • The filter sign can be reset.
	Cleaning	Auto descending panel	Use to lift and lower the auto descending panel (Optional parts).
Service	Test run		Select "Test run" from the Service menu to bring up the Test run menu. • Test run • Drain pump test run
	Input maintenance info.		Select "Input maintenance Info." from the Service menu to bring up the Maintenance information screen. The following settings can be made from the Maintenance Information screen. • Model name input • Serial No. input • Dealer information input • Initialize maintenance info.
	Settings	Function setting	Make the settings for the indoor unit functions via the remote controller as necessary.
		LOSSNAY setting	This setting is required only when the operation of CITY MULTI units is interlocked with LOSSNAY units.
	Check	Error history	Display the error history and execute "delete error history".
		Diagnosis	Self check: Error history of each unit can be checked via the remote controller. Remote controller check: When the remote controller does not work properly, use the remote controller checking function to troubleshoot the problem.
	Others	Maintenance password	Use to change the maintenance password.
		Initialize remote controller	Use to initialize the remote controller to the factory shipment status.
		Remote controller information	Use to display the remote controller model name, software version, and serial number.

<PAR-SL100A-E>


Controller interface

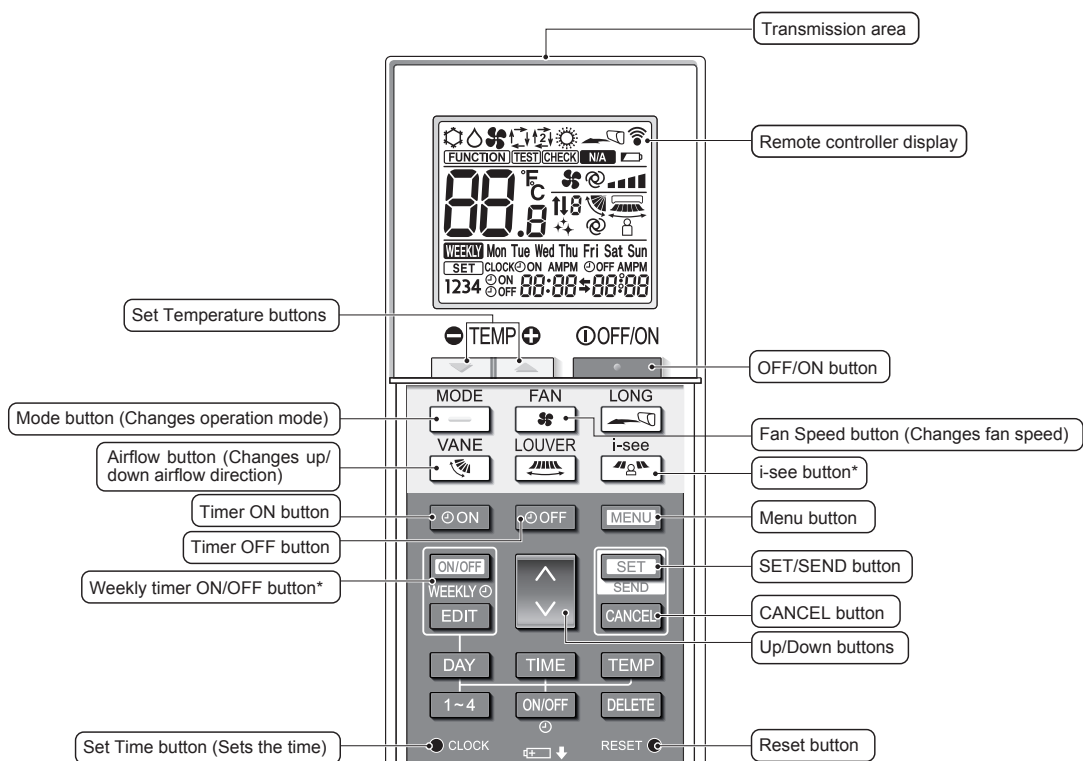

Note:


* This button is enabled or disabled depending on the model of the indoor unit.

Display

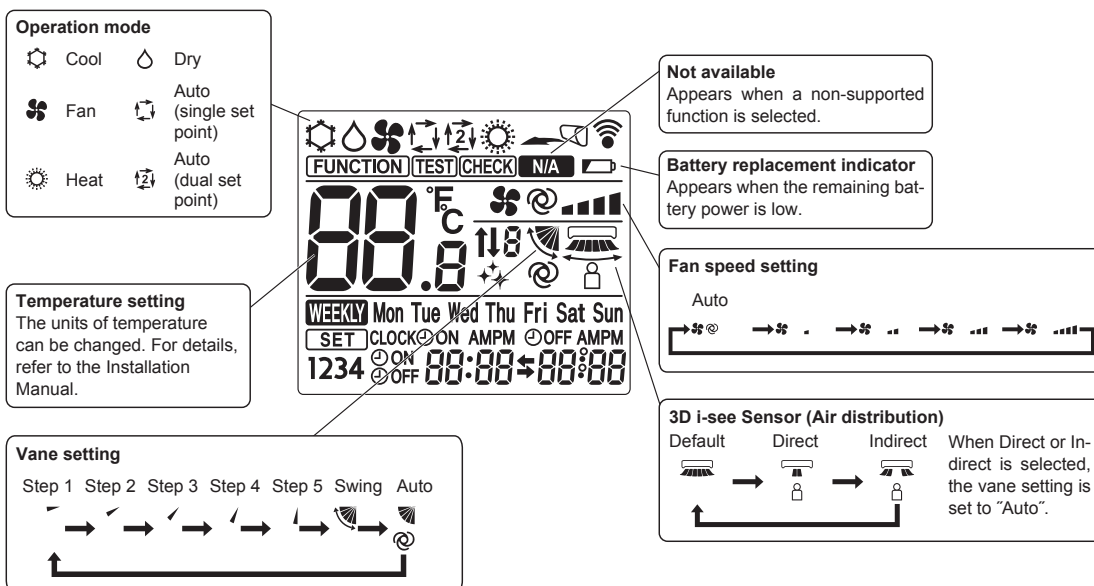

<PAR-U02MEDA>

Controller interface

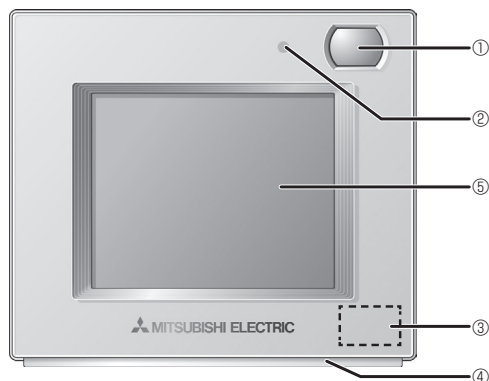

① Occupancy Sensor

The occupancy sensor detects vacancy for energy saving control.

② Brightness Sensor

The brightness sensor detects the brightness of the room for energy saving control.

③ Temperature & Humidity Sensor

The sensor detects the room temperature and the relative humidity.

④ LED Indicator

The LED indicator indicates the operation status in different colors. The LED indicator lights up during normal operation, lights off when units are stopped, and blinks when an error occurs.

⑤ Touch panel & Backlit LCD



The touch panel shows the operation settings screen. When the backlight is off, touching the panel turns the backlight on, and it will stay lit for a predetermined period of time.

11-2. ERROR INFORMATION


**When an error occurs, the following screen will appear.
Check the error status, stop the operation, and consult your dealer.**

1. Check code, error unit, refrigerant address, date and time of occurrence, model name, and serial number will appear.
The model name and serial number will appear only if the information have been registered.

Press the **[F1]** or **[F2]** button to go to the next page.

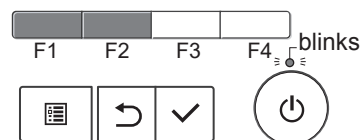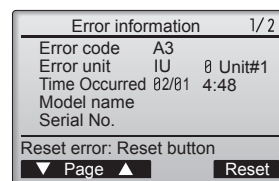

Contact information (dealer's phone number) will appear if the information has been registered.

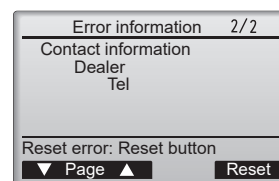


2. Press the **[F4]** button or the  button to reset the error that is occurring.

Errors cannot be reset while the ON/OFF operation is prohibited.

Select "OK" with the **[F4]** button.


Navigating through the screens

- To go back to the Service menu  button


• Checking the error information


While no errors are occurring, page 2/2 of the error information can be viewed by selecting "Error information" from the Maintenance menu. Errors cannot be reset from this screen.


Error information		1/2
Error code	A3	
Error unit	IU 8 Unit#1	
Time Occurred	02/01 4:48	
Model name		
Serial No.		
Reset error: Reset button		
▼ Page ▲	Reset	

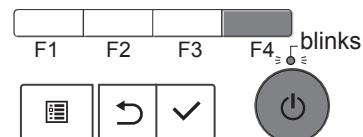


Error reset	
Reset current error?	
Cancel OK	



Error reset	
Error reset	
Main menu: 	

Maintenance menu	
► Error information	
Filter information	
Cleaning	
Main menu: 	
▼ Cursor ▲	

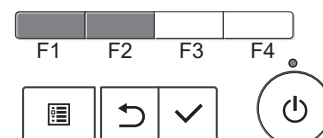


11-3. SERVICE MENU

Maintenance password is required


1. Select "Service" from the Main menu, and press the [✓] button.

*At the main display, the menu button and select "Service" to make the maintenance setting.

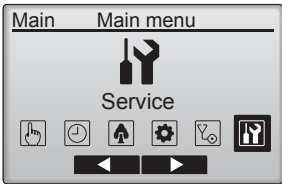


2. When the Service menu is selected, a window will appear asking for the password.

To enter the current maintenance password (4 numerical digits), move the cursor to the digit you want to change with the [F1] or [F2] button.

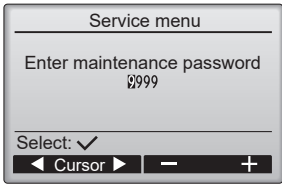

Set each number (0 through 9) with the [F3] or [F4] button.

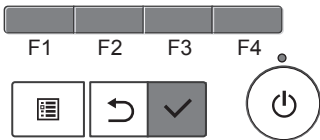

Then, press the [✓] button.


Note: The initial maintenance password is "9999". Change the default password as necessary to prevent unauthorized access. Have the password available for those who need it.

: If you forget your maintenance password, you can initialize the password to the default password "9999" by pressing and holding the [F1] button for 10 seconds on the maintenance password setting screen.

3. If the password matches, the Service menu will appear.

The type of menu that appears depends on the connected indoor units' type.

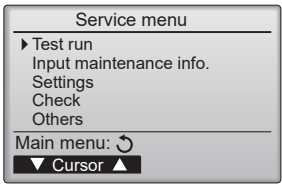

Note: Air conditioning units may need to be stopped to make only at "Settings". There may be some settings that cannot be made when the system is centrally controlled.



A screen will appear that indicates the setting has been saved.



Navigating through the screens

- To go back to the Service menu[] button
- To return to the previous screen.....[] button


11-4. TEST RUN

11-4-1. PAR-40MAA


1. Select "Service" from the Main menu, and press the [✓] button.



Select "Test run" with the [F1] or [F2] button, and press the [✓] button.

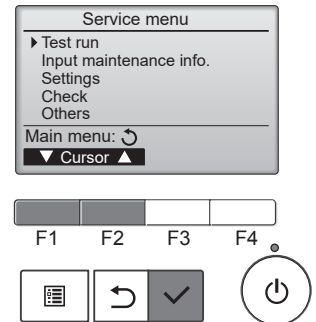

2. Select "Test run" with the [F1] or [F2] button, and press the [✓] button.

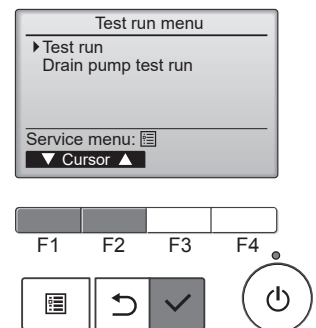

Test run operation


Press the [F1] button to go through the operation modes in the order of "Cool and Heat".

Cool mode: Check the cold air blows out.
Heat mode: Check the heat blows out.

Check the operation of the outdoor unit's fan.



Press the [✓] button and open the Vane setting screen.

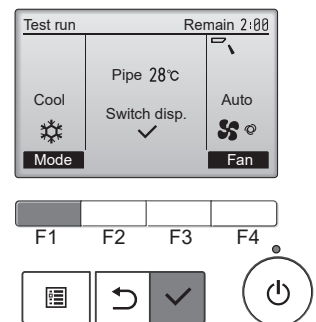

Auto vane check

Check the auto vane with the [F1] [F2] buttons.




Press the [↺] button to return to "Test run operation".









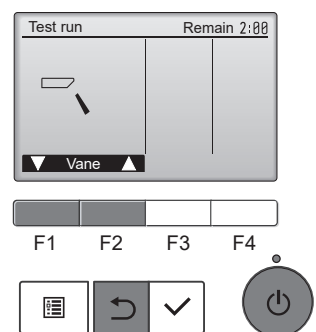




Press the [⏻] button.


When the test run is completed, the "Test run menu" screen will appear.
The test run will stop automatically after 2 hours.

*The function is available only for the model with vanes.




11-4-2. PAR-SL100A-E


- Press the  button ① to stop the air conditioner.
 - If the weekly timer is enabled (**WEEKLY** is on), press the  button ③ to disable it (**WEEKLY** is off).
- Press the  button ② for 5 seconds.
 - CHECK** comes on and the unit enters the service mode.
- Press the  button ②.
 - TEST**  comes on and the unit enters the test mode.
- Press the following buttons to start the test run.
 - : Switch the operation mode between cooling and heating and start the test run.
 - : Switch the fan speed and start the test run.
 - : Switch the airflow direction and start the test run.
 - : Switch the louver and start the test run.
 - : Start the test run.
- Stop the test run.
 - Press the  button ① to stop the test run.
 - After 2 hours, the stop signal is transmitted.

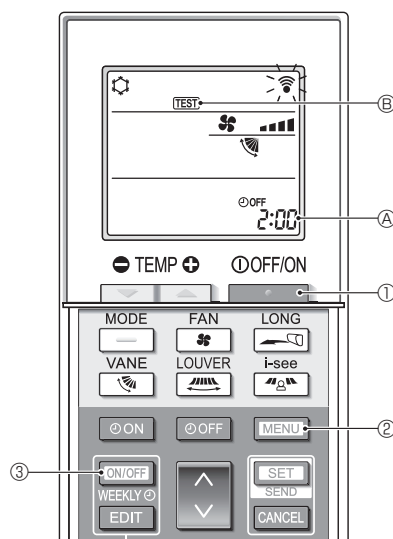

11-4-3. PAR-U02MEDA

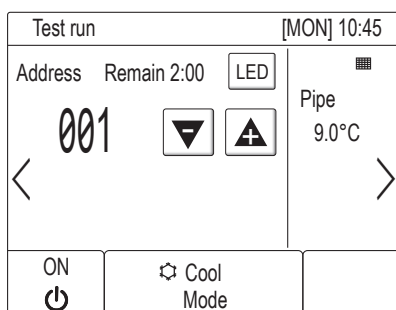

[Test run screen]

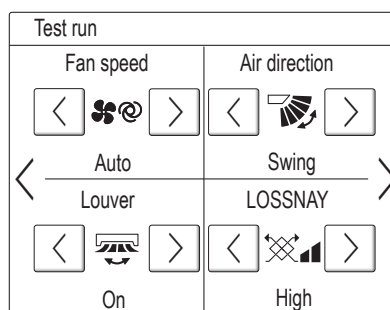

[Indoor unit setting screen]

- Read the section about Test run in the indoor unit Installation Manual before performing a test run.
- During the test run, indoor units will be forced to operate in the Thermo-ON status.
Except the set temperature, normal operation functions are accessible during test run.
- By selecting the address of another indoor unit, the liquid pipe temperature of the selected unit can be monitored.
- The test run will automatically end in two hours.

* When AHC is controlled from the controller

To monitor the operating status of AHC, touch the [<] button on the [Test run] screen and access the [General equipment] screen.

To set the humidity setting for the humidifier (when one is connected to the AHC), touch the [>] button on the [Indoor unit setting] screen.



11-5. FUNCTION SETTING

11-5-1. PAR-40MAA

1. Select "Service" from the Main menu, and press the [✓] button.

Select "Setting" from the Service menu, and press the [✓] button.

Select "Function setting", and press the [✓] button.

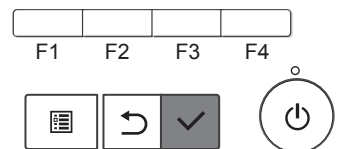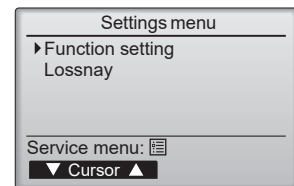

2. The Function setting screen will appear.

Press the [F1] or [F2] button to move the cursor to one of the following: M-NET address, function setting number, or setting value. Then, press the [F3] or [F4] button to change the settings to the desired settings.


Once the settings have been completed, press the [✓] button.

A screen will appear indicating that the settings information is being sent.

To check the current settings of a given unit, enter the setting for its M-NET address and function setting number, select Conf for the Function, and press the [✓] button.



A screen will appear indicating that the settings are being searched for.

When the search is done, the current settings will appear.

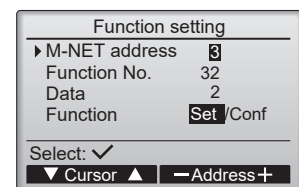

When the settings information has been sent, a screen will appear indicating its completion.

To make additional settings, press the [↺] button to return to the screen shown in the above step. Set the function numbers for other indoor units by following the same steps.

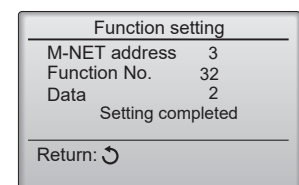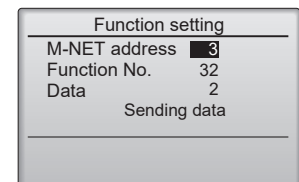

Note:

- Refer to the indoor unit Installation Manual for information about the initial settings of indoor units, function setting numbers, and setting values.
- Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.

11-5-2. PAR-SL100A-E

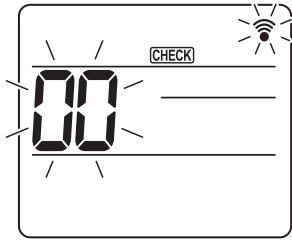


Fig. 11-1

1. Going to the function select mode
Press the **MENU** button between of 5 seconds.
(Start this operation from the status of remote controller display turned off.)
[CHECK] is lit and "00" blinks. (Fig. 11-1)
Press the **↓** button to set the "50".
Direct the wireless remote controller toward the receiver of the indoor unit and press the **SET** button.

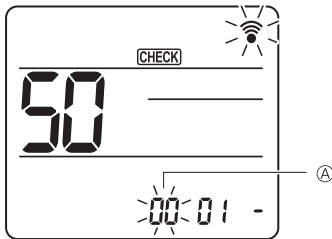


Fig. 11-2

2. Setting the unit number
Press the **↓** button to set unit number ①. (Fig. 11-2)
Direct the wireless remote controller toward the receiver of the indoor unit and press the **SET** button.

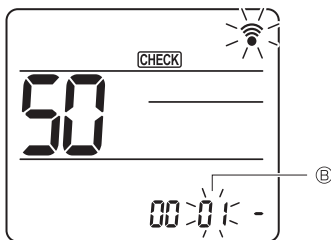


Fig. 11-3

3. Select a mode
Press the **↓** button to set Mode number ②. (Fig. 11-3)
Direct the wireless remote controller toward the receiver of the indoor unit and press the **SET** button.
Current setting number:
1=1 beep (1 second)
2=2 beep (1 second each)
3=3 beep (1 second each)

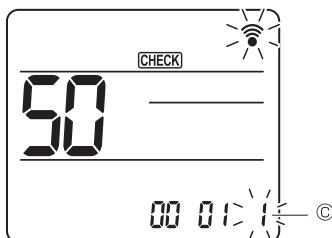


Fig. 11-4

4. Selecting the setting number
Use the **↓** button to change the Setting number ③. (Fig. 11-4)
Direct the wireless remote controller toward the receiver of the indoor unit and press the **SET** button.
5. To select multiple functions continuously
Repeat select ③ and ④ to change multiple function settings continuously.
6. Complete function selection
Direct the wireless remote controller toward the sensor of the indoor unit and press the **OFF/ON** button.

Note:

Make the above settings on Indoor units as necessary.


- Be sure to write down the settings for all functions if any of the initial settings has been changed after the completion of installation work.

11-6. ERROR HISTORY


1. Select "Service" from the Main menu, and press the [✓] button.



Select "Check" with the [F1] or [F2] button, and press the [✓] button.


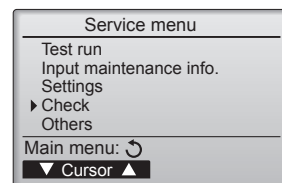


2. Select "Error history" with the [F1] or [F2] button, and press the [✓] button.

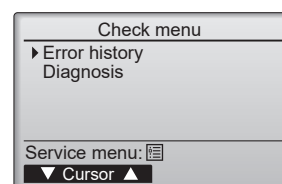

3. 16 error history records will appear.

4 records are shown per page, and the top record on the first page indicates the latest error record.

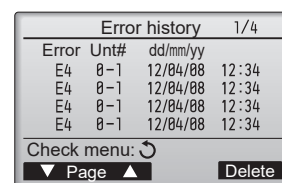

4. Deleting the error history

To delete the error history, press the [F4] button (Delete) on the screen that shows error history.

A confirmation screen will appear asking if you want to delete the error history.





Press the [F4] button (OK) to delete the history.



"Error history deleted" will appear on the screen.

Press the [↺] button to go back to the Check menu screen.

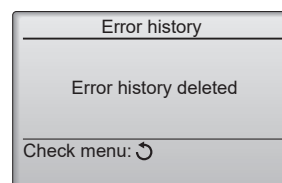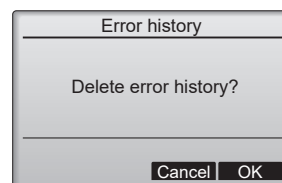

11-7. SELF-DIAGNOSIS


11-7-1. PAR-40MAA

1. Select "Service" from the Main menu, and press the [✓] button.

Select "Check" from the Service menu, and press the [✓] button.

Select "Diagnosis" from the Check menu, and press the [✓] button.



Select "Self check" with the [F1] or [F2] button, and press the [✓] button.

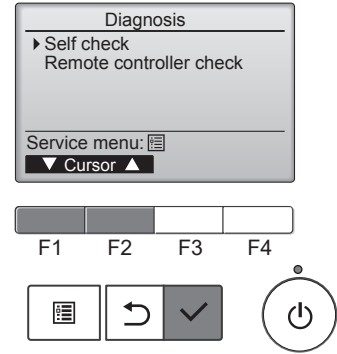


2. Select "Self check" from the Diagnosis menu, and press the [✓] button to view the Self check screen.

With the [F1] or [F2] button, enter the M-NET address, and press the [✓] button.

Check code, unit number, attribute, and indoor unit demand signal ON/OFF status at the contact will appear. " - " will appear if no error history is available.

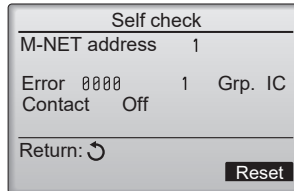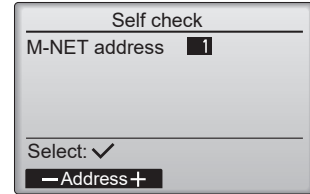



When there is no error history

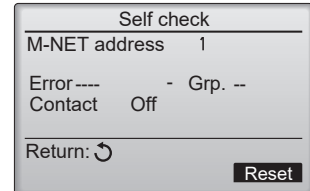


3. Resetting the error history

Press the [F4] button (Reset) on the screen that shows the error history. A confirmation screen will appear asking if you want to delete the error history.

Press the [F4] button (OK) to delete the error history. If deletion fails, "Request rejected" will appear, and "Unit not exist" will appear if indoor units that are correspond to the entered address are not found.

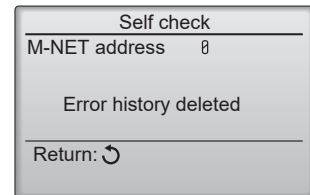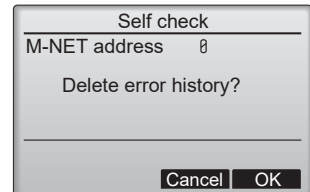

11-7-2. PAR-SL100A-E

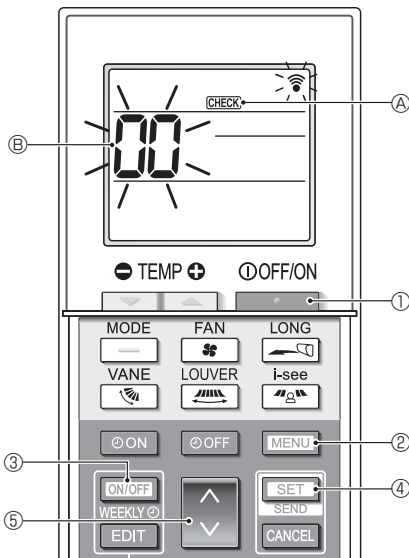

1. Press the [] button ① to stop the air conditioner.

- If the weekly timer is enabled (WEEKLY is on), press the [ON/OFF WEEKLY] button ③ to disable it (WEEKLY is off).

2. Press the [MENU] button ② for 5 seconds.

- [CHECK] ④ comes on and the unit enters the self-check mode.

3. Press the [] button ⑤ to select the refrigerant address (M-NET address) ⑥ of the indoor unit for which you want to perform the self-check.

4. Press the [SET] button ④.

- If an error is detected, the check code is indicated by the number of beeps from the indoor unit and the number of blinks of the OPERATION INDICATOR lamp.

5. Press the [] button ①.

- [CHECK] ④ and the refrigerant address (M-NET address) ⑥ go off and the self-check is completed.

11-8. REMOTE CONTROLLER CHECK


If operations cannot be completed with the remote controller, diagnose the remote controller with this function.

1. Select "Service" from the Main menu, and press the [✓] button.

Select "Check" from the Service menu, and press the [✓] button.

Select "Diagnosis" from the Check menu, and press the [✓] button.



Select "Remote controller check" with the [F1] or [F2] button, and press the [✓] button.

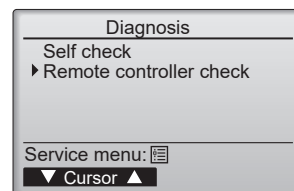

2. Select "Remote controller check" from the Diagnosis menu, and press the [✓] button to start the remote controller check and see the check results.

To cancel the remote controller check and exit the "Remote controller check" menu screen, press the [F1] or the [F2] button.

The remote controller will not reboot itself.

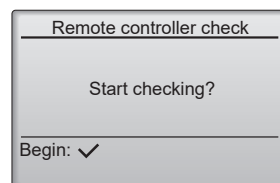


3.
 - OK: No problems are found with the remote controller. Check other parts for problems.
 - E3, 6832: There is noise on the transmission line, or the indoor unit or another remote controller is faulty. Check the transmission line and the other remote controllers.
 - NG (ALL0, ALL1): Send-receive circuit fault. The remote controller needs replacing.
 - ERC: The number of data errors is the discrepancy between the number of bits in the data transmitted from the remote controller and that of the data that was actually transmitted over the transmission line. If data errors are found, check the transmission line for external noise interference.

If the [✓] button is pressed after the remote controller check results are displayed, remote controller check will end, and the remote controller will automatically reboot itself.

Check the remote controller display and see if anything is displayed (including lines). Nothing will appear on the remote controller display if the correct voltage (8.5–12 VDC) is not supplied to the remote controller. If this is the case, check the remote controller wiring and indoor units.

Remote controller check results screen

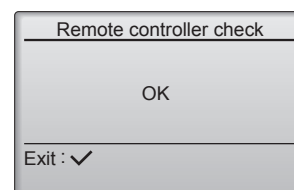

11-9. SPECIAL FUNCTION OPERATION SETTING

<PAR-U02MEDA>


*M-NET remote controller cannot be connected with a refrigerant system which includes branch box.

It is necessary to perform “group settings” and “Interlocked LOSSNAY” at making group settings of different refrigerant systems (multiple outdoor unit).

(A) Group settings: Enter the indoor unit controlled by the remote controller, check the content of entries, and clear entries, etc.


(B) Interlocked LOSSNAY: Used to set the linked operation of a Lossnay unit.

How to display the setup screen

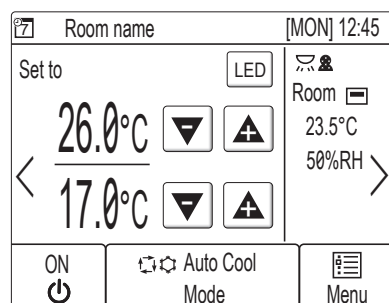


• HOME screen

Touch the [MENU] button.

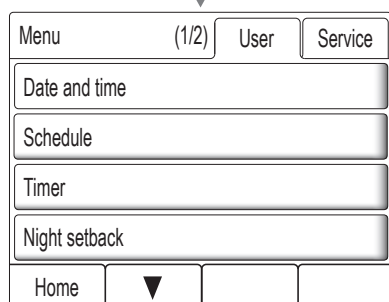


• Menu (User) screen

Touch the [Service] button.

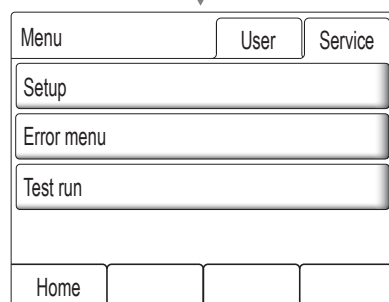

• Menu (Service) screen

Touch the [Setup] button.
Setup screen will appear.

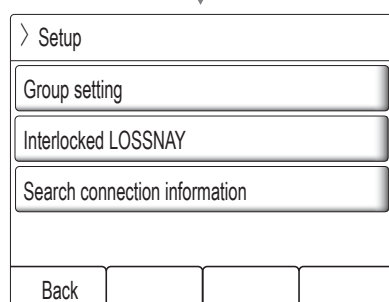

(a) Group setting

Use this screen to register the indoor units and the AHC to be controlled from the controller.

[Group setting]	
IC	Address ▼ 001 ▲
001 002 003 004	Unit IC
005 006 007 008	Function Set Del
009 010 011 012	
013 014 015 016	
AHC 201	
Back	

1. Select an indoor unit or an AHC address in the [Address] field.
The number of units that can be registered.
Indoor unit: 16 units maximum
AHC: 1 unit maximum
* AHC cannot be controlled from the controller unless indoor units are registered with the system.
2. Touch the [Set] button to register the address, and [Del] to delete the address.
 - Successful address registration/deletion:
The registered address(es) will appear on the left side of the screen.
Deleted address will not appear on the screen.
 - Error:
"Request denied." or "Is not to be connected" will appear.

(b) Interlocked LOSSNAY

Use this function to interlock the operation of indoor units and LOSSNAY units.

[Interlocked LOSSNAY]	
001 IC 007 IC	Add. 1 ▼ 001 ▲
002 IC 008 IC	Add. 2 ▼ 013 ▲
003 IC 009 IC	Function Set Conf Del
004 IC 010 IC	
005 IC 011 IC	
006 IC 012 IC	
Back	

1. To register LOSSNAY units
Select the indoor unit address in the Add. 1 section.
Select the interlocked LOSSNAY address in the Add. 2 section.
Touch the [Set] button to save the setting.
2. To search for an interlocked setting
Touch the [Conf] button to display in the left column the addresses of the units that are interlocked with the unit whose address was set in the Add. 1 section.
3. To delete the interlock settings
After taking Step 2 above, select the address to be deleted in the Add. 2 section, and then touch the [Del] button.

When the setting or deletion is successfully completed, "Completed" will appear below [Function] field on the screen.
If setting or deletion fails, "Request denied" will appear below [Function] field on the screen.

(c) Search connection information

Use this screen to specify a unit and search for the controllers that are connected to the unit.

[Search connection information]	
001 IC	Address ▼ 051 ▲
002 IC	
003 IC	Function Conf
004 IC	
005 IC	
006 IC	
Back	

1. Select an address in the [Address] field.
2. Touch the [Conf] button to search for the interlocked units.
The results will appear in the left column. (When multiple units are found, the addresses that do not fit on the first page will appear on the successive pages.)
 - Search error:
"Request denied." will appear.

After completing the settings, touch the [Back] button on the [Setup] screen. The message "Collecting the information from the air conditioner." will appear, and then the screen will jump to the HOME screen. This signals the completion of the setup process. Access the Service Menu from the HOME screen to make the settings for other items as necessary.

CITY MULTI

mitsubishi electric corporation

HEAD OFFICE : TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN