


PURY-M200, 250, 300YNW-A1(-BS)


Unit: mm

PURY-M-YNW-A1, EM-YNW-A1

- Note 1. Please refer to the next page for information regarding necessary spacing around the unit and foundation work.
2. The detachable leg can be removed at site.
 3. At brazing of pipes, wrap the refrigerant service valve with wet cloth and keep the temperature of refrigerant service valve under 120°C.
 4. This unit has restrictions for the safety, so refer to SAFETY HANDLING FOR R32 or the Installation Manual.

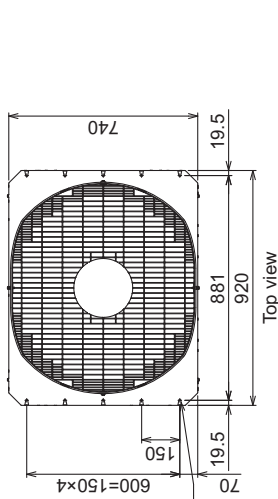

2×5-φ4.6 Hole
(Make hole at the plastic fan guard for snow hood attachment)
<Snow hood attachment hole>

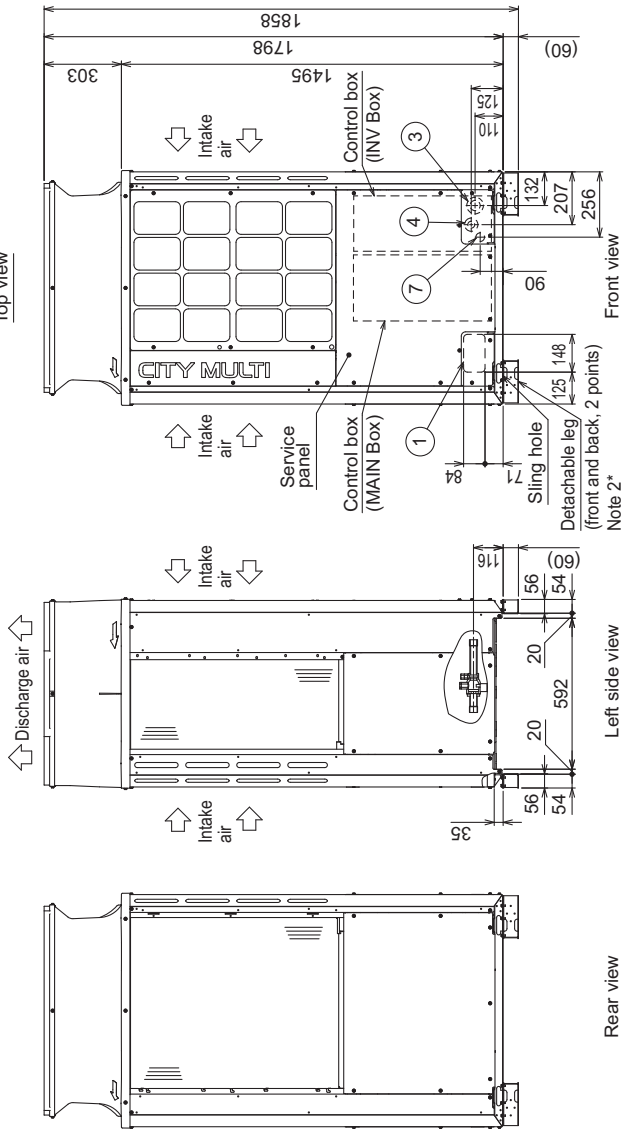


Connecting pipe specifications

| Model | Refrigerant pipe | | Service valve | |
|-------|------------------|-----------------|---------------|--------------|
| | High pressure | Low pressure | High pressure | Low pressure |
| M200 | φ19.05 Brazed *1 | | | |
| M250 | φ15.88 Brazed *1 | | φ22.2 | φ28.58 |
| M300 | | φ22.2 Brazed *1 | | |

*1 Connect the refrigerant pipe to the service valve according to the Installation Manual.

| NO. | Usage | Specifications |
|-----|---------------------|--------------------------|
| ① | Front through hole | 148 × 84 Knockout hole |
| ② | Bottom through hole | 150 × 94 Knockout hole |
| ③ | Front through hole | φ65 or φ40 Knockout hole |
| ④ | Front through hole | φ62 or φ27 Knockout hole |
| ⑤ | Bottom through hole | φ65 Knockout hole |
| ⑥ | Bottom through hole | φ62 Knockout hole |
| ⑦ | Front through hole | φ34 Knockout hole |
| ⑧ | Bottom through hole | φ34 Knockout hole |

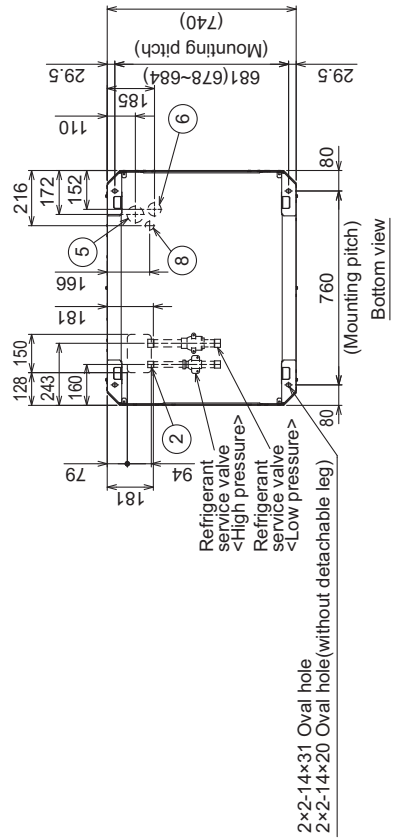

2×2-14×31 Oval hole
2×2-14×20 Oval hole(without detachable leg)

PURY-M200, 250, 300YNW-A1(-BS)


Unit: mm

1. Required space around the unit


● In case of single installation

① Secure enough space around the unit as shown in the figure below.

· With a space of at least 300mm to the wall on the back of the unit

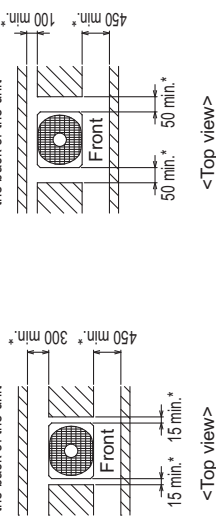

② When the height of the walls on the front, back or on the sides<H> exceeds the wall height limit as defined below add the height that exceeds the height limit <h> to the figures that are marked with an asterisk.

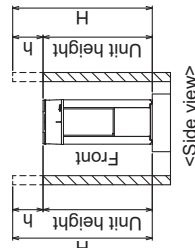

<Wall height limit> Front :Up to the unit height
Back :Up to the unit height
Side :Up to the unit height

2. Foundation work

- ① Take into consideration the surface strength, water drainage route, piping route, and wiring route when preparing the installation site.
<Note that the drain water comes out of the unit during operation.>
- ② Build the foundation in such way that the corner of the installation leg is securely supported as shown in the right figure.(Fig.A,B)
When using a rubber isolating cushion, please ensure it is large enough to cover the entire width of each of the unit's legs.
- ③ The protrusion length of the anchor bolt must not exceed 30mm.(Fig.A,B)
- ④ Use four fixing plates as shown in the right figure <field supply required> when using M12 hole-in anchor bolts <field supply required> (Fig. C,D)
- ⑤ To prevent small animals and water and snow from entering the unit and damaging its parts, close the gap around the edges of through holes for pipes and wires with filler plates <field supply required>.
- ⑥ When the pipes or cables are routed at the bottom of the unit, make sure that the through hole at the base of the unit does not get blocked with the installation base.
- ⑦ Refer to the Installation Manual when installing units on an installation base.

● In case of collective installation

- ① When multiple units are installed adjacent to each other, secure enough space to allow for air circulation and walkway between groups of units as shown in the figures below.
- ② At least two sides must be left open.
- ③ As with the single installation, add the height that exceeds the height limit<h> to the figures that are marked with an asterisk.
- ④ If there is a wall at both the front and the rear of the unit, install up to six units consecutively in the side direction and provide a space of 1000mm or more as inlet space/ passage space for each six units.

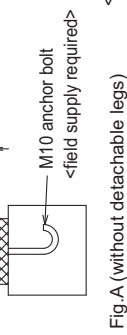
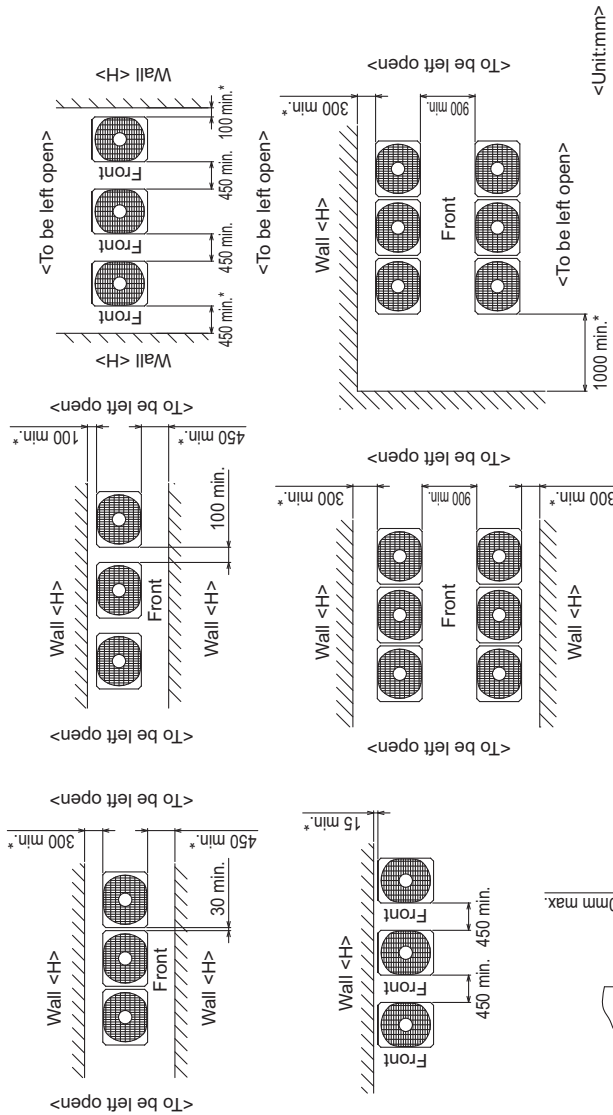


Fig.A (without detachable legs)

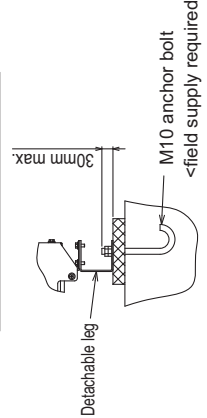


Fig.B (with detachable legs)



Fig.C (without detachable legs)

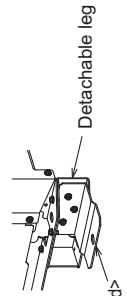



Fig.D (with detachable legs)

PURY-M350,400,450YNW-A1(-BS)


Unit: mm

PURY-M-YNW-A1, EM-YNW-A1

- Note 1. Please refer to the next page for information regarding necessary spacing around the unit and foundation work.
 2. The detachable leg can be removed at site.
 3. At brazing of pipes, wrap the refrigerant service valve with wet cloth and keep the temperature of refrigerant service valve under 120°C.
 4. This unit has restrictions for the safety, so refer to SAFETY HANDLING FOR R32 or the Installation Manual.

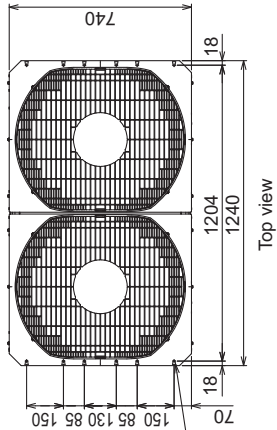

2x6-ø4.6 Hole
 (Make hole at the plastic fan guard for snow hood attachment)
 <Snow hood attachment hole>

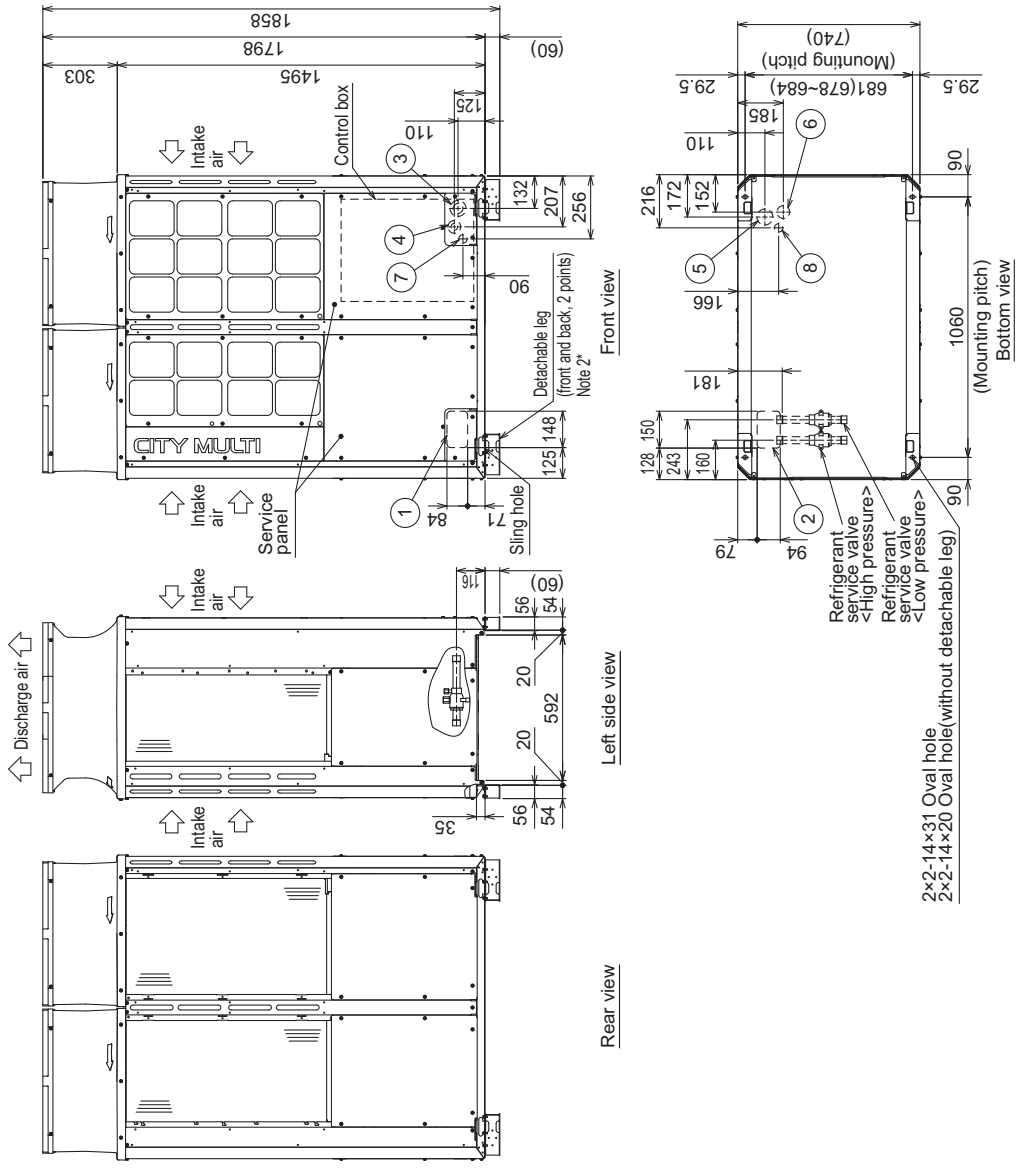

Connecting pipe specifications

| Model | Refrigerant pipe | | Service valve | |
|-------|-----------------------------|-----------------------------|---------------|--------------|
| | High pressure | Low pressure | High pressure | Low pressure |
| M350 | ø15.88 Brazed ^{*1} | | ø28.58 | ø28.58 |
| M400 | | | ø28.58 Brazed | ø28.58 |
| M450 | | ø19.05 Brazed ^{*1} | | ø28.58 |

*1 Connect the refrigerant pipe to the service valve according to the Installation Manual.

| NO. | Usage | Specifications |
|-----|-------------------------|---|
| ① | For pipes | Front through hole 148 x 84 Knockout hole |
| ② | | Bottom through hole 150 x 94 Knockout hole |
| ③ | For wires | Front through hole ø65 or ø40 Knockout hole |
| ④ | | Front through hole ø52 or ø27 Knockout hole |
| ⑤ | | Bottom through hole ø65 Knockout hole |
| ⑥ | | Bottom through hole ø52 Knockout hole |
| ⑦ | For transmission cables | Front through hole ø34 Knockout hole |
| ⑧ | | Bottom through hole ø34 Knockout hole |


PURY-M350,400,450YNW-A1(-BS)

Unit: mm


1. Required space around the unit

● In case of single installation

① Secure enough space around the unit as shown in the figure below.

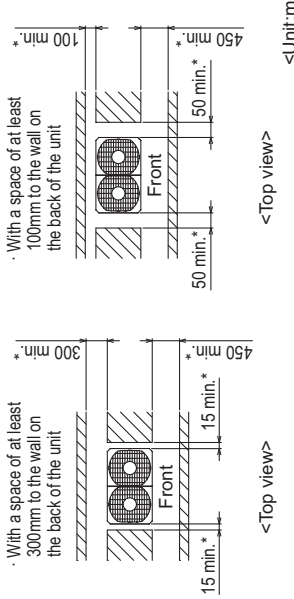

② When the height of the walls on the front, back or on the sides-H> exceeds the wall height limit as defined below add the height that exceeds the height limit -h> to the figures that are marked with an asterisk.

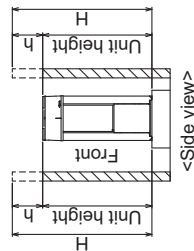

<Wall height limit> Front :Up to the unit height
Back :Up to the unit height
Side :Up to the unit height

2. Foundation work

- Take into consideration the surface strength, water drainage route, piping route, and wiring route when preparing the installation site.
<Note that the drain water comes out of the unit during operation.>
- Build the foundation in such way that the corner of the installation leg is securely supported as shown in the right figure.(Fig.A,B)
When using a rubber isolating cushion, please ensure it is large enough to cover the entire width of each of the unit's legs.
- The protrusion length of the anchor bolt must not exceed 30mm.(Fig.A,B)
- Use four fixing plates as shown in the right figure <field supply required> when using M12 hole-in anchor bolts <field supply required> (Fig. C,D)
- To prevent small animals and water and snow from entering the unit and damaging its parts, close the gap around the edges of through holes for pipes and wires with filler plates <field supply required>.
- When the pipes or cables are routed at the bottom of the unit, make sure that the through hole at the base of the unit does not get blocked with the installation base.
- Refer to the Installation Manual when installing units on an installation base.

● In case of collective installation

- When multiple units are installed adjacent to each other, secure enough space to allow for air circulation and walkway between groups of units as shown in the figures below.
- At least two sides must be left open.
- As with the single installation, add the height that exceeds the height limit-h> to the figures that are marked with an asterisk.
- If there is a wall at both the front and the rear of the unit, install up to six units consecutively in the side direction and provide a space of 1000mm or more as inlet space/ passage space for each six units.

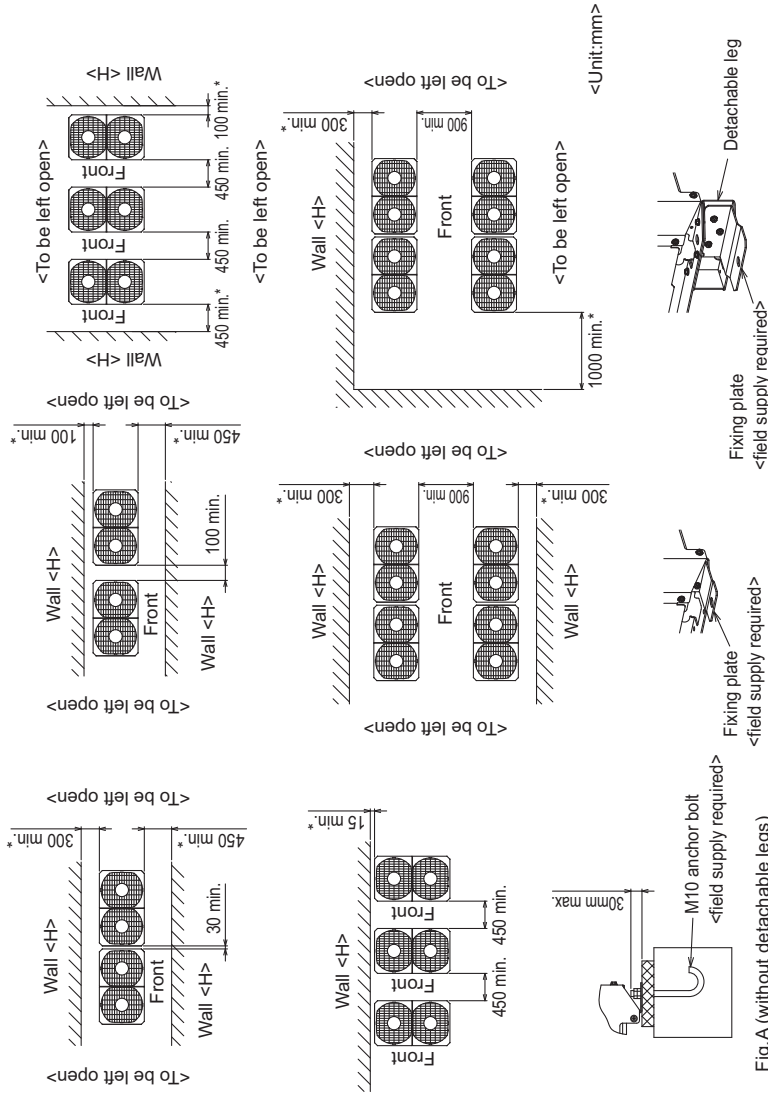


Fig.A (without detachable legs)

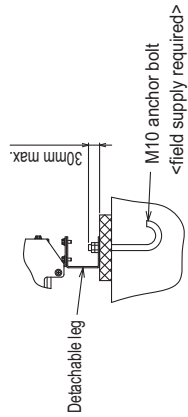


Fig.B (with detachable legs)

Fig.C (without detachable legs)


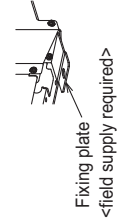


Fig.D (with detachable legs)

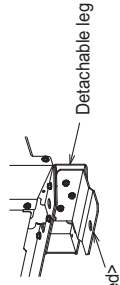


PURY-M500YNW-A1(-BS)


Unit: mm

PURY-M-YNW-A1, EM-YNW-A1

- Note 1. Please refer to the next page for information regarding necessary spacing around the unit and foundation work.
 2. The detachable leg can be removed at site.
 3. At brazing of pipes, wrap the refrigerant service valve with wet cloth and keep the temperature of refrigerant service valve under 120°C.
 4. This unit has restrictions for the safety, so refer to SAFETY HANDLING FOR R32 or the Installation Manual.

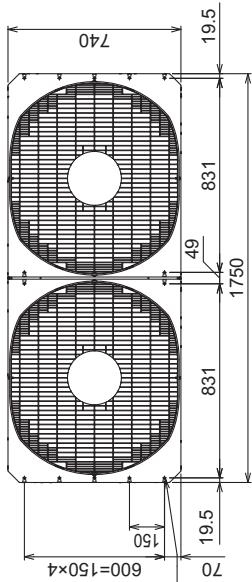

2x7-ø4.6 Hole
(Make hole at the plastic fan guard for snow hood attachment)
 <Snow hood attachment hole>

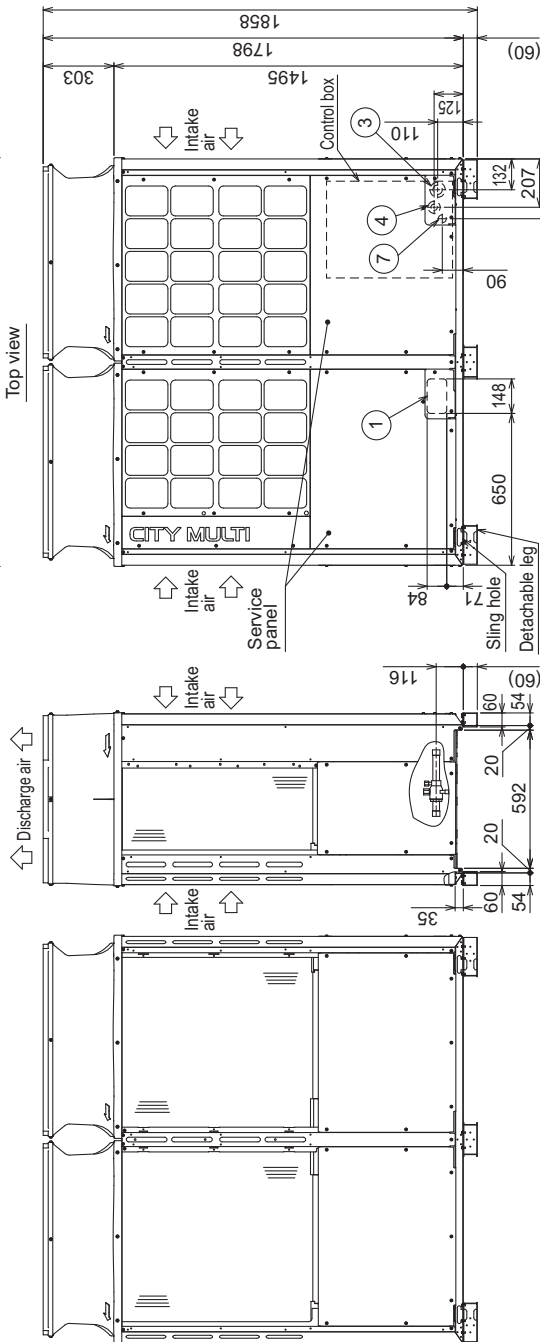


Connecting pipe specifications

| Model | Refrigerant pipe | | Service valve | |
|-------|----------------------------|---------------------------|---------------|--------------|
| | High pressure | Low pressure | High pressure | Low pressure |
| M500 | ø19.05 Braze ^{*1} | ø28.58 Braze ^d | ø28.58 | ø28.58 |

*1 Connect the refrigerant pipe to the service valve according to the Installation Manual.

| NO. | Usage | Specifications |
|-----|-------------------------|---|
| ① | For pipes | Front through hole 148 x 84 Knockout hole |
| ② | | Bottom through hole 150 x 94 Knockout hole |
| ③ | For wires | Front through hole ø65 or ø40 Knockout hole |
| ④ | | Front through hole ø52 or ø27 Knockout hole |
| ⑤ | | Bottom through hole ø65 Knockout hole |
| ⑥ | | Bottom through hole ø52 Knockout hole |
| ⑦ | For transmission cables | Front through hole ø34 Knockout hole |
| ⑧ | | Bottom through hole ø34 Knockout hole |

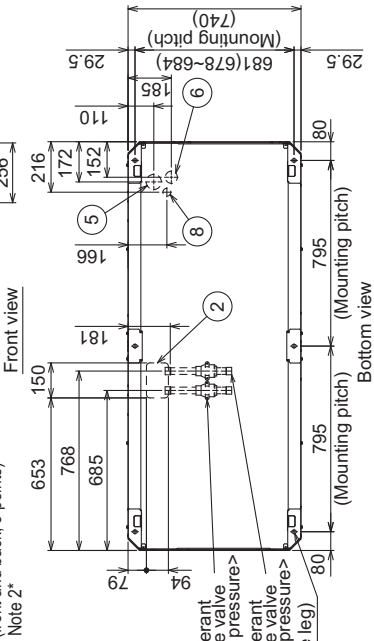

2x3-14x31 Oval hole
 2x3-14x20 Oval hole(without detachable leg)



PURY-M500YNW-A1(-BS)

1. Required space around the unit

● In case of single installation


① Secure enough space around the unit as shown in the figure below.

- With a space of at least 300mm to the wall on the back of the unit
- With a space of at least 100mm to the wall on the back of the unit

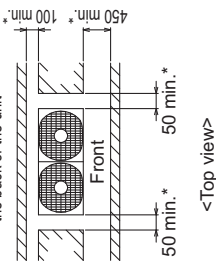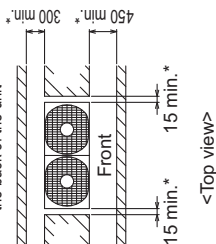

<Top view>

② When the height of the walls on the front, back or on the sides<H> exceeds the wall height limit as defined below add the height that exceeds the height limit <h> to the figures that are marked with an asterisk.

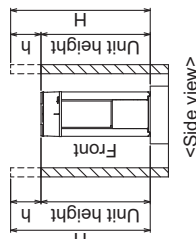







<Wall height limit> Front :Up to the unit height
Back :Up to the unit height
Side :Up to the unit height

2. Foundation work

- Take into consideration the surface strength, water drainage route, piping route, and wiring route when preparing the installation site.
<Note that the drain water comes out of the unit during operation.>
- Build the foundation in such way that the corner of the installation leg is securely supported as shown in the right figure.(Fig.A,B)
When using a rubber isolating cushion, please ensure it is large enough to cover the entire width of each of the unit's legs.
- The protrusion length of the anchor bolt must not exceed 30mm.(Fig.A,B)
- Use six fixing plates as shown in the right figure <field supply required> when using M12 hole-in anchor bolts <field supply required> (Fig. C,D)
- To prevent small animals and water and snow from entering the unit and damaging its parts, close the gap around the edges of through holes for pipes and wires with filler plates <field supply required>.
- When the pipes or cables are routed at the bottom of the unit, make sure that the through hole at the base of the unit does not get blocked with the installation base.
- Refer to the Installation Manual when installing units on an installation base.

● In case of collective installation

- When multiple units are installed adjacent to each other, secure enough space to allow for air circulation and walkway between groups of units as shown in the figures below.
- At least two sides must be left open.
- As with the single installation, add the height that exceeds the height limit<h> to the figures that are marked with an asterisk.
- If there is a wall at both the front and the rear of the unit, install up to three units consecutively in the side direction and provide a space of 1000mm or more as inlet space/ passage space for each three units.

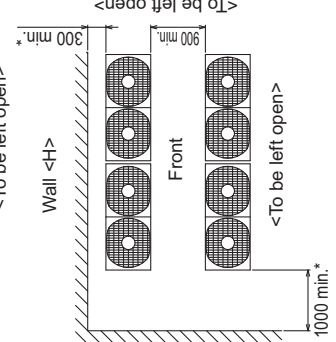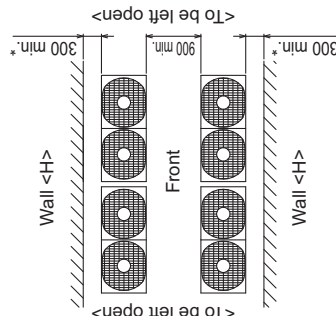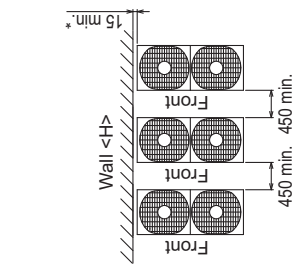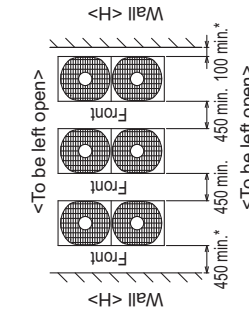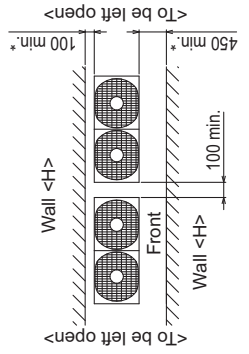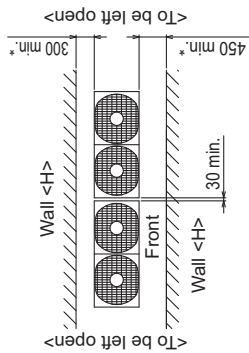

<Unit:mm>

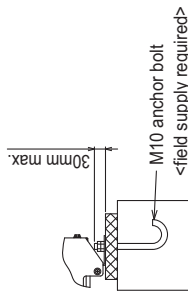


Fig.A (without detachable legs)



Fig.C (without detachable legs)

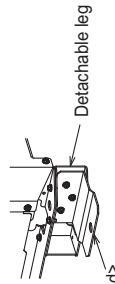


Fig.D (with detachable legs)

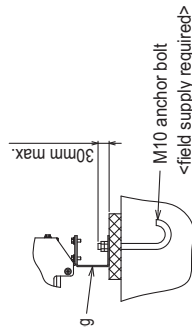


Fig.B (with detachable legs)